

NEXZSCAN II

Quick Start Guide



Software Downloading

Opening the website:

<http://www.humzor.com>

Home page>Support page

Then find the right software to download and install.

search keyword: NEXZSCAN




General Description




Set up on Vehicles

1. Locate the OBDII Port

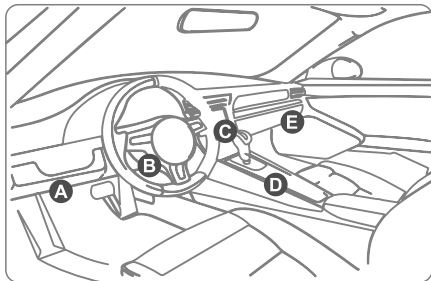


2. Plug in the NEXZSCAN Adapter, and then turn on ignition with key ON

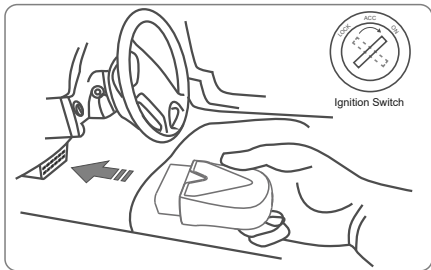


● You may also run the diagnostics with KEY ON engine OFF

Set up Bluetooth

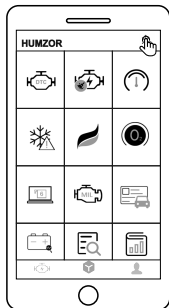

Click the Bluetooth button in the upper right corner to enter the Bluetooth matching page.

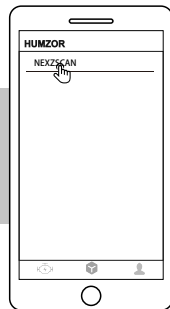

Select the corresponding device to connect, and you can start using it after the connection is completed.

● Please connect the bluetooth from NEXZSCAN application ONLY.

Contact us

Website: www.humzor.com
E-mail: service@humzor.com

Warranty

Warranty Ordinance: Limited two year warranty for NEXZSCAN sensor .

No Warranty Provided in Following Conditions:

1. Warranty service is not provided beyond the warranty period.
2. Product damage caused by incorrect installation or improper operation.

Technical Parameters:

Support Protocols	ISO9141-2; ISO14230-4; KWP15765-4; SAEJ1850-VPW SAEJ1850-PWM
Working current	0.24A
Communications	Bluetooth 4.2
Input Voltage	DC 7.9 ~ 30V
Working Temperature	-20 to 70°C/-4 to 158°F
Storage Temperature	-40 to 85°C/-40 to 185°F
Dimension	84mm*120mm*35mm