

Model	System	ECU Info.	Read Fault Code	Clear Fault Code	Live Data	Active Test	Special Function
CK	EMS	√	√	√	√	√	√
CK	ABS	√	√	√	√	√	√
CK	IMMO	√	√	√	√	√	√
CK	SRS	√	√	√	√		√
MK	EMS	√	√	√	√	√	√
MK	ABS	√	√	√	√	√	√
MK	IMMO	√	√	√	√	√	√
MK	SRS	√	√	√	√		√
MK-CROSS	EMS	√	√	√	√	√	√
MK-CROSS	ABS	√	√	√	√	√	√
MK-CROSS	IMMO	√	√	√	√	√	√
MK-CROSS	SRS	√	√	√	√		√
G√2	EMS	√	√	√	√	√	√
G√2	ABS	√	√	√	√	√	√
G√2	IMMO	√	√	√	√	√	√
G√2	SRS	√	√	√	√		√
FC	EMS	√	√	√	√	√	√
FC	ABS	√	√	√	√	√	√
FC	BMCS	√	√	√	√		
FC	IMMO	√	√	√	√	√	√
FC	SRS	√	√	√	√		√
SC7	EMS	√	√	√	√	√	√
SC7	ABS	√	√	√	√	√	√
SC7	TCU	√	√	√	√	√	
SC7	IMMO	√	√	√	√	√	√
SC7	SRS	√	√	√	√		√
GC7	EMS	√	√	√	√	√	√
GC7	ABS	√	√	√	√	√	√
GC7	TCU	√	√	√	√	√	
GC7	IMMO	√	√	√	√	√	√
GC7	SRS	√	√	√	√		√
GC7	ICU	√	√	√	√	√	√
GC6	EMS	√	√	√	√	√	√
GC6	ABS	√	√	√	√	√	√
GC6	TCU	√	√	√	√	√	

GC6	IMMO	√	√	√	√	√	√
GC6	SRS	√	√	√	√		√
GC6	ICU	√	√	√	√	√	√
GC6	BMCS	√	√	√	√		√
GC6	AC	√	√	√	√		
GC5	EMS	√	√	√	√	√	√
GC5	ABS	√	√	√	√	√	√
GC5	SRS	√	√	√	√		√
GC3	EMS	√	√	√	√	√	√
GC3	SRS	√	√	√	√		√
GC2	EMS	√	√	√	√	√	√
GC2	ABS	√	√	√	√	√	√
GC2	SRS	√	√	√	√		√
GC2	IMMO	√	√	√	√		√