SUBARU Function list

Vehicle systems covered				
System	DTC	Data List	Active Test	Special Func
Engine	V			$\sqrt{}$
AT	V	V		
ABS	V			$\sqrt{}$
EPS	V	V		
SRS	V			
TPMS	V			V
IUM	√		V	$\sqrt{}$
ASS				$\sqrt{}$
ACS	V		V	$\sqrt{}$
ccs	V			
Impact Sensor	V	V		$\sqrt{}$
Automatic Light and Wiper	V			V
Keyless access system	V	V		$\sqrt{}$
CAN System	√			
Occupant Detection System	V			$\sqrt{}$
Brake Vacuum Pump System				$\sqrt{}$

Vehicle Special Function covered		
System	Special Function	
Engine	Dealer Check Mode Procedure	
Engine	System Operation Check Mode	
Engine	Diagnosis Results	
Engine	Cancle Code(s) Display	
Engine	DPF maintenance	
Engine	Oil maintenance mode	
Engine	Maintenance at the time of ECM replacement	
Engine	Injector or Engine Replacement	
Engine	ECM Replacement	
Engine	Injector Code Display	
Engine	Fuel pump duty learning	
Engine	Fuel injector injection amount learning	
Engine	EGR valve opening angle learning	
AT	Fuction Check Sequence	
AT	Dealer Check Mode Procedure	
AT	AT learning mode	
AT	Oil inspection mode	
AT	Rear differential inspection mode	
AT	AWD ON/OFF switching mode	
AT	Clear Memories 2	
ABS	Freeze Frame	
ABS	Fuction Check Sequence	
TPMS	Transmitter ID regist confirm	
IUM	ECUCustomize	
IUM	Fun_checkmenu	
IUM	Keyless ID Regist	
ASS	CompulsoryHeightControl	
ACS	Variable compressor break-in drive	

ACS	Freeze Frame		
Impact Sensor	SensitivityAdjustmentMode		
Automatic Light and Wiper	Sensor initial setting		
Keyless access system	Collation ECM output check		
Keyless access system	Keyless access system check		
Keyless access system	Power supply ECU output check		
Keyless access system	Keyless ID Regist.		
Occupant Detection System	Re-zeroing		
Brake Vacuum Pump System	Function Check Sequence		
	Maintenance Reset		