

Notes:

√	Functions is fully supported and already existed in former software version.
*	Functions is fully supported and newly added in current software version.
	Functions is not supported.

Vehicle Models covered

Brand	Mode Name	Year	System
TOYOTA	03L.O	Up to 2019	All
TOYOTA	4Runner	Up to 2019	All
TOYOTA	86	Up to 2019	All
TOYOTA	AGYA	Up to 2019	All
TOYOTA	ALLION/PREMIO	Up to 2019	All
TOYOTA	ALPHARD	Up to 2019	All
TOYOTA	ALPHARD HV	Up to 2019	All
TOYOTA	ALPHARD HV/VELLFIRE HV	Up to 2019	All
TOYOTA	ALPHARD/VELLFIRE	Up to 2019	All
TOYOTA	ALTEZZA/ALTEZZA GITA	Up to 2019	All
TOYOTA	AQUA	Up to 2019	All
TOYOTA	ARISTO	Up to 2019	All
TOYOTA	AURIS	Up to 2019	All
TOYOTA	AURIS HV	Up to 2019	All
TOYOTA	Avalon	Up to 2019	All
TOYOTA	AVALON HV	Up to 2019	All
TOYOTA	AVANZA	Up to 2019	All
TOYOTA	AVENSIS	Up to 2019	All
TOYOTA	AVENSIS VERSO/PICNIC	Up to 2019	All
TOYOTA	AYGO	Up to 2019	All
TOYOTA	bB	Up to 2019	All
TOYOTA	BELTA	Up to 2019	All
TOYOTA	BLADE	Up to 2019	All
TOYOTA	C-HR	Up to 2019	All
TOYOTA	C-HR HV	Up to 2019	All
TOYOTA	CALDINA	Up to 2019	All
TOYOTA	CALYA	Up to 2019	All
TOYOTA	Cami	Up to 2019	All
TOYOTA	Camry	Up to 2019	All
TOYOTA	CAMRY HV	Up to 2019	All
TOYOTA	CAMRY/AURION	Up to 2019	All
TOYOTA	CARINA	Up to 2019	All
TOYOTA	CARINA E	Up to 2019	All
TOYOTA	CELICA	Up to 2019	All
TOYOTA	Celica/CURREN	Up to 2019	All
TOYOTA	CELSIOR	Up to 2019	All
TOYOTA	CENTURY	Up to 2019	All
TOYOTA	COASTER	Up to 2019	All
TOYOTA	COMFORT	Up to 2019	All
TOYOTA	CONDOR	Up to 2019	All
TOYOTA	Corolla	Up to 2019	All
TOYOTA	COROLLA AXIO	Up to 2019	All
TOYOTA	COROLLA AXIO HV/FIELDER HV	Up to 2019	All
TOYOTA	COROLLA AXIO/FIELDER	Up to 2019	All
TOYOTA	COROLLA HV	Up to 2019	All

TOYOTA	COROLLA HV/AURIS HV	Up to 2019	All
TOYOTA	Corolla iM	Up to 2019	All
TOYOTA	COROLLA RUMION	Up to 2019	All
TOYOTA	COROLLA RUNX/ALEX	Up to 2019	All
TOYOTA	COROLLA SPACIO	Up to 2019	All
TOYOTA	COROLLA VERSO	Up to 2019	All
TOYOTA	COROLLA-S	Up to 2019	All
TOYOTA	COROLLA-S HV	Up to 2019	All
TOYOTA	COROLLA/AURIS	Up to 2019	All
TOYOTA	CORONA	Up to 2019	All
TOYOTA	Cressida	Up to 2019	All
TOYOTA	CROWN	Up to 2019	All
TOYOTA	CROWN COMFORT	Up to 2019	All
TOYOTA	CROWN ESTATE	Up to 2019	All
TOYOTA	CROWN HV	Up to 2019	All
TOYOTA	CROWN MAJESTA	Up to 2019	All
TOYOTA	CROWN Mild Hybrid	Up to 2019	All
TOYOTA	CROWN PATROL CAR	Up to 2019	All
TOYOTA	CROWN SEDAN/COMFORT	Up to 2019	All
TOYOTA	CT200h	Up to 2019	All
TOYOTA	Duet	Up to 2019	All
TOYOTA	DYNA	Up to 2019	All
TOYOTA	E'z	Up to 2019	All
TOYOTA	Echo	Up to 2019	All
TOYOTA	eQ	Up to 2019	All
TOYOTA	ES200	Up to 2019	All
TOYOTA	ES240	Up to 2019	All
TOYOTA	ES250	Up to 2019	All
TOYOTA	ES300	Up to 2019	All
TOYOTA	ES300h	Up to 2019	All
TOYOTA	ES330	Up to 2019	All
TOYOTA	ES350	Up to 2019	All
TOYOTA	ESTIMA	Up to 2019	All
TOYOTA	ESTIMA HV	Up to 2019	All
TOYOTA	ETIOS	Up to 2019	All
TOYOTA	FCHV-adv	Up to 2019	All
TOYOTA	FJ CRUISER	Up to 2019	All
TOYOTA	FORTUNER/HILUX SW4	Up to 2019	All
TOYOTA	FR-S	Up to 2019	All
TOYOTA	Fun Cargo	Up to 2019	All
TOYOTA	GAIA	Up to 2019	All
TOYOTA	Granvia/GRAND HIACE	Up to 2019	All
TOYOTA	GS F	Up to 2019	All
TOYOTA	GS200t	Up to 2019	All
TOYOTA	GS250	Up to 2019	All
TOYOTA	GS300	Up to 2019	All
TOYOTA	GS300h	Up to 2019	All
TOYOTA	GS350	Up to 2019	All
TOYOTA	GS400	Up to 2019	All
TOYOTA	GS430	Up to 2019	All
TOYOTA	GS450h	Up to 2019	All
TOYOTA	GS460	Up to 2019	All
TOYOTA	GX400	Up to 2019	All
TOYOTA	GX460	Up to 2019	All
TOYOTA	GX470	Up to 2019	All
TOYOTA	HARRIER	Up to 2019	All

TOYOTA	HARRIER HV	Up to 2019	All
TOYOTA	Hiace	Up to 2019	All
TOYOTA	HIACE/REGIUSACE/HIMEDIC	Up to 2019	All
TOYOTA	HIGHLANDER	Up to 2019	All
TOYOTA	HIGHLANDER HV	Up to 2019	All
TOYOTA	HIGHLANDER/KLUGER	Up to 2019	All
TOYOTA	HILUX	Up to 2019	All
TOYOTA	HILUX SURF	Up to 2019	All
TOYOTA	HONGQI	Up to 2019	All
TOYOTA	HS250h	Up to 2019	All
TOYOTA	iA	Up to 2019	All
TOYOTA	iM	Up to 2019	All
TOYOTA	INNOVA/KIJANG INNOVA	Up to 2019	All
TOYOTA	IPSUM	Up to 2019	All
TOYOTA	iQ	Up to 2019	All
TOYOTA	iQ EV	Up to 2019	All
TOYOTA	IS F	Up to 2019	All
TOYOTA	IS200	Up to 2019	All
TOYOTA	IS200D	Up to 2019	All
TOYOTA	IS200t	Up to 2019	All
TOYOTA	IS220D	Up to 2019	All
TOYOTA	IS250	Up to 2019	All
TOYOTA	IS250C	Up to 2019	All
TOYOTA	IS300	Up to 2019	All
TOYOTA	IS300C	Up to 2019	All
TOYOTA	IS300h	Up to 2019	All
TOYOTA	IS350	Up to 2019	All
TOYOTA	IS350C	Up to 2019	All
TOYOTA	ISIS	Up to 2019	All
TOYOTA	ist	Up to 2019	All
TOYOTA	JPN TAXI	Up to 2019	All
TOYOTA	KEY REGIST	Up to 2019	All
TOYOTA	KIJANG	Up to 2019	All
TOYOTA	KLUGER	Up to 2019	All
TOYOTA	KLUGER HV	Up to 2019	All
TOYOTA	LAND CR PRADO	Up to 2019	All
TOYOTA	LAND CR.	Up to 2019	All
TOYOTA	Land Cruiser	Up to 2019	All
TOYOTA	LAND CRUISER PRADO	Up to 2019	All
TOYOTA	LC500	Up to 2019	All
TOYOTA	LC500h	Up to 2019	All
TOYOTA	LEVIN	Up to 2019	All
TOYOTA	LEVIN HV	Up to 2019	All
TOYOTA	LFA	Up to 2019	All
TOYOTA	LITEACE	Up to 2019	All
TOYOTA	LS350	Up to 2019	All
TOYOTA	LS400	Up to 2019	All
TOYOTA	LS430	Up to 2019	All
TOYOTA	LS460	Up to 2019	All
TOYOTA	LS500	Up to 2019	All
TOYOTA	LS500h	Up to 2019	All
TOYOTA	LS600h	Up to 2019	All
TOYOTA	LX450	Up to 2019	All
TOYOTA	LX450d	Up to 2019	All
TOYOTA	LX460	Up to 2019	All
TOYOTA	LX470	Up to 2019	All

TOYOTA	LX570	Up to 2019	All
TOYOTA	MAC	Up to 2019	All
TOYOTA	MARK X	Up to 2019	All
TOYOTA	MARK X Zio	Up to 2019	All
TOYOTA	MARK2 QUALIS/CAMRY GRACIA	Up to 2019	All
TOYOTA	MARK2/MARK2 BLIT	Up to 2019	All
TOYOTA	Matrix	Up to 2019	All
TOYOTA	MIRAI	Up to 2019	All
TOYOTA	MR-S	Up to 2019	All
TOYOTA	MR2	Up to 2019	All
TOYOTA	MR2 Spyder	Up to 2019	All
TOYOTA	NADIA	Up to 2019	All
TOYOTA	NAV1	Up to 2019	All
TOYOTA	NOAH	Up to 2019	All
TOYOTA	NOAH HV/VOXY HV/ESQUIRE HV	Up to 2019	All
TOYOTA	NOAH/VOXY/ESQUIRE	Up to 2019	All
TOYOTA	NX200	Up to 2019	All
TOYOTA	NX200t	Up to 2019	All
TOYOTA	NX300	Up to 2019	All
TOYOTA	NX300h	Up to 2019	All
TOYOTA	Opa	Up to 2019	All
TOYOTA	PASEO	Up to 2019	All
TOYOTA	PASSO	Up to 2019	All
TOYOTA	PASSO SETTE	Up to 2019	All
TOYOTA	PICNIC	Up to 2019	All
TOYOTA	PIXIS EPOCH	Up to 2019	All
TOYOTA	PIXIS JOY	Up to 2019	All
TOYOTA	PIXIS MEGA	Up to 2019	All
TOYOTA	PIXIS SPACE	Up to 2019	All
TOYOTA	PIXIS Truck/Van	Up to 2019	All
TOYOTA	PLATZ	Up to 2019	All
TOYOTA	PORTE/SPADE	Up to 2019	All
TOYOTA	Previa	Up to 2019	All
TOYOTA	PREVIA HV	Up to 2019	All
TOYOTA	PREVIA/TARAGO	Up to 2019	All
TOYOTA	Prius	Up to 2019	All
TOYOTA	PRIUS +/PRIUS V	Up to 2019	All
TOYOTA	PRIUS alpha	Up to 2019	All
TOYOTA	Prius C	Up to 2019	All
TOYOTA	PRIUS PHV	Up to 2019	All
TOYOTA	PRIUS PHV/PRIUS PRIME	Up to 2019	All
TOYOTA	Prius Prime	Up to 2019	All
TOYOTA	Prius V	Up to 2019	All
TOYOTA	PROACE	Up to 2019	All
TOYOTA	PROBOX/SUCCEED	Up to 2019	All
TOYOTA	PROGRES/BREVIS	Up to 2019	All
TOYOTA	Pronard	Up to 2019	All
TOYOTA	QUALIS	Up to 2019	All
TOYOTA	QUICKDELIVERY	Up to 2019	All
TOYOTA	RACTIS	Up to 2019	All
TOYOTA	RAUM	Up to 2019	All
TOYOTA	Rav4	Up to 2019	All
TOYOTA	Rav4 EV	Up to 2019	All
TOYOTA	RAV4 HV	Up to 2019	All
TOYOTA	RC F	Up to 2019	All
TOYOTA	RC200t	Up to 2019	All

TOYOTA	RC300	Up to 2019	All
TOYOTA	RC300h	Up to 2019	All
TOYOTA	RC350	Up to 2019	All
TOYOTA	REGIUS/TOURING HIACE	Up to 2019	All
TOYOTA	REIZ	Up to 2019	All
TOYOTA	ROOMY	Up to 2019	All
TOYOTA	RUKUS	Up to 2019	All
TOYOTA	Rush	Up to 2019	All
TOYOTA	RX200t	Up to 2019	All
TOYOTA	RX270	Up to 2019	All
TOYOTA	RX300	Up to 2019	All
TOYOTA	RX330	Up to 2019	All
TOYOTA	RX350	Up to 2019	All
TOYOTA	RX400h	Up to 2019	All
TOYOTA	RX450h	Up to 2019	All
TOYOTA	SAI	Up to 2019	All
TOYOTA	SC300	Up to 2019	All
TOYOTA	SC400	Up to 2019	All
TOYOTA	SC430	Up to 2019	All
TOYOTA	SDF Vehicle	Up to 2019	All
TOYOTA	SEQUOIA	Up to 2019	All
TOYOTA	Sienna	Up to 2019	All
TOYOTA	SIENTA	Up to 2019	All
TOYOTA	SIENTA HV	Up to 2019	All
TOYOTA	SOARER	Up to 2019	All
TOYOTA	Solara	Up to 2019	All
TOYOTA	SOLUNA(AFC)	Up to 2019	All
TOYOTA	SPACIO	Up to 2019	All
TOYOTA	SPADE	Up to 2019	All
TOYOTA	Sparky	Up to 2019	All
TOYOTA	STARLET	Up to 2019	All
TOYOTA	Supra	Up to 2019	All
TOYOTA	T100	Up to 2019	All
TOYOTA	Tacoma	Up to 2019	All
TOYOTA	TAMARAW	Up to 2019	All
TOYOTA	TANK	Up to 2019	All
TOYOTA	tC	Up to 2019	All
TOYOTA	Tercel	Up to 2019	All
TOYOTA	TOWNACE	Up to 2019	All
TOYOTA	TOYOACE/CAMROAD/DYNA 150/100	Up to 2019	All
TOYOTA	TOYOACE/DYNA 200	Up to 2019	All
TOYOTA	Truck	Up to 2019	All
TOYOTA	Tundra	Up to 2019	All
TOYOTA	UNSER	Up to 2019	All
TOYOTA	URBAN CRUISER	Up to 2019	All
TOYOTA	VANGUARD	Up to 2019	All
TOYOTA	VELLFIRE	Up to 2019	All
TOYOTA	VENZA	Up to 2019	All
TOYOTA	Verossa	Up to 2019	All
TOYOTA	VERSO	Up to 2019	All
TOYOTA	Verso-s/Ractis	Up to 2019	All
TOYOTA	VIOS	Up to 2019	All
TOYOTA	Vista/Vista Ardeo	Up to 2019	All
TOYOTA	VITZ	Up to 2019	All
TOYOTA	VITZ HV	Up to 2019	All
TOYOTA	VOLTZ	Up to 2019	All

TOYOTA	WIGO	Up to 2019	All
TOYOTA	Will Cypha	Up to 2019	All
TOYOTA	Will Vi	Up to 2019	All
TOYOTA	Will VS	Up to 2019	All
TOYOTA	WINDOM	Up to 2019	All
TOYOTA	WISH	Up to 2019	All
TOYOTA	xA	Up to 2019	All
TOYOTA	xB	Up to 2019	All
TOYOTA	xD	Up to 2019	All
TOYOTA	YARIS	Up to 2019	All
TOYOTA	YARIS HV	Up to 2019	All
TOYOTA	Yaris iA	Up to 2019	All
TOYOTA	Yaris R	Up to 2019	All
TOYOTA	YARIS VERSO/ECHO VERSO	Up to 2019	All
TOYOTA	YARIS/ECHO	Up to 2019	All
TOYOTA	ZACE	Up to 2019	All
TOYOTA	ZELAS	Up to 2019	All
TOYOTA	ZZZ1 P3S	Up to 2019	All
TOYOTA	ZZZ2 P4S	Up to 2019	All
TOYOTA	ZZZ3 P4C	Up to 2019	All
TOYOTA	ZZZ4 P5C	Up to 2019	All

Vehicle Systems covered						
System	Ecu Info.	Read Codes	Eraser Code	Live data	Active Test	Utility
4WD CAN	√	√	√	√	√	
ABS	√	√	√	√	√	√
ABS/VSC/TRAC	√	√	√	√	√	√
ABS/VSC/TRC	√	√	√	√	√	√
ABS CAN	√	√	√	√	√	√
AFS	√	√	√	√	√	√
AHC	√	√	√	√	√	√
AHS	√	√	√	√	√	
ASG	√	√	√	√	√	√
Accessory Gateway	√	√	√	√	√	
Active Headrest L	√	√	√	√	√	
Active Headrest R	√	√	√	√	√	
Active Rear Wing	√	√	√	√	√	
Advanced Parking Guidance/Parking Assist Monitor	√	√	√	√	√	
Air Conditioner	√	√	√	√	√	√
Air Suspension	√	√	√	√	√	√
Audio System	√	√	√	√	√	
Back Door	√	√	√	√	√	
Back Door P/W	√	√	√	√	√	
Battery	√	√	√	√	√	
Blind Spot Monitor Master	√	√	√	√	√	√
Blind Spot Monitor Slave	√	√	√	√	√	√
Body	√	√	√	√	√	
Body No.2	√	√	√	√	√	
Body No.3	√	√	√	√	√	
Body No.4	√	√	√	√	√	
Body No.5	√	√	√	√	√	
CARB Mode ECU	√	√	√	√	√	

Center Console Switch				√	√	
Charging Control	√	√	√	√	√	
Clearance Sonar	√	√	√	√	√	√
Combination Meter	√	√	√	√	√	
Combination Switch				√	√	
Cruise Control	√	√	√	√		
D-Door Motor	√	√	√	√	√	
D-SEAT SW				√		
DRS	√	√	√	√	√	√
Driver Door	√	√	√	√	√	
Driver Seat	√	√	√	√	√	
E-ACM	√	√	√	√	√	
ECB Gateway	√	√	√	√	√	
ECM Gateway	√	√	√	√	√	
ECT	√	√	√	√	√	√
EMPS	√	√	√	√	√	√
EMS	√	√	√	√	√	
EV	√	√	√	√	√	√
EV Battery	√	√	√	√	√	√
Electric Parking Brake	√	√	√	√	√	√
Electric Power Control	√	√	√	√	√	
Electric Propulsion Control System	√	√	√	√	√	
Engine	√	√	√	√	√	√
Engine (LH Bank)	√	√	√	√	√	√
Engine (RH Bank)	√	√	√	√	√	√
Engine and ECT	√	√	√	√	√	√
Engine2	√	√	√	√	√	√
Entry&Start	√	√	√	√	√	√
Entry&Start(CAN)	√	√	√	√	√	√
FC	√	√	√	√	√	
FCHV	√	√	√	√	√	
Four Wheel Drive	√	√	√	√	√	√
Free-Tronic	√	√	√	√	√	
Front Left Door	√	√	√	√	√	
Front Left Seat A/C	√	√	√	√	√	
Front Right Door	√	√	√	√	√	
Front Right Seat A/C	√	√	√	√	√	
Front Stabilizer	√	√	√	√	√	
Gateway	√	√	√	√	√	
Gateway BEAN	√	√	√	√	√	
Gateway CAN	√	√	√	√	√	
Gateway V	√	√	√	√	√	
Grill Shutter	√	√	√	√	√	
HL AutoLeveling	√	√	√	√	√	
HV Battery	√	√	√	√	√	
HV Gateway	√	√	√	√	√	
Hybrid Control	√	√	√	√	√	√
IPA/Parking Assist Monitor	√	√	√	√	√	
Immobiliser	√	√	√	√	√	
Intuitive P/A	√	√	√	√	√	
KDSS	√	√	√	√	√	
Lane Departure Alert	√	√	√	√	√	√
Lane Keeping Assist	√	√	√	√	√	√
Laser Cruise	√	√	√			√
Main Body	√	√	√	√	√	√
Master Switch	√	√	√	√	√	√

Mayday Gateway	√	√	√	√	√	
Mirror	√	√	√	√	√	
Mirror L				√	√	
Mirror R				√	√	
Multi Bus Gateway	√	√	√	√	√	
Multi Bus Monitor No.1	√	√	√	√	√	
Multi Bus Monitor No.2	√	√	√	√	√	
Multi-Mode M/T	√	√	√	√	√	
Navigation System	√	√	√	√	√	√
Night View	√	√	√	√	√	
Occupant Detection	√	√	√	√	√	√
P Master Switch	√	√	√	√	√	
P-Door Motor	√	√	√	√	√	
PM1 Gateway	√	√	√	√	√	
PM2 Gateway	√	√	√	√	√	
PPS	√	√	√	√	√	
Passenger Door	√	√	√	√	√	
Passenger Seat	√	√	√	√	√	
Plug-in Control	√	√	√	√	√	√
Power Source Control	√	√	√	√	√	√
Pre-Collision	√	√	√	√	√	
Pre-Collision 2	√	√	√	√	√	
Pre-Crash	√	√	√	√	√	
Pre-Crash 2	√	√	√	√	√	√
RL-Door Motor	√	√	√	√	√	
RR-Door Motor	√	√	√	√	√	
Radar Cruise	√	√	√			√
Rain Sensor	√	√	√	√	√	
Rear Console Switch	√	√	√	√	√	
Rear Left Door	√	√	√	√	√	
Rear Left Seat	√	√	√	√	√	
Rear Left Seat A/C	√	√	√	√	√	
Rear Right Door	√	√	√	√	√	
Rear Right Seat	√	√	√	√	√	
Rear Right Seat A/C	√	√	√	√	√	
Rear Seat Switch	√	√	√	√	√	
Rear Stabilizer	√	√	√	√	√	
Remote Engine Starter	√	√	√	√	√	√
Retractable Hardtop	√	√	√	√	√	
SRS Airbag	√	√	√	√	√	√
SRS Side Airbag	√	√	√	√	√	
Sequential M/T	√	√	√	√	√	√
Sliding Roof	√	√	√	√	√	
Smart Access	√	√	√	√	√	
Smart Key	√	√	√	√	√	
Stabilizer	√	√	√	√	√	√
Starting Control	√	√	√	√	√	
Steering Lock	√	√	√	√	√	
Steering Pad Switch	√	√	√	√	√	
Stop and Go	√	√	√	√	√	
Stop and Start	√	√	√	√	√	
TRAC	√	√	√	√	√	
TVSS	√	√	√	√	√	
Telematics	√	√	√	√	√	
Theft Deterrent	√	√	√	√	√	
Tilt&Telescopic	√	√	√	√	√	

Tire Pressure Monitor	√	√	√	√	√	√
Transmission Control	√	√	√	√	√	
VGRS	√	√	√	√	√	√
Vehicle Control	√	√	√	√	√	√
WIL Gateway	√	√	√	√	√	
ASC	√	√	√	√	√	
Anti-theft alarm	√	√	√	√	√	
Auto Leveling Module	√	√	√	√	√	
Automatic High Beam	√	√	√	√	√	
Battery Charge Status Unit	√	√	√	√	√	
Body Control Module	√	√	√	√	√	
Bodywork conversion unit	√	√	√	√	√	
Built-In System Interface(BSI)	√	√	√	√	√	
Central Gateway	√	√	√	√	√	
Connectivity Master Unit	√	√	√	√	√	
Diagnostic Recorder	√	√	√	√	√	
EHPS	√	√	√	√	√	
Electric Supply Unit	√	√	√	√	√	
Electronic Air Temperature Controller	√	√	√	√	√	
Electronic-Controlled Power Steering	√	√	√	√	√	
Engine relay unit(BSM)	√	√	√	√	√	
FC External Power Supply	√	√	√	√	√	
FCDC	√	√	√	√	√	
Front Recognition Camera	√	√	√	√	√	
Heating Ventilation	√	√	√	√	√	
High Frequency Receiver	√	√	√	√	√	
ILLUMINATION	√	√	√	√	√	
Instrument Cluster	√	√	√	√	√	
Instrument Panel	√	√	√	√	√	
LKA/LDA	√	√	√	√	√	
LKA/LDA (Sub)	√	√	√	√	√	
Multifunction Display	√	√	√	√	√	
PCS/LDA/RSA/LVN	√	√	√	√	√	
Panoramic View Monitor	√	√	√	√	√	
Power Steering Electric Pump Unit	√	√	√	√	√	
Powertrain Control Module	√	√	√	√	√	
Radar Cruise1	√	√	√	√	√	
Radar Cruise2	√	√	√	√	√	
Radio or Radiotelephone(Radio Part)	√	√	√	√	√	
Rain and Brightness Sensor	√	√	√	√	√	
Restraint Control Module	√	√	√	√	√	
Sliding Sunshade	√	√	√	√	√	
Smart City Brake Support	√	√	√	√	√	
Smart Start Unit	√	√	√	√	√	
Switch Module under the Steering	√	√	√	√	√	
TVD	√	√	√	√	√	
Trailer Brake Controller	√	√	√	√	√	
Traller relay unit(BSR)	√	√	√	√	√	
Transmission	√	√	√	√	√	
Transmission Control Module	√	√	√	√	√	
Tyre Under-Inflation Detection(DSG)	√	√	√	√	√	
Vehicle Proximity Notification System	√	√	√	√	√	
Wiper	√	√	√	√	√	

Vehicle Utilities covered

System	Utilitys
ABS/VSC/TRC	2nd Sys. Air Bleeding
ABS/VSC/TRC	Air Bleeding
ABS/VSC/TRC	Check Mode
ABS/VSC/TRC	ECB Utility
ABS/VSC/TRC	ES Calibration
ABS/VSC/TRC	Inspection Mode
ABS/VSC/TRC	Reset Memory
ABS/VSC/TRC	Test Mode
ABS/VSC/TRC	VSC Sensor Neutral Memorization
ABS/VSC/TRC	VSC/TR(A)C/4WD Control Prevention Mode
ABS/VSC/TRC	Vehicle Information Synchronization
ABS CAN	Air Bleeding
ABS CAN	ECB Utility
ABS CAN	Inspection Mode
ABS CAN	Reset Memory
ABS CAN	Test Mode
AFS	AHS Camera Optic A \sqrt is Adjustment
AFS	AHS Shade Angle Adjustment
AFS	ECU Information Sync
AFS	Steering Sensor Initialization
AHC	Height Offset
ASG	ASG System Initial Learning
ASG	All Readiness
Active Rear Wing	Rear Wing Zero Point Calibration
Air Conditioner	Blower Motor Brush Wear Amount Initialization
Air Conditioner	Rear Cooling Unit Check
Air Conditioner	Refrigerant Gas Volume Check
Air Conditioner	Servomotor Initialization
Air suspension	Height Offset
Blind Spot Monitor Master	BSM Master Abnormal History
Blind Spot Monitor Master	BSM Master Beam A \sqrt is Adjustment
Blind Spot Monitor Master	BSM Master Beam A \sqrt is Display
Blind Spot Monitor Master	BSM Master Beam A \sqrt is Inspection
Blind Spot Monitor Slave	BSM Slave Abnormal History
Blind Spot Monitor Slave	BSM Slave Beam A \sqrt is Adjustment
Blind Spot Monitor Slave	BSM Slave Beam A \sqrt is Display
Blind Spot Monitor Slave	BSM Slave Beam A \sqrt is Inspection
Clearance Sonar	Steering Initialization
DRS	Check Mode
ECT	A/T Code Registration
ECT	A/T Code Reset
ECT	All Readiness
ECT	Check Mode
ECT	Reset Memory
EMPS	Abnormal Operation History
EMPS	Check Mode
EMPS	Torque Sensor Adjustment
EV	Battery Pack Malf Fail-Safe Drive History Clear
EV	Check Mode
EV	Inspection Mode
EV	VIN
EV Battery	Battery Diagnosis
EV Battery	Battery Status Info Update
EV Battery	Check Mode
EV Battery	HV Batt Cell Low Volt READY ON Prevention Cancel

EV Battery	Temporary Vehicle Start Up
Electric Parking Brake	Check Mode
Electric Parking Brake	Reset Memory
Engine	A/F Sensor Compensation Reset
Engine	A/T Code Registration
Engine	A/T Code Reset
Engine	All Readiness
Engine	CVT Oil Pressure Calibration
Engine	Catalyst Record Clear
Engine	Catalyst Record Read
Engine	Catalyst Record Transferring
Engine	Check Mode
Engine	Crank Time Compensation Reset
Engine	DPF Deterioration Record Clear
Engine	Deceleration Sensor Zero Point Calibration
Engine	Electric Throttle Learning
Engine	Engine History Utility
Engine	Engine Oil Pressure Control Check
Engine	Injector Compensation
Engine	Learning Value Reset
Engine	Learning Values Confirmation
Engine	Learning Values Save
Engine	Learning Values Write
Engine	Pilot Quantity Learning
Engine	Pilot Quantity Learning Values Clear
Engine	Pilot Quantity Learning Values Reset
Engine	Pilot Quantity Learning(Detail)
Engine	Pressure Discharge Valve Check
Engine	Reset Memory
Engine	Shift Control Synchronization
Engine	Supply Pump Initialization
Engine	VIN
Engine	Vehicle Mileage Write
Engine	i-ART Learning Value Reset
Engine (LH Bank)	Check Mode
Engine (LH Bank)	Reset Memory
Engine (RH Bank)	Check Mode
Engine (RH Bank)	Reset Memory
Engine and ECT	A/F Sensor Compensation Reset
Engine and ECT	A/T Code Registration
Engine and ECT	A/T Code Reset
Engine and ECT	All Readiness
Engine and ECT	CVT Oil Pressure Calibration
Engine and ECT	Catalyst Record Clear
Engine and ECT	Catalyst Record Read
Engine and ECT	Catalyst Record Transferring
Engine and ECT	Check Mode
Engine and ECT	Crank Time Compensation Reset
Engine and ECT	DPF Deterioration Record Clear
Engine and ECT	Deceleration Sensor Zero Point Calibration
Engine and ECT	Electric Throttle Learning
Engine and ECT	Engine History Utility
Engine and ECT	Engine Oil Pressure Control Check
Engine and ECT	Injector Compensation
Engine and ECT	Learning Value Reset
Engine and ECT	Learning Values Confirmation

Engine and ECT	Learning Values Save
Engine and ECT	Learning Values Write
Engine and ECT	Pilot Quantity Learning
Engine and ECT	Pilot Quantity Learning Values Clear
Engine and ECT	Pilot Quantity Learning Values Reset
Engine and ECT	Pilot Quantity Learning(Detail)
Engine and ECT	Pressure Discharge Valve Check
Engine and ECT	Reset Memory
Engine and ECT	Supply Pump Initialization
Engine and ECT	VIN
Engine and ECT	Vehicle Mileage Write
Engine and ECT	i-ART Learning Value Reset
Engine2	All Readiness
Engine2	Check Mode
Engine2	Drive History Reset
Entry&Start	Wireless Door Lock Diagnosis Mode
Four Wheel Drive	4WD Control Prevention Mode
Four Wheel Drive	Reset Memory
Four Wheel Drive	VSC/TR(A)C/4WD Control Prevention Mode
HV Battery	Initialization
Hybrid Control	B1 Air Bleeding
Hybrid Control	Battery Diagnosis
Hybrid Control	Battery Status Info Update
Hybrid Control	HV Batt Cell Low Volt READY ON Prevention Cancel
Hybrid Control	Initialization
Hybrid Control	Inspection Mode
Hybrid Control	Normal Battery Stack Average Voltage Calculation
Hybrid Control	Prediagnostic Battery Charge
Hybrid Control	Reset Memory
Hybrid Control	Temporary Vehicle Start Up
Hybrid Control	VIN
Lane Departure Alert	Camera A√is Adjust
Lane Departure Alert	Camera/Target Position Memory
Lane Keeping Assist	Camera A√is Adjust
Lane Keeping Assist	Camera/Target Position Memory
Laser Cruise	Laser/Radar Cruise Initialization
Main Body	Wireless Door Lock Diagnosis Mode
Master Switch	Reset Memory
Navigation System	Map Information
Navigation System	Optical Disc Error History
Navigation System	Software Error History
Occupant Detection	Sensitivity Check
Occupant Detection	Zero Point Calibration
Plug-in Control	Check Mode
Plug-in Control	Quick Charge Relay Diagnosis
Power Source Control	Auto Power OFF Cancel
Pre-Crash 2	Camera A√is Adjust
Pre-Crash 2	Camera/Target Position Memory
Pre-Crash 2	Rear Beam A√is Adjustment
Pre-Crash 2	Recog ECU H Temp Hist Reset
Radar Cruise	Beam A√is Misalignment Reading
Radar Cruise	Laser/Radar Cruise Initialization
Remote Engine Starter	Trouble Factor Code Clear
SRS Airbag	Check Mode
Sequential M/T	Parts E√change
Stabilizer	Stabilizer System Check

Tire Pressure Monitor	ID Registration
VGRS	Abnormal Operation History
VGRS	Check Mode
VGRS	Steering Angle Adjust
Vehicle Control	Starter Actuation Count Utility

Vehicle Customize Setting covered
Customize Setting
Air Conditioner
Compass Calibration
Display
Door Lock
Illuminated Entry
Light Control
Option Setup
Power Window
Retractable Hardtop
Seat
Security
Sensor
Slide Roof
Smart Key / Access
TVSS
Tilt & Telesco
Unit conversion
Warning
Wiper
Wireless Door Lock
Others