


Front and rear shell  
PC+ABS  
Black material  
EDM marks on the surface  
Texture in the middle  
High gloss on the bevel

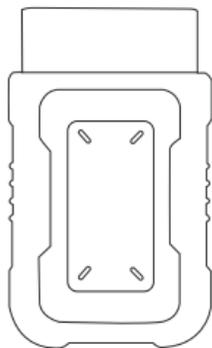

## Software Downloading

Open the website  
<http://www.humzor.cn>

Home page>Support page  
Then find the right software to download and install



1


## APP Guide

### 1. Software Activation

At first, please keep network working, run NEXZDAS series APP. If you are a new customer, please register at first Input your E-mail and set your password to complete binding




Click 'Add a new product' to input the serial number (S/N) and activation code [can be obtained from the envelope in the box ]

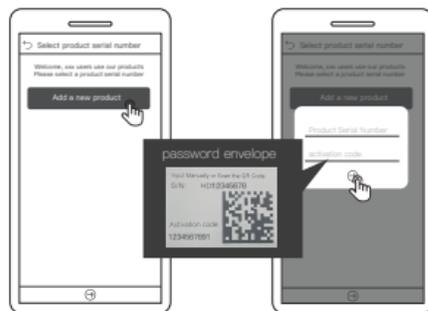

2

### 2. Wifi setting

After enter the HOME page, click the WIFI icon in the top right corner to connect WIFI

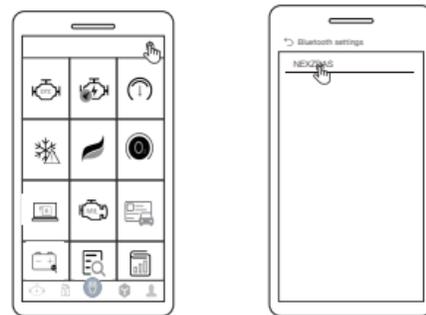

### 3. Software Downloads


After activation completes, click OISCOVER? module and enter App store to download the function you need.



3

### 4. Feedback

Click the feedback button in the upper right corner of the software interface for quick feedback with text or image form. And we will respond to it as soon as possible.

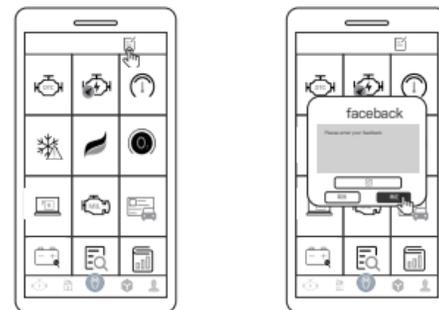

### 5. Product management



Click the "Switch 1 Add Product" button in the "Me" module to enter the product selection interface. You can switch, add and delete product (Delete product can be done by making a left slide)



4

## OBD Interface

Vehicle OBD connector locates in iffent parts,see the picture as below.

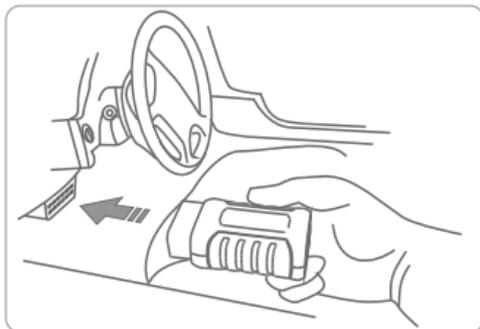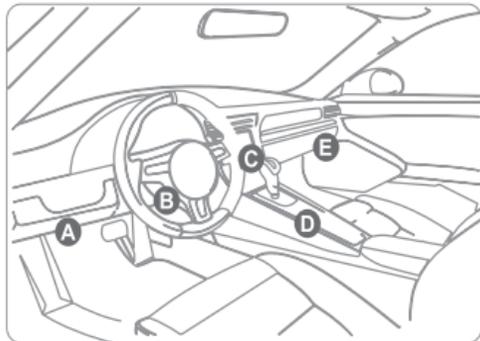

## Specifications

Operating System	Android
Processor	ARM 32-bit Cortex
Communications	WIFI
Input Voltage	DC 9 ~ 24V
Operating Temperature	-20 to 70°C (14-158°F) ,Relative Humidity:<90%
Storage Temperature	-40 to 85°C (-40 to 185°F) ,Relative Humidity:<90%
Dimension	150mm(5.91") * 94mm(3.70") * 40mm(1.57")
unit weight	net weight:0.07kg(0.154lb) Gross Weight:0.166kg(0.336lb)

## Warranty

Warranty Ordinance: Limited two years warranty for NEXZDAS

No Warranty Provided in Following Conditions:

1. Warranty service is not provided beyond the warranty period.
- 2 Product damage caused by incorrect installation or improper operation.
- 3 Sellt. modification, replacement of internal parts, and other man-made damage, etc.
- 4 Product damaged by natural disasters, accidents, infiltration of liquids, etc .

# M400 Series

## Quick Start Guide



[www.humzor.cn](http://www.humzor.cn)



WeChat public account



**HUMZOR**