

Note:

√ Functions marked with √ is fully supported and already existed in former software version.

Number Index number of the special function , you can find the name from the special function table.

Special Function Table

0001	12V Battery SOC Correction Function	0081	Intelligent Driving Mode Integrated Control
0002	12V Current Sensor Offset Correction Function	0082	LATERAL G SENSOR CALIBRATION
0003	A / F Learning	0083	LDC Activation Test
0004	A / F Value imposing	0084	LDWS Reference Point Calibration
0005	AFLS AMING MODE	0085	LDWS Region Code
0006	AMP Operation Test	0086	LEARNT KEYS
0007	AT Adaptation Mode	0087	LONG G SENSOR CALIBRATION (ONLY EPB)
0009	AVM Tolerance compensation - Auto	0089	Learning after replacing the turbocharger actuator
0010	AWD Mode Selection	0090	Level Initialization
0011	Air Bleeding Mode	0091	Limp Home Mode
0012	Air Cut Off Valve Open Mode	0092	Longitudinal G Sensor Calibration (ESC Only)
0013	Alternator TEST	0093	Longitudinal G Sensor Calibration (HAC / DBC Only)
0014	Assembly Check (ECU replacement)	0094	MDPS TEST (Motor Driven Power Steering)
0015	Auto Detected Configuration Reset	0095	MEC Read (Inline)
0016	BSD Radar Calibration	0096	MOBIS MDPS Torque Test
0017	BSD variant coding	0097	MSL IMMO Key Status Information
0018	Battery Discharge Warning History Check	0098	Master Key Delete
0019	Break Pad Change Mode	0099	Master Key Record / Change
0020	CLEAR CAN Learnable Status	0100	Monitoring Test Results
0021	Calibration	0101	Motor / HSG Resolver Calibration
0022	Checking the wear amount of clutch	0102	Neutral Mode
0023	Clutch Learning Read	0103	PAD Change Mode (After Change)
0024	Clutch Learning Reset	0104	PAD Change Mode (Before Change)
0025	Clutch compensation value setting	0105	PCSV TEST (Option)
0026	Code Saving	0106	PDM STATUS INFORMATION
0027	Current FOB Key Check	0107	PODS Reset
0028	DCT Learning Function	0108	PRESSURE SENSOR CALIBRATION
0029	DPF Service Regeneration	0109	Pass.Airbag Realtime Info.
0030	E / C Fluid Pressure Cal.	0110	Pass.Airbag Status with Battery Voltage
0031	E / C Pressure Adjustment Set	0111	Passenger A / Bag Info.
0032	ECM Neutralization	0112	Password Teaching / Changing
0033	ECU Initialization	0113	Power Tailgate Mode Configuration
0034	ECU Serial Number	0114	READ VIN INLINE
0035	ECU Tuning Data Confirm	0115	Read The Number Of Refueling
0036	EOP TEST (Electric Oil Pump Test)	0116	Read VIN

0037	EPB Variant Coding	0117	Readiness Test
0038	EPCU (MCU) self - diagnosis function	0118	Removal of air from engine clutch hydraulic pressure line
0039	EPS Type Recognition	0119	Request if DVD - Slots are Empty
0040	ERM (Engine RPM Monitoring)	0120	Resetting Adaptive Values
0041	ESCL ENABLE OUTPUT CHECK	0121	Resetting Auto T / A Values
0042	ESCL OPEN STATUS CHECK	0122	Resetting Auto Trans Adaptive Values
0043	ESCL STATUS INFORMATION	0123	Resetting E - CVVT Values
0044	EVAP INLINE	0124	Ring Break
0045	EWP Actuating	0125	SCR restarting temporary unrestricting function
0046	Electric Water Pump Control	0126	SCU Parking Application Test
0047	Engine Clutch / Motor Resolver Adaptation	0127	SCU Parking Canceling Test
0049	Engine Test Off	0129	SMK STATUS INFORMATION
0050	Engine Test On	0130	SOC Calibration
0051	Engine coolant filling mode	0131	SPC Calibration
0052	Erase Network Configuration	0132	SPTAC Calibration
0053	Essential work after component replacement	0133	Seat Limit Position Setting
0054	Evap Leak Test [HEV]	0134	Seat Limit Position Setting State
0055	Evap. Leakage Test	0135	Sensor Initialization
0056	Evap. Leakage Test (Inline)	0136	Serial Communication Line Check
0057	FC Run / Stop	0137	Smart Key Code Saving
0058	FOB KEY STATUS INFORMATION	0138	Smatra Neutral Mode
0059	Fluid Circulation Mode	0139	Solenoid valve inspection for hydrogen tank
0060	Fuel Leakage Test	0140	Stabilization of the engine clutch hardware transfer torque
0061	Fuel line air removal	0141	Stack Coolant Pump Actuating
0062	G - Sensor Calibration	0142	Steering Limit Position Setting
0063	Get All S / W Version	0143	TCU Sub Rom Reset
0064	HCU Air Bleeding Mode	0144	TP STATUS INFORMATION
0065	HPCU (MCU / GCU) self - diagnosis function	0145	TPMS Variant Coding
0066	HPCU (MCU,GCU) Diagnosis Parameter Initialization	0146	TPS Circuit Test
0067	Headlamp Levelling	0147	Teaching
0068	Headrest Setting	0148	Tire pressure Save (SET)
0069	High Pressure Release Mode	0149	Torque Coupling Control
0070	IFU Neutralization	0150	Torque Offset Calibration
0071	IPM Status Information	0151	UIP System Identification (Only Brazil)
0072	ISG TEST (Option)	0152	Update from CD
0073	Idle CO Adjustment	0153	Urea Reset Menu
0074	Immobilizer Reset	0154	VARIANT CODING
0075	Initialization of Automatic Resolver Offset Calibration	0155	VCM Learning
0076	Initialization of rear door curtains	0156	WCS Reset
0077	Initialization of the engine clutch inspection line learning and diagnostic information	0157	Wake up Line
0078	Injector Data Input (QR CODE)	0158	Write VIN
0079	Injector Specific Data	0159	XdB Test
0080	Inspection of 12V Battery Status	0160	[N] Position The Adaptive

Area	Model	Year	Engine	System	ECU Info.	Read Code	Clear Code	Live Data	Active Test	Special Func
Europe/General	ACCENT(HC)	2018	G 1.4 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(HC)	2018	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	ACCENT(HC)	2018	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ACCENT(HC)	2018	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(HC)	2018	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(HC)	2018	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(HC)	2018	G 1.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(HC)	2018	G 1.4 MPI	PGS [Dynamic Guideline Camera]	√	√	√	√		
Europe/General	ACCENT(HC)	2018	G 1.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT(HC)	2018	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ACCENT(HC)	2018	G 1.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ACCENT(HC)	2018	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ACCENT(HC)	2018	G 1.4 MPI	SLM [Seat Belt Reminder / Lighting Module]	√	√	√	√	√	
Europe/General	ACCENT(HC)	2018	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(HC)	2018	G 1.6 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(HC)	2018	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	ACCENT(HC)	2018	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ACCENT(HC)	2018	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(HC)	2018	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(HC)	2018	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(HC)	2018	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(HC)	2018	G 1.6 MPI	PGS [Dynamic Guideline Camera]	√	√	√	√		
Europe/General	ACCENT(HC)	2018	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT(HC)	2018	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ACCENT(HC)	2018	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ACCENT(HC)	2018	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ACCENT(HC)	2018	G 1.6 MPI	SLM [Seat Belt Reminder / Lighting Module]	√	√	√	√	√	
Europe/General	ACCENT(HC)	2018	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(HCI)	2018	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(HCI)	2018	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ACCENT(HCI)	2018	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(HCI)	2018	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(HCI)	2018	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(HCI)	2018	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(HCI)	2018	D 1.6 TCI-U2	TPMS [i - Tire Pressure Monitoring System]	√	√	√	√		0145, 0148
Europe/General	ACCENT(HCI)	2018	D 1.6 TCI-U2	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ACCENT(HCI)	2018	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT(HCI)	2018	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129

Europe/General	ACCENT(HCI)	2018	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ACCENT(HCI)	2018	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ACCENT(HCI)	2018	D 1.6 TCI-U2	SLM [Seat Belt Reminder / Lighting Module]	√	√	√	√	√	
Europe/General	ACCENT(HCI)	2018	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(HCI)	2018	G 1.4 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(HCI)	2018	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	ACCENT(HCI)	2018	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ACCENT(HCI)	2018	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(HCI)	2018	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(HCI)	2018	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(HCI)	2018	G 1.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(HCI)	2018	G 1.4 MPI	TPMS [i - Tire Pressure Monitoring System]	√	√	√	√		0145, 0148
Europe/General	ACCENT(HCI)	2018	G 1.4 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ACCENT(HCI)	2018	G 1.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT(HCI)	2018	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ACCENT(HCI)	2018	G 1.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ACCENT(HCI)	2018	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ACCENT(HCI)	2018	G 1.4 MPI	SLM [Seat Belt Reminder / Lighting Module]	√	√	√	√	√	
Europe/General	ACCENT(HCI)	2018	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(HCI)	2018	G 1.6 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(HCI)	2018	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	ACCENT(HCI)	2018	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ACCENT(HCI)	2018	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(HCI)	2018	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(HCI)	2018	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(HCI)	2018	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(HCI)	2018	G 1.6 MPI	TPMS [i - Tire Pressure Monitoring System]	√	√	√	√		0145, 0148
Europe/General	ACCENT(HCI)	2018	G 1.6 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ACCENT(HCI)	2018	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ACCENT(HCI)	2018	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ACCENT(HCI)	2018	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ACCENT(HCI)	2018	G 1.6 MPI	SLM [Seat Belt Reminder / Lighting Module]	√	√	√	√	√	
Europe/General	ACCENT(HCI)	2018	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(HCI)	2017	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ACCENT(HCI)	2017	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(HCI)	2017	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ACCENT(HCI)	2017	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(HCI)	2017	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(HCI)	2017	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	ACCENT(HCI)	2017	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(HCI)	2017	D 1.6 TCI-U2	TPMS [i - Tire Pressure Monitoring System]	√	√	√	√		0145, 0148
Europe/General	ACCENT(HCI)	2017	D 1.6 TCI-U2	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ACCENT(HCI)	2017	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT(HCI)	2017	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ACCENT(HCI)	2017	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ACCENT(HCI)	2017	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ACCENT(HCI)	2017	D 1.6 TCI-U2	SLM [Seat Belt Reminder / Lighting Module]	√	√	√	√	√	
Europe/General	ACCENT(HCI)	2017	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(HCI)	2017	G 1.4 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(HCI)	2017	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	ACCENT(HCI)	2017	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ACCENT(HCI)	2017	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(HCI)	2017	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(HCI)	2017	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(HCI)	2017	G 1.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(HCI)	2017	G 1.4 MPI	TPMS [i - Tire Pressure Monitoring System]	√	√	√	√		0145, 0148
Europe/General	ACCENT(HCI)	2017	G 1.4 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ACCENT(HCI)	2017	G 1.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT(HCI)	2017	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ACCENT(HCI)	2017	G 1.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ACCENT(HCI)	2017	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ACCENT(HCI)	2017	G 1.4 MPI	SLM [Seat Belt Reminder / Lighting Module]	√	√	√	√	√	
Europe/General	ACCENT(HCI)	2017	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(HCI)	2017	G 1.6 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(HCI)	2017	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	ACCENT(HCI)	2017	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(HCI)	2017	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(HCI)	2017	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(HCI)	2017	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(HCI)	2017	G 1.6 MPI	TPMS [i - Tire Pressure Monitoring System]	√	√	√	√		0145, 0148
Europe/General	ACCENT(HCI)	2017	G 1.6 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ACCENT(HCI)	2017	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT(HCI)	2017	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ACCENT(HCI)	2017	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ACCENT(HCI)	2017	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ACCENT(HCI)	2017	G 1.6 MPI	SLM [Seat Belt Reminder / Lighting Module]	√	√	√	√	√	

Europe/General	ACCENT(HCI)	2017	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(LC)	2007	D 1.5 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ACCENT(LC)	2007	D 1.5 TCI-D	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2007	D 1.5 TCI-D	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2007	D 1.5 TCI-D	AIRBAG [SRE - Smart (Dual Stage)]	√	√	√			
Europe/General	ACCENT(LC)	2007	D 1.5 TCI-D	AIRBAG [SRE - LC / HMC]	√	√	√			
Europe/General	ACCENT(LC)	2007	D 1.5 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ACCENT(LC)	2007	G 1.3 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2007	G 1.3 SOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2007	G 1.3 SOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2007	G 1.3 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2007	G 1.3 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2007	G 1.3 SOHC	AIRBAG [SRE - Smart (Dual Stage)]	√	√	√			
Europe/General	ACCENT(LC)	2007	G 1.3 SOHC	AIRBAG [SRE - LC / HMC]	√	√	√			
Europe/General	ACCENT(LC)	2007	G 1.3 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ACCENT(LC)	2007	G 1.5 SOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0116, 0055
Europe/General	ACCENT(LC)	2007	G 1.5 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2007	G 1.5 SOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2007	G 1.5 SOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2007	G 1.5 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2007	G 1.5 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2007	G 1.5 SOHC	AIRBAG [SRE - Smart (Dual Stage)]	√	√	√			
Europe/General	ACCENT(LC)	2007	G 1.5 SOHC	AIRBAG [SRE - LC / HMC]	√	√	√			
Europe/General	ACCENT(LC)	2007	G 1.5 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ACCENT(LC)	2007	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0116, 0055
Europe/General	ACCENT(LC)	2007	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2007	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2007	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2007	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2007	G 1.6 DOHC	AIRBAG [SRE - Smart (Dual Stage)]	√	√	√			
Europe/General	ACCENT(LC)	2007	G 1.6 DOHC	AIRBAG [SRE - LC / HMC]	√	√	√			
Europe/General	ACCENT(LC)	2007	G 1.6 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ACCENT(LC)	2006	D 1.5 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ACCENT(LC)	2006	D 1.5 TCI-D	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2006	D 1.5 TCI-D	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2006	D 1.5 TCI-D	AIRBAG [SRE - Smart (Dual Stage)]	√	√	√			
Europe/General	ACCENT(LC)	2006	D 1.5 TCI-D	AIRBAG [SRE - LC / HMC]	√	√	√			
Europe/General	ACCENT(LC)	2006	D 1.5 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ACCENT(LC)	2006	G 1.3 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2006	G 1.3 SOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2006	G 1.3 SOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2006	G 1.3 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2006	G 1.3 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2006	G 1.3 SOHC	AIRBAG [SRE - Smart (Dual Stage)]	√	√	√			
Europe/General	ACCENT(LC)	2006	G 1.3 SOHC	AIRBAG [SRE - LC / HMC]	√	√	√			

Europe/General	ACCENT(LC)	2006	G 1.3 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ACCENT(LC)	2006	G 1.5 SOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0116, 0055
Europe/General	ACCENT(LC)	2006	G 1.5 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2006	G 1.5 SOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2006	G 1.5 SOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2006	G 1.5 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2006	G 1.5 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2006	G 1.5 SOHC	AIRBAG [SRE - Smart (Dual Stage)]	√	√	√			
Europe/General	ACCENT(LC)	2006	G 1.5 SOHC	AIRBAG [SRE - LC / HMC]	√	√	√			
Europe/General	ACCENT(LC)	2006	G 1.5 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ACCENT(LC)	2006	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0116, 0055
Europe/General	ACCENT(LC)	2006	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2006	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2006	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2006	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2006	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2006	G 1.6 DOHC	AIRBAG [SRE - Smart (Dual Stage)]	√	√	√			
Europe/General	ACCENT(LC)	2006	G 1.6 DOHC	AIRBAG [SRE - LC / HMC]	√	√	√			
Europe/General	ACCENT(LC)	2006	G 1.6 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ACCENT(LC)	2005	D 1.5 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ACCENT(LC)	2005	D 1.5 TCI-D	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2005	D 1.5 TCI-D	AIRBAG [SRE - Smart (Dual Stage)]	√	√	√			
Europe/General	ACCENT(LC)	2005	D 1.5 TCI-D	AIRBAG [SRE - LC / HMC]	√	√	√			
Europe/General	ACCENT(LC)	2005	D 1.5 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ACCENT(LC)	2005	G 1.3 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2005	G 1.3 SOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2005	G 1.3 SOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2005	G 1.3 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2005	G 1.3 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2005	G 1.3 SOHC	AIRBAG [SRE - Smart (Dual Stage)]	√	√	√			
Europe/General	ACCENT(LC)	2005	G 1.3 SOHC	AIRBAG [SRE - LC / HMC]	√	√	√			
Europe/General	ACCENT(LC)	2005	G 1.3 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ACCENT(LC)	2005	G 1.5 SOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0116, 0055
Europe/General	ACCENT(LC)	2005	G 1.5 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2005	G 1.5 SOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2005	G 1.5 SOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2005	G 1.5 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2005	G 1.5 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2005	G 1.5 SOHC	AIRBAG [SRE - Smart (Dual Stage)]	√	√	√			
Europe/General	ACCENT(LC)	2005	G 1.5 SOHC	AIRBAG [SRE - LC / HMC]	√	√	√			
Europe/General	ACCENT(LC)	2005	G 1.5 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ACCENT(LC)	2005	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0116, 0055
Europe/General	ACCENT(LC)	2005	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2005	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2005	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		

Europe/General	ACCENT(LC)	2005	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2005	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2005	G 1.6 DOHC	AIRBAG [SRE - Smart (Dual Stage)]	√	√	√			
Europe/General	ACCENT(LC)	2005	G 1.6 DOHC	AIRBAG [SRE - LC / HMC]	√	√	√			
Europe/General	ACCENT(LC)	2005	G 1.6 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ACCENT(LC)	2004	D 1.5 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ACCENT(LC)	2004	D 1.5 TCI-D	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2004	D 1.5 TCI-D	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2004	D 1.5 TCI-D	AIRBAG [SRE - Smart (Dual Stage)]	√	√	√			
Europe/General	ACCENT(LC)	2004	D 1.5 TCI-D	AIRBAG [SRE - LC / HMC]	√	√	√			
Europe/General	ACCENT(LC)	2004	D 1.5 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ACCENT(LC)	2004	G 1.3 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2004	G 1.3 SOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2004	G 1.3 SOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2004	G 1.3 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2004	G 1.3 SOHC	AIRBAG [SRE - Smart (Dual Stage)]	√	√	√			
Europe/General	ACCENT(LC)	2004	G 1.3 SOHC	AIRBAG [SRE - LC / HMC]	√	√	√			
Europe/General	ACCENT(LC)	2004	G 1.3 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ACCENT(LC)	2004	G 1.5 SOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	ACCENT(LC)	2004	G 1.5 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2004	G 1.5 SOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2004	G 1.5 SOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2004	G 1.5 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2004	G 1.5 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2004	G 1.5 SOHC	AIRBAG [SRE - Smart (Dual Stage)]	√	√	√			
Europe/General	ACCENT(LC)	2004	G 1.5 SOHC	AIRBAG [SRE - LC / HMC]	√	√	√			
Europe/General	ACCENT(LC)	2004	G 1.5 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ACCENT(LC)	2004	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	ACCENT(LC)	2004	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2004	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2004	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2004	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2004	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2004	G 1.6 DOHC	AIRBAG [SRE - Smart (Dual Stage)]	√	√	√			
Europe/General	ACCENT(LC)	2004	G 1.6 DOHC	AIRBAG [SRE - LC / HMC]	√	√	√			
Europe/General	ACCENT(LC)	2004	G 1.6 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ACCENT(LC)	2003	D 1.5 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ACCENT(LC)	2003	D 1.5 TCI-D	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2003	D 1.5 TCI-D	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2003	D 1.5 TCI-D	AIRBAG [SRE - Smart (Dual Stage)]	√	√	√			
Europe/General	ACCENT(LC)	2003	D 1.5 TCI-D	AIRBAG [SRE - LC / HMC]	√	√	√			
Europe/General	ACCENT(LC)	2003	D 1.5 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ACCENT(LC)	2003	G 1.3 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2003	G 1.3 SOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2003	G 1.3 SOHC	ENGINE [Unleaded GEN]	√	√	√	√		

Europe/General	ACCENT(LC)	2003	G 1.3 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2003	G 1.3 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2003	G 1.3 SOHC	AIRBAG [SRE - Smart (Dual Stage)]	√	√	√			
Europe/General	ACCENT(LC)	2003	G 1.3 SOHC	AIRBAG [SRE - LC / HMC]	√	√	√			
Europe/General	ACCENT(LC)	2003	G 1.3 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ACCENT(LC)	2003	G 1.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√		0055
Europe/General	ACCENT(LC)	2003	G 1.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2003	G 1.5 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2003	G 1.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2003	G 1.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2003	G 1.5 DOHC	AIRBAG [SRE - Smart (Dual Stage)]	√	√	√			
Europe/General	ACCENT(LC)	2003	G 1.5 DOHC	AIRBAG [SRE - LC / HMC]	√	√	√			
Europe/General	ACCENT(LC)	2003	G 1.5 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ACCENT(LC)	2003	G 1.5 SOHC	ENGINE [Unleaded OBD - II]	√	√	√	√		0055
Europe/General	ACCENT(LC)	2003	G 1.5 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2003	G 1.5 SOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2003	G 1.5 SOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2003	G 1.5 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2003	G 1.5 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2003	G 1.5 SOHC	AIRBAG [SRE - Smart (Dual Stage)]	√	√	√			
Europe/General	ACCENT(LC)	2003	G 1.5 SOHC	AIRBAG [SRE - LC / HMC]	√	√	√			
Europe/General	ACCENT(LC)	2003	G 1.5 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ACCENT(LC)	2003	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√		0055
Europe/General	ACCENT(LC)	2003	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2003	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2003	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2003	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2003	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2003	G 1.6 DOHC	AIRBAG [SRE - Smart (Dual Stage)]	√	√	√			
Europe/General	ACCENT(LC)	2003	G 1.6 DOHC	AIRBAG [SRE - LC / HMC]	√	√	√			
Europe/General	ACCENT(LC)	2003	G 1.6 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ACCENT(LC)	2002	D 1.5 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ACCENT(LC)	2002	D 1.5 TCI-D	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2002	D 1.5 TCI-D	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2002	D 1.5 TCI-D	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ACCENT(LC)	2002	D 1.5 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ACCENT(LC)	2002	G 1.3 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2002	G 1.3 SOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2002	G 1.3 SOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2002	G 1.3 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2002	G 1.3 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2002	G 1.3 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ACCENT(LC)	2002	G 1.3 SOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ACCENT(LC)	2002	G 1.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2002	G 1.5 DOHC	ENGINE [Leaded All]	√	√	√	√		0073

Europe/General	ACCENT(LC)	2002	G 1.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√		0055
Europe/General	ACCENT(LC)	2002	G 1.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2002	G 1.5 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2002	G 1.5 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ACCENT(LC)	2002	G 1.5 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ACCENT(LC)	2002	G 1.5 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2002	G 1.5 SOHC	ENGINE [Unleaded OBD - II]	√	√	√	√		0055
Europe/General	ACCENT(LC)	2002	G 1.5 SOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2002	G 1.5 SOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2002	G 1.5 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2002	G 1.5 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2002	G 1.5 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ACCENT(LC)	2002	G 1.5 SOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ACCENT(LC)	2002	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2002	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2002	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√		0055
Europe/General	ACCENT(LC)	2002	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2002	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2002	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2002	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ACCENT(LC)	2002	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ACCENT(LC)	2001	D 1.5 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ACCENT(LC)	2001	D 1.5 TCI-D	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2001	D 1.5 TCI-D	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2001	D 1.5 TCI-D	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ACCENT(LC)	2001	D 1.5 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ACCENT(LC)	2001	G 1.3 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2001	G 1.3 SOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2001	G 1.3 SOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2001	G 1.3 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2001	G 1.3 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2001	G 1.3 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ACCENT(LC)	2001	G 1.3 SOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ACCENT(LC)	2001	G 1.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2001	G 1.5 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2001	G 1.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√		0055
Europe/General	ACCENT(LC)	2001	G 1.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2001	G 1.5 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2001	G 1.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2001	G 1.5 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ACCENT(LC)	2001	G 1.5 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ACCENT(LC)	2001	G 1.5 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2001	G 1.5 SOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2001	G 1.5 SOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2001	G 1.5 SOHC	AT [Automatic Transaxle]		√	√	√	√	

Europe/General	ACCENT(LC)	2001	G 1.5 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2001	G 1.5 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ACCENT(LC)	2001	G 1.5 SOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ACCENT(LC)	2001	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2001	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2001	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√		0055
Europe/General	ACCENT(LC)	2001	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2001	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2001	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2001	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ACCENT(LC)	2001	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ACCENT(LC)	2000	D 1.5 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ACCENT(LC)	2000	D 1.5 TCI-D	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2000	D 1.5 TCI-D	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2000	D 1.5 TCI-D	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ACCENT(LC)	2000	D 1.5 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ACCENT(LC)	2000	G 1.3 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2000	G 1.3 SOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2000	G 1.3 SOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2000	G 1.3 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2000	G 1.3 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2000	G 1.3 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ACCENT(LC)	2000	G 1.3 SOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ACCENT(LC)	2000	G 1.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2000	G 1.5 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2000	G 1.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√		0055
Europe/General	ACCENT(LC)	2000	G 1.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2000	G 1.5 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2000	G 1.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2000	G 1.5 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ACCENT(LC)	2000	G 1.5 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ACCENT(LC)	2000	G 1.5 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2000	G 1.5 SOHC	ENGINE [Unleaded OBD - II]	√	√	√	√		0055
Europe/General	ACCENT(LC)	2000	G 1.5 SOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2000	G 1.5 SOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2000	G 1.5 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2000	G 1.5 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ACCENT(LC)	2000	G 1.5 SOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ACCENT(LC)	2000	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ACCENT(LC)	2000	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ACCENT(LC)	2000	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√		0055
Europe/General	ACCENT(LC)	2000	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ACCENT(LC)	2000	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ACCENT(LC)	2000	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ACCENT(LC)	2000	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			

Europe/General	ACCENT(LC)	2000	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ACCENT(MC)	2011	D 1.5 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2011	D 1.5 TCI-U	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(MC)	2011	D 1.5 TCI-U	ABS [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ACCENT(MC)	2011	D 1.5 TCI-U	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ACCENT(MC)	2011	D 1.5 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2011	D 1.5 TCI-U	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(MC)	2011	D 1.5 TCI-U	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	ACCENT(MC)	2011	G 1.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0120
Europe/General	ACCENT(MC)	2011	G 1.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0120
Europe/General	ACCENT(MC)	2011	G 1.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ACCENT(MC)	2011	G 1.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(MC)	2011	G 1.4 DOHC	ABS [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ACCENT(MC)	2011	G 1.4 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ACCENT(MC)	2011	G 1.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2011	G 1.4 DOHC	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(MC)	2011	G 1.4 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
Europe/General	ACCENT(MC)	2011	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0116, 0120, 0158, 0055
Europe/General	ACCENT(MC)	2011	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ACCENT(MC)	2011	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0120
Europe/General	ACCENT(MC)	2011	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0120
Europe/General	ACCENT(MC)	2011	G 1.6 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(MC)	2011	G 1.6 DOHC	ABS [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ACCENT(MC)	2011	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ACCENT(MC)	2011	G 1.6 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2011	G 1.6 DOHC	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(MC)	2011	G 1.6 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
Europe/General	ACCENT(MC)	2010	D 1.5 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2010	D 1.5 TCI-U	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(MC)	2010	D 1.5 TCI-U	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ACCENT(MC)	2010	D 1.5 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2010	D 1.5 TCI-U	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(MC)	2010	D 1.5 TCI-U	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	ACCENT(MC)	2010	G 1.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0120
Europe/General	ACCENT(MC)	2010	G 1.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0120
Europe/General	ACCENT(MC)	2010	G 1.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ACCENT(MC)	2010	G 1.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(MC)	2010	G 1.4 DOHC	ABS [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ACCENT(MC)	2010	G 1.4 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ACCENT(MC)	2010	G 1.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2010	G 1.4 DOHC	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(MC)	2010	G 1.4 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
Europe/General	ACCENT(MC)	2010	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0116, 0120, 0158, 0055

Europe/General	ACCENT(MC)	2010	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ACCENT(MC)	2010	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0120
Europe/General	ACCENT(MC)	2010	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0120
Europe/General	ACCENT(MC)	2010	G 1.6 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(MC)	2010	G 1.6 DOHC	ABS [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ACCENT(MC)	2010	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ACCENT(MC)	2010	G 1.6 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2010	G 1.6 DOHC	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(MC)	2010	G 1.6 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
Europe/General	ACCENT(MC)	2009	D 1.5 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2009	D 1.5 TCI-U	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(MC)	2009	D 1.5 TCI-U	ABS [ABS (MGH - 25)]	√	√	√	√	√	0064
Europe/General	ACCENT(MC)	2009	D 1.5 TCI-U	ABS [ABS (MGH - 40)]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2009	D 1.5 TCI-U	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ACCENT(MC)	2009	D 1.5 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2009	D 1.5 TCI-U	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(MC)	2009	D 1.5 TCI-U	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	ACCENT(MC)	2009	G 1.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0120
Europe/General	ACCENT(MC)	2009	G 1.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0120
Europe/General	ACCENT(MC)	2009	G 1.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ACCENT(MC)	2009	G 1.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(MC)	2009	G 1.4 DOHC	ABS [ABS (MGH - 25)]	√	√	√	√	√	0064
Europe/General	ACCENT(MC)	2009	G 1.4 DOHC	ABS [ABS (MGH - 40)]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2009	G 1.4 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ACCENT(MC)	2009	G 1.4 DOHC	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(MC)	2009	G 1.4 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0116, 0120, 0158, 0055
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0120
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0120
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	ABS [ABS (MGH - 25)]	√	√	√	√	√	0064
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	ABS [ABS (MGH - 40)]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(MC)	2009	G 1.6 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
Europe/General	ACCENT(MC)	2008	D 1.5 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2008	D 1.5 TCI-U	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(MC)	2008	D 1.5 TCI-U	ABS [Anti - Lock Brake (MGH - 25)]	√	√	√	√	√	0064
Europe/General	ACCENT(MC)	2008	D 1.5 TCI-U	ABS [Anti - Lock Brake (MGH - 40)]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2008	D 1.5 TCI-U	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ACCENT(MC)	2008	D 1.5 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2008	D 1.5 TCI-U	EPS [Motor Driven Power Steering]	√	√	√	√		

Europe/General	ACCENT(MC)	2008	D 1.5 TCI-U	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	ACCENT(MC)	2008	G 1.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0120
Europe/General	ACCENT(MC)	2008	G 1.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0120
Europe/General	ACCENT(MC)	2008	G 1.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ACCENT(MC)	2008	G 1.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(MC)	2008	G 1.4 DOHC	ABS [Anti - Lock Brake (MGH - 25)]	√	√	√	√	√	0064
Europe/General	ACCENT(MC)	2008	G 1.4 DOHC	ABS [Anti - Lock Brake (MGH - 40)]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2008	G 1.4 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ACCENT(MC)	2008	G 1.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2008	G 1.4 DOHC	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(MC)	2008	G 1.4 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
Europe/General	ACCENT(MC)	2008	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0116, 0120, 0158, 0055
Europe/General	ACCENT(MC)	2008	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ACCENT(MC)	2008	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0120
Europe/General	ACCENT(MC)	2008	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0120
Europe/General	ACCENT(MC)	2008	G 1.6 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(MC)	2008	G 1.6 DOHC	ABS [Anti - Lock Brake (MGH - 25)]	√	√	√	√	√	0064
Europe/General	ACCENT(MC)	2008	G 1.6 DOHC	ABS [Anti - Lock Brake (MGH - 40)]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2008	G 1.6 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2008	G 1.6 DOHC	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(MC)	2008	G 1.6 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
Europe/General	ACCENT(MC)	2007	D 1.5 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2007	D 1.5 TCI-U	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(MC)	2007	D 1.5 TCI-U	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	ACCENT(MC)	2007	D 1.5 TCI-U	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ACCENT(MC)	2007	D 1.5 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2007	D 1.5 TCI-U	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(MC)	2007	D 1.5 TCI-U	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	ACCENT(MC)	2007	G 1.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0120
Europe/General	ACCENT(MC)	2007	G 1.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0120
Europe/General	ACCENT(MC)	2007	G 1.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ACCENT(MC)	2007	G 1.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(MC)	2007	G 1.4 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	ACCENT(MC)	2007	G 1.4 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ACCENT(MC)	2007	G 1.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2007	G 1.4 DOHC	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(MC)	2007	G 1.4 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
Europe/General	ACCENT(MC)	2007	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0116, 0120, 0158, 0055
Europe/General	ACCENT(MC)	2007	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ACCENT(MC)	2007	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0120
Europe/General	ACCENT(MC)	2007	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0120
Europe/General	ACCENT(MC)	2007	G 1.6 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(MC)	2007	G 1.6 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	0064

Europe/General	ACCENT(MC)	2007	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ACCENT(MC)	2007	G 1.6 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2007	G 1.6 DOHC	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(MC)	2007	G 1.6 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
Europe/General	ACCENT(MC)	2006	D 1.5 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2006	D 1.5 TCI-U	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(MC)	2006	D 1.5 TCI-U	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	ACCENT(MC)	2006	D 1.5 TCI-U	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ACCENT(MC)	2006	D 1.5 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2006	D 1.5 TCI-U	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(MC)	2006	D 1.5 TCI-U	IMMO [Immobilizer]				√		
Europe/General	ACCENT(MC)	2006	G 1.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0120
Europe/General	ACCENT(MC)	2006	G 1.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0120
Europe/General	ACCENT(MC)	2006	G 1.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(MC)	2006	G 1.4 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	ACCENT(MC)	2006	G 1.4 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ACCENT(MC)	2006	G 1.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2006	G 1.4 DOHC	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(MC)	2006	G 1.4 DOHC	IMMO [Immobilizer]				√		
Europe/General	ACCENT(MC)	2006	G 1.6 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0116, 0120, 0158, 0055
Europe/General	ACCENT(MC)	2006	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ACCENT(MC)	2006	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0120
Europe/General	ACCENT(MC)	2006	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0120
Europe/General	ACCENT(MC)	2006	G 1.6 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(MC)	2006	G 1.6 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	ACCENT(MC)	2006	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ACCENT(MC)	2006	G 1.6 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(MC)	2006	G 1.6 DOHC	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT(MC)	2006	G 1.6 DOHC	IMMO [Immobilizer]				√		
Europe/General	ACCENT(RB)	2018	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	ACCENT(RB)	2018	D 1.6 TCI-U2	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	ACCENT(RB)	2018	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2018	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2018	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2018	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2018	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2018	D 1.6 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2018	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ACCENT(RB)	2018	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ACCENT(RB)	2018	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0138, 0112, 0086, 0091, 0138, 0102, 0086
Europe/General	ACCENT(RB)	2018	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2018	D 1.6 TCI-U2	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2018	D 1.6 TCI-U2	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2018	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026

Europe/General	ACCENT(RB)	2018	G 1.4 MPI-GAMMA	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-GAMMA	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-GAMMA	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-GAMMA	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-GAMMA	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-GAMMA	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-GAMMA	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-GAMMA	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-GAMMA	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-GAMMA	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-GAMMA	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-GAMMA	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-GAMMA	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-GAMMA	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-KAPPA	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-KAPPA	ENGINE [Unleaded All]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-KAPPA	AT [Continuously Variable Transmission]	√	√	√	√		0122
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-KAPPA	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-KAPPA	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-KAPPA	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-KAPPA	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-KAPPA	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-KAPPA	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-KAPPA	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-KAPPA	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-KAPPA	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-KAPPA	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2018	G 1.4 MPI-KAPPA	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2018	G 1.6 GDI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2018	G 1.6 GDI	ENGINE [Unleaded All]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2018	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2018	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2018	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2018	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2018	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2018	G 1.6 GDI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2018	G 1.6 GDI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ACCENT(RB)	2018	G 1.6 GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ACCENT(RB)	2018	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT(RB)	2018	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2018	G 1.6 GDI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2018	G 1.6 GDI	BCM [Body Control Module (SMK -)]	√	√	√	√	√	

Europe/General	ACCENT(RB)	2018	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2018	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2018	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2018	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2018	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2018	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2018	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2018	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2018	G 1.6 MPI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2018	G 1.6 MPI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ACCENT(RB)	2018	G 1.6 MPI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ACCENT(RB)	2018	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT(RB)	2018	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2018	G 1.6 MPI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2018	G 1.6 MPI	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2017	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	ACCENT(RB)	2017	D 1.6 TCI-U2	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	ACCENT(RB)	2017	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2017	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2017	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2017	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2017	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2017	D 1.6 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2017	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ACCENT(RB)	2017	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ACCENT(RB)	2017	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT(RB)	2017	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2017	D 1.6 TCI-U2	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2017	D 1.6 TCI-U2	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2017	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-GAMMA	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-GAMMA	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-GAMMA	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-GAMMA	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-GAMMA	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-GAMMA	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-GAMMA	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-GAMMA	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-GAMMA	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-GAMMA	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-GAMMA	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-GAMMA	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-GAMMA	BCM [Body Control Module (SMK+)]	√	√	√	√	√	

Europe/General	ACCENT(RB)	2017	G 1.4 MPI-GAMMA	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-KAPPA	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-KAPPA	ENGINE [Unleaded All]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-KAPPA	AT [Continuously Variable Transmission]	√	√	√	√		0122
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-KAPPA	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-KAPPA	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-KAPPA	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-KAPPA	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-KAPPA	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-KAPPA	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-KAPPA	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-KAPPA	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-KAPPA	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-KAPPA	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-KAPPA	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2017	G 1.4 MPI-KAPPA	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2017	G 1.6 GDI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2017	G 1.6 GDI	ENGINE [Unleaded All]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2017	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2017	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2017	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2017	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2017	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2017	G 1.6 GDI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ACCENT(RB)	2017	G 1.6 GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ACCENT(RB)	2017	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT(RB)	2017	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2017	G 1.6 GDI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2017	G 1.6 GDI	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2017	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2017	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2017	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2017	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2017	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2017	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2017	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2017	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2017	G 1.6 MPI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2017	G 1.6 MPI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ACCENT(RB)	2017	G 1.6 MPI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ACCENT(RB)	2017	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT(RB)	2017	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129

Europe/General	ACCENT(RB)	2017	G 1.6 MPI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2017	G 1.6 MPI	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2017	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2016	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	ACCENT(RB)	2016	D 1.6 TCI-U2	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	ACCENT(RB)	2016	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2016	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2016	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2016	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2016	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2016	D 1.6 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2016	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ACCENT(RB)	2016	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ACCENT(RB)	2016	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT(RB)	2016	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2016	D 1.6 TCI-U2	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2016	D 1.6 TCI-U2	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2016	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-GAMMA	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-GAMMA	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-GAMMA	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-GAMMA	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-GAMMA	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-GAMMA	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-GAMMA	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-GAMMA	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-GAMMA	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-GAMMA	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-GAMMA	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-GAMMA	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-GAMMA	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-GAMMA	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-KAPPA	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-KAPPA	ENGINE [Unleaded All]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-KAPPA	AT [Continuously Variable Transmission]	√	√	√	√		0122
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-KAPPA	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-KAPPA	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-KAPPA	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-KAPPA	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-KAPPA	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-KAPPA	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-KAPPA	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-KAPPA	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129

Europe/General	ACCENT(RB)	2016	G 1.4 MPI-KAPPA	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-KAPPA	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2016	G 1.4 MPI-KAPPA	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2016	G 1.6 GDI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2016	G 1.6 GDI	ENGINE [Unleaded All]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2016	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2016	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2016	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2016	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2016	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2016	G 1.6 GDI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2016	G 1.6 GDI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ACCENT(RB)	2016	G 1.6 GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ACCENT(RB)	2016	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT(RB)	2016	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2016	G 1.6 GDI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2016	G 1.6 GDI	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2016	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2016	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2016	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2016	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2016	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2016	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2016	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2016	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2016	G 1.6 MPI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2016	G 1.6 MPI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ACCENT(RB)	2016	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT(RB)	2016	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2016	G 1.6 MPI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2016	G 1.6 MPI	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2016	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	IMMO [Immobilizer]				√		

Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2015	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	IMMO [Immobilizer]				√		
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-GAMMA	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	ENGINE [Unleaded All]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	AT [Continuously Variable Transmission]	√	√	√	√		0122
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	IMMO [Immobilizer]				√		
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2015	G 1.4 MPI-KAPPA	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	ENGINE [Unleaded All]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	IMMO [Immobilizer]				√		

Europe/General	ACCENT(RB)	2015	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2015	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2015	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2014	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2014	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2014	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2014	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2014	D 1.6 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2014	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	ACCENT(RB)	2014	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2014	D 1.6 TCI-U2	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2014	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	IMMO [Immobilizer]				√		
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-GAMMA	CODE [Transmitter Code Saving]				√		0026

Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	ENGINE [Unleaded All]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	AT [Continuously Variable Transmission]	√	√	√	√		0122
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	IMMO [Immobilizer]				√		
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2014	G 1.4 MPI-KAPPA	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	ENGINE [Unleaded All]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	IMMO [Immobilizer]				√		
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2014	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2014	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2013	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2013	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			

Europe/General	ACCENT(RB)	2013	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2013	D 1.6 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2013	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	ACCENT(RB)	2013	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2013	D 1.6 TCI-U2	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2013	D 1.6 TCI-U2	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2013	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	IMMO [Immobilizer]				√		
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-GAMMA	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	ENGINE [Unleaded All]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	IMMO [Immobilizer]				√		
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2013	G 1.4 MPI-KAPPA	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129

Europe/General	ACCENT(RB)	2013	G 1.6 MPI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2013	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	EPS [Motor driven Power Steering (2012.02.23~)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	ACCENT(RB)	2012	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	EPS [Motor driven Power Steering (~2012.02.22)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	EPS [Motor driven Power Steering (2012.02.23~)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	ACCENT(RB)	2012	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	EPS [Motor driven Power Steering (~2012.02.22)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	EPS [Motor driven Power Steering (2012.02.23~)]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	IMMO [Immobilizer]				√		

Europe/General	ACCENT(RB)	2012	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	ACCENT(RB)	2012	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	ACCENT(RB)	2011	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	ACCENT(RB)	2011	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	ACCENT(RB)	2011	G 1.6 MPI	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	ACCENT(X3)	1999	G 1.3 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	ACCENT(X3)	1999	G 1.3 SOHC	AIRBAG [Airbag Control]			√	√	√	
Europe/General	ACCENT(X3)	1999	G 1.3 SOHC	IMMO [Immobilizer]			√	√	√	0074, 0098, 0099, 0102

Europe/General	ACCENT(X3)	1996	G 1.3 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	ACCENT(X3)	1996	G 1.3 SOHC	AIRBAG [Airbag Control]		√	√	√	√	
Europe/General	ACCENT(X3)	1996	G 1.3 SOHC	IMMO [Immobilizer]		√	√	√	√	0074, 0098, 0099, 0102
Europe/General	ACCENT(X3)	1996	G 1.5 DOHC	ENGINE [Unleaded MAP]		√	√	√	√	
Europe/General	ACCENT(X3)	1996	G 1.5 DOHC	ENGINE [Unleaded IMMO]		√	√	√	√	
Europe/General	ACCENT(X3)	1996	G 1.5 DOHC	ENGINE [Unleaded OBD - II]		√	√	√	√	
Europe/General	ACCENT(X3)	1996	G 1.5 DOHC	ENGINE [Unleaded MAF]		√	√	√	√	
Europe/General	ACCENT(X3)	1996	G 1.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	ACCENT(X3)	1996	G 1.5 DOHC	AIRBAG [Airbag Control]		√	√	√	√	
Europe/General	ACCENT(X3)	1996	G 1.5 DOHC	IMMO [Immobilizer]		√	√	√	√	0074, 0098, 0099, 0102
Europe/General	ACCENT(X3)	1996	G 1.5 SOHC	ENGINE [Unleaded IMMO]		√	√	√	√	
Europe/General	ACCENT(X3)	1996	G 1.5 SOHC	ENGINE [Leaded]		√	√	√	√	
Europe/General	ACCENT(X3)	1996	G 1.5 SOHC	ENGINE [Unleaded GEN]		√	√	√	√	
Europe/General	ACCENT(X3)	1996	G 1.5 SOHC	ENGINE [Unleaded OBD - II]		√	√	√	√	
Europe/General	ACCENT(X3)	1996	G 1.5 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	ACCENT(X3)	1996	G 1.5 SOHC	AIRBAG [Airbag Control]		√	√	√	√	
Europe/General	ACCENT(X3)	1996	G 1.5 SOHC	IMMO [Immobilizer]		√	√	√	√	0074, 0098, 0099, 0102
Europe/General	ACCENT(X3)	1995	G 1.3 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	ACCENT(X3)	1995	G 1.3 SOHC	AIRBAG [Airbag Control]		√	√	√	√	
Europe/General	ACCENT(X3)	1995	G 1.3 SOHC	IMMO [Immobilizer]		√	√	√	√	0074, 0098, 0099, 0102
Europe/General	ACCENT(X3)	1995	G 1.5 DOHC	ENGINE [Unleaded MAP]		√	√	√	√	
Europe/General	ACCENT(X3)	1995	G 1.5 DOHC	ENGINE [Unleaded IMMO]		√	√	√	√	
Europe/General	ACCENT(X3)	1995	G 1.5 DOHC	ENGINE [Unleaded OBD - II]		√	√	√	√	
Europe/General	ACCENT(X3)	1995	G 1.5 DOHC	ENGINE [Unleaded MAF]		√	√	√	√	
Europe/General	ACCENT(X3)	1995	G 1.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	ACCENT(X3)	1995	G 1.5 DOHC	AIRBAG [Airbag Control]		√	√	√	√	
Europe/General	ACCENT(X3)	1995	G 1.5 DOHC	IMMO [Immobilizer]		√	√	√	√	0074, 0098, 0099, 0102
Europe/General	ACCENT(X3)	1995	G 1.5 SOHC	ENGINE [Unleaded IMMO]		√	√	√	√	
Europe/General	ACCENT(X3)	1995	G 1.5 SOHC	ENGINE [Unleaded OBD - II]		√	√	√	√	
Europe/General	ACCENT(X3)	1995	G 1.5 SOHC	ENGINE [Leaded]		√	√	√	√	
Europe/General	ACCENT(X3)	1995	G 1.5 SOHC	AIRBAG [Airbag Control]		√	√	√	√	
Europe/General	ACCENT(X3)	1995	G 1.5 SOHC	IMMO [Immobilizer]		√	√	√	√	0074, 0098, 0099, 0102
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.4 MPI	ENGINE [Engine Control]		√	√	√	√	0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0007, 0122
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√	√	

Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.4 MPI	TPMS [i - Tire Pressure Monitoring System]	√	√	√	√		0145, 0148
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.4 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.4 MPI	SLM [Seat Belt Reminder / Lighting Module]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.4 MPI	ECALL [e - Call]	√	√	√			
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.6 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.6 MPI	TPMS [i - Tire Pressure Monitoring System]	√	√	√	√		0145, 0148
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.6 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.6 MPI	SLM [Seat Belt Reminder / Lighting Module]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.6 MPI	ECALL [e - Call]	√	√	√			
Europe/General	ACCENT/SOLARIS(HCR)	2018	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026

Europe/General	ACCENT/SOLARIS(RBr)	2017	G 1.4 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT/SOLARIS(RBr)	2017	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT/SOLARIS(RBr)	2017	G 1.4 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT/SOLARIS(RBr)	2017	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT/SOLARIS(RBr)	2017	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT/SOLARIS(RBr)	2017	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2017	G 1.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT/SOLARIS(RBr)	2017	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT/SOLARIS(RBr)	2017	G 1.4 MPI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2017	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT/SOLARIS(RBr)	2017	G 1.6 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT/SOLARIS(RBr)	2017	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT/SOLARIS(RBr)	2017	G 1.6 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT/SOLARIS(RBr)	2017	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT/SOLARIS(RBr)	2017	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT/SOLARIS(RBr)	2017	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2017	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT/SOLARIS(RBr)	2017	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT/SOLARIS(RBr)	2017	G 1.6 MPI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2017	G 1.6 MPI	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2017	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT/SOLARIS(RBr)	2016	G 1.4 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT/SOLARIS(RBr)	2016	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT/SOLARIS(RBr)	2016	G 1.4 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093

Europe/General	ACCENT/SOLARIS(RBr)	2016	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT/SOLARIS(RBr)	2016	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT/SOLARIS(RBr)	2016	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2016	G 1.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT/SOLARIS(RBr)	2016	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT/SOLARIS(RBr)	2016	G 1.4 MPI	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2016	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT/SOLARIS(RBr)	2016	G 1.6 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT/SOLARIS(RBr)	2016	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT/SOLARIS(RBr)	2016	G 1.6 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT/SOLARIS(RBr)	2016	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT/SOLARIS(RBr)	2016	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT/SOLARIS(RBr)	2016	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2016	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT/SOLARIS(RBr)	2016	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT/SOLARIS(RBr)	2016	G 1.6 MPI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2016	G 1.6 MPI	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2016	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.4 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.4 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.4 MPI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.4 MPI	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.6 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.6 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.6 MPI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.6 MPI	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2015	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.4 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.4 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.4 MPI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2014	G 1.4 MPI	BCM [Body Control Module (SMK -)]	√	√	√	√	√	

Europe/General	ACCENT/SOLARI S(RBr)	2014	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT/SOLARI S(RBr)	2014	G 1.6 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT/SOLARI S(RBr)	2014	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT/SOLARI S(RBr)	2014	G 1.6 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT/SOLARI S(RBr)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT/SOLARI S(RBr)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT/SOLARI S(RBr)	2014	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT/SOLARI S(RBr)	2014	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	ACCENT/SOLARI S(RBr)	2014	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT/SOLARI S(RBr)	2014	G 1.6 MPI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT/SOLARI S(RBr)	2014	G 1.6 MPI	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT/SOLARI S(RBr)	2014	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT/SOLARI S(RBr)	2013	G 1.4 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT/SOLARI S(RBr)	2013	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT/SOLARI S(RBr)	2013	G 1.4 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT/SOLARI S(RBr)	2013	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT/SOLARI S(RBr)	2013	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT/SOLARI S(RBr)	2013	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	ACCENT/SOLARI S(RBr)	2013	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT/SOLARI S(RBr)	2013	G 1.4 MPI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT/SOLARI S(RBr)	2013	G 1.4 MPI	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT/SOLARI S(RBr)	2013	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT/SOLARI S(RBr)	2013	G 1.6 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT/SOLARI S(RBr)	2013	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122

Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.6 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.6 MPI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.6 MPI	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2013	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.4 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.4 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.4 MPI	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.4 MPI	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.6 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.6 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			

Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.6 MPI	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.6 MPI	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2012	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.4 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.4 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.4 MPI	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.4 MPI	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.6 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.6 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129

Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.6 MPI	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.6 MPI	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	ACCENT/SOLARIS(RBr)	2011	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ATOS PRIME(MXL)	2004	G 1.0 SOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	ATOS PRIME(MXL)	2004	G 1.0 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS PRIME(MXL)	2004	G 1.0 SOHC	ENGINE [Unleaded MEX]	√	√	√	√		
Europe/General	ATOS PRIME(MXL)	2004	G 1.0 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ATOS PRIME(MXL)	2004	G 1.0 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS PRIME(MXL)	2004	G 1.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS PRIME(MXL)	2004	G 1.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS PRIME(MXL)	2004	G 1.0 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0147, 0112, 0099, 0102, 0091, 0098
Europe/General	ATOS PRIME(MXL)	2003	G 1.0 SOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	ATOS PRIME(MXL)	2003	G 1.0 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS PRIME(MXL)	2003	G 1.0 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS PRIME(MXL)	2003	G 1.0 SOHC	ENGINE [Unleaded MEX]	√	√	√	√		
Europe/General	ATOS PRIME(MXL)	2003	G 1.0 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ATOS PRIME(MXL)	2003	G 1.0 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS PRIME(MXL)	2003	G 1.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS PRIME(MXL)	2003	G 1.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS PRIME(MXL)	2003	G 1.0 SOHC	IMMO [Immobilizer]		√	√	√		0112, 0147, 0074, 0099, 0091, 0102, 0098
Europe/General	ATOS PRIME(MXL)	2002	G 1.0 SOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	ATOS PRIME(MXL)	2002	G 1.0 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS PRIME(MXL)	2002	G 1.0 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS PRIME(MXL)	2002	G 1.0 SOHC	ENGINE [Unleaded MEX]	√	√	√	√		

Europe/General	ATOS PRIME(MXL)	2002	G 1.0 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ATOS PRIME(MXL)	2002	G 1.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS PRIME(MXL)	2002	G 1.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS PRIME(MXL)	2002	G 1.0 SOHC	IMMO [Immobilizer]		√	√	√		0112, 0147, 0074, 0099, 0091, 0102, 0098
Europe/General	ATOS PRIME(MXL)	2001	G 1.0 SOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	ATOS PRIME(MXL)	2001	G 1.0 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS PRIME(MXL)	2001	G 1.0 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS PRIME(MXL)	2001	G 1.0 SOHC	ENGINE [Unleaded MEX]	√	√	√	√		
Europe/General	ATOS PRIME(MXL)	2001	G 1.0 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ATOS PRIME(MXL)	2001	G 1.0 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS PRIME(MXL)	2001	G 1.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS PRIME(MXL)	2001	G 1.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS PRIME(MXL)	2001	G 1.0 SOHC	IMMO [Immobilizer]		√	√	√		0112, 0147, 0074, 0099, 0091, 0102, 0098
Europe/General	ATOS PRIME(MXL)	2000	G 1.0 SOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	ATOS PRIME(MXL)	2000	G 1.0 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS PRIME(MXL)	2000	G 1.0 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS PRIME(MXL)	2000	G 1.0 SOHC	ENGINE [Unleaded MEX]	√	√	√	√		
Europe/General	ATOS PRIME(MXL)	2000	G 1.0 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ATOS PRIME(MXL)	2000	G 1.0 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS PRIME(MXL)	2000	G 1.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS PRIME(MXL)	2000	G 1.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MX)	2004	G 1.0 SOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	ATOS(MX)	2004	G 1.0 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS(MX)	2004	G 1.0 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MX)	2004	G 1.0 SOHC	ENGINE [Unleaded MEX]	√	√	√	√		
Europe/General	ATOS(MX)	2004	G 1.0 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ATOS(MX)	2004	G 1.0 SOHC	AT [Automatic Transaxle]		√	√	√	√	

Europe/General	ATOS(MX)	2004	G 1.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MX)	2004	G 1.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MX)	2004	G 1.0 SOHC	IMMO [Immobilizer]		√	√	√		0112, 0147, 0074, 0099, 0091, 0102, 0098
Europe/General	ATOS(MX)	2003	G 1.0 SOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	ATOS(MX)	2003	G 1.0 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS(MX)	2003	G 1.0 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MX)	2003	G 1.0 SOHC	ENGINE [Unleaded MEX]	√	√	√	√		
Europe/General	ATOS(MX)	2003	G 1.0 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ATOS(MX)	2003	G 1.0 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MX)	2003	G 1.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MX)	2003	G 1.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MX)	2003	G 1.0 SOHC	IMMO [Immobilizer]		√	√	√		0112, 0147, 0074, 0099, 0091, 0102, 0098
Europe/General	ATOS(MX)	2002	G 1.0 SOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	ATOS(MX)	2002	G 1.0 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS(MX)	2002	G 1.0 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MX)	2002	G 1.0 SOHC	ENGINE [Unleaded MEX]	√	√	√	√		
Europe/General	ATOS(MX)	2002	G 1.0 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ATOS(MX)	2002	G 1.0 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MX)	2002	G 1.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MX)	2002	G 1.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MX)	2002	G 1.0 SOHC	IMMO [Immobilizer]		√	√	√		0112, 0147, 0074, 0099, 0091, 0102, 0098
Europe/General	ATOS(MX)	2001	G 1.0 SOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	ATOS(MX)	2001	G 1.0 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS(MX)	2001	G 1.0 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MX)	2001	G 1.0 SOHC	ENGINE [Unleaded MEX]	√	√	√	√		
Europe/General	ATOS(MX)	2001	G 1.0 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ATOS(MX)	2001	G 1.0 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MX)	2001	G 1.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MX)	2001	G 1.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MX)	2000	G 1.0 SOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	ATOS(MX)	2000	G 1.0 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS(MX)	2000	G 1.0 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MX)	2000	G 1.0 SOHC	ENGINE [Unleaded MEX]	√	√	√	√		
Europe/General	ATOS(MX)	2000	G 1.0 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ATOS(MX)	2000	G 1.0 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MX)	2000	G 1.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MX)	2000	G 1.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MX)	2000	G 1.0 SOHC	IMMO [Immobilizer]		√	√	√		0112, 0147, 0074, 0099, 0091, 0102, 0098
Europe/General	ATOS(MX)	1999	G 1.0 SOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	ATOS(MX)	1999	G 1.0 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS(MX)	1999	G 1.0 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MX)	1999	G 1.0 SOHC	ENGINE [Unleaded MEX]	√	√	√	√		

Europe/General	ATOS(MX)	1999	G 1.0 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ATOS(MX)	1999	G 1.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MX)	1999	G 1.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MX)	1999	G 1.0 SOHC	IMMO [Immobilizer]		√	√	√		0112, 0147, 0074, 0099, 0091, 0102, 0098
Europe/General	ATOS(MX)	1998	G 1.0 SOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	ATOS(MX)	1998	G 1.0 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS(MX)	1998	G 1.0 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MX)	1998	G 1.0 SOHC	ENGINE [Unleaded MEX]	√	√	√	√		
Europe/General	ATOS(MX)	1998	G 1.0 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ATOS(MX)	1998	G 1.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MX)	1998	G 1.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MX)	1998	G 1.0 SOHC	IMMO [Immobilizer]		√	√	√		0112, 0147, 0074, 0099, 0091, 0102, 0098
Europe/General	ATOS(MXI)-PDF	2013	G 1.0 SOHC	ENGINE [Unleaded INDIA]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2013	G 1.0 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2013	G 1.0 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2013	G 1.0 SOHC	ENGINE [Unleaded MEX]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2013	G 1.0 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2013	G 1.0 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2013	G 1.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MXI)-PDF	2013	G 1.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MXI)-PDF	2013	G 1.0 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0147, 0112, 0099, 0102, 0091, 0098
Europe/General	ATOS(MXI)-PDF	2013	G 1.1 SOHC	ENGINE [Unleaded INDIA]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2013	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2013	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	ATOS(MXI)-PDF	2013	G 1.1 SOHC	ENGINE [Unleaded MEX]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2013	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2013	G 1.1 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2013	G 1.1 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MXI)-PDF	2013	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MXI)-PDF	2013	G 1.1 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0147, 0112, 0099, 0102, 0091, 0098
Europe/General	ATOS(MXI)-PDF	2012	G 1.0 SOHC	ENGINE [Unleaded INDIA]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2012	G 1.0 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2012	G 1.0 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2012	G 1.0 SOHC	ENGINE [Unleaded MEX]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2012	G 1.0 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2012	G 1.0 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2012	G 1.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MXI)-PDF	2012	G 1.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MXI)-PDF	2012	G 1.0 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0147, 0112, 0099, 0102, 0091, 0098
Europe/General	ATOS(MXI)-PDF	2012	G 1.1 SOHC	ENGINE [Unleaded INDIA]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2012	G 1.1 SOHC	ENGINE [B 1.1 LPG]	√	√	√	√	√	0120

Europe/General	ATOS(MXI)-PDF	2012	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2012	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	ATOS(MXI)-PDF	2012	G 1.1 SOHC	ENGINE [Unleaded MEX]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2012	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2012	G 1.1 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2012	G 1.1 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MXI)-PDF	2012	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MXI)-PDF	2012	G 1.1 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0147, 0112, 0099, 0102, 0091, 0098
Europe/General	ATOS(MXI)-PDF	2011	G 1.0 SOHC	ENGINE [Unleaded INDIA]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2011	G 1.0 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2011	G 1.0 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2011	G 1.0 SOHC	ENGINE [Unleaded MEX]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2011	G 1.0 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2011	G 1.0 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2011	G 1.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MXI)-PDF	2011	G 1.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MXI)-PDF	2011	G 1.0 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0147, 0112, 0099, 0102, 0091, 0098
Europe/General	ATOS(MXI)-PDF	2011	G 1.1 SOHC	ENGINE [B 1.1 LPG]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2011	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2011	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	ATOS(MXI)-PDF	2011	G 1.1 SOHC	ENGINE [Unleaded MEX]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2011	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2011	G 1.1 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2011	G 1.1 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MXI)-PDF	2011	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MXI)-PDF	2011	G 1.1 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0147, 0112, 0099, 0102, 0091, 0098
Europe/General	ATOS(MXI)-PDF	2010	G 1.0 SOHC	ENGINE [Unleaded INDIA]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2010	G 1.0 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2010	G 1.0 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2010	G 1.0 SOHC	ENGINE [Unleaded MEX]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2010	G 1.0 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2010	G 1.0 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2010	G 1.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MXI)-PDF	2010	G 1.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MXI)-PDF	2010	G 1.0 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0147, 0112, 0099, 0102, 0091, 0098
Europe/General	ATOS(MXI)-PDF	2010	G 1.1 SOHC	ENGINE [Unleaded INDIA]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2010	G 1.1 SOHC	ENGINE [B 1.1 LPG]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2010	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2010	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	ATOS(MXI)-PDF	2010	G 1.1 SOHC	ENGINE [Unleaded MEX]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2010	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2010	G 1.1 SOHC	AT [Automatic Transaxle]		√	√	√	√	

Europe/General	ATOS(MXI)-PDF	2010	G 1.1 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MXI)-PDF	2010	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MXI)-PDF	2010	G 1.1 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0147, 0112, 0099, 0102, 0091, 0098
Europe/General	ATOS(MXI)-PDF	2009	G 1.0 SOHC	ENGINE [Unleaded INDIA]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2009	G 1.0 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2009	G 1.0 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2009	G 1.0 SOHC	ENGINE [Unleaded MEX]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2009	G 1.0 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2009	G 1.0 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2009	G 1.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MXI)-PDF	2009	G 1.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MXI)-PDF	2009	G 1.1 SOHC	ENGINE [Unleaded INDIA]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2009	G 1.1 SOHC	ENGINE [B 1.1 LPG]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2009	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2009	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	ATOS(MXI)-PDF	2009	G 1.1 SOHC	ENGINE [Unleaded MEX]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2009	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2009	G 1.1 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2009	G 1.1 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MXI)-PDF	2009	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MXI)-PDF	2009	G 1.1 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0147, 0112, 0099, 0102, 0091, 0098
Europe/General	ATOS(MXI)-PDF	2008	G 1.0 SOHC	ENGINE [Unleaded INDIA]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2008	G 1.0 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2008	G 1.0 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2008	G 1.0 SOHC	ENGINE [Unleaded MEX]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2008	G 1.0 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2008	G 1.0 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2008	G 1.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MXI)-PDF	2008	G 1.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MXI)-PDF	2008	G 1.0 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0147, 0112, 0099, 0102, 0091, 0098
Europe/General	ATOS(MXI)-PDF	2008	G 1.1 SOHC	ENGINE [Unleaded INDIA]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2008	G 1.1 SOHC	ENGINE [B 1.1 LPG]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2008	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2008	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	ATOS(MXI)-PDF	2008	G 1.1 SOHC	ENGINE [Unleaded MEX]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2008	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2008	G 1.1 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2008	G 1.1 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MXI)-PDF	2008	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MXI)-PDF	2008	G 1.1 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0147, 0112, 0099, 0102, 0091, 0098
Europe/General	ATOS(MXI)-PDF	2007	G 1.0 SOHC	ENGINE [Unleaded INDIA]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2007	G 1.0 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120

Europe/General	ATOS(MXI)-PDF	2007	G 1.0 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2007	G 1.0 SOHC	ENGINE [Unleaded MEX]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2007	G 1.0 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2007	G 1.0 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2007	G 1.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MXI)-PDF	2007	G 1.0 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0147, 0112, 0099, 0102, 0091, 0098
Europe/General	ATOS(MXI)-PDF	2007	G 1.1 SOHC	ENGINE [Unleaded INDIA]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2007	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2007	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	ATOS(MXI)-PDF	2007	G 1.1 SOHC	ENGINE [Unleaded MEX]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2007	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2007	G 1.1 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2007	G 1.1 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MXI)-PDF	2007	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MXI)-PDF	2007	G 1.1 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0147, 0112, 0099, 0102, 0091, 0098
Europe/General	ATOS(MXI)-PDF	2006	G 1.0 SOHC	ENGINE [Unleaded INDIA]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2006	G 1.0 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2006	G 1.0 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2006	G 1.0 SOHC	ENGINE [Unleaded MEX]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2006	G 1.0 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2006	G 1.0 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2006	G 1.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MXI)-PDF	2006	G 1.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MXI)-PDF	2006	G 1.0 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0147, 0112, 0099, 0102, 0091, 0098
Europe/General	ATOS(MXI)-PDF	2006	G 1.1 SOHC	ENGINE [Unleaded INDIA]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2006	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2006	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	ATOS(MXI)-PDF	2006	G 1.1 SOHC	ENGINE [Unleaded MEX]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2006	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2006	G 1.1 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2006	G 1.1 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MXI)-PDF	2006	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MXI)-PDF	2006	G 1.1 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0147, 0112, 0099, 0102, 0091, 0098
Europe/General	ATOS(MXI)-PDF	2005	G 1.0 SOHC	ENGINE [Unleaded INDIA]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2005	G 1.0 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2005	G 1.0 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2005	G 1.0 SOHC	ENGINE [Unleaded MEX]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2005	G 1.0 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2005	G 1.0 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2005	G 1.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MXI)-PDF	2005	G 1.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MXI)-PDF	2005	G 1.1 SOHC	ENGINE [Unleaded INDIA]	√	√	√	√	√	0120

Europe/General	ATOS(MXI)-PDF	2005	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2005	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2005	G 1.1 SOHC	ENGINE [Unleaded MEX]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2005	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2005	G 1.1 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2005	G 1.1 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MXI)-PDF	2005	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MXI)-PDF	2005	G 1.1 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0147, 0112, 0099, 0102, 0091, 0098
Europe/General	ATOS(MXI)-PDF	2004	G 1.0 SOHC	ENGINE [Unleaded INDIA]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2004	G 1.0 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2004	G 1.0 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2004	G 1.0 SOHC	ENGINE [Unleaded MEX]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2004	G 1.0 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2004	G 1.0 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2004	G 1.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MXI)-PDF	2004	G 1.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MXI)-PDF	2004	G 1.0 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0147, 0112, 0099, 0102, 0091, 0098
Europe/General	ATOS(MXI)-PDF	2004	G 1.1 SOHC	ENGINE [Unleaded INDIA]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2004	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2004	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2004	G 1.1 SOHC	ENGINE [Unleaded MEX]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2004	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2004	G 1.1 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2004	G 1.1 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MXI)-PDF	2004	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MXI)-PDF	2004	G 1.1 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0147, 0112, 0099, 0102, 0091, 0098
Europe/General	ATOS(MXI)-PDF	2003	G 1.0 SOHC	ENGINE [Unleaded INDIA]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2003	G 1.0 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2003	G 1.0 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2003	G 1.0 SOHC	ENGINE [Unleaded MEX]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2003	G 1.0 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2003	G 1.0 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2003	G 1.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MXI)-PDF	2003	G 1.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ATOS(MXI)-PDF	2003	G 1.1 SOHC	ENGINE [Unleaded INDIA]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2003	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2003	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0120
Europe/General	ATOS(MXI)-PDF	2003	G 1.1 SOHC	ENGINE [Unleaded MEX]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2003	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2003	G 1.1 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ATOS(MXI)-PDF	2003	G 1.1 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ATOS(MXI)-PDF	2003	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			

Europe/General	ATOS(MXI)-PDF	2003	G 1.1 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0147, 0112, 0099, 0102, 0091, 0098
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	ABSESP [TCS (+)]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	ABSESP [ESP (+)]		√	√	√	√	0064
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	ECS [Active ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	ECS [ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	AHLS [Automatic Headlamp Leveling]	√	√	√	√		0090
Europe/General	CENTENNIAL(LZ)	2008	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	ENGINE [Leaded All]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	ABSESP [TCS (+)]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	ABSESP [ESP (+)]		√	√	√	√	0064
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	ECS [Active ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	ECS [ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	AHLS [Automatic Headlamp Leveling]	√	√	√	√		0090
Europe/General	CENTENNIAL(LZ)	2008	G 4.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	ABSESP [ESP (+)]		√	√	√	√	0064
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	ECS [Active ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	ECS [ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	AHLS [Automatic Headlamp Leveling]	√	√	√	√		0090
Europe/General	CENTENNIAL(LZ)	2007	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	ENGINE [Leaded All]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	ABSESP [TCS (+)]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	ABSESP [ESP (+)]		√	√	√	√	0064

Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	ECS [Active ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	ECS [ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	AHLS [Automatic Headlamp Leveling]	√	√	√	√		0090
Europe/General	CENTENNIAL(LZ)	2007	G 4.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	ABSESP [TCS (+)]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	ABSESP [ESP (+)]		√	√	√	√	0064
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	ECS [Active ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	ECS [ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	AHLS [Automatic Headlamp Leveling]	√	√	√	√		0090
Europe/General	CENTENNIAL(LZ)	2006	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	ENGINE [Leaded All]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	ABSESP [TCS (+)]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	ABSESP [ESP (+)]		√	√	√	√	0064
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	ECS [Active ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	ECS [ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	AHLS [Automatic Headlamp Leveling]	√	√	√	√		0090
Europe/General	CENTENNIAL(LZ)	2006	G 4.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	ABSESP [TCS (+)]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	ABSESP [ESP (+)]		√	√	√	√	0064
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	ECS [Active ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	ECS [ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	AHLS [Automatic Headlamp Leveling]	√	√	√	√		0090
Europe/General	CENTENNIAL(LZ)	2005	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	ENGINE [Leaded All]		√	√	√	√	

Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	ABSESP [TCS (+)]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	ABSESP [ESP (+)]		√	√	√	√	0064
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	ECS [Active ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	ECS [ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	AHLS [Automatic Headlamp Leveling]	√	√	√	√		0090
Europe/General	CENTENNIAL(LZ)	2005	G 4.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	ABSESP [TCS (+)]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	ABSESP [ESP (+)]		√	√	√	√	0064
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	ECS [Active ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	AHLS [Automatic Headlamp Leveling]	√	√	√	√		0090
Europe/General	CENTENNIAL(LZ)	2004	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	ENGINE [Leaded All]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	ABSESP [TCS (+)]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	ABSESP [ESP (+)]		√	√	√	√	0064
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	ECS [Active ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	ECS [ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	AHLS [Automatic Headlamp Leveling]	√	√	√	√		0090
Europe/General	CENTENNIAL(LZ)	2004	G 4.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	ABSESP [TCS (+)]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	ABSESP [ESP (+)]		√	√	√	√	0064
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	ECS [Active ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	ECS [ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	AHLS [Automatic Headlamp Leveling]	√	√	√	√		0090

Europe/General	CENTENNIAL(LZ)	2003	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	ENGINE [Leaded All]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	ABSESP [TCS (+)]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	ABSESP [ESP (+)]		√	√	√	√	0064
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	ECS [Active ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	ECS [ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2003	G 4.5 DOHC	AHLS [Automatic Headlamp Leveling]	√	√	√	√		0090
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	ABSESP [TCS (ITT Type)]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	ABSESP [TCS (CTC Type) (2002.09~)]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	ABSESP [ESP (CTC Type) (2002.09~)]		√	√	√	√	0064
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	ABSESP [ESP (Melco Type)]		√	√	√	√	0064
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	ECS [Active ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	ECS [ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	AHLS [Automatic Headlamp Leveling]	√	√	√	√		0090
Europe/General	CENTENNIAL(LZ)	2002	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	ENGINE [Leaded All]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	ABSESP [TCS (ITT Type)]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	ABSESP [TCS (CTC Type) (2002.09~)]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	ABSESP [ESP (CTC Type) (2002.09~)]		√	√	√	√	0064
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	ABSESP [ESP (Melco Type)]		√	√	√	√	0064
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	ECS [Active ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	ECS [ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	AHLS [Automatic Headlamp Leveling]	√	√	√	√		0090
Europe/General	CENTENNIAL(LZ)	2002	G 4.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	CENTENNIAL(LZ)	2001	G 3.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2001	G 3.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2001	G 3.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	

Europe/General	CENTENNIAL(LZ)	2001	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2001	G 3.5 DOHC	ABSESP [TCS (+)]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2001	G 3.5 DOHC	ABSESP [VDC (+)]		√	√	√	√	0064
Europe/General	CENTENNIAL(LZ)	2001	G 3.5 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2001	G 3.5 DOHC	ECS [Active ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2001	G 3.5 DOHC	ECS [ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2001	G 3.5 DOHC	AHLS [Automatic Headlamp Leveling]	√	√	√	√		0090
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	ENGINE [Unleaded MPI GEN]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	ENGINE [Unleaded GDI All]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	ENGINE [Unleaded MPI EOBD]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	ENGINE [Leaded MPI All]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	ABSESP [TCS (+)]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	ABSESP [VDC (+)]		√	√	√	√	0064
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	ECS [Active ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	ECS [ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	AHLS [Automatic Headlamp Leveling]	√	√	√	√		0090
Europe/General	CENTENNIAL(LZ)	2001	G 4.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	ABSESP [TCS (+)]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	ABSESP [VDC (+)]		√	√	√	√	0064
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	ECS [Active ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	ECS [ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	AHLS [Automatic Headlamp Leveling]	√	√	√	√		0090
Europe/General	CENTENNIAL(LZ)	2000	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	CENTENNIAL(LZ)	2000	G 4.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2000	G 4.5 DOHC	ENGINE [Unleaded All]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2000	G 4.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2000	G 4.5 DOHC	ABSESP [TCS (+)]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2000	G 4.5 DOHC	ABSESP [VDC (+)]		√	√	√	√	0064
Europe/General	CENTENNIAL(LZ)	2000	G 4.5 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2000	G 4.5 DOHC	ECS [Active ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2000	G 4.5 DOHC	ECS [ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	2000	G 4.5 DOHC	AHLS [Automatic Headlamp Leveling]	√	√	√	√		0090
Europe/General	CENTENNIAL(LZ)	2000	G 4.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	CENTENNIAL(LZ)	1999	G 3.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	1999	G 3.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	1999	G 3.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	1999	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	

Europe/General	CENTENNIAL(LZ)	1999	G 3.5 DOHC	ABSESP [TCS (+)]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	1999	G 3.5 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	1999	G 3.5 DOHC	ECS [Active ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	1999	G 3.5 DOHC	ECS [ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	1999	G 3.5 DOHC	AHLS [Automatic Headlamp Leveling]	√	√	√	√		0090
Europe/General	CENTENNIAL(LZ)	1999	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	CENTENNIAL(LZ)	1999	G 4.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	1999	G 4.5 DOHC	ENGINE [Unleaded All]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	1999	G 4.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	CENTENNIAL(LZ)	1999	G 4.5 DOHC	ABSESP [TCS (+)]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	1999	G 4.5 DOHC	ABSESP [VDC (+)]		√	√	√	√	0064
Europe/General	CENTENNIAL(LZ)	1999	G 4.5 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	1999	G 4.5 DOHC	ECS [Active ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	1999	G 4.5 DOHC	ECS [ECS]		√	√	√	√	
Europe/General	CENTENNIAL(LZ)	1999	G 4.5 DOHC	AHLS [Automatic Headlamp Leveling]	√	√	√	√		0090
Europe/General	CENTENNIAL(LZ)	1999	G 4.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	CRETA(GS)	2018	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	CRETA(GS)	2018	D 1.4 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	CRETA(GS)	2018	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	CRETA(GS)	2018	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	CRETA(GS)	2018	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	CRETA(GS)	2018	D 1.4 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	CRETA(GS)	2018	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	CRETA(GS)	2018	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	CRETA(GS)	2018	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	CRETA(GS)	2018	D 1.4 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	CRETA(GS)	2018	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	CRETA(GS)	2018	D 1.4 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	CRETA(GS)	2018	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	CRETA(GS)	2018	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	CRETA(GS)	2018	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	CRETA(GS)	2018	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	CRETA(GS)	2018	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	CRETA(GS)	2018	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	CRETA(GS)	2018	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	CRETA(GS)	2018	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	CRETA(GS)	2018	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	CRETA(GS)	2018	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	CRETA(GS)	2018	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	CRETA(GS)	2018	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	CRETA(GS)	2018	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	CRETA(GS)	2018	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026

Europe/General	CRETA(GS)	2018	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	CRETA(GS)	2018	G 1.6 MPI	ENGINE [Unleaded All]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	CRETA(GS)	2018	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	CRETA(GS)	2018	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	CRETA(GS)	2018	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	CRETA(GS)	2018	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	CRETA(GS)	2018	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	CRETA(GS)	2018	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	CRETA(GS)	2018	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	CRETA(GS)	2018	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	CRETA(GS)	2018	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	CRETA(GS)	2018	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	CRETA(GS)	2018	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	CRETA(GS)	2018	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	CRETA(GS)	2018	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	CRETA(GS)	2017	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	CRETA(GS)	2017	D 1.4 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	CRETA(GS)	2017	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	CRETA(GS)	2017	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	CRETA(GS)	2017	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	CRETA(GS)	2017	D 1.4 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	CRETA(GS)	2017	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	CRETA(GS)	2017	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	CRETA(GS)	2017	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	CRETA(GS)	2017	D 1.4 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	CRETA(GS)	2017	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	CRETA(GS)	2017	D 1.4 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	CRETA(GS)	2017	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	CRETA(GS)	2017	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	CRETA(GS)	2017	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	CRETA(GS)	2017	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	CRETA(GS)	2017	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	CRETA(GS)	2017	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	CRETA(GS)	2017	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	CRETA(GS)	2017	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	CRETA(GS)	2017	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	CRETA(GS)	2017	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	CRETA(GS)	2017	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	CRETA(GS)	2017	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	CRETA(GS)	2017	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	CRETA(GS)	2017	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026

Europe/General	CRETA(GS)	2017	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	CRETA(GS)	2017	G 1.6 MPI	ENGINE [Unleaded All]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	CRETA(GS)	2017	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	CRETA(GS)	2017	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	CRETA(GS)	2017	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	CRETA(GS)	2017	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	CRETA(GS)	2017	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	CRETA(GS)	2017	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	CRETA(GS)	2017	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	CRETA(GS)	2017	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	CRETA(GS)	2017	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	CRETA(GS)	2017	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	CRETA(GS)	2017	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	CRETA(GS)	2017	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	CRETA(GS)	2017	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	CRETA(GS)	2016	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	CRETA(GS)	2016	D 1.4 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	CRETA(GS)	2016	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	CRETA(GS)	2016	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	CRETA(GS)	2016	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	CRETA(GS)	2016	D 1.4 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	CRETA(GS)	2016	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	CRETA(GS)	2016	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	CRETA(GS)	2016	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	CRETA(GS)	2016	D 1.4 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	CRETA(GS)	2016	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	CRETA(GS)	2016	D 1.4 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	CRETA(GS)	2016	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	CRETA(GS)	2016	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	CRETA(GS)	2016	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	CRETA(GS)	2016	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	CRETA(GS)	2016	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	CRETA(GS)	2016	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	CRETA(GS)	2016	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	CRETA(GS)	2016	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	CRETA(GS)	2016	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	CRETA(GS)	2016	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	CRETA(GS)	2016	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	CRETA(GS)	2016	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	CRETA(GS)	2016	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	CRETA(GS)	2016	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026

Europe/General	CRETA(GS)	2016	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	CRETA(GS)	2016	G 1.6 MPI	ENGINE [Unleaded All]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	CRETA(GS)	2016	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	CRETA(GS)	2016	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	CRETA(GS)	2016	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	CRETA(GS)	2016	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	CRETA(GS)	2016	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	CRETA(GS)	2016	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	CRETA(GS)	2016	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	CRETA(GS)	2016	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	CRETA(GS)	2016	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	CRETA(GS)	2016	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	CRETA(GS)	2016	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	CRETA(GS)	2016	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	CRETA(GS)	2016	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	CRETA(GS)	2015	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	CRETA(GS)	2015	D 1.4 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	CRETA(GS)	2015	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	CRETA(GS)	2015	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	CRETA(GS)	2015	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	CRETA(GS)	2015	D 1.4 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	CRETA(GS)	2015	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	CRETA(GS)	2015	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	CRETA(GS)	2015	D 1.4 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	CRETA(GS)	2015	D 1.4 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	CRETA(GS)	2015	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	CRETA(GS)	2015	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	CRETA(GS)	2015	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	CRETA(GS)	2015	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	CRETA(GS)	2015	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	CRETA(GS)	2015	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	CRETA(GS)	2015	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	CRETA(GS)	2015	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	CRETA(GS)	2015	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	CRETA(GS)	2015	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	CRETA(GS)	2015	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	CRETA(GS)	2015	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	CRETA(GS)	2015	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	CRETA(GS)	2015	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	CRETA(GS)	2015	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	CRETA(GS)	2015	G 1.6 MPI	ENGINE [Unleaded All]		√	√			0013, 0040, 0072, 0116, 0158

Europe/General	CRETA(GS)	2015	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	CRETA(GS)	2015	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	CRETA(GS)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	CRETA(GS)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	CRETA(GS)	2015	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	CRETA(GS)	2015	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	CRETA(GS)	2015	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	CRETA(GS)	2015	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	CRETA(GS)	2015	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	CRETA(GS)	2015	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	CRETA(GS)	2015	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	CRETA(GS)	2015	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	CRETA(GSB)	2018	F 1.6 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	CRETA(GSB)	2018	F 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	CRETA(GSB)	2018	F 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√		0064, 0108
Europe/General	CRETA(GSB)	2018	F 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	CRETA(GSB)	2018	F 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	CRETA(GSB)	2018	F 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	CRETA(GSB)	2018	F 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	CRETA(GSB)	2018	F 1.6 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	CRETA(GSB)	2018	F 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	CRETA(GSB)	2018	F 1.6 MPI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	CRETA(GSB)	2018	F 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	CRETA(GSB)	2018	F 1.6 MPI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	CRETA(GSB)	2018	F 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	CRETA(GSB)	2018	F 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	CRETA(GSB)	2018	F 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0158
Europe/General	CRETA(GSB)	2018	F 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	CRETA(GSB)	2018	F 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√		0064, 0108
Europe/General	CRETA(GSB)	2018	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	CRETA(GSB)	2018	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	CRETA(GSB)	2018	F 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	CRETA(GSB)	2018	F 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	CRETA(GSB)	2018	F 2.0 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	CRETA(GSB)	2018	F 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	CRETA(GSB)	2018	F 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	CRETA(GSB)	2018	F 2.0 MPI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	CRETA(GSB)	2018	F 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	CRETA(GSB)	2018	F 2.0 MPI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	CRETA(GSB)	2018	F 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	CRETA(GSB)	2018	F 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	CRETA(GSR)	2018	G 1.6 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158

Europe/General	CRETA(GSR)	2018	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	CRETA(GSR)	2018	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	CRETA(GSR)	2018	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	CRETA(GSR)	2018	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	CRETA(GSR)	2018	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	CRETA(GSR)	2018	G 1.6 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	CRETA(GSR)	2018	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	CRETA(GSR)	2018	G 1.6 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	CRETA(GSR)	2018	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	CRETA(GSR)	2018	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	CRETA(GSR)	2018	G 1.6 MPI	IBU - TPMS [Integrated Body Control Unit - TPMS]	√	√	√			
Europe/General	CRETA(GSR)	2018	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	CRETA(GSR)	2018	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	CRETA(GSR)	2018	G 1.6 MPI	ECALL [e - Call]	√	√	√			
Europe/General	CRETA(GSR)	2018	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	CRETA(GSR)	2018	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0158
Europe/General	CRETA(GSR)	2018	G 2.0 MPI	AT [Automatic Transaxle (4WD)]	√	√	√	√		0007, 0122
Europe/General	CRETA(GSR)	2018	G 2.0 MPI	AT [Automatic Transaxle (2WD)]	√	√	√	√		0007, 0122
Europe/General	CRETA(GSR)	2018	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	CRETA(GSR)	2018	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	CRETA(GSR)	2018	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	CRETA(GSR)	2018	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	CRETA(GSR)	2018	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	CRETA(GSR)	2018	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	CRETA(GSR)	2018	G 2.0 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	CRETA(GSR)	2018	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	CRETA(GSR)	2018	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	CRETA(GSR)	2018	G 2.0 MPI	IBU - TPMS [Integrated Body Control Unit - TPMS]	√	√	√			
Europe/General	CRETA(GSR)	2018	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	CRETA(GSR)	2018	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	CRETA(GSR)	2018	G 2.0 MPI	IBU - BCM [Integrated Body Control Unit - BCM]	√	√	√	√	√	
Europe/General	CRETA(GSR)	2018	G 2.0 MPI	ECALL [e - Call]	√	√	√			
Europe/General	CRETA(GSR)	2018	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	CRETA(GSR)	2017	G 1.6 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	CRETA(GSR)	2017	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	CRETA(GSR)	2017	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	CRETA(GSR)	2017	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	CRETA(GSR)	2017	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			

Europe/General	CRETA(GSR)	2017	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	CRETA(GSR)	2017	G 1.6 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	CRETA(GSR)	2017	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	CRETA(GSR)	2017	G 1.6 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	CRETA(GSR)	2017	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	CRETA(GSR)	2017	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	CRETA(GSR)	2017	G 1.6 MPI	IBU - TPMS [Integrated Body Control Unit - TPMS]	√	√	√			
Europe/General	CRETA(GSR)	2017	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	CRETA(GSR)	2017	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	CRETA(GSR)	2017	G 1.6 MPI	ECALL [e - Call]	√	√	√			
Europe/General	CRETA(GSR)	2017	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	CRETA(GSR)	2017	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0158
Europe/General	CRETA(GSR)	2017	G 2.0 MPI	AT [Automatic Transaxle (4WD)]	√	√	√	√		0007, 0122
Europe/General	CRETA(GSR)	2017	G 2.0 MPI	AT [Automatic Transaxle (2WD)]	√	√	√	√		0007, 0122
Europe/General	CRETA(GSR)	2017	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	CRETA(GSR)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	CRETA(GSR)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	CRETA(GSR)	2017	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	CRETA(GSR)	2017	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	CRETA(GSR)	2017	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	CRETA(GSR)	2017	G 2.0 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	CRETA(GSR)	2017	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	CRETA(GSR)	2017	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	CRETA(GSR)	2017	G 2.0 MPI	IBU - TPMS [Integrated Body Control Unit - TPMS]	√	√	√			
Europe/General	CRETA(GSR)	2017	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	CRETA(GSR)	2017	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	CRETA(GSR)	2017	G 2.0 MPI	IBU - BCM [Integrated Body Control Unit - BCM]	√	√	√	√	√	
Europe/General	CRETA(GSR)	2017	G 2.0 MPI	ECALL [e - Call]	√	√	√			
Europe/General	CRETA(GSR)	2017	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA COUPE(JK)	2016	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ELANTRA COUPE(JK)	2016	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ELANTRA COUPE(JK)	2016	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA COUPE(JK)	2016	G 1.6 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA COUPE(JK)	2016	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			

Europe/General	ELANTRA COUPE(JK)	2016	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA COUPE(JK)	2016	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2016	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA COUPE(JK)	2016	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA COUPE(JK)	2016	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA COUPE(JK)	2016	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2016	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2016	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2016	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA COUPE(JK)	2016	G 1.8 MPI	ENGINE [Leaded All]		√	√			0013, 0015, 0073, 0116, 0120, 0158
Europe/General	ELANTRA COUPE(JK)	2016	G 1.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA COUPE(JK)	2016	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA COUPE(JK)	2016	G 1.8 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA COUPE(JK)	2016	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA COUPE(JK)	2016	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA COUPE(JK)	2016	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2016	G 1.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA COUPE(JK)	2016	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA COUPE(JK)	2016	G 1.8 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA COUPE(JK)	2016	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA COUPE(JK)	2016	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2016	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2016	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158

Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2015	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	ENGINE [Leaded All]		√	√			0013, 0015, 0073, 0116, 0120, 0158
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129

Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2015	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2014	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	ENGINE [Leaded All]		√	√			0013, 0015, 0073, 0116, 0120, 0158
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			

Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2014	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2013	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	ENGINE [Leaded All]		√	√			0013, 0015, 0073, 0116, 0120, 0158

Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA COUPE(JK)	2013	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(AD)	2018	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	ELANTRA(AD)	2018	D 1.6 TCI-U2	AT [Dual Clutch Transmission]	√	√	√	√		0022, 0025
Europe/General	ELANTRA(AD)	2018	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(AD)	2018	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(AD)	2018	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(AD)	2018	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(AD)	2018	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	ELANTRA(AD)	2018	D 1.6 TCI-U2	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ELANTRA(AD)	2018	D 1.6 TCI-U2	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ELANTRA(AD)	2018	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(AD)	2018	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	D 1.6 TCI-U2	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	D 1.6 TCI-U2	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	D 1.6 TCI-U2	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	ELANTRA(AD)	2018	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	ELANTRA(AD)	2018	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	D 1.6 TCI-U2	ECALL [e - Call]	√	√	√			
Europe/General	ELANTRA(AD)	2018	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026

Europe/General	ELANTRA(AD)	2018	F 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA(AD)	2018	F 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	ELANTRA(AD)	2018	F 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(AD)	2018	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(AD)	2018	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(AD)	2018	F 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	F 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	ELANTRA(AD)	2018	F 2.0 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ELANTRA(AD)	2018	F 2.0 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	F 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ELANTRA(AD)	2018	F 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(AD)	2018	F 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	F 2.0 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	F 2.0 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	F 2.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	ELANTRA(AD)	2018	F 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	ELANTRA(AD)	2018	F 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	F 2.0 MPI	ECALL [e - Call]	√	√	√			
Europe/General	ELANTRA(AD)	2018	F 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(AD)	2018	G 1.6 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	ELANTRA(AD)	2018	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	ELANTRA(AD)	2018	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(AD)	2018	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(AD)	2018	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(AD)	2018	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(AD)	2018	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	ELANTRA(AD)	2018	G 1.6 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ELANTRA(AD)	2018	G 1.6 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ELANTRA(AD)	2018	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(AD)	2018	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	G 1.6 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	G 1.6 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	G 1.6 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	ELANTRA(AD)	2018	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	ELANTRA(AD)	2018	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	G 1.6 MPI	ECALL [e - Call]	√	√	√			
Europe/General	ELANTRA(AD)	2018	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(AD)	2018	G 1.6 T-GDI	ENGINE [Engine Control]	√	√	√	√		0015, 0072, 0116, 0158
Europe/General	ELANTRA(AD)	2018	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		0022, 0025
Europe/General	ELANTRA(AD)	2018	G 1.6 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(AD)	2018	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			

Europe/General	ELANTRA(AD)	2018	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(AD)	2018	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(AD)	2018	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	ELANTRA(AD)	2018	G 1.6 T-GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ELANTRA(AD)	2018	G 1.6 T-GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ELANTRA(AD)	2018	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(AD)	2018	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	G 1.6 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	G 1.6 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	G 1.6 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	ELANTRA(AD)	2018	G 1.6 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	ELANTRA(AD)	2018	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	G 1.6 T-GDI	ECALL [e - Call]	√	√	√			
Europe/General	ELANTRA(AD)	2018	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(AD)	2018	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA(AD)	2018	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	ELANTRA(AD)	2018	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(AD)	2018	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(AD)	2018	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(AD)	2018	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(AD)	2018	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	ELANTRA(AD)	2018	G 2.0 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ELANTRA(AD)	2018	G 2.0 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ELANTRA(AD)	2018	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(AD)	2018	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	G 2.0 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	G 2.0 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	G 2.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	ELANTRA(AD)	2018	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	ELANTRA(AD)	2018	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2018	G 2.0 MPI	ECALL [e - Call]	√	√	√			
Europe/General	ELANTRA(AD)	2018	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(AD)	2017	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	ELANTRA(AD)	2017	D 1.6 TCI-U2	AT [Dual Clutch Transmission]	√	√	√	√		0022, 0025
Europe/General	ELANTRA(AD)	2017	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(AD)	2017	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(AD)	2017	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(AD)	2017	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	ELANTRA(AD)	2017	D 1.6 TCI-U2	PGS [Parking Guide System]	√	√	√	√		

Europe/General	ELANTRA(AD)	2017	D 1.6 TCI-U2	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ELANTRA(AD)	2017	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(AD)	2017	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	D 1.6 TCI-U2	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	D 1.6 TCI-U2	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	D 1.6 TCI-U2	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	ELANTRA(AD)	2017	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	ELANTRA(AD)	2017	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	D 1.6 TCI-U2	ECALL [e - Call]	√	√	√			
Europe/General	ELANTRA(AD)	2017	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(AD)	2017	F 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA(AD)	2017	F 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	ELANTRA(AD)	2017	F 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(AD)	2017	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(AD)	2017	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(AD)	2017	F 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	F 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(AD)	2017	F 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	ELANTRA(AD)	2017	F 2.0 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ELANTRA(AD)	2017	F 2.0 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	F 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ELANTRA(AD)	2017	F 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(AD)	2017	F 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	F 2.0 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	F 2.0 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	F 2.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	ELANTRA(AD)	2017	F 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	ELANTRA(AD)	2017	F 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	F 2.0 MPI	ECALL [e - Call]	√	√	√			
Europe/General	ELANTRA(AD)	2017	F 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(AD)	2017	G 1.6 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	ELANTRA(AD)	2017	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	ELANTRA(AD)	2017	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(AD)	2017	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(AD)	2017	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(AD)	2017	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	ELANTRA(AD)	2017	G 1.6 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ELANTRA(AD)	2017	G 1.6 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ELANTRA(AD)	2017	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129

Europe/General	ELANTRA(AD)	2017	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	G 1.6 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	G 1.6 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	G 1.6 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	ELANTRA(AD)	2017	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	ELANTRA(AD)	2017	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	G 1.6 MPI	ECALL [e - Call]	√	√	√			
Europe/General	ELANTRA(AD)	2017	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(AD)	2017	G 1.6 T-GDI	ENGINE [Engine Control]	√	√	√	√		0015, 0072, 0116, 0158
Europe/General	ELANTRA(AD)	2017	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		0022, 0025
Europe/General	ELANTRA(AD)	2017	G 1.6 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(AD)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(AD)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(AD)	2017	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(AD)	2017	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	ELANTRA(AD)	2017	G 1.6 T-GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ELANTRA(AD)	2017	G 1.6 T-GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ELANTRA(AD)	2017	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(AD)	2017	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	G 1.6 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	G 1.6 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	G 1.6 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	ELANTRA(AD)	2017	G 1.6 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	ELANTRA(AD)	2017	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	G 1.6 T-GDI	ECALL [e - Call]	√	√	√			
Europe/General	ELANTRA(AD)	2017	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(AD)	2017	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA(AD)	2017	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	ELANTRA(AD)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(AD)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(AD)	2017	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(AD)	2017	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	ELANTRA(AD)	2017	G 2.0 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ELANTRA(AD)	2017	G 2.0 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ELANTRA(AD)	2017	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(AD)	2017	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	G 2.0 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	G 2.0 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	G 2.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133

Europe/General	ELANTRA(AD)	2017	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	ELANTRA(AD)	2017	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2017	G 2.0 MPI	ECALL [e - Call]	√	√	√			
Europe/General	ELANTRA(AD)	2017	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(AD)	2016	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	ELANTRA(AD)	2016	D 1.6 TCI-U2	AT [Dual Clutch Transmission]	√	√	√	√		0022, 0025
Europe/General	ELANTRA(AD)	2016	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(AD)	2016	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(AD)	2016	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(AD)	2016	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(AD)	2016	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	ELANTRA(AD)	2016	D 1.6 TCI-U2	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ELANTRA(AD)	2016	D 1.6 TCI-U2	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ELANTRA(AD)	2016	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(AD)	2016	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	D 1.6 TCI-U2	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	D 1.6 TCI-U2	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	D 1.6 TCI-U2	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	ELANTRA(AD)	2016	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	ELANTRA(AD)	2016	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	D 1.6 TCI-U2	ECALL [e - Call]	√	√	√			
Europe/General	ELANTRA(AD)	2016	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(AD)	2016	F 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA(AD)	2016	F 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(AD)	2016	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(AD)	2016	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(AD)	2016	F 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	F 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(AD)	2016	F 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	ELANTRA(AD)	2016	F 2.0 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ELANTRA(AD)	2016	F 2.0 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	F 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ELANTRA(AD)	2016	F 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(AD)	2016	F 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	F 2.0 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	F 2.0 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	F 2.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	ELANTRA(AD)	2016	F 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	ELANTRA(AD)	2016	F 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	F 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(AD)	2016	G 1.6 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158

Europe/General	ELANTRA(AD)	2016	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	ELANTRA(AD)	2016	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(AD)	2016	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(AD)	2016	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(AD)	2016	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(AD)	2016	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	ELANTRA(AD)	2016	G 1.6 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ELANTRA(AD)	2016	G 1.6 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ELANTRA(AD)	2016	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(AD)	2016	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	G 1.6 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	G 1.6 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	G 1.6 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	ELANTRA(AD)	2016	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	ELANTRA(AD)	2016	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	G 1.6 MPI	ECALL [e - Call]	√	√	√			
Europe/General	ELANTRA(AD)	2016	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(AD)	2016	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA(AD)	2016	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(AD)	2016	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(AD)	2016	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(AD)	2016	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(AD)	2016	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	ELANTRA(AD)	2016	G 2.0 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ELANTRA(AD)	2016	G 2.0 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ELANTRA(AD)	2016	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(AD)	2016	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	G 2.0 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	G 2.0 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	G 2.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	ELANTRA(AD)	2016	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	ELANTRA(AD)	2016	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(AD)	2016	G 2.0 MPI	ECALL [e - Call]	√	√	√			
Europe/General	ELANTRA(AD)	2016	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(ADA)	2018	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0051, 0116, 0120, 0158
Europe/General	ELANTRA(ADA)	2018	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	ELANTRA(ADA)	2018	G 2.0 MPI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
Europe/General	ELANTRA(ADA)	2018	G 2.0 MPI	SCCAEB [SCC / AEB]	√	√	√	√		

Europe/General	ELANTRA(ADA)	2018	G 2.0 MPI	OCS [Occupant Classification System]	√	√	√	√		
Europe/General	ELANTRA(ADA)	2018	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(ADA)	2018	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(ADA)	2018	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(ADA)	2018	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(ADA)	2018	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	ELANTRA(ADA)	2018	G 2.0 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ELANTRA(ADA)	2018	G 2.0 MPI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	ELANTRA(ADA)	2018	G 2.0 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	ELANTRA(ADA)	2018	G 2.0 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	ELANTRA(ADA)	2018	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ELANTRA(ADA)	2018	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	ELANTRA(ADA)	2018	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADA)	2018	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	ELANTRA(ADA)	2018	G 2.0 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADA)	2018	G 2.0 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADA)	2018	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADA)	2018	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(ADA)	2017	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0051, 0116, 0120, 0158
Europe/General	ELANTRA(ADA)	2017	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	ELANTRA(ADA)	2017	G 2.0 MPI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
Europe/General	ELANTRA(ADA)	2017	G 2.0 MPI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	ELANTRA(ADA)	2017	G 2.0 MPI	OCS [Occupant Classification System]	√	√	√	√		
Europe/General	ELANTRA(ADA)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(ADA)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(ADA)	2017	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(ADA)	2017	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(ADA)	2017	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	ELANTRA(ADA)	2017	G 2.0 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ELANTRA(ADA)	2017	G 2.0 MPI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	ELANTRA(ADA)	2017	G 2.0 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	ELANTRA(ADA)	2017	G 2.0 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	ELANTRA(ADA)	2017	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ELANTRA(ADA)	2017	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	ELANTRA(ADA)	2017	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADA)	2017	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	ELANTRA(ADA)	2017	G 2.0 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADA)	2017	G 2.0 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADA)	2017	G 2.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	ELANTRA(ADA)	2017	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADA)	2017	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(ADI)	2018	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2018	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(ADI)	2018	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064

Europe/General	ELANTRA(ADI)	2018	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(ADI)	2018	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(ADI)	2018	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2018	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(ADI)	2018	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	ELANTRA(ADI)	2018	D 1.6 TCI-U2	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ELANTRA(ADI)	2018	D 1.6 TCI-U2	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2018	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ELANTRA(ADI)	2018	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(ADI)	2018	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2018	D 1.6 TCI-U2	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2018	D 1.6 TCI-U2	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	ELANTRA(ADI)	2018	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	ELANTRA(ADI)	2018	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2018	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(ADI)	2018	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA(ADI)	2018	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	ELANTRA(ADI)	2018	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(ADI)	2018	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(ADI)	2018	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(ADI)	2018	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2018	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(ADI)	2018	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	ELANTRA(ADI)	2018	G 2.0 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ELANTRA(ADI)	2018	G 2.0 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2018	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ELANTRA(ADI)	2018	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(ADI)	2018	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2018	G 2.0 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2018	G 2.0 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2018	G 2.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	ELANTRA(ADI)	2018	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	ELANTRA(ADI)	2018	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2018	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(ADI)	2017	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2017	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(ADI)	2017	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(ADI)	2017	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(ADI)	2017	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(ADI)	2017	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2017	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(ADI)	2017	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	ELANTRA(ADI)	2017	D 1.6 TCI-U2	PGS [Parking Guide System]	√	√	√	√		

Europe/General	ELANTRA(ADI)	2017	D 1.6 TCI-U2	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2017	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ELANTRA(ADI)	2017	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(ADI)	2017	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2017	D 1.6 TCI-U2	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2017	D 1.6 TCI-U2	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	ELANTRA(ADI)	2017	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	ELANTRA(ADI)	2017	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2017	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(ADI)	2017	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA(ADI)	2017	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	ELANTRA(ADI)	2017	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(ADI)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(ADI)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(ADI)	2017	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2017	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(ADI)	2017	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	ELANTRA(ADI)	2017	G 2.0 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ELANTRA(ADI)	2017	G 2.0 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2017	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ELANTRA(ADI)	2017	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(ADI)	2017	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2017	G 2.0 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2017	G 2.0 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2017	G 2.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	ELANTRA(ADI)	2017	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	ELANTRA(ADI)	2017	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2017	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(ADI)	2016	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2016	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(ADI)	2016	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(ADI)	2016	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(ADI)	2016	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(ADI)	2016	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2016	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(ADI)	2016	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	ELANTRA(ADI)	2016	D 1.6 TCI-U2	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ELANTRA(ADI)	2016	D 1.6 TCI-U2	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2016	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ELANTRA(ADI)	2016	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(ADI)	2016	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2016	D 1.6 TCI-U2	DDM [Driver Door Module]	√	√	√	√	√	

Europe/General	ELANTRA(ADI)	2016	D 1.6 TCI-U2	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2016	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	ELANTRA(ADI)	2016	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2016	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(ADI)	2016	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA(ADI)	2016	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	ELANTRA(ADI)	2016	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(ADI)	2016	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(ADI)	2016	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(ADI)	2016	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2016	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(ADI)	2016	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	ELANTRA(ADI)	2016	G 2.0 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	ELANTRA(ADI)	2016	G 2.0 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2016	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ELANTRA(ADI)	2016	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(ADI)	2016	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2016	G 2.0 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2016	G 2.0 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2016	G 2.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	ELANTRA(ADI)	2016	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	ELANTRA(ADI)	2016	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(ADI)	2016	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(HD)	2011	D 1.6 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ELANTRA(HD)	2011	D 1.6 TCI-U	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(HD)	2011	D 1.6 TCI-U	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(HD)	2011	D 1.6 TCI-U	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ELANTRA(HD)	2011	D 1.6 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(HD)	2011	D 1.6 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(HD)	2011	D 1.6 TCI-U	IMMO [Immobilizer]				√		0147, 0112, 0138, 0091, 0102, 0086, 0147, 0091
Europe/General	ELANTRA(HD)	2011	D 1.6 TCI-U	BCM [Body Control Module]	√			√	√	
Europe/General	ELANTRA(HD)	2011	D 1.6 TCI-U	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(HD)	2011	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	ELANTRA(HD)	2011	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	ELANTRA(HD)	2011	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	ELANTRA(HD)	2011	G 1.6 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(HD)	2011	G 1.6 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(HD)	2011	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ELANTRA(HD)	2011	G 1.6 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(HD)	2011	G 1.6 DOHC	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(HD)	2011	G 1.6 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	ELANTRA(HD)	2011	G 1.6 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055, 0116, 0120, 0158

Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	ELANTRA(HD)	2011	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(HD)	2010	D 1.6 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ELANTRA(HD)	2010	D 1.6 TCI-U	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(HD)	2010	D 1.6 TCI-U	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(HD)	2010	D 1.6 TCI-U	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ELANTRA(HD)	2010	D 1.6 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(HD)	2010	D 1.6 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(HD)	2010	D 1.6 TCI-U	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	ELANTRA(HD)	2010	D 1.6 TCI-U	BCM [Body Control Module]	√			√	√	
Europe/General	ELANTRA(HD)	2010	D 1.6 TCI-U	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(HD)	2010	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	ELANTRA(HD)	2010	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	ELANTRA(HD)	2010	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	ELANTRA(HD)	2010	G 1.6 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(HD)	2010	G 1.6 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(HD)	2010	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ELANTRA(HD)	2010	G 1.6 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(HD)	2010	G 1.6 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(HD)	2010	G 1.6 DOHC	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(HD)	2010	G 1.6 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	ELANTRA(HD)	2010	G 1.6 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055, 0116, 0120, 0158
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	ELANTRA(HD)	2010	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(HD)	2009	D 1.6 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ELANTRA(HD)	2009	D 1.6 TCI-U	AT [Automatic Transaxle]	√	√	√	√	√	0122

Europe/General	ELANTRA(HD)	2009	D 1.6 TCI-U	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(HD)	2009	D 1.6 TCI-U	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ELANTRA(HD)	2009	D 1.6 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(HD)	2009	D 1.6 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(HD)	2009	D 1.6 TCI-U	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	ELANTRA(HD)	2009	D 1.6 TCI-U	BCM [Body Control Module]	√			√	√	
Europe/General	ELANTRA(HD)	2009	D 1.6 TCI-U	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(HD)	2009	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	ELANTRA(HD)	2009	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	ELANTRA(HD)	2009	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	ELANTRA(HD)	2009	G 1.6 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(HD)	2009	G 1.6 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(HD)	2009	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ELANTRA(HD)	2009	G 1.6 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(HD)	2009	G 1.6 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(HD)	2009	G 1.6 DOHC	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(HD)	2009	G 1.6 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	ELANTRA(HD)	2009	G 1.6 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055, 0120
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0120
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0120
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(HD)	2009	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(HD)	2008	D 1.6 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ELANTRA(HD)	2008	D 1.6 TCI-U	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(HD)	2008	D 1.6 TCI-U	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(HD)	2008	D 1.6 TCI-U	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ELANTRA(HD)	2008	D 1.6 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(HD)	2008	D 1.6 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(HD)	2008	D 1.6 TCI-U	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	ELANTRA(HD)	2008	D 1.6 TCI-U	BCM [Body Control Module]	√			√	√	
Europe/General	ELANTRA(HD)	2008	D 1.6 TCI-U	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(HD)	2008	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	ELANTRA(HD)	2008	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	ELANTRA(HD)	2008	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	ELANTRA(HD)	2008	G 1.6 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(HD)	2008	G 1.6 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064

Europe/General	ELANTRA(HD)	2008	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ELANTRA(HD)	2008	G 1.6 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(HD)	2008	G 1.6 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(HD)	2008	G 1.6 DOHC	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(HD)	2008	G 1.6 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	ELANTRA(HD)	2008	G 1.6 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055, 0120
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0120
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0120
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	ELANTRA(HD)	2008	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(HD)	2007	D 1.6 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ELANTRA(HD)	2007	D 1.6 TCI-U	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(HD)	2007	D 1.6 TCI-U	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	ELANTRA(HD)	2007	D 1.6 TCI-U	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ELANTRA(HD)	2007	D 1.6 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(HD)	2007	D 1.6 TCI-U	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	ELANTRA(HD)	2007	D 1.6 TCI-U	BCM [Body Control Module]	√			√	√	
Europe/General	ELANTRA(HD)	2007	D 1.6 TCI-U	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(HD)	2007	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	ELANTRA(HD)	2007	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	ELANTRA(HD)	2007	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	ELANTRA(HD)	2007	G 1.6 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(HD)	2007	G 1.6 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	ELANTRA(HD)	2007	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	ELANTRA(HD)	2007	G 1.6 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(HD)	2007	G 1.6 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(HD)	2007	G 1.6 DOHC	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(HD)	2007	G 1.6 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	ELANTRA(HD)	2007	G 1.6 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055, 0120
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0120
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0120
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			0109

Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	ELANTRA(HD)	2007	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(J1)	1995	G 1.5 SOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	ELANTRA(J1)	1995	G 1.6 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	ELANTRA(J1)	1995	G 1.8 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	ELANTRA(J1)	1994	G 1.5 SOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	ELANTRA(J1)	1994	G 1.6 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	ELANTRA(J1)	1994	G 1.8 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	ELANTRA(J1)	1993	G 1.5 SOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	ELANTRA(J1)	1993	G 1.6 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	ELANTRA(J1)	1993	G 1.8 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	ELANTRA(J1)	1992	G 1.5 SOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	ELANTRA(J1)	1992	G 1.6 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	ELANTRA(J1)	1992	G 1.8 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	ELANTRA(MD)	2016	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MD)	2016	D 1.6 TCI-U2	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MD)	2016	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MD)	2016	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MD)	2016	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2016	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MD)	2016	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ELANTRA(MD)	2016	D 1.6 TCI-U2	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(MD)	2016	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MD)	2016	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MD)	2016	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2016	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2016	D 1.6 TCI-U2	CLU VC [Cluster Variant Coding]	√	√	√			
Europe/General	ELANTRA(MD)	2016	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2016	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MD)	2016	F 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA(MD)	2016	F 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MD)	2016	F 2.0 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MD)	2016	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MD)	2016	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MD)	2016	F 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2016	F 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MD)	2016	F 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ELANTRA(MD)	2016	F 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(MD)	2016	F 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MD)	2016	F 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MD)	2016	F 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2016	F 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	

Europe/General	ELANTRA(MD)	2016	F 2.0 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	ELANTRA(MD)	2016	F 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2016	F 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MD)	2016	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ELANTRA(MD)	2016	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ELANTRA(MD)	2016	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MD)	2016	G 1.6 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MD)	2016	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MD)	2016	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MD)	2016	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2016	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ELANTRA(MD)	2016	G 1.6 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(MD)	2016	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MD)	2016	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MD)	2016	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2016	G 1.6 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	ELANTRA(MD)	2016	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2016	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2016	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MD)	2016	G 1.8 MPI	ENGINE [Leaded All]		√	√			0013, 0015, 0073, 0116, 0120, 0158
Europe/General	ELANTRA(MD)	2016	G 1.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA(MD)	2016	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MD)	2016	G 1.8 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MD)	2016	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MD)	2016	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MD)	2016	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2016	G 1.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MD)	2016	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ELANTRA(MD)	2016	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(MD)	2016	G 1.8 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MD)	2016	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MD)	2016	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2016	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	ELANTRA(MD)	2016	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2016	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2016	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MD)	2016	G 2.0 MPI	ENGINE [Leaded All]		√	√			0013, 0015, 0073, 0116, 0120, 0158
Europe/General	ELANTRA(MD)	2016	G 2.0 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA(MD)	2016	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MD)	2016	G 2.0 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MD)	2016	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MD)	2016	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			

Europe/General	ELANTRA(MD)	2016	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2016	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MD)	2016	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ELANTRA(MD)	2016	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(MD)	2016	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MD)	2016	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MD)	2016	G 2.0 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	ELANTRA(MD)	2016	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2016	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2016	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MD)	2015	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2015	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MD)	2015	D 1.6 TCI-U2	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MD)	2015	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MD)	2015	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MD)	2015	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2015	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MD)	2015	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ELANTRA(MD)	2015	D 1.6 TCI-U2	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(MD)	2015	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MD)	2015	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MD)	2015	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2015	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2015	D 1.6 TCI-U2	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	ELANTRA(MD)	2015	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2015	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MD)	2015	F 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA(MD)	2015	F 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MD)	2015	F 2.0 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MD)	2015	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MD)	2015	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MD)	2015	F 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2015	F 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MD)	2015	F 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ELANTRA(MD)	2015	F 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(MD)	2015	F 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MD)	2015	F 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MD)	2015	F 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2015	F 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2015	F 2.0 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	ELANTRA(MD)	2015	F 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2015	F 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MD)	2015	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ELANTRA(MD)	2015	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158

Europe/General	ELANTRA(MD)	2015	G 1.6 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MD)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MD)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MD)	2015	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2015	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MD)	2015	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ELANTRA(MD)	2015	G 1.6 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(MD)	2015	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MD)	2015	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MD)	2015	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2015	G 1.6 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	ELANTRA(MD)	2015	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2015	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2015	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MD)	2015	G 1.8 MPI	ENGINE [Leaded All]		√	√			0013, 0015, 0073, 0116, 0120, 0158
Europe/General	ELANTRA(MD)	2015	G 1.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA(MD)	2015	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MD)	2015	G 1.8 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MD)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MD)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MD)	2015	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2015	G 1.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MD)	2015	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ELANTRA(MD)	2015	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(MD)	2015	G 1.8 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MD)	2015	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MD)	2015	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2015	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	ELANTRA(MD)	2015	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2015	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2015	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MD)	2015	G 2.0 MPI	ENGINE [Leaded All]		√	√			0013, 0015, 0073, 0116, 0120, 0158
Europe/General	ELANTRA(MD)	2015	G 2.0 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA(MD)	2015	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MD)	2015	G 2.0 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MD)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MD)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MD)	2015	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2015	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ELANTRA(MD)	2015	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(MD)	2015	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MD)	2015	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MD)	2015	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	

Europe/General	ELANTRA(MD)	2015	G 2.0 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	ELANTRA(MD)	2015	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2015	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2015	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MD)	2014	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2014	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MD)	2014	D 1.6 TCI-U2	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MD)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MD)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MD)	2014	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2014	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MD)	2014	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ELANTRA(MD)	2014	D 1.6 TCI-U2	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(MD)	2014	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MD)	2014	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MD)	2014	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2014	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2014	D 1.6 TCI-U2	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	ELANTRA(MD)	2014	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2014	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	ELANTRA(MD)	2014	F 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	

Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2014	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	ENGINE [Leaded All]		√	√			0013, 0015, 0073, 0116, 0120, 0158
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2014	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	ENGINE [Leaded All]		√	√			0013, 0015, 0073, 0116, 0120, 0158
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2014	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122

Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2013	F 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2013	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	ENGINE [Leaded All]		√	√			0013, 0015, 0073, 0116, 0120, 0158
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2013	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	ENGINE [Leaded All]		√	√			0013, 0015, 0073, 0116, 0120, 0158

Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2013	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2012	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	ENGINE [Leaded All]	√	√	√	√		0116, 0015, 0073, 0013, 0120, 0158
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MD)	2012	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026

Europe/General	ELANTRA(MDI)	2016	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2016	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MDI)	2016	D 1.6 TCI-U2	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MDI)	2016	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MDI)	2016	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MDI)	2016	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2016	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MDI)	2016	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MDI)	2016	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MDI)	2016	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2016	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2016	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2016	G 1.8 MPI	ENGINE [Leaded All]	√	√	√	√		0116, 0015, 0073, 0013, 0120, 0158
Europe/General	ELANTRA(MDI)	2016	G 1.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	ELANTRA(MDI)	2016	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MDI)	2016	G 1.8 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MDI)	2016	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MDI)	2016	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MDI)	2016	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2016	G 1.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MDI)	2016	G 1.8 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MDI)	2016	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MDI)	2016	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2016	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2016	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2016	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MDI)	2015	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2015	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MDI)	2015	D 1.6 TCI-U2	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MDI)	2015	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MDI)	2015	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MDI)	2015	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2015	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MDI)	2015	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MDI)	2015	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MDI)	2015	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2015	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2015	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2015	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MDI)	2015	G 1.8 MPI	ENGINE [Leaded All]	√	√	√	√		0116, 0015, 0073, 0013, 0120, 0158
Europe/General	ELANTRA(MDI)	2015	G 1.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	ELANTRA(MDI)	2015	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MDI)	2015	G 1.8 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064

Europe/General	ELANTRA(MDI)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MDI)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MDI)	2015	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2015	G 1.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MDI)	2015	G 1.8 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MDI)	2015	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MDI)	2015	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2015	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2015	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MDI)	2014	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2014	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MDI)	2014	D 1.6 TCI-U2	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MDI)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MDI)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MDI)	2014	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2014	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MDI)	2014	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MDI)	2014	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MDI)	2014	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2014	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2014	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2014	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MDI)	2014	G 1.8 MPI	ENGINE [Leaded All]	√	√	√	√		0116, 0015, 0073, 0013, 0120, 0158
Europe/General	ELANTRA(MDI)	2014	G 1.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	ELANTRA(MDI)	2014	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MDI)	2014	G 1.8 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MDI)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MDI)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MDI)	2014	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2014	G 1.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MDI)	2014	G 1.8 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MDI)	2014	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MDI)	2014	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2014	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2014	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2014	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	IMMO [Immobilizer]				√		

Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2013	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	ENGINE [Leaded All]	√	√	√	√		0116, 0015, 0073, 0013, 0120, 0158
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	ABSESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(MDI)	2013	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(RD)	2000	G 1.5 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ELANTRA(RD)	2000	G 1.5 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(RD)	2000	G 1.5 SOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	ELANTRA(RD)	2000	G 1.5 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	ELANTRA(RD)	2000	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ELANTRA(RD)	2000	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(RD)	2000	G 1.6 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	ELANTRA(RD)	2000	G 1.6 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	ELANTRA(RD)	2000	G 1.8 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ELANTRA(RD)	2000	G 1.8 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(RD)	2000	G 1.8 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	ELANTRA(RD)	2000	G 1.8 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	ELANTRA(RD)	2000	G 2.0 DOHC	ENGINE [Unleaded OBD - II]		√	√	√		
Europe/General	ELANTRA(RD)	2000	G 2.0 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ELANTRA(RD)	2000	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(RD)	2000	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	ELANTRA(RD)	2000	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	ELANTRA(RD)	1999	G 1.5 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	ELANTRA(RD)	1999	G 1.5 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(RD)	1999	G 1.5 SOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	ELANTRA(RD)	1999	G 1.5 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	ELANTRA(RD)	1999	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(RD)	1999	G 1.6 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	ELANTRA(RD)	1999	G 1.6 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	ELANTRA(RD)	1999	G 1.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	ELANTRA(RD)	1999	G 1.8 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064

Europe/General	ELANTRA(RD)	1996	G 1.5 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	ELANTRA(RD)	1996	G 1.6 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	ELANTRA(RD)	1996	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(RD)	1996	G 1.6 DOHC	AIRBAG [AIRBAG]		√	√	√		
Europe/General	ELANTRA(RD)	1996	G 1.6 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	ELANTRA(RD)	1996	G 1.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	ELANTRA(RD)	1996	G 1.8 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(RD)	1996	G 1.8 DOHC	AIRBAG [AIRBAG]		√	√	√		
Europe/General	ELANTRA(RD)	1996	G 1.8 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	ELANTRA(RD)	1996	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	ELANTRA(RD)	1996	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(RD)	1996	G 2.0 DOHC	AIRBAG [AIRBAG]		√	√	√		
Europe/General	ELANTRA(RD)	1996	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	ELANTRA(UD)	2016	G 1.8 MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	ELANTRA(UD)	2016	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(UD)	2016	G 1.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
Europe/General	ELANTRA(UD)	2016	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(UD)	2016	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(UD)	2016	G 1.8 MPI	ODS [Occupant Detection Sensor]	√	√	√	√		0156
Europe/General	ELANTRA(UD)	2016	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(UD)	2016	G 1.8 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(UD)	2016	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ELANTRA(UD)	2016	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(UD)	2016	G 1.8 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(UD)	2016	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	ELANTRA(UD)	2016	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	ELANTRA(UD)	2016	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(UD)	2016	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(UD)	2016	G 1.8 MPI	TMU [Telematics Unit]	√	√	√			
Europe/General	ELANTRA(UD)	2016	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(UD)	2015	G 1.8 MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	ELANTRA(UD)	2015	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(UD)	2015	G 1.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
Europe/General	ELANTRA(UD)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(UD)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(UD)	2015	G 1.8 MPI	ODS [Occupant Detection Sensor]	√	√	√	√		0156
Europe/General	ELANTRA(UD)	2015	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(UD)	2015	G 1.8 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(UD)	2015	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ELANTRA(UD)	2015	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(UD)	2015	G 1.8 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(UD)	2015	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	ELANTRA(UD)	2015	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	ELANTRA(UD)	2015	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(UD)	2015	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	

Europe/General	ELANTRA(UD)	2015	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(UD)	2015	G 1.8 MPI	TMU [Telematics Unit]	√	√	√			
Europe/General	ELANTRA(UD)	2015	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	ODS [Occupant Detection Sensor]	√	√	√	√		0156
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	IMMO [Immobilizer]				√		
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	TMU [Telematics Unit]	√	√	√			
Europe/General	ELANTRA(UD)	2014	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ELANTRA(XD)	2006	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2006	D 2.0 TCI-D	TCS [Traction Control]		√	√	√	√	
Europe/General	ELANTRA(XD)	2006	D 2.0 TCI-D	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(XD)	2006	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√	√		0111
Europe/General	ELANTRA(XD)	2006	D 2.0 TCI-D	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ELANTRA(XD)	2006	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2006	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	ELANTRA(XD)	2006	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2006	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ELANTRA(XD)	2006	G 1.6 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	ELANTRA(XD)	2006	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(XD)	2006	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√	√		0111
Europe/General	ELANTRA(XD)	2006	G 1.6 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ELANTRA(XD)	2006	G 1.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2006	G 1.8 DOHC	ENGINE [Unleaded GEN (CVVT+)]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2006	G 1.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	ELANTRA(XD)	2006	G 1.8 DOHC	ENGINE [Unleaded GEN (CVVT -)]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2006	G 1.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2006	G 1.8 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	ELANTRA(XD)	2006	G 1.8 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(XD)	2006	G 1.8 DOHC	AIRBAG [Airbag Control]	√	√	√	√		0111
Europe/General	ELANTRA(XD)	2006	G 1.8 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ELANTRA(XD)	2006	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0117, 0120
Europe/General	ELANTRA(XD)	2006	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120

Europe/General	ELANTRA(XD)	2006	G 2.0 DOHC	ENGINE [Unleaded GEN (CVVT+)]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2006	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	ELANTRA(XD)	2006	G 2.0 DOHC	ENGINE [Unleaded GEN (CVVT -)]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2006	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2006	G 2.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	ELANTRA(XD)	2006	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(XD)	2006	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√	√		0111
Europe/General	ELANTRA(XD)	2006	G 2.0 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ELANTRA(XD)	2005	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2005	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2005	D 2.0 TCI-D	TCS [Traction Control]		√	√	√	√	
Europe/General	ELANTRA(XD)	2005	D 2.0 TCI-D	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(XD)	2005	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√	√		0111
Europe/General	ELANTRA(XD)	2005	D 2.0 TCI-D	IMMO [Immobilizer]				√		0147, 0112, 0091, 0102, 0147, 0091
Europe/General	ELANTRA(XD)	2005	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2005	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2005	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ELANTRA(XD)	2005	G 1.6 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	ELANTRA(XD)	2005	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(XD)	2005	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√	√		0111
Europe/General	ELANTRA(XD)	2005	G 1.6 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ELANTRA(XD)	2005	G 1.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2005	G 1.8 DOHC	ENGINE [Unleaded GEN (CVVT+)]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2005	G 1.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	ELANTRA(XD)	2005	G 1.8 DOHC	ENGINE [Unleaded GEN (CVVT -)]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2005	G 1.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2005	G 1.8 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	ELANTRA(XD)	2005	G 1.8 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(XD)	2005	G 1.8 DOHC	AIRBAG [Airbag Control]	√	√	√	√		0111
Europe/General	ELANTRA(XD)	2005	G 1.8 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ELANTRA(XD)	2005	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0117, 0120
Europe/General	ELANTRA(XD)	2005	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2005	G 2.0 DOHC	ENGINE [Unleaded GEN (CVVT+)]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2005	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	ELANTRA(XD)	2005	G 2.0 DOHC	ENGINE [Unleaded GEN (CVVT -)]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2005	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2005	G 2.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	ELANTRA(XD)	2005	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(XD)	2005	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√	√		0111
Europe/General	ELANTRA(XD)	2005	G 2.0 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ELANTRA(XD)	2004	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2004	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2004	D 2.0 TCI-D	TCS [Traction Control]		√	√	√	√	
Europe/General	ELANTRA(XD)	2004	D 2.0 TCI-D	ABS [Anti - Lock Brake]		√	√	√	√	0064

Europe/General	ELANTRA(XD)	2004	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√	√		0111
Europe/General	ELANTRA(XD)	2004	D 2.0 TCI-D	IMMO [Immobilizer]				√		0147, 0112, 0091, 0102, 0147, 0091
Europe/General	ELANTRA(XD)	2004	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2004	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	ELANTRA(XD)	2004	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2004	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ELANTRA(XD)	2004	G 1.6 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	ELANTRA(XD)	2004	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(XD)	2004	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√	√		0111
Europe/General	ELANTRA(XD)	2004	G 1.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2004	G 1.8 DOHC	ENGINE [Unleaded GEN (CVVT+)]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2004	G 1.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	ELANTRA(XD)	2004	G 1.8 DOHC	ENGINE [Unleaded GEN (CVVT -)]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2004	G 1.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2004	G 1.8 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	ELANTRA(XD)	2004	G 1.8 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(XD)	2004	G 1.8 DOHC	AIRBAG [Airbag Control]	√	√	√	√		0111
Europe/General	ELANTRA(XD)	2004	G 1.8 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ELANTRA(XD)	2004	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0117, 0120
Europe/General	ELANTRA(XD)	2004	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2004	G 2.0 DOHC	ENGINE [Unleaded GEN (CVVT+)]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2004	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	ELANTRA(XD)	2004	G 2.0 DOHC	ENGINE [Unleaded GEN (CVVT -)]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2004	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2004	G 2.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	ELANTRA(XD)	2004	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(XD)	2004	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√	√		0111
Europe/General	ELANTRA(XD)	2004	G 2.0 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ELANTRA(XD)	2003	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2003	D 2.0 TCI-D	AT [Melco TCM]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2003	D 2.0 TCI-D	AT [Siemens PCM]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2003	D 2.0 TCI-D	TCS [Traction Control]		√	√	√	√	
Europe/General	ELANTRA(XD)	2003	D 2.0 TCI-D	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(XD)	2003	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	ELANTRA(XD)	2003	D 2.0 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ELANTRA(XD)	2003	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ELANTRA(XD)	2003	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ELANTRA(XD)	2003	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ELANTRA(XD)	2003	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ELANTRA(XD)	2003	G 1.6 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	ELANTRA(XD)	2003	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(XD)	2003	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	ELANTRA(XD)	2003	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ELANTRA(XD)	2003	G 1.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120

Europe/General	ELANTRA(XD)	2003	G 1.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2003	G 1.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2003	G 1.8 DOHC	AT [Melco TCM]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2003	G 1.8 DOHC	AT [Siemens PCM]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2003	G 1.8 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(XD)	2003	G 1.8 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	ELANTRA(XD)	2003	G 1.8 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ELANTRA(XD)	2003	G 2.0 DOHC	ENGINE [Unleaded OBD - II (SULEV)]	√	√	√	√	√	0015, 0055, 0117, 0120
Europe/General	ELANTRA(XD)	2003	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	ELANTRA(XD)	2003	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2003	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2003	G 2.0 DOHC	ENGINE [Unleaded OBD - II (Non SULEV)]	√	√	√	√	√	0015, 0055, 0117, 0120
Europe/General	ELANTRA(XD)	2003	G 2.0 DOHC	AT [Melco TCM]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2003	G 2.0 DOHC	AT [Siemens PCM]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2003	G 2.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	ELANTRA(XD)	2003	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(XD)	2003	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√	√		0111
Europe/General	ELANTRA(XD)	2003	G 2.0 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ELANTRA(XD)	2002	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2002	D 2.0 TCI-D	AT [Melco TCM]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2002	D 2.0 TCI-D	AT [Siemens PCM]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2002	D 2.0 TCI-D	TCS [Traction Control]		√	√	√	√	
Europe/General	ELANTRA(XD)	2002	D 2.0 TCI-D	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(XD)	2002	D 2.0 TCI-D	AIRBAG [AIRBAG]	√	√	√	√		
Europe/General	ELANTRA(XD)	2002	D 2.0 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ELANTRA(XD)	2002	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ELANTRA(XD)	2002	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ELANTRA(XD)	2002	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ELANTRA(XD)	2002	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ELANTRA(XD)	2002	G 1.6 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	ELANTRA(XD)	2002	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(XD)	2002	G 1.6 DOHC	AIRBAG [AIRBAG]	√	√	√	√		
Europe/General	ELANTRA(XD)	2002	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ELANTRA(XD)	2002	G 1.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	ELANTRA(XD)	2002	G 1.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2002	G 1.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2002	G 1.8 DOHC	AT [Melco TCM]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2002	G 1.8 DOHC	AT [Siemens PCM]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2002	G 1.8 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	ELANTRA(XD)	2002	G 1.8 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(XD)	2002	G 1.8 DOHC	AIRBAG [AIRBAG]	√	√	√	√		
Europe/General	ELANTRA(XD)	2002	G 1.8 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ELANTRA(XD)	2002	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	ELANTRA(XD)	2002	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120

Europe/General	ELANTRA(XD)	2002	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0117, 0120
Europe/General	ELANTRA(XD)	2002	G 2.0 DOHC	AT [Melco TCM]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2002	G 2.0 DOHC	AT [Siemens PCM]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2002	G 2.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	ELANTRA(XD)	2002	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(XD)	2002	G 2.0 DOHC	AIRBAG [AIRBAG]	√	√	√	√		0111
Europe/General	ELANTRA(XD)	2002	G 2.0 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ELANTRA(XD)	2001	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2001	D 2.0 TCI-D	AT [Melco TCM]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2001	D 2.0 TCI-D	AT [Siemens PCM]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2001	D 2.0 TCI-D	TCS [Traction Control]		√	√	√	√	
Europe/General	ELANTRA(XD)	2001	D 2.0 TCI-D	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(XD)	2001	D 2.0 TCI-D	AIRBAG [AIRBAG]	√	√	√	√		
Europe/General	ELANTRA(XD)	2001	D 2.0 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ELANTRA(XD)	2001	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	ELANTRA(XD)	2001	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	ELANTRA(XD)	2001	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	ELANTRA(XD)	2001	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	ELANTRA(XD)	2001	G 1.6 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	ELANTRA(XD)	2001	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(XD)	2001	G 1.6 DOHC	AIRBAG [AIRBAG]	√	√	√	√		
Europe/General	ELANTRA(XD)	2001	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	ELANTRA(XD)	2001	G 1.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	ELANTRA(XD)	2001	G 1.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2001	G 1.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2001	G 1.8 DOHC	AT [Melco TCM]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2001	G 1.8 DOHC	AT [Siemens PCM]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2001	G 1.8 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	ELANTRA(XD)	2001	G 1.8 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	ELANTRA(XD)	2001	G 1.8 DOHC	AIRBAG [AIRBAG]	√	√	√	√		
Europe/General	ELANTRA(XD)	2001	G 1.8 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	ELANTRA(XD)	2001	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	ELANTRA(XD)	2001	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2001	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	ELANTRA(XD)	2001	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0117, 0120
Europe/General	ELANTRA(XD)	2001	G 2.0 DOHC	AT [Melco TCM]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2001	G 2.0 DOHC	AT [Siemens PCM]	√	√	√	√	√	
Europe/General	ELANTRA(XD)	2001	G 2.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	ELANTRA(XD)	2001	G 2.0 DOHC	AIRBAG [AIRBAG]	√	√	√	√		0111
Europe/General	ELANTRA(XD)	2001	G 2.0 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	EON(HA)	2018	B 0.8 MPI	ENGINE [Engine Control]	√	√	√	√		0015, 0116, 0120, 0158
Europe/General	EON(HA)	2018	B 0.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EON(HA)	2018	B 0.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EON(HA)	2018	B 0.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	EON(HA)	2018	B 0.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112

Europe/General	EON(HA)	2018	B 0.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	EON(HA)	2018	G 0.8 MPI	ENGINE [Leaded All]	√	√	√	√		0015, 0073, 0116, 0120, 0158
Europe/General	EON(HA)	2018	G 0.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0015, 0116, 0120, 0158
Europe/General	EON(HA)	2018	G 0.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EON(HA)	2018	G 0.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EON(HA)	2018	G 0.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	EON(HA)	2018	G 0.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	EON(HA)	2018	G 0.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	EON(HA)	2018	G 1.0 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	EON(HA)	2018	G 1.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EON(HA)	2018	G 1.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EON(HA)	2018	G 1.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	EON(HA)	2018	G 1.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	EON(HA)	2018	G 1.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	EON(HA)	2017	B 0.8 MPI	ENGINE [Engine Control]	√	√	√	√		0015, 0116, 0120, 0158
Europe/General	EON(HA)	2017	B 0.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EON(HA)	2017	B 0.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EON(HA)	2017	B 0.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	EON(HA)	2017	B 0.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	EON(HA)	2017	B 0.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	EON(HA)	2017	G 0.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	EON(HA)	2017	G 0.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	EON(HA)	2017	G 0.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	EON(HA)	2017	G 0.8 MPI	ENGINE [Leaded All]	√	√	√	√		0015, 0073, 0116, 0120, 0158
Europe/General	EON(HA)	2017	G 0.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0015, 0116, 0120, 0158
Europe/General	EON(HA)	2017	G 0.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EON(HA)	2017	G 0.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EON(HA)	2017	G 1.0 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	EON(HA)	2017	G 1.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EON(HA)	2017	G 1.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EON(HA)	2017	G 1.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	EON(HA)	2017	G 1.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	EON(HA)	2016	B 0.8 MPI	ENGINE [Engine Control]	√	√	√	√		0015, 0116, 0120, 0158
Europe/General	EON(HA)	2016	B 0.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EON(HA)	2016	B 0.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EON(HA)	2016	B 0.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	EON(HA)	2016	B 0.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	EON(HA)	2016	B 0.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	EON(HA)	2016	G 0.8 MPI	ENGINE [Leaded All]	√	√	√	√		0015, 0073, 0116, 0120, 0158
Europe/General	EON(HA)	2016	G 0.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0015, 0116, 0120, 0158
Europe/General	EON(HA)	2016	G 0.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EON(HA)	2016	G 0.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EON(HA)	2016	G 0.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	EON(HA)	2016	G 0.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	EON(HA)	2016	G 0.8 MPI	CODE [Transmitter Code Saving]				√		0026

Europe/General	EON(HA)	2016	G 1.0 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	EON(HA)	2016	G 1.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EON(HA)	2016	G 1.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EON(HA)	2016	G 1.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	EON(HA)	2016	G 1.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	EON(HA)	2016	G 1.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	EON(HA)	2015	B 0.8 MPI	ENGINE [Engine Control]	√	√	√	√		0015, 0116, 0120, 0158
Europe/General	EON(HA)	2015	B 0.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EON(HA)	2015	B 0.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EON(HA)	2015	B 0.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	EON(HA)	2015	B 0.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	EON(HA)	2015	B 0.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	EON(HA)	2015	G 0.8 MPI	ENGINE [Leaded All]	√	√	√	√		0015, 0073, 0116, 0120, 0158
Europe/General	EON(HA)	2015	G 0.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0015, 0116, 0120, 0158
Europe/General	EON(HA)	2015	G 0.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EON(HA)	2015	G 0.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EON(HA)	2015	G 0.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	EON(HA)	2015	G 0.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	EON(HA)	2015	G 0.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	EON(HA)	2015	G 1.0 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	EON(HA)	2015	G 1.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EON(HA)	2015	G 1.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EON(HA)	2015	G 1.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	EON(HA)	2015	G 1.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	EON(HA)	2015	G 1.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	EON(HA)	2014	B 0.8 MPI	ENGINE [Engine Control]	√	√	√	√		0015, 0116, 0120, 0158
Europe/General	EON(HA)	2014	B 0.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EON(HA)	2014	B 0.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	EON(HA)	2014	B 0.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	EON(HA)	2014	B 0.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	EON(HA)	2014	G 0.8 MPI	ENGINE [Leaded All]	√	√	√	√		0015, 0073, 0116, 0120, 0158
Europe/General	EON(HA)	2014	G 0.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0015, 0116, 0120, 0158
Europe/General	EON(HA)	2014	G 0.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EON(HA)	2014	G 0.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EON(HA)	2014	G 0.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	EON(HA)	2014	G 0.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	EON(HA)	2014	G 0.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	EON(HA)	2014	G 1.0 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	EON(HA)	2014	G 1.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EON(HA)	2014	G 1.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EON(HA)	2014	G 1.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	EON(HA)	2014	G 1.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	EON(HA)	2014	G 1.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	EON(HA)	2013	B 0.8 MPI	ENGINE [Engine Control]	√	√	√	√		0015, 0116, 0120, 0158
Europe/General	EON(HA)	2013	B 0.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			

Europe/General	EON(HA)	2013	B 0.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EON(HA)	2013	B 0.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	EON(HA)	2013	B 0.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	EON(HA)	2013	B 0.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	EON(HA)	2013	G 0.8 MPI	ENGINE [Leaded All]	√	√	√	√		0015, 0073, 0116, 0120, 0158
Europe/General	EON(HA)	2013	G 0.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0015, 0116, 0120, 0158
Europe/General	EON(HA)	2013	G 0.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EON(HA)	2013	G 0.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EON(HA)	2013	G 0.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	EON(HA)	2013	G 0.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	EON(HA)	2013	G 0.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	EON(HA)	2012	B 0.8 MPI	ENGINE [Engine Control]	√	√	√	√		0015, 0116, 0120, 0158
Europe/General	EON(HA)	2012	B 0.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EON(HA)	2012	B 0.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EON(HA)	2012	B 0.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	EON(HA)	2012	B 0.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	EON(HA)	2012	B 0.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	EON(HA)	2012	G 0.8 MPI	ENGINE [Leaded All]	√	√	√	√		0015, 0073, 0116, 0120, 0158
Europe/General	EON(HA)	2012	G 0.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0015, 0116, 0120, 0158
Europe/General	EON(HA)	2012	G 0.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EON(HA)	2012	G 0.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	EON(HA)	2012	G 0.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	EON(HA)	2012	G 0.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	ECS [Electronic Control Suspension (Limousine)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	ECS [Electronic Control Suspension (Sedan)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	

Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	ESHIFTER [E - Shifter]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	APSM [Assist Power Seat Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	CLU [Cluster Module]	√			√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 3.8 GDI	DIS [Multimedia]	√			√		

Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	ECS [Electronic Control Suspension (Limousine)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	ECS [Electronic Control Suspension (Sedan)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	ESHIFTER [E - Shifter]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	

Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	APSM [Assist Power Seat Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	CLU [Cluster Module]	√			√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2016	G 5.0 GDI	DIS [Multimedia]	√			√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	ECS [Electronic Control Suspension (Sedan)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	

Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	ESHIFTER [E - Shifter]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	APSM [Assist Power Seat Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	CLU [Cluster Module]	√			√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 3.8 GDI	DIS [Multimedia]	√			√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0122

Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	ECS [Electronic Control Suspension (Limousine)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	ECS [Electronic Control Suspension (Sedan)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	ESHIFTER [E - Shifter]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	

Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	APSM [Assist Power Seat Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	CLU [Cluster Module]	√			√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2015	G 5.0 GDI	DIS [Multimedia]	√			√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	ECS [Electronic Control Suspension (Limousine)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	ECS [Electronic Control Suspension (Sedan)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084

Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	APSM [Assist Power Seat Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	CLU [Cluster Module]	√			√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 3.8 GDI	DIS [Multimedia]	√			√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093

Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	ECS [Electronic Control Suspension (Limousine)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	ECS [Electronic Control Suspension (Sedan)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	ESHIFTER [E - Shifter]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	

Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	APSM [Assist Power Seat Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	CLU [Cluster Module]	√			√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2014	G 5.0 GDI	DIS [Multimedia]	√			√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	EPB [Electric Parking Brake (New - F / L)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	EPB [Electric Parking Brake (Old)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	ESP [Electronic Stability Program (Old)]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	ESP [Electronic Stability Program (New - F / L)]	√	√	√	√	√	0064, 0093
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #2) (New - F / L)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #2) (Old)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #1) (Old)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	AIRCON [Air Conditioner (Old)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	AIRCON [Air Conditioner (New - F / L)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	EPS [Electric Hydraulic Power Steering (New - F / L)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	EPS [Electric Hydraulic Power Steering (Old)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	ECS [Electronic Control Suspension (Sedan)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	ECS [Electronic Control Suspension (Limousine)]	√	√	√	√		

Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	SCC [Smart Cruise Control (New - F / L)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	SCC [Smart Cruise Control (Old)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	TPMS [Tire Pressure Monitoring (New - F / L)]	√	√	√		√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	TPMS [Tire Pressure Monitoring (Old)]	√	√	√		√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	LDWS [Lane Departure Warning System (Old)]	√	√	√	√		0084, 0085
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	LDWS [Lane Departure Warning System (New - F / L)]	√	√	√	√		0084
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	AHLS [Auto Headlamp Leveling (Old)]	√	√	√	√		0090, 0135
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	AFLS [Adaptive Front Lighting System (Old)]	√	√	√	√	√	0021
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	AFLS [Adaptive Front Lighting System (New - F / L)]	√	√	√	√	√	0021
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	AHLS [Auto Headlamp Leveling System (New - F / L)]	√	√	√	√		0090, 0135
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	SMK [Smart Key Unit (New - F / L)]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	SMKCODE [Smart Key Code Saving (Old)]				√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	PSB - R [Pre - safe Seat Belt - Right (Old)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	PSB - L [Pre - safe Seat Belt - Left (Old)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	PSB - L [Pre - safe Seat Belt - Left (New - F / L)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	PSB - R [Pre - safe Seat Belt - Right (New - F / L)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	ECW [Electric Control Wiper (Old)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	OPTION [User Option (Old)]				√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	FAM [Front Area Module (Old)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	DDM [Driver Door Module (Old)]	√	√	√	√	√	

Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	ADM [Assist Door Module (Old)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	CLU [Cluster Module (Old)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	MFSW [Multi Function Switch (Old)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	PSM [Power Seat Module (Old)]	√	√	√	√	√	0068
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	SCM [Steering Column Module (Old)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	FBWS [Front Back Warning System (Old)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	PTM [Power Trunk Module (Old)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	MFSW [Multi Function Switch (New - F / L)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	HUD [Head Up Display (New - F / L)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	CLU [Cluster Module (New - F / L)]	√			√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	APSM [Assist Power Seat Module (New - F / L)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	PTM [Power Trunk Module (New - F / L)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	SWRC [Steering Wheel Remote Control (New - F / L)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	PDM [Power Distribution Module (Old)]	√	√	√	√	√	0042
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	SJB [Smart Junction Block (New - F / L)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	SCM [Steering Column Module (New - F / L)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	PSM [Power Seat Module (New - F / L)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	FAM [Front Area Module (New - F / L)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	DDM [Driver Door Module (New - F / L)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	ADM [Assist Door Module (New - F / L)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	IPM [Instrument Panel Module (New - F / L)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	ECW [Electric Control Wiper (New - F / L)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	M - MEDIA [Multimedia (New - F / L)]	√			√		

Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	TUNER_AMP [Tuner / Amplifier (Old)]	√	√	√			0034
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 GDI	HEADUNIT [Head Unit (Old)]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0114, 0015, 0044, 0158, 0095, 0055, 0056
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	OPTION [User Option]				√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	ADM [Assist Door Module]	√	√	√	√	√	

Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	PSM [Power Seat Module]	√	√	√	√	√	0068
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 3.8 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0158
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	AFLS [Adaptive Front Lighting]	√	√	√	√	√	0021
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	SMKCODE [Smart Key Code Saving]				√		

Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	OPTION [User Option]				√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	PSM [Power Seat Module]	√	√	√	√	√	0068
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	IPM [Instrument Panel Module]	√	√	√	√	√	0043, 0058, 0071, 0106
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 4.6 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	EPB [Electric Parking Brake (Old)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	ESP [Electronic Stability Program (Old)]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	ESP [Electronic Stability Program (New - F / L)]	√	√	√	√	√	0064, 0093
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	AIRBAG [Airbag (Event #2) (New - F / L)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	AIRBAG [Airbag (Event #1) (New - F / L)]	√	√	√			

Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	AIRBAG [Airbag (Event #2) (Old)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	AIRBAG [Airbag (Event #1) (Old)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	AIRCON [Air Conditioner (Old)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	AIRCON [Air Conditioner (New - F / L)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	EPS [Electric Hydraulic Power Steering (New - F / L)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	EPS [Electronic Power Steering (Old)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	ECS [Electronic Control Suspension (Limousine)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	ECS [Electronic Control Suspension (Sedan)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	SCC [Smart Cruise Control (New - F / L)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	SCC [Smart Cruise Control (Old)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	TPMS [Tire Pressure Monitoring (New - F / L)]	√	√	√		√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	TPMS [Tire Pressure Monitoring (Old)]	√	√	√		√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	LDWS [Lane Departure Warning System (Old)]	√	√	√	√		0084, 0085
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	LDWS [Lane Departure Warning System (New - F / L)]	√	√	√	√		0084
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	AFLS [Adaptive Front Lighting System (Old)]	√	√	√	√	√	0021
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	AFLS [Adaptive Front Lighting System (New - F / L)]	√	√	√	√	√	0021
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	AHLS [Auto Headlamp Leveling System (New - F / L)]	√	√	√	√		0090, 0135
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	ESHIFTER [E - Shifter]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	SMK [Smart Key Unit (New - F / L)]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	SMKCODE [Smart Key Code Saving (Old)]				√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right (Old)]	√	√	√			

Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left (Old)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left (New - F / L)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right (New - F / L)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	PTM [Power Trunk Module (Old)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	OPTION [User Option (Old)]				√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	IPM [Instrument Panel Module (Old)]	√	√	√	√	√	0043, 0058, 0071, 0106
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	FAM [Front Area Module (Old)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	DDM [Driver Door Module (Old)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	ADM [Assist Door Module (Old)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	CLU [Cluster Module (Old)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	MFSW [Multi Function Switch (Old)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	PSM [Power Seat Module (Old)]	√	√	√	√	√	0068
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	FBWS [Front Back Warning System (Old)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	SJB [Smart Junction Block (New - F / L)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	HUD [Head Up Display (New - F / L)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	CLU [Cluster Module (New - F / L)]	√			√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	PTM [Power Trunk Module (New - F / L)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	ECW [Electric Control Wiper (New - F / L)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	APSM [Assist Power Seat Module (New - F / L)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	MFSW [Multi Function Switch (New - F / L)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	ECW [Electric Control Wiper (Old)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	SCM [Steering Column Module (New - F / L)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	PSM [Power Seat Module (New - F / L)]	√	√	√	√	√	

Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	FAM [Front Area Module (New - F / L)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	DDM [Driver Door Module (New - F / L)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	ADM [Assist Door Module (New - F / L)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	IPM [Instrument Panel Module (New - F / L)]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	PDM [Power Distribution Module (Old)]	√	√	√	√	√	0042
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	SWRC [Steering Wheel Remote Control (New - F / L)]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	M - MEDIA [Multimedia (New - F / L)]	√			√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	TUNER_AMP [Tuner / Amplifier (Old)]	√	√	√			0034
Europe/General	EQUUS/CENTEN NIAL(VI)	2013	G 5.0 GDI	HEADUNIT [Head Unit (Old)]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	SMKCODE [Smart Key Code Saving]				√		

Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	OPTION [User Option]				√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	IPM [Instrument Panel Module]	√	√	√	√	√	0043, 0058, 0071, 0106
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 GDI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	SCC [Smart Cruise Control]	√	√	√	√		

Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	OPTION [User Option]				√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	PSM [Power Seat Module]	√	√	√	√	√	0068
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	IPM [Instrument Panel Module]	√	√	√	√	√	0043, 0058, 0071, 0106
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 3.8 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0158
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	

Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	AFLS [Adaptive Front Lighting (8 Speed)]	√	√	√	√	√	0021
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	AFLS [Adaptive Front Lighting (6 Speed)]	√	√	√	√	√	0021
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	IPM [Instrument Panel Module]	√	√	√	√	√	0043, 0058, 0071, 0106
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	PSM [Power Seat Module]	√	√	√	√	√	0068

Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 4.6 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	FBWS [Front Back Warning System]	√	√	√	√		

Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	OPTION [User Option]				√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	IPM [Instrument Panel Module]	√	√	√	√	√	0043, 0058, 0071, 0106
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0068
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	EQUUS/CENTEN NIAL(VI)	2012	G 5.0 GDI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	

Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	LDWS [Lane Departure Warning System (China)]	√	√	√	√		0084, 0085
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	AFLS [Adaptive Front Lighting]	√	√	√	√	√	0021
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	OPTION [User Option]				√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	PSM [Power Seat Module]	√	√	√	√	√	0068
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	IPM [Instrument Panel Module]	√	√	√	√	√	0043, 0058, 0071, 0106
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 3.8 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0158
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0020, 0122
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	

Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	LDWS [Lane Departure Warning System (China)]	√	√	√	√		0084, 0085
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	AFLS [Adaptive Front Lighting]	√	√	√	√	√	0021
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	OPTION [User Option]				√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	IPM [Instrument Panel Module]	√	√	√	√	√	0043, 0058, 0071, 0106
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	PTM [Power Trunk Module]	√	√	√	√		

Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	PSM [Power Seat Module]	√	√	√	√	√	0068
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	EQUUS/CENTEN NIAL(VI)	2011	G 4.6 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	LDWS [Lane Departure Warning System (China)]	√	√	√	√		0084, 0085
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	AFLS [Adaptive Front Lighting]	√	√	√	√	√	0021
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	OPTION [User Option]				√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	FAM [Front Area Module]	√	√	√	√	√	

Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	PSM [Power Seat Module]	√	√	√	√	√	0068
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	IPM [Instrument Panel Module]	√	√	√	√	√	0043, 0058, 0071, 0106
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 3.8 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0158
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	LDWS [Lane Departure Warning System (China)]	√	√	√	√		0084, 0085
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085

Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	AFLS [Adaptive Front Lighting]	√	√	√	√	√	0021
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	OPTION [User Option]				√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	IPM [Instrument Panel Module]	√	√	√	√	√	0043, 0058, 0071, 0106
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	PSM [Power Seat Module]	√	√	√	√	√	0068
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	EQUUS/CENTEN NIAL(VI)	2010	G 4.6 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
Europe/General	G70(IK)	2018	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0051, 0116, 0120, 0123, 0158
Europe/General	G70(IK)	2018	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	G70(IK)	2018	G 2.0 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	G70(IK)	2018	G 2.0 T-GDI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	G70(IK)	2018	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	G70(IK)	2018	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	G70(IK)	2018	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	G70(IK)	2018	G 2.0 T-GDI	4WD [4WD Control]	√	√	√	√	√	0011
Europe/General	G70(IK)	2018	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0096

Europe/General	G70(IK)	2018	G 2.0 T-GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	G70(IK)	2018	G 2.0 T-GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	G70(IK)	2018	G 2.0 T-GDI	AVM [Around View Monitor System]	√	√	√	√	√	0008
Europe/General	G70(IK)	2018	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	G70(IK)	2018	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	G70(IK)	2018	G 2.0 T-GDI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	G70(IK)	2018	G 2.0 T-GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	G70(IK)	2018	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	G70(IK)	2018	G 2.0 T-GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	G70(IK)	2018	G 2.0 T-GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	G70(IK)	2018	G 2.0 T-GDI	AMP [Amplifier]						0006
Europe/General	G70(IK)	2018	G 2.0 T-GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	G70(IK)	2018	G 2.0 T-GDI	IBU - SMK [IBU - SMK]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	G70(IK)	2018	G 2.0 T-GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	G70(IK)	2018	G 2.0 T-GDI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	G70(IK)	2018	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133, 0134
Europe/General	G70(IK)	2018	G 2.0 T-GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	G70(IK)	2018	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	G70(IK)	2018	G 2.0 T-GDI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	G70(IK)	2018	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	G70(IK)	2018	G 2.0 T-GDI	ICU [Integrated Central Control Unit]	√	√	√	√	√	0018, 0052
Europe/General	G70(IK)	2018	G 2.0 T-GDI	ECALL [e - Call]	√	√	√			
Europe/General	G70(IK)	2018	G 3.3 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0051, 0116, 0120, 0158
Europe/General	G70(IK)	2018	G 3.3 T-GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	G70(IK)	2018	G 3.3 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	G70(IK)	2018	G 3.3 T-GDI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	G70(IK)	2018	G 3.3 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	G70(IK)	2018	G 3.3 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	G70(IK)	2018	G 3.3 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	G70(IK)	2018	G 3.3 T-GDI	4WD [4WD Control]	√	√	√	√	√	0011
Europe/General	G70(IK)	2018	G 3.3 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0096
Europe/General	G70(IK)	2018	G 3.3 T-GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	G70(IK)	2018	G 3.3 T-GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	G70(IK)	2018	G 3.3 T-GDI	AVM [Around View Monitor System]	√	√	√	√	√	0008
Europe/General	G70(IK)	2018	G 3.3 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	G70(IK)	2018	G 3.3 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	G70(IK)	2018	G 3.3 T-GDI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	G70(IK)	2018	G 3.3 T-GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	G70(IK)	2018	G 3.3 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	G70(IK)	2018	G 3.3 T-GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	G70(IK)	2018	G 3.3 T-GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	G70(IK)	2018	G 3.3 T-GDI	ESHIFTER [E - Shifter]	√	√	√	√	√	
Europe/General	G70(IK)	2018	G 3.3 T-GDI	AMP [Amplifier]						0006
Europe/General	G70(IK)	2018	G 3.3 T-GDI	SCM [Steering Column Module]	√	√	√	√	√	0142

Europe/General	G70(IK)	2018	G 3.3 T-GDI	IBU - SMK [IBU - SMK]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	G70(IK)	2018	G 3.3 T-GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	G70(IK)	2018	G 3.3 T-GDI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	G70(IK)	2018	G 3.3 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133, 0134
Europe/General	G70(IK)	2018	G 3.3 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	G70(IK)	2018	G 3.3 T-GDI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	G70(IK)	2018	G 3.3 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	G70(IK)	2018	G 3.3 T-GDI	ICU [Integrated Central Control Unit]	√	√	√	√	√	0018, 0052
Europe/General	G70(IK)	2018	G 3.3 T-GDI	ECALL [e - Call]	√	√	√			
Europe/General	G80(DH)	2018	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0123, 0158
Europe/General	G80(DH)	2018	G 2.0 T-GDI	AT [Automatic Transaxle (SBC)]	√	√	√	√		0007, 0122
Europe/General	G80(DH)	2018	G 2.0 T-GDI	AT [Automatic Transaxle (SBW)]	√	√	√	√		0007, 0122
Europe/General	G80(DH)	2018	G 2.0 T-GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0081, 0093
Europe/General	G80(DH)	2018	G 2.0 T-GDI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	G80(DH)	2018	G 2.0 T-GDI	EPB [Parking Brake]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	G80(DH)	2018	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	G80(DH)	2018	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 2.0 T-GDI	4WD [4WD Control]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	G80(DH)	2018	G 2.0 T-GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	G80(DH)	2018	G 2.0 T-GDI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 2.0 T-GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	G80(DH)	2018	G 2.0 T-GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 2.0 T-GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 2.0 T-GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	G80(DH)	2018	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	G80(DH)	2018	G 2.0 T-GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	G80(DH)	2018	G 2.0 T-GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	G80(DH)	2018	G 2.0 T-GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 2.0 T-GDI	ESHIFTER [E - Shifter]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	G80(DH)	2018	G 2.0 T-GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 2.0 T-GDI	AVN [Audio Video Navigation (Premium)]	√			√		0124
Europe/General	G80(DH)	2018	G 2.0 T-GDI	AMP [Amplifier]		√	√			
Europe/General	G80(DH)	2018	G 2.0 T-GDI	AVN [Audio Video Navigation (Standard)]	√			√		
Europe/General	G80(DH)	2018	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	G80(DH)	2018	G 2.0 T-GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	G80(DH)	2018	G 2.0 T-GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
Europe/General	G80(DH)	2018	G 2.0 T-GDI	PTM [Power Trunk Module]	√	√	√	√		

Europe/General	G80(DH)	2018	G 2.0 T-GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	G80(DH)	2018	G 2.0 T-GDI	DSS [Driver Seat Switch]	√	√	√	√		
Europe/General	G80(DH)	2018	G 2.0 T-GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 2.0 T-GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 2.0 T-GDI	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052
Europe/General	G80(DH)	2018	G 2.0 T-GDI	ECALL [e - Call]	√	√	√			
Europe/General	G80(DH)	2018	G 3.3 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0051, 0116, 0120, 0158
Europe/General	G80(DH)	2018	G 3.3 T-GDI	AT [Automatic Transaxle (SBW)]	√	√	√	√		0007, 0122
Europe/General	G80(DH)	2018	G 3.3 T-GDI	AT [Automatic Transaxle (SBC)]	√	√	√	√		0007, 0122
Europe/General	G80(DH)	2018	G 3.3 T-GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0081, 0093
Europe/General	G80(DH)	2018	G 3.3 T-GDI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	G80(DH)	2018	G 3.3 T-GDI	EPB [Parking Brake]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.3 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	G80(DH)	2018	G 3.3 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	G80(DH)	2018	G 3.3 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.3 T-GDI	4WD [4WD Control]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.3 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	G80(DH)	2018	G 3.3 T-GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.3 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	G80(DH)	2018	G 3.3 T-GDI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.3 T-GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	G80(DH)	2018	G 3.3 T-GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.3 T-GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.3 T-GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	G80(DH)	2018	G 3.3 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	G80(DH)	2018	G 3.3 T-GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	G80(DH)	2018	G 3.3 T-GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	G80(DH)	2018	G 3.3 T-GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.3 T-GDI	ESHIFTER [E - Shifter]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.3 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	G80(DH)	2018	G 3.3 T-GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.3 T-GDI	AVN [Audio Video Navigation (Premium)]	√			√		0124
Europe/General	G80(DH)	2018	G 3.3 T-GDI	AMP [Amplifier]		√	√			
Europe/General	G80(DH)	2018	G 3.3 T-GDI	AVN [Audio Video Navigation (Standard)]	√			√		
Europe/General	G80(DH)	2018	G 3.3 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.3 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.3 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	G80(DH)	2018	G 3.3 T-GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	G80(DH)	2018	G 3.3 T-GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	G80(DH)	2018	G 3.3 T-GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
Europe/General	G80(DH)	2018	G 3.3 T-GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	G80(DH)	2018	G 3.3 T-GDI	HUD [Head Up Display]	√	√	√	√		

Europe/General	G80(DH)	2018	G 3.3 T-GDI	DSS [Driver Seat Switch]	√	√	√	√		
Europe/General	G80(DH)	2018	G 3.3 T-GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.3 T-GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.3 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.3 T-GDI	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052
Europe/General	G80(DH)	2018	G 3.3 T-GDI	ECALL [e - Call]	√	√	√			
Europe/General	G80(DH)	2018	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0051, 0116, 0120, 0158
Europe/General	G80(DH)	2018	G 3.8 GDI	AT [Automatic Transaxle (SBW)]	√	√	√	√		0007, 0122
Europe/General	G80(DH)	2018	G 3.8 GDI	AT [Automatic Transaxle (SBC)]	√	√	√	√		0007, 0122
Europe/General	G80(DH)	2018	G 3.8 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0081, 0093
Europe/General	G80(DH)	2018	G 3.8 GDI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	G80(DH)	2018	G 3.8 GDI	EPB [Parking Brake]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	G80(DH)	2018	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	G80(DH)	2018	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.8 GDI	4WD [4WD Control]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.8 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	G80(DH)	2018	G 3.8 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	G80(DH)	2018	G 3.8 GDI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.8 GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	G80(DH)	2018	G 3.8 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.8 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.8 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	G80(DH)	2018	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	G80(DH)	2018	G 3.8 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	G80(DH)	2018	G 3.8 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	G80(DH)	2018	G 3.8 GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.8 GDI	ESHIFTER [E - Shifter]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.8 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	G80(DH)	2018	G 3.8 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.8 GDI	AMP [Amplifier]		√	√			
Europe/General	G80(DH)	2018	G 3.8 GDI	AVN [Audio Video Navigation (Standard)]	√			√		
Europe/General	G80(DH)	2018	G 3.8 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.8 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.8 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.8 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	G80(DH)	2018	G 3.8 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	G80(DH)	2018	G 3.8 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	G80(DH)	2018	G 3.8 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
Europe/General	G80(DH)	2018	G 3.8 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	G80(DH)	2018	G 3.8 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	G80(DH)	2018	G 3.8 GDI	DSS [Driver Seat Switch]	√	√	√	√		

Europe/General	G80(DH)	2018	G 3.8 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.8 GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.8 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 3.8 GDI	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052
Europe/General	G80(DH)	2018	G 3.8 GDI	ECALL [e - Call]	√	√	√			
Europe/General	G80(DH)	2018	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0051, 0055, 0116, 0158
Europe/General	G80(DH)	2018	G 5.0 GDI	AT [Automatic Transaxle (SBW)]	√	√	√	√		0007, 0122
Europe/General	G80(DH)	2018	G 5.0 GDI	AT [Automatic Transaxle (SBC)]	√	√	√	√		0007, 0122
Europe/General	G80(DH)	2018	G 5.0 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0081, 0093
Europe/General	G80(DH)	2018	G 5.0 GDI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	G80(DH)	2018	G 5.0 GDI	EPB [Parking Brake]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	G80(DH)	2018	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	G80(DH)	2018	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 5.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	G80(DH)	2018	G 5.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	G80(DH)	2018	G 5.0 GDI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 5.0 GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	G80(DH)	2018	G 5.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 5.0 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 5.0 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	G80(DH)	2018	G 5.0 GDI	ECALL [e - Call]	√	√	√			
Europe/General	G80(DH)	2018	G 5.0 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	G80(DH)	2018	G 5.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	G80(DH)	2018	G 5.0 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	G80(DH)	2018	G 5.0 GDI	ESHIFTER [E - Shifter]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 5.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	G80(DH)	2018	G 5.0 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 5.0 GDI	AVN [Audio Video Navigation (Premium)]	√			√		0124
Europe/General	G80(DH)	2018	G 5.0 GDI	AVN [Audio Video Navigation (Standard)]	√			√		
Europe/General	G80(DH)	2018	G 5.0 GDI	AMP [Amplifier]		√	√			
Europe/General	G80(DH)	2018	G 5.0 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 5.0 GDI	DSS [Driver Seat Switch]	√	√	√	√		
Europe/General	G80(DH)	2018	G 5.0 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	G80(DH)	2018	G 5.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	G80(DH)	2018	G 5.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 5.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	G80(DH)	2018	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	G80(DH)	2018	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		

Europe/General	G80(DH)	2018	G 5.0 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
Europe/General	G80(DH)	2018	G 5.0 GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	G80(DH)	2018	G 5.0 GDI	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052
Europe/General	G80(DH)	2017	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0123, 0158
Europe/General	G80(DH)	2017	G 2.0 T-GDI	AT [Automatic Transaxle (SBC)]	√	√	√	√		0007, 0122
Europe/General	G80(DH)	2017	G 2.0 T-GDI	AT [Automatic Transaxle (SBW)]	√	√	√	√		0007, 0122
Europe/General	G80(DH)	2017	G 2.0 T-GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0081, 0093
Europe/General	G80(DH)	2017	G 2.0 T-GDI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	G80(DH)	2017	G 2.0 T-GDI	EPB [Parking Brake]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	G80(DH)	2017	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	G80(DH)	2017	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 2.0 T-GDI	4WD [4WD Control]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	G80(DH)	2017	G 2.0 T-GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	G80(DH)	2017	G 2.0 T-GDI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 2.0 T-GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	G80(DH)	2017	G 2.0 T-GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 2.0 T-GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 2.0 T-GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	G80(DH)	2017	G 2.0 T-GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	G80(DH)	2017	G 2.0 T-GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	G80(DH)	2017	G 2.0 T-GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 2.0 T-GDI	ESHIFTER [E - Shifter]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	G80(DH)	2017	G 2.0 T-GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 2.0 T-GDI	AVN [Audio Video Navigation (Premium)]	√			√		0124
Europe/General	G80(DH)	2017	G 2.0 T-GDI	AMP [Amplifier]		√	√			
Europe/General	G80(DH)	2017	G 2.0 T-GDI	AVN [Audio Video Navigation (Standard)]	√			√		
Europe/General	G80(DH)	2017	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	G80(DH)	2017	G 2.0 T-GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	G80(DH)	2017	G 2.0 T-GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	G80(DH)	2017	G 2.0 T-GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
Europe/General	G80(DH)	2017	G 2.0 T-GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	G80(DH)	2017	G 2.0 T-GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	G80(DH)	2017	G 2.0 T-GDI	DSS [Driver Seat Switch]	√	√	√	√		
Europe/General	G80(DH)	2017	G 2.0 T-GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 2.0 T-GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	

Europe/General	G80(DH)	2017	G 2.0 T-GDI	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052
Europe/General	G80(DH)	2017	G 2.0 T-GDI	ECALL [e - Call]	√	√	√			
Europe/General	G80(DH)	2017	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0051, 0116, 0120, 0158
Europe/General	G80(DH)	2017	G 3.8 GDI	AT [Automatic Transaxle (SBW)]	√	√	√	√		0007, 0122
Europe/General	G80(DH)	2017	G 3.8 GDI	AT [Automatic Transaxle (SBC)]	√	√	√	√		0007, 0122
Europe/General	G80(DH)	2017	G 3.8 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0081, 0093
Europe/General	G80(DH)	2017	G 3.8 GDI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	G80(DH)	2017	G 3.8 GDI	EPB [Parking Brake]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	G80(DH)	2017	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	G80(DH)	2017	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 3.8 GDI	4WD [4WD Control]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 3.8 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	G80(DH)	2017	G 3.8 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	G80(DH)	2017	G 3.8 GDI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 3.8 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 3.8 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 3.8 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	G80(DH)	2017	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	G80(DH)	2017	G 3.8 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	G80(DH)	2017	G 3.8 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	G80(DH)	2017	G 3.8 GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 3.8 GDI	ESHIFTER [E - Shifter]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 3.8 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	G80(DH)	2017	G 3.8 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 3.8 GDI	AVN [Audio Video Navigation (Premium)]	√			√		0124
Europe/General	G80(DH)	2017	G 3.8 GDI	AMP [Amplifier]		√	√			
Europe/General	G80(DH)	2017	G 3.8 GDI	AVN [Audio Video Navigation (Standard)]	√			√		
Europe/General	G80(DH)	2017	G 3.8 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 3.8 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 3.8 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 3.8 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	G80(DH)	2017	G 3.8 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	G80(DH)	2017	G 3.8 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	G80(DH)	2017	G 3.8 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
Europe/General	G80(DH)	2017	G 3.8 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	G80(DH)	2017	G 3.8 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	G80(DH)	2017	G 3.8 GDI	DSS [Driver Seat Switch]	√	√	√	√		
Europe/General	G80(DH)	2017	G 3.8 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 3.8 GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 3.8 GDI	CLU [Cluster Module]	√	√	√	√	√	

Europe/General	G80(DH)	2017	G 3.8 GDI	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052
Europe/General	G80(DH)	2017	G 3.8 GDI	ECALL [e - Call]	√	√	√			
Europe/General	G80(DH)	2017	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0051, 0055, 0116, 0158
Europe/General	G80(DH)	2017	G 5.0 GDI	AT [Automatic Transaxle (SBW)]	√	√	√	√		0007, 0122
Europe/General	G80(DH)	2017	G 5.0 GDI	AT [Automatic Transaxle (SBC)]	√	√	√	√		0007, 0122
Europe/General	G80(DH)	2017	G 5.0 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0081, 0093
Europe/General	G80(DH)	2017	G 5.0 GDI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	G80(DH)	2017	G 5.0 GDI	EPB [Parking Brake]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	G80(DH)	2017	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	G80(DH)	2017	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 5.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	G80(DH)	2017	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	G80(DH)	2017	G 5.0 GDI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 5.0 GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	G80(DH)	2017	G 5.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 5.0 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 5.0 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	G80(DH)	2017	G 5.0 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	G80(DH)	2017	G 5.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	G80(DH)	2017	G 5.0 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	G80(DH)	2017	G 5.0 GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 5.0 GDI	ESHIFTER [E - Shifter]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 5.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	G80(DH)	2017	G 5.0 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 5.0 GDI	AVN [Audio Video Navigation (Premium)]	√			√		0124
Europe/General	G80(DH)	2017	G 5.0 GDI	AVN [Audio Video Navigation (Standard)]	√			√		
Europe/General	G80(DH)	2017	G 5.0 GDI	AMP [Amplifier]		√	√			
Europe/General	G80(DH)	2017	G 5.0 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 5.0 GDI	DSS [Driver Seat Switch]	√	√	√	√		
Europe/General	G80(DH)	2017	G 5.0 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	G80(DH)	2017	G 5.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	G80(DH)	2017	G 5.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 5.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	G80(DH)	2017	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	G80(DH)	2017	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	G80(DH)	2017	G 5.0 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
Europe/General	G80(DH)	2017	G 5.0 GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	G80(DH)	2017	G 5.0 GDI	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052

Europe/General	G80(DH)	2017	G 5.0 GDI	ECALL [e - Call]	√	√	√			
Europe/General	G90(HI)	2018	G 3.3 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0051, 0116, 0120, 0158
Europe/General	G90(HI)	2018	G 3.3 T-GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	G90(HI)	2018	G 3.3 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	G90(HI)	2018	G 3.3 T-GDI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	G90(HI)	2018	G 3.3 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 3.3 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	G90(HI)	2018	G 3.3 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	G90(HI)	2018	G 3.3 T-GDI	4WD [4WD Control]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 3.3 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	G90(HI)	2018	G 3.3 T-GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	G90(HI)	2018	G 3.3 T-GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	G90(HI)	2018	G 3.3 T-GDI	AVM [Around View Monitor System]	√	√	√	√	√	0008
Europe/General	G90(HI)	2018	G 3.3 T-GDI	BSD [Blind Spot Detection]	√	√	√	√		
Europe/General	G90(HI)	2018	G 3.3 T-GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	G90(HI)	2018	G 3.3 T-GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	G90(HI)	2018	G 3.3 T-GDI	ESHIFTER [E - Shifter]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 3.3 T-GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 3.3 T-GDI	AVN [Audio Video Navigation]	√	√	√	√		
Europe/General	G90(HI)	2018	G 3.3 T-GDI	AMP [Amplifier]						0006
Europe/General	G90(HI)	2018	G 3.3 T-GDI	PSM - RL [Power Seat Module - Rear Left]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2018	G 3.3 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 3.3 T-GDI	PSM - RR [Power Seat Module - Rear Right]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2018	G 3.3 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	G90(HI)	2018	G 3.3 T-GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	G90(HI)	2018	G 3.3 T-GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 3.3 T-GDI	APSM [Assist Power Seat Module]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2018	G 3.3 T-GDI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 3.3 T-GDI	IBU - SMK [IBU - SMK]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	G90(HI)	2018	G 3.3 T-GDI	RWPC [Rear Wireless Power Charger]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 3.3 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	0076
Europe/General	G90(HI)	2018	G 3.3 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2018	G 3.3 T-GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	G90(HI)	2018	G 3.3 T-GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	G90(HI)	2018	G 3.3 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 3.3 T-GDI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	G90(HI)	2018	G 3.3 T-GDI	ARS [Rear Armrest Switch]	√	√	√	√	√	0133
Europe/General	G90(HI)	2018	G 3.3 T-GDI	CGW [Central Gateway]	√	√	√	√		0052
Europe/General	G90(HI)	2018	G 3.3 T-GDI	PTG [Power Tailgate]	√	√	√	√		
Europe/General	G90(HI)	2018	G 3.3 T-GDI	ECALL [e - Call]	√	√	√			
Europe/General	G90(HI)	2018	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0051, 0116, 0120, 0158
Europe/General	G90(HI)	2018	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122

Europe/General	G90(HI)	2018	G 3.8 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	G90(HI)	2018	G 3.8 GDI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	G90(HI)	2018	G 3.8 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	G90(HI)	2018	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 3.8 GDI	4WD [4WD Control]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 3.8 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	G90(HI)	2018	G 3.8 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	G90(HI)	2018	G 3.8 GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	G90(HI)	2018	G 3.8 GDI	AVM [Around View Monitor System]	√	√	√	√	√	0008
Europe/General	G90(HI)	2018	G 3.8 GDI	BSD [Blind Spot Detection]	√	√	√	√		
Europe/General	G90(HI)	2018	G 3.8 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	G90(HI)	2018	G 3.8 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	G90(HI)	2018	G 3.8 GDI	ESHIFTER [E - Shifter]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 3.8 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 3.8 GDI	AVN [Audio Video Navigation]	√	√	√	√		
Europe/General	G90(HI)	2018	G 3.8 GDI	AMP [Amplifier]						0006
Europe/General	G90(HI)	2018	G 3.8 GDI	PSM - RL [Power Seat Module - Rear Left]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2018	G 3.8 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 3.8 GDI	PSM - RR [Power Seat Module - Rear Right]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2018	G 3.8 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	G90(HI)	2018	G 3.8 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	G90(HI)	2018	G 3.8 GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 3.8 GDI	APSM [Assist Power Seat Module]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2018	G 3.8 GDI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 3.8 GDI	IBU - SMK [IBU - SMK]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	G90(HI)	2018	G 3.8 GDI	RWPC [Rear Wireless Power Charger]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 3.8 GDI	DDM [Driver Door Module]	√	√	√	√	√	0076
Europe/General	G90(HI)	2018	G 3.8 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2018	G 3.8 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	G90(HI)	2018	G 3.8 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	G90(HI)	2018	G 3.8 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 3.8 GDI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	G90(HI)	2018	G 3.8 GDI	ARS [Rear Armrest Switch]	√	√	√	√	√	0133
Europe/General	G90(HI)	2018	G 3.8 GDI	CGW [Central Gateway]	√	√	√	√		0052
Europe/General	G90(HI)	2018	G 3.8 GDI	PTG [Power Tailgate]	√	√	√	√		
Europe/General	G90(HI)	2018	G 3.8 GDI	ECALL [e - Call]	√	√	√			
Europe/General	G90(HI)	2018	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0051, 0055, 0116, 0158
Europe/General	G90(HI)	2018	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	G90(HI)	2018	G 5.0 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	G90(HI)	2018	G 5.0 GDI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	G90(HI)	2018	G 5.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	

Europe/General	G90(HI)	2018	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	G90(HI)	2018	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 5.0 GDI	4WD [4WD Control]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 5.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	G90(HI)	2018	G 5.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	G90(HI)	2018	G 5.0 GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	G90(HI)	2018	G 5.0 GDI	AVM [Around View Monitor System]	√	√	√	√	√	0008
Europe/General	G90(HI)	2018	G 5.0 GDI	BSD [Blind Spot Detection]	√	√	√	√		
Europe/General	G90(HI)	2018	G 5.0 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	G90(HI)	2018	G 5.0 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	G90(HI)	2018	G 5.0 GDI	ESHIFTER [E - Shifter]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 5.0 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 5.0 GDI	AVN [Audio Video Navigation]	√	√	√	√		
Europe/General	G90(HI)	2018	G 5.0 GDI	AMP [Amplifier]						0006
Europe/General	G90(HI)	2018	G 5.0 GDI	PSM - RL [Power Seat Module - Rear Left]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2018	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 5.0 GDI	PSM - RR [Power Seat Module - Rear Right]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2018	G 5.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	G90(HI)	2018	G 5.0 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	G90(HI)	2018	G 5.0 GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 5.0 GDI	APSM [Assist Power Seat Module]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2018	G 5.0 GDI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 5.0 GDI	IBU - SMK [IBU - SMK]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	G90(HI)	2018	G 5.0 GDI	RWPC [Rear Wireless Power Charger]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	0076
Europe/General	G90(HI)	2018	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2018	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	G90(HI)	2018	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	G90(HI)	2018	G 5.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	G90(HI)	2018	G 5.0 GDI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	G90(HI)	2018	G 5.0 GDI	ARS [Rear Armrest Switch]	√	√	√	√	√	0133
Europe/General	G90(HI)	2018	G 5.0 GDI	CGW [Central Gateway]	√	√	√	√		0052
Europe/General	G90(HI)	2018	G 5.0 GDI	PTG [Power Tailgate]	√	√	√	√		
Europe/General	G90(HI)	2018	G 5.0 GDI	ECALL [e - Call]	√	√	√			
Europe/General	G90(HI)	2017	G 3.3 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0051, 0116, 0120, 0158
Europe/General	G90(HI)	2017	G 3.3 T-GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	G90(HI)	2017	G 3.3 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	G90(HI)	2017	G 3.3 T-GDI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	G90(HI)	2017	G 3.3 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	G90(HI)	2017	G 3.3 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	G90(HI)	2017	G 3.3 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 3.3 T-GDI	4WD [4WD Control]	√	√	√	√	√	

Europe/General	G90(HI)	2017	G 3.3 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	G90(HI)	2017	G 3.3 T-GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	G90(HI)	2017	G 3.3 T-GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	G90(HI)	2017	G 3.3 T-GDI	AVM [Around View Monitor System]	√	√	√	√	√	0008
Europe/General	G90(HI)	2017	G 3.3 T-GDI	BSD [Blind Spot Detection]	√	√	√	√		
Europe/General	G90(HI)	2017	G 3.3 T-GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	G90(HI)	2017	G 3.3 T-GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	G90(HI)	2017	G 3.3 T-GDI	ESHIFTER [E - Shifter]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 3.3 T-GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 3.3 T-GDI	AVN [Audio Video Navigation]	√	√	√	√		
Europe/General	G90(HI)	2017	G 3.3 T-GDI	AMP [Amplifier]						0006
Europe/General	G90(HI)	2017	G 3.3 T-GDI	PSM - RL [Power Seat Module - Rear Left]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2017	G 3.3 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 3.3 T-GDI	PSM - RR [Power Seat Module - Rear Right]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2017	G 3.3 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	G90(HI)	2017	G 3.3 T-GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	G90(HI)	2017	G 3.3 T-GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 3.3 T-GDI	APSM [Assist Power Seat Module]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2017	G 3.3 T-GDI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 3.3 T-GDI	IBU - SMK [IBU - SMK]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	G90(HI)	2017	G 3.3 T-GDI	RWPC [Rear Wireless Power Charger]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 3.3 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	0076
Europe/General	G90(HI)	2017	G 3.3 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2017	G 3.3 T-GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	G90(HI)	2017	G 3.3 T-GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	G90(HI)	2017	G 3.3 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 3.3 T-GDI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	G90(HI)	2017	G 3.3 T-GDI	ARS [Rear Armrest Switch]	√	√	√	√	√	0133
Europe/General	G90(HI)	2017	G 3.3 T-GDI	CGW [Central Gateway]	√	√	√	√		0052
Europe/General	G90(HI)	2017	G 3.3 T-GDI	PTG [Power Tailgate]	√	√	√	√		
Europe/General	G90(HI)	2017	G 3.3 T-GDI	ECALL [e - Call]	√	√	√			
Europe/General	G90(HI)	2017	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0051, 0116, 0120, 0158
Europe/General	G90(HI)	2017	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	G90(HI)	2017	G 3.8 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	G90(HI)	2017	G 3.8 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	G90(HI)	2017	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	G90(HI)	2017	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 3.8 GDI	4WD [4WD Control]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 3.8 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	G90(HI)	2017	G 3.8 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	G90(HI)	2017	G 3.8 GDI	PGS [Parking Guide System]	√	√	√	√		

Europe/General	G90(HI)	2017	G 3.8 GDI	AVM [Around View Monitor System]	√	√	√	√	√	0008
Europe/General	G90(HI)	2017	G 3.8 GDI	BSD [Blind Spot Detection]	√	√	√	√		
Europe/General	G90(HI)	2017	G 3.8 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	G90(HI)	2017	G 3.8 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	G90(HI)	2017	G 3.8 GDI	ESHIFTER [E - Shifter]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 3.8 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 3.8 GDI	AVN [Audio Video Navigation]	√	√	√	√		
Europe/General	G90(HI)	2017	G 3.8 GDI	AMP [Amplifier]						0006
Europe/General	G90(HI)	2017	G 3.8 GDI	PSM - RL [Power Seat Module - Rear Left]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2017	G 3.8 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 3.8 GDI	PSM - RR [Power Seat Module - Rear Right]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2017	G 3.8 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	G90(HI)	2017	G 3.8 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	G90(HI)	2017	G 3.8 GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 3.8 GDI	APSM [Assist Power Seat Module]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2017	G 3.8 GDI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 3.8 GDI	IBU - SMK [IBU - SMK]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	G90(HI)	2017	G 3.8 GDI	RWPC [Rear Wireless Power Charger]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 3.8 GDI	DDM [Driver Door Module]	√	√	√	√	√	0076
Europe/General	G90(HI)	2017	G 3.8 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2017	G 3.8 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	G90(HI)	2017	G 3.8 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	G90(HI)	2017	G 3.8 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 3.8 GDI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	G90(HI)	2017	G 3.8 GDI	ARS [Rear Armrest Switch]	√	√	√	√	√	0133
Europe/General	G90(HI)	2017	G 3.8 GDI	CGW [Central Gateway]	√	√	√	√		0052
Europe/General	G90(HI)	2017	G 3.8 GDI	PTG [Power Tailgate]	√	√	√	√		
Europe/General	G90(HI)	2017	G 3.8 GDI	ECALL [e - Call]	√	√	√			
Europe/General	G90(HI)	2017	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0051, 0055, 0116, 0158
Europe/General	G90(HI)	2017	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	G90(HI)	2017	G 5.0 GDI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	G90(HI)	2017	G 5.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	G90(HI)	2017	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	G90(HI)	2017	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 5.0 GDI	4WD [4WD Control]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 5.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	G90(HI)	2017	G 5.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	G90(HI)	2017	G 5.0 GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	G90(HI)	2017	G 5.0 GDI	AVM [Around View Monitor System]	√	√	√	√	√	0008
Europe/General	G90(HI)	2017	G 5.0 GDI	BSD [Blind Spot Detection]	√	√	√	√		
Europe/General	G90(HI)	2017	G 5.0 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		

Europe/General	G90(HI)	2017	G 5.0 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	G90(HI)	2017	G 5.0 GDI	ESHIFTER [E - Shifter]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 5.0 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 5.0 GDI	AVN [Audio Video Navigation]	√	√	√	√		
Europe/General	G90(HI)	2017	G 5.0 GDI	AMP [Amplifier]						0006
Europe/General	G90(HI)	2017	G 5.0 GDI	PSM - RL [Power Seat Module - Rear Left]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2017	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 5.0 GDI	PSM - RR [Power Seat Module - Rear Right]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2017	G 5.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	G90(HI)	2017	G 5.0 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	G90(HI)	2017	G 5.0 GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 5.0 GDI	APSM [Assist Power Seat Module]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2017	G 5.0 GDI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 5.0 GDI	IBU - SMK [IBU - SMK]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	G90(HI)	2017	G 5.0 GDI	RWPC [Rear Wireless Power Charger]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	0076
Europe/General	G90(HI)	2017	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133, 0134
Europe/General	G90(HI)	2017	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	G90(HI)	2017	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	G90(HI)	2017	G 5.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	G90(HI)	2017	G 5.0 GDI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	G90(HI)	2017	G 5.0 GDI	ARS [Rear Armrest Switch]	√	√	√	√	√	0133
Europe/General	G90(HI)	2017	G 5.0 GDI	CGW [Central Gateway]	√	√	√	√		0052
Europe/General	G90(HI)	2017	G 5.0 GDI	PTG [Power Tailgate]	√	√	√	√		
Europe/General	G90(HI)	2017	G 5.0 GDI	ECALL [e - Call]	√	√	√			
Europe/General	GALLOPER-2(M1)-PDF	2003	D 2.5 TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	GALLOPER-2(M1)-PDF	2003	D 2.5 TCI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GALLOPER-2(M1)-PDF	2003	D 2.5 TCI	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GALLOPER-2(M1)-PDF	2003	G 3.0 SOHC	ENGINE [Leaded IMMO]	√	√	√	√	√	
Europe/General	GALLOPER-2(M1)-PDF	2003	G 3.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GALLOPER-2(M1)-PDF	2003	G 3.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GALLOPER-2(M1)-PDF	2003	G 3.0 SOHC	IMMO [Unleaded]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GALLOPER-2(M1)-PDF	2003	G 3.0 SOHC	IMMO [Leaded]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GALLOPER-2(M1)-PDF	2002	D 2.5 TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	GALLOPER-2(M1)-PDF	2002	D 2.5 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064

Europe/General	GALLOPER-2(M1)-PDF	2002	D 2.5 TCI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GALLOPER-2(M1)-PDF	2002	D 2.5 TCI	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GALLOPER-2(M1)-PDF	2002	G 3.0 SOHC	ENGINE [Leaded IMMO]	√	√	√	√	√	
Europe/General	GALLOPER-2(M1)-PDF	2002	G 3.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GALLOPER-2(M1)-PDF	2002	G 3.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GALLOPER-2(M1)-PDF	2002	G 3.0 SOHC	IMMO [Unleaded]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GALLOPER-2(M1)-PDF	2002	G 3.0 SOHC	IMMO [Leaded]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GALLOPER-2(M1)-PDF	2001	D 2.5 TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	GALLOPER-2(M1)-PDF	2001	D 2.5 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GALLOPER-2(M1)-PDF	2001	D 2.5 TCI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GALLOPER-2(M1)-PDF	2001	D 2.5 TCI	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GALLOPER-2(M1)-PDF	2001	G 3.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GALLOPER-2(M1)-PDF	2001	G 3.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GALLOPER-2(M1)-PDF	2001	G 3.0 SOHC	IMMO [Unleaded]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GALLOPER-2(M1)-PDF	2001	G 3.0 SOHC	IMMO [Leaded]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GALLOPER-2(M1)-PDF	2000	D 2.5 TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	GALLOPER-2(M1)-PDF	2000	D 2.5 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GALLOPER-2(M1)-PDF	2000	D 2.5 TCI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GALLOPER-2(M1)-PDF	2000	D 2.5 TCI	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GALLOPER-2(M1)-PDF	2000	G 3.0 SOHC	ENGINE [Leaded IMMO]	√	√	√	√	√	
Europe/General	GALLOPER-2(M1)-PDF	2000	G 3.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GALLOPER-2(M1)-PDF	2000	G 3.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GALLOPER-2(M1)-PDF	2000	G 3.0 SOHC	IMMO [Unleaded]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GALLOPER-2(M1)-PDF	2000	G 3.0 SOHC	IMMO [Leaded]		√	√	√		0074, 0098, 0099, 0102

Europe/General	GALLOPER-2(M1)-PDF	1999	D 2.5 TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	GALLOPER-2(M1)-PDF	1999	D 2.5 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GALLOPER-2(M1)-PDF	1999	D 2.5 TCI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GALLOPER-2(M1)-PDF	1999	D 2.5 TCI	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GALLOPER-2(M1)-PDF	1999	G 3.0 SOHC	ENGINE [Leaded IMMO]	√	√	√	√	√	
Europe/General	GALLOPER-2(M1)-PDF	1999	G 3.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GALLOPER-2(M1)-PDF	1999	G 3.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GALLOPER-2(M1)-PDF	1999	G 3.0 SOHC	IMMO [Leaded]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GALLOPER-2(M1)-PDF	1998	D 2.5 TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	GALLOPER-2(M1)-PDF	1998	D 2.5 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GALLOPER-2(M1)-PDF	1998	D 2.5 TCI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GALLOPER-2(M1)-PDF	1998	D 2.5 TCI	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GALLOPER-2(M1)-PDF	1998	G 3.0 SOHC	ENGINE [Leaded IMMO]	√	√	√	√	√	
Europe/General	GALLOPER-2(M1)-PDF	1998	G 3.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GALLOPER-2(M1)-PDF	1998	G 3.0 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GALLOPER-2(M1)-PDF	1998	G 3.0 SOHC	IMMO [Unleaded]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GALLOPER-2(M1)-PDF	1998	G 3.0 SOHC	IMMO [Leaded]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GALLOPER-2(M1)-PDF	1997	D 2.5 TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	GALLOPER-2(M1)-PDF	1997	D 2.5 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GALLOPER-2(M1)-PDF	1997	D 2.5 TCI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GALLOPER-2(M1)-PDF	1997	D 2.5 TCI	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GALLOPER-2(M1)-PDF	1997	G 3.0 SOHC	ENGINE [Leaded IMMO]	√	√	√	√	√	
Europe/General	GALLOPER-2(M1)-PDF	1997	G 3.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GALLOPER-2(M1)-PDF	1997	G 3.0 SOHC	AIRBAG [Airbag Control]	√	√	√			

Europe/General	GALLOPER-2(M1)-PDF	1997	G 3.0 SOHC	IMMO [Unleaded]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GALLOPER-2(M1)-PDF	1997	G 3.0 SOHC	IMMO [Leaded]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GENESIS COUPE(BK)	2017	G 2.0 T-MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0013, 0120, 0116, 0158
Europe/General	GENESIS COUPE(BK)	2017	G 2.0 T-MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GENESIS COUPE(BK)	2017	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2017	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2017	G 2.0 T-MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2017	G 2.0 T-MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)	2017	G 2.0 T-MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS COUPE(BK)	2017	G 2.0 T-MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	GENESIS COUPE(BK)	2017	G 2.0 T-MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)	2017	G 2.0 T-MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS COUPE(BK)	2017	G 2.0 T-MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2017	G 2.0 T-MPI	CLU [Cluster Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2017	G 2.0 T-MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2017	G 2.0 T-MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129

Europe/General	GENESIS COUPE(BK)	2017	G 3.8 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 GDI	CLU [Cluster Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 MPI	CLU [Cluster Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2017	G 3.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	√	√	√			

Europe/General	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	CLU [Cluster Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 GDI	IMMO [Immobilizer]				√		
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 GDI	CLU [Cluster Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 GDI	BCM [Body Control Module]	√	√	√	√	√	

Europe/General	GENESIS COUPE(BK)	2016	G 3.8 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 MPI	CLU [Cluster Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2016	G 3.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129

Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	CLU [Cluster Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	IMMO [Immobilizer]				√		
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	CLU [Cluster Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			

Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	CLU [Cluster Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2015	G 3.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	CLU [Cluster Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	CODE [Transmitter Code Saving]				√		0026

Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	IMMO [Immobilizer]				√		
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	CLU [Cluster Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	SMKCODE [Smart Key Code Saving]				√		

Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	CLU [Cluster Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2014	G 3.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	CLU [Cluster Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			

Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	IMMO [Immobilizer]				√		
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	CLU [Cluster Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	CLU [Cluster Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2013	G 3.8 MPI	CODE [Transmitter Code Saving]				√		0026

Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	CLU [Cluster Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	IMMO [Immobilizer]				√		
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	SMKCODE [Smart Key Code Saving]				√		

Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	CLU [Cluster Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	CLU [Cluster Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2012	G 3.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0120, 0158
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0120, 0158
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0143
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	ESP [ESP (MGH - 60) (2010. 9.15~)]	√	√	√	√	√	0064
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	√	√	√			

Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	BCM [Body Control Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0158
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0158
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0015, 0116, 0158
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0020, 0122
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	ESP [ESP (MGH - 40) (~2010. 9.14)]	√	√	√	√	√	0064
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	ESP [ESP (MGH - 60) (2010. 9.15~)]	√	√	√	√	√	0064
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2011	G 3.8 MPI	CODE [Transmitter Code Saving]				√		0026

Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0120, 0158
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0120, 0158
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0143
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	ESP [Electronic Stability Program]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	BCM [Body Control Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0158
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0158
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0020, 0122
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129

Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2010	G 3.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0143
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	ESP [Electronic Stability Program]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	BCM [Body Control Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2009	G 2.0 T-MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0020, 0122
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)	2009	G 3.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 2.0 T-MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 2.0 T-MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 2.0 T-MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 2.0 T-MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 2.0 T-MPI	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 2.0 T-MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 2.0 T-MPI	PDM [Power Distribution Module]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 2.0 T-MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 2.0 T-MPI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 2.0 T-MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 2.0 T-MPI	CLU [Cluster Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 2.0 T-MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 2.0 T-MPI	TMU [Telematics Unit]	√	√	√			
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 2.0 T-MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158

Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 3.8 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 3.8 GDI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 3.8 GDI	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 3.8 GDI	IMMO [Immobilizer]				√		
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 3.8 GDI	PDM [Power Distribution Module]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 3.8 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 3.8 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 3.8 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 3.8 GDI	CLU [Cluster Module]	√			√	√	
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 3.8 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 3.8 GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	GENESIS COUPE(BK)-U.S.	2013	G 3.8 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	AFLS [Adaptive Front Lighting (LED)]	√	√	√	√	√	0005, 0021
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	AFLS [Adaptive Front Lighting (HID)]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	SMK [Smart Key Code Saving]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129

Europe/General	GENESIS(BH)	2014	G 3.3 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	M - MEDIA [Multimedia]	√	√		√		
Europe/General	GENESIS(BH)	2014	G 3.3 GDI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0158, 0055
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	AFLS [Adaptive Front Lighting (LED)]	√	√	√	√	√	0005, 0021
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	AFLS [Adaptive Front Lighting (HID)]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	SMK [Smart Key Code Saving]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	FBWS [Front Back Warning System]	√	√	√	√		

Europe/General	GENESIS(BH)	2014	G 3.3 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	M - MEDIA [Multimedia]	√	√		√		
Europe/General	GENESIS(BH)	2014	G 3.3 MPI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	AFLS [Adaptive Front Lighting (LED)]	√	√	√	√	√	0005, 0021
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	AFLS [Adaptive Front Lighting (HID)]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	SMK [Smart Key Code Saving]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	M - MEDIA [Multimedia]	√	√		√		
Europe/General	GENESIS(BH)	2014	G 3.8 GDI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√		0122

Europe/General	GENESIS(BH)	2014	G 3.8 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	AFLS [Adaptive Front Lighting (LED)]	√	√	√	√	√	0005, 0021
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	AFLS [Adaptive Front Lighting (HID)]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	SMK [Smart Key Code Saving]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	M - MEDIA [Multimedia]	√	√		√		
Europe/General	GENESIS(BH)	2014	G 3.8 MPI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0158
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085

Europe/General	GENESIS(BH)	2014	G 4.6 MPI	AFLS [Adaptive Front Lighting (LED)]	√	√	√	√	√	0005, 0021
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	AFLS [Adaptive Front Lighting (HID)]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	SMK [Smart Key Code Saving]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	M - MEDIA [Multimedia]	√	√		√		
Europe/General	GENESIS(BH)	2014	G 4.6 MPI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	AFLS [Adaptive Front Lighting (LED)]	√	√	√	√	√	0005, 0021
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	AFLS [Adaptive Front Lighting (HID)]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	SMK [Smart Key Code Saving]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106

Europe/General	GENESIS(BH)	2014	G 5.0 GDI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	M - MEDIA [Multimedia]	√	√		√		
Europe/General	GENESIS(BH)	2014	G 5.0 GDI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	AFLS [Adaptive Front Lighting (LED)]	√	√	√	√	√	0005, 0021
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	AFLS [Adaptive Front Lighting (HID)]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	SMK [Smart Key Code Saving]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	OPTION [User Option]				√		

Europe/General	GENESIS(BH)	2013	G 3.3 GDI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	M - MEDIA [Multimedia]	√	√		√		
Europe/General	GENESIS(BH)	2013	G 3.3 GDI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	AFLS [Adaptive Front Lighting (LED)]	√	√	√	√	√	0005, 0021
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	AFLS [Adaptive Front Lighting (HID)]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	SMK [Smart Key Code Saving]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	M - MEDIA [Multimedia]	√	√		√		
Europe/General	GENESIS(BH)	2013	G 3.3 MPI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√	√		

Europe/General	GENESIS(BH)	2013	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	AFLS [Adaptive Front Lighting (LED)]	√	√	√	√	√	0005, 0021
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	AFLS [Adaptive Front Lighting (HID)]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	SMK [Smart Key Code Saving]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	M - MEDIA [Multimedia]	√	√		√		
Europe/General	GENESIS(BH)	2013	G 3.8 GDI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	AFLS [Adaptive Front Lighting (HID)]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	IMMO [Immobilizer]				√		

Europe/General	GENESIS(BH)	2013	G 3.8 MPI	SMK [Smart Key Code Saving]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	M - MEDIA [Multimedia]	√	√		√		
Europe/General	GENESIS(BH)	2013	G 3.8 MPI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0158
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	AFLS [Adaptive Front Lighting (LED)]	√	√	√	√	√	0005, 0021
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	AFLS [Adaptive Front Lighting (HID)]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	SMK [Smart Key Code Saving]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	PSM [Power Seat Module]	√	√	√	√	√	

Europe/General	GENESIS(BH)	2013	G 4.6 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	M - MEDIA [Multimedia]	√	√		√		
Europe/General	GENESIS(BH)	2013	G 4.6 MPI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	AFLS [Adaptive Front Lighting (LED)]	√	√	√	√	√	0005, 0021
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	AFLS [Adaptive Front Lighting (HID)]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	SMK [Smart Key Code Saving]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	M - MEDIA [Multimedia]	√	√		√		
Europe/General	GENESIS(BH)	2013	G 5.0 GDI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158

Europe/General	GENESIS(BH)	2012	G 3.3 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	AFLS [Adaptive Front Lighting (HID)]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	AFLS [Adaptive Front Lighting (LED)]	√	√	√	√	√	0005, 0021
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	SMK [Smart Key Code Saving]				√		
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
Europe/General	GENESIS(BH)	2012	G 3.3 GDI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	PTM [Power Trunk Module]	√	√	√	√		

Europe/General	GENESIS(BH)	2012	G 3.3 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	AFLS [Adaptive Front Lighting (HID)]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	AFLS [Adaptive Front Lighting (LED)]	√	√	√	√	√	0005, 0021
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	SMK [Smart Key Code Saving]				√		
Europe/General	GENESIS(BH)	2012	G 3.3 MPI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	AFLS [Adaptive Front Lighting (HID)]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	AFLS [Adaptive Front Lighting (LED)]	√	√	√	√	√	0005, 0021
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	IMMO [Immobilizer]				√		

Europe/General	GENESIS(BH)	2012	G 3.8 GDI	SMK [Smart Key Code Saving]				√		
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	TUNER AMP [Tuner / Amplifier]	√	√	√			0034
Europe/General	GENESIS(BH)	2012	G 3.8 GDI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	AFLS [Adaptive Front Lighting (HID)]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	AFLS [Adaptive Front Lighting (LED)]	√	√	√	√	√	0005, 0021
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	SMK [Smart Key Code Saving]				√		
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	ADM [Assist Door Module]	√	√	√	√	√	

Europe/General	GENESIS(BH)	2012	G 3.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
Europe/General	GENESIS(BH)	2012	G 3.8 MPI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0158
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	AFLS [Adaptive Front Lighting (HID)]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	AFLS [Adaptive Front Lighting (LED)]	√	√	√	√	√	0005, 0021
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	SMK [Smart Key Code Saving]				√		
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	SCM [Steering Column Module]	√	√	√	√	√	

Europe/General	GENESIS(BH)	2012	G 4.6 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
Europe/General	GENESIS(BH)	2012	G 4.6 MPI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	AFLS [Adaptive Front Lighting (HID)]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	AFLS [Adaptive Front Lighting (LED)]	√	√	√	√	√	0005, 0021
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	IAP [Intelligent Accel Pedal]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	SMK [Smart Key Code Saving]				√		
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	GENESIS(BH)	2012	G 5.0 GDI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0158
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0158
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122

Europe/General	GENESIS(BH)	2011	G 3.3 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	AFLS [Adaptive Front Lighting]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	SMK [Smart Key Code Saving]				√		
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
Europe/General	GENESIS(BH)	2011	G 3.3 MPI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0158
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085

Europe/General	GENESIS(BH)	2011	G 3.8 MPI	AFLS [Adaptive Front Lighting]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	SMK [Smart Key Code Saving]				√		
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
Europe/General	GENESIS(BH)	2011	G 3.8 MPI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0116, 0120, 0158
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0020, 0122
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	AFLS [Adaptive Front Lighting]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	SMK [Smart Key Code Saving]				√		
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	CLU [Cluster Module]	√	√	√	√	√	

Europe/General	GENESIS(BH)	2011	G 4.6 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
Europe/General	GENESIS(BH)	2011	G 4.6 MPI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0158
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0158
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	AFLS [Adaptive Front Lighting]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	SMK [Smart Key Code Saving]				√		
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159

Europe/General	GENESIS(BH)	2010	G 3.3 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
Europe/General	GENESIS(BH)	2010	G 3.3 MPI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0158
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0158
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	SMK [Smart Key Code Saving]				√		
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
Europe/General	GENESIS(BH)	2010	G 3.8 MPI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0116, 0120, 0158
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0020, 0122
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√	√		

Europe/General	GENESIS(BH)	2010	G 4.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	AFLS [Adaptive Front Lighting]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	SMK [Smart Key Code Saving]				√		
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
Europe/General	GENESIS(BH)	2010	G 4.6 MPI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0158
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0158
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	AFLS [Adaptive Front Lighting]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	SMK [Smart Key Code Saving]				√		
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106

Europe/General	GENESIS(BH)	2009	G 3.3 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
Europe/General	GENESIS(BH)	2009	G 3.3 MPI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0158
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0158
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	AFLS [Adaptive Front Lighting]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	SMK [Smart Key Code Saving]				√		
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	SCM [Steering Column Module]	√	√	√	√	√	

Europe/General	GENESIS(BH)	2009	G 3.8 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
Europe/General	GENESIS(BH)	2009	G 3.8 MPI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0116, 0120, 0158
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0020, 0122
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	EPS [Electronic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	AFLS [Adaptive Front Lighting]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	SMK [Smart Key Code Saving]				√		
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	IPM [Instrument Panel Module (SMK+)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	IPM [Instrument Panel Module (SMK -)]	√	√	√		√	
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
Europe/General	GENESIS(BH)	2009	G 4.6 MPI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√	√		

Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	EPS [Electric Hydraulic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	AFLS [AFLS (HID)]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	AFLS [AFLS (LED)]	√	√	√	√	√	0005, 0021
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	SMK [Smart Key Code Saving]	√	√	√	√	√	0027, 0058, 0129
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	IPM [Instrument Panel Module (W / SMK)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	SCM [Steering Column Module]	√	√	√	√	√	

Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	IPM [Instrument Panel Module (W / O SMK)]	√	√	√		√	
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	DIS [Multimedia]	√	√		√		
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	GENESIS(BH)-U.S.	2013	G 3.8 GDI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0158
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	EPS [Electric Hydraulic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	AFLS [AFLS (HID)]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	AFLS [AFLS (LED)]	√	√	√	√	√	0005, 0021
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	SMK [Smart Key Code Saving]	√	√	√	√	√	0027, 0058, 0129
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	IPM [Instrument Panel Module (W / SMK)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	FAM [Front Area Module]	√	√	√	√	√	

Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	IPM [Instrument Panel Module (W / O SMK)]	√	√	√		√	
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	DIS [Multimedia]	√	√		√		
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	TMU [Telematics Unit]	√	√	√			
Europe/General	GENESIS(BH)-U.S.	2013	G 4.6 MPI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0087, 0088, 0108
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√	√		
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√	√		
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	EPS [Electric Hydraulic Power Steering]	√	√	√	√	√	
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135

Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	AFLS [AFLS (HID)]	√	√	√	√	√	0021
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	AFLS [AFLS (LED)]	√	√	√	√	√	0005, 0021
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	IMMO [Immobilizer]				√		
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	SMK [Smart Key Code Saving]	√	√	√	√	√	0027, 0058, 0129
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	IPM [Instrument Panel Module (W / SMK)]	√	√	√		√	0043, 0058, 0071, 0106
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	FAM [Front Area Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	FBWS [Front Back Warning System]	√	√	√	√		
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	ECW [Electric Control Wiper]	√	√	√	√		
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	OPTION [User Option]				√		
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	IPM [Instrument Panel Module (W / O SMK)]	√	√	√		√	
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	DIS [Multimedia]	√	√		√		
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	GENESIS(BH)-U.S.	2013	G 5.0 GDI	CODE [Transmitter Code Saving]				√		
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0081, 0093
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			

Europe/General	GENESIS(DH)	2017	G 3.0 GDI	4WD [4WD Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	AVM [Around View Monitor System]	√	√	√	√	√	0009
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	PGS [Parking Guide System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	AVN [Audio Video Navigation (Standard)]	√			√		0124
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	AVN [Audio Video Navigation (Premium)]	√			√		
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	AMP [Amplifier]						0006
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	HSWS [Haptic Steering Warning System]	√	√	√			
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	DSS [Driver Seat Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.0 GDI	CGW [Central Gateway]	√	√	√			0052
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0081, 0093
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	AVM [Around View Monitor System]	√	√	√	√	√	0009
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	PGS [Parking Guide System]	√	√	√	√	√	

Europe/General	GENESIS(DH)	2017	G 3.3 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	AVN [Audio Video Navigation (Standard)]	√			√		0124
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	AVN [Audio Video Navigation (Premium)]	√			√		
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	AMP [Amplifier]						0006
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	HSWS [Haptic Steering Warning System]	√	√	√			
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	DSS [Driver Seat Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.3 GDI	CGW [Central Gateway]	√	√	√			0052
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0081, 0093
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	4WD [4WD Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	AVM [Around View Monitor System]	√	√	√	√	√	0009
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	PGS [Parking Guide System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	

Europe/General	GENESIS(DH)	2017	G 3.8 GDI	AVN [Audio Video Navigation (Standard)]	√			√		0124
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	AVN [Audio Video Navigation (Premium)]	√			√		
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	AMP [Amplifier]						0006
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	HSWS [Haptic Steering Warning System]	√	√	√			
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	DSS [Driver Seat Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 3.8 GDI	CGW [Central Gateway]	√	√	√			0052
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0081, 0093
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	4WD [4WD Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	AVM [Around View Monitor System]	√	√	√	√	√	0009
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	PGS [Parking Guide System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	AVN [Audio Video Navigation (Standard)]	√			√		0124
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	AVN [Audio Video Navigation (Premium)]	√			√		
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	AMP [Amplifier]						0006
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	HSWS [Haptic Steering Warning System]	√	√	√			
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	DSS [Driver Seat Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	HUD [Head Up Display]	√	√	√	√		

Europe/General	GENESIS(DH)	2017	G 5.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2017	G 5.0 GDI	CGW [Central Gateway]	√	√	√			0052
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0081, 0093
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	4WD [4WD Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	AVM [Around View Monitor System]	√	√	√	√	√	0009
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	PGS [Parking Guide System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	AVN [Audio Video Navigation (Standard)]	√			√		0124
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	AVN [Audio Video Navigation (Premium)]	√			√		
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	AMP [Amplifier]						0006
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	HSWS [Haptic Steering Warning System]	√	√	√			
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	DSS [Driver Seat Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		

Europe/General	GENESIS(DH)	2016	G 3.0 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.0 GDI	CGW [Central Gateway]	√	√	√			0052
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0081, 0093
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	4WD [4WD Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	AVM [Around View Monitor System]	√	√	√	√	√	0009
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	PGS [Parking Guide System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	AVN [Audio Video Navigation (Standard)]	√			√		0124
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	AVN [Audio Video Navigation (Premium)]	√			√		
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	AMP [Amplifier]						0006
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	HSWS [Haptic Steering Warning System]	√	√	√			
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	DSS [Driver Seat Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.3 GDI	CGW [Central Gateway]	√	√	√			0052
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0081, 0093

Europe/General	GENESIS(DH)	2016	G 3.8 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	4WD [4WD Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	PGS [Parking Guide System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	AVN [Audio Video Navigation (Standard)]	√			√		0124
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	AVN [Audio Video Navigation (Premium)]	√			√		
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	AMP [Amplifier]						0006
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	HSWS [Haptic Steering Warning System]	√	√	√			
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	DSS [Driver Seat Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 3.8 GDI	CGW [Central Gateway]	√	√	√			0052
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0081, 0093
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	4WD [4WD Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	

Europe/General	GENESIS(DH)	2016	G 5.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	AVM [Around View Monitor System]	√	√	√	√	√	0009
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	AVN [Audio Video Navigation (Standard)]	√			√		0124
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	AVN [Audio Video Navigation (Premium)]	√			√		
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	AMP [Amplifier]						0006
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	HSWS [Haptic Steering Warning System]	√	√	√			
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	DSS [Driver Seat Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2016	G 5.0 GDI	CGW [Central Gateway]	√	√	√			0052
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0081, 0093
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	4WD [4WD Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	AVM [Around View Monitor System]	√	√	√	√	√	0009
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	PGS [Parking Guide System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067

Europe/General	GENESIS(DH)	2015	G 3.0 GDI	AHS [Active Hood System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	AVN [Audio Video Navigation (Standard)]	√			√		0124
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	AVN [Audio Video Navigation (Premium)]	√			√		
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	AMP [Amplifier]						0006
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	HSWS [Haptic Steering Warning System]	√	√	√			
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	DSS [Driver Seat Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.0 GDI	CGW [Central Gateway]	√	√	√			0052
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0081, 0093
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	4WD [4WD Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	AVM [Around View Monitor System]	√	√	√	√	√	0009
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	PGS [Parking Guide System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	AVN [Audio Video Navigation (Standard)]	√			√		0124
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	AVN [Audio Video Navigation (Premium)]	√			√		
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	AMP [Amplifier]						0006
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	HSWS [Haptic Steering Warning System]	√	√	√			

Europe/General	GENESIS(DH)	2015	G 3.3 GDI	DSS [Driver Seat Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.3 GDI	CGW [Central Gateway]	√	√	√			0052
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0081, 0093
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	4WD [4WD Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	AVM [Around View Monitor System]	√	√	√	√	√	0009
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	PGS [Parking Guide System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	AVN [Audio Video Navigation (Standard)]	√			√		0124
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	AVN [Audio Video Navigation (Premium)]	√			√		
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	AMP [Amplifier]						0006
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	HSWS [Haptic Steering Warning System]	√	√	√			
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	DSS [Driver Seat Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	ADM [Assist Door Module]	√	√	√	√	√	

Europe/General	GENESIS(DH)	2015	G 3.8 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 3.8 GDI	CGW [Central Gateway]	√	√	√			0052
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0081, 0093
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	4WD [4WD Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	AVM [Around View Monitor System]	√	√	√	√	√	0009
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	PGS [Parking Guide System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	AVN [Audio Video Navigation (Standard)]	√			√		0124
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	AVN [Audio Video Navigation (Premium)]	√			√		
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	AMP [Amplifier]						0006
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	HSWS [Haptic Steering Warning System]	√	√	√			
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	DSS [Driver Seat Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2015	G 5.0 GDI	CGW [Central Gateway]	√	√	√			0052

Europe/General	GENESIS(DH)	2014	G 3.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0081, 0093
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	4WD [4WD Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	AVM [Around View Monitor System]	√	√	√	√	√	0009
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	PGS [Parking Guide System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	AVN [Audio Video Navigation (Standard)]	√			√		0124
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	AVN [Audio Video Navigation (Premium)]	√			√		
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	AMP [Amplifier]						0006
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	HSWS [Haptic Steering Warning System]	√	√	√			
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	DSS [Driver Seat Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.0 GDI	CGW [Central Gateway]	√	√	√			0052
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0081, 0093
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	GENESIS(DH)	2014	G 3.3 GDI	4WD [4WD Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	AVM [Around View Monitor System]	√	√	√	√	√	0009
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	PGS [Parking Guide System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	AVN [Audio Video Navigation (Standard)]	√			√		0124
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	AVN [Audio Video Navigation (Premium)]	√			√		
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	AMP [Amplifier]						0006
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	HSWS [Haptic Steering Warning System]	√	√	√			
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	DSS [Driver Seat Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.3 GDI	CGW [Central Gateway]	√	√	√			0052
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0081, 0093
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	4WD [4WD Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	AVM [Around View Monitor System]	√	√	√	√	√	0009
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	PGS [Parking Guide System]	√	√	√	√	√	

Europe/General	GENESIS(DH)	2014	G 3.8 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	AVN [Audio Video Navigation (Standard)]	√			√		0124
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	AVN [Audio Video Navigation (Premium)]	√			√		
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	AMP [Amplifier]						0006
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	HSWS [Haptic Steering Warning System]	√	√	√			
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	DSS [Driver Seat Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 3.8 GDI	CGW [Central Gateway]	√	√	√			0052
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0081, 0093
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	4WD [4WD Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	AVM [Around View Monitor System]	√	√	√	√	√	0009
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	PGS [Parking Guide System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	

Europe/General	GENESIS(DH)	2014	G 5.0 GDI	AVN [Audio Video Navigation (Premium)]	√			√		
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	AMP [Amplifier]						0006
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	HSWS [Haptic Steering Warning System]	√	√	√			
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	DSS [Driver Seat Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GENESIS(DH)	2014	G 5.0 GDI	CGW [Central Gateway]	√	√	√			0052
Europe/General	GETZ(TB)	2011	D 1.5 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	GETZ(TB)	2011	D 1.5 TCI-U	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2011	D 1.5 TCI-U	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	GETZ(TB)	2011	D 1.5 TCI-U	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2011	D 1.5 TCI-U	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2011	D 1.5 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2011	D 1.5 TCI-U	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2011	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GETZ(TB)	2011	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2011	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2011	G 1.1 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2011	G 1.1 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2011	G 1.1 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2011	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2011	G 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2011	G 1.1 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2011	G 1.3 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GETZ(TB)	2011	G 1.3 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2011	G 1.3 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2011	G 1.3 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2011	G 1.3 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2011	G 1.3 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2011	G 1.3 SOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2011	G 1.3 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2011	G 1.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	

Europe/General	GETZ(TB)	2011	G 1.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2011	G 1.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2011	G 1.4 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2011	G 1.4 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2011	G 1.4 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2011	G 1.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2011	G 1.4 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2011	G 1.4 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2011	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GETZ(TB)	2011	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2011	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2011	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2011	G 1.6 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2011	G 1.6 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2011	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2011	G 1.6 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2011	G 1.6 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2010	D 1.5 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	GETZ(TB)	2010	D 1.5 TCI-U	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2010	D 1.5 TCI-U	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2010	D 1.5 TCI-U	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2010	D 1.5 TCI-U	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2010	D 1.5 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2010	D 1.5 TCI-U	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2010	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GETZ(TB)	2010	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2010	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2010	G 1.1 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2010	G 1.1 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2010	G 1.1 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2010	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2010	G 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2010	G 1.1 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2010	G 1.3 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GETZ(TB)	2010	G 1.3 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2010	G 1.3 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2010	G 1.3 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2010	G 1.3 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2010	G 1.3 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2010	G 1.3 SOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2010	G 1.3 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091

Europe/General	GETZ(TB)	2010	G 1.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GETZ(TB)	2010	G 1.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2010	G 1.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2010	G 1.4 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2010	G 1.4 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2010	G 1.4 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2010	G 1.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2010	G 1.4 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2010	G 1.4 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2010	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GETZ(TB)	2010	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2010	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2010	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2010	G 1.6 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2010	G 1.6 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2010	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2010	G 1.6 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2010	G 1.6 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2009	D 1.5 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	GETZ(TB)	2009	D 1.5 TCI-U	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2009	D 1.5 TCI-U	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2009	D 1.5 TCI-U	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2009	D 1.5 TCI-U	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2009	D 1.5 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2009	D 1.5 TCI-U	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2009	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GETZ(TB)	2009	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2009	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2009	G 1.1 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2009	G 1.1 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2009	G 1.1 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2009	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2009	G 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2009	G 1.1 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2009	G 1.3 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2009	G 1.3 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2009	G 1.3 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2009	G 1.3 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2009	G 1.3 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2009	G 1.3 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2009	G 1.3 SOHC	EPS [Electronic Power Steering]	√	√	√	√		0039

Europe/General	GETZ(TB)	2009	G 1.3 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2009	G 1.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GETZ(TB)	2009	G 1.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2009	G 1.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2009	G 1.4 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2009	G 1.4 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2009	G 1.4 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2009	G 1.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2009	G 1.4 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2009	G 1.4 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2009	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GETZ(TB)	2009	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2009	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2009	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2009	G 1.6 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2009	G 1.6 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2009	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2009	G 1.6 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2009	G 1.6 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2008	D 1.5 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	GETZ(TB)	2008	D 1.5 TCI-U	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2008	D 1.5 TCI-U	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2008	D 1.5 TCI-U	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2008	D 1.5 TCI-U	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2008	D 1.5 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2008	D 1.5 TCI-U	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2008	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GETZ(TB)	2008	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2008	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2008	G 1.1 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2008	G 1.1 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2008	G 1.1 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2008	G 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2008	G 1.1 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2008	G 1.3 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GETZ(TB)	2008	G 1.3 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2008	G 1.3 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2008	G 1.3 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2008	G 1.3 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2008	G 1.3 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2008	G 1.3 SOHC	AIRBAG [Airbag Control]	√	√	√			

Europe/General	GETZ(TB)	2008	G 1.3 SOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2008	G 1.3 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2008	G 1.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GETZ(TB)	2008	G 1.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2008	G 1.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2008	G 1.4 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2008	G 1.4 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2008	G 1.4 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2008	G 1.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2008	G 1.4 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2008	G 1.4 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2008	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GETZ(TB)	2008	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2008	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2008	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2008	G 1.6 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2008	G 1.6 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2008	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2008	G 1.6 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2008	G 1.6 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2007	D 1.5 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	GETZ(TB)	2007	D 1.5 TCI-U	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2007	D 1.5 TCI-U	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2007	D 1.5 TCI-U	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2007	D 1.5 TCI-U	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2007	D 1.5 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2007	D 1.5 TCI-U	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2007	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GETZ(TB)	2007	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2007	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2007	G 1.1 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2007	G 1.1 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2007	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2007	G 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2007	G 1.1 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2007	G 1.3 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GETZ(TB)	2007	G 1.3 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2007	G 1.3 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2007	G 1.3 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2007	G 1.3 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2007	G 1.3 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			

Europe/General	GETZ(TB)	2007	G 1.3 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2007	G 1.3 SOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2007	G 1.3 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2007	G 1.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GETZ(TB)	2007	G 1.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2007	G 1.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2007	G 1.4 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2007	G 1.4 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2007	G 1.4 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2007	G 1.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2007	G 1.4 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2007	G 1.4 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2007	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GETZ(TB)	2007	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2007	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2007	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2007	G 1.6 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2007	G 1.6 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2007	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2007	G 1.6 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2007	G 1.6 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2006	D 1.5 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	GETZ(TB)	2006	D 1.5 TCI-D	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2006	D 1.5 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2006	D 1.5 TCI-D	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2006	D 1.5 TCI-D	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2006	D 1.5 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	GETZ(TB)	2006	D 1.5 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	GETZ(TB)	2006	D 1.5 TCI-U	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2006	D 1.5 TCI-U	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2006	D 1.5 TCI-U	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2006	D 1.5 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2006	D 1.5 TCI-U	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2006	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GETZ(TB)	2006	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2006	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2006	G 1.1 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2006	G 1.1 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2006	G 1.1 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2006	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2006	G 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		0039

Europe/General	GETZ(TB)	2006	G 1.1 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2006	G 1.3 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GETZ(TB)	2006	G 1.3 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2006	G 1.3 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2006	G 1.3 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2006	G 1.3 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2006	G 1.3 SOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2006	G 1.3 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2006	G 1.3 SOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2006	G 1.3 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2006	G 1.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GETZ(TB)	2006	G 1.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2006	G 1.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2006	G 1.4 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2006	G 1.4 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2006	G 1.4 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2006	G 1.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2006	G 1.4 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2006	G 1.4 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2006	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GETZ(TB)	2006	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2006	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2006	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2006	G 1.6 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2006	G 1.6 DOHC	AIRBAG [Airbag Control (Without PAB SW)]	√	√	√			
Europe/General	GETZ(TB)	2006	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2006	G 1.6 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2005	D 1.5 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	GETZ(TB)	2005	D 1.5 TCI-D	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2005	D 1.5 TCI-D	ABS [Anti - Lock Brake]	√	√	√	√	√	
Europe/General	GETZ(TB)	2005	D 1.5 TCI-D	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2005	D 1.5 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	GETZ(TB)	2005	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	GETZ(TB)	2005	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	GETZ(TB)	2005	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	GETZ(TB)	2005	G 1.1 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2005	G 1.1 SOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	
Europe/General	GETZ(TB)	2005	G 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2005	G 1.1 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2005	G 1.3 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	GETZ(TB)	2005	G 1.3 SOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	GETZ(TB)	2005	G 1.3 SOHC	ENGINE [Unleaded GEN]	√	√	√	√		

Europe/General	GETZ(TB)	2005	G 1.3 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2005	G 1.3 SOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	
Europe/General	GETZ(TB)	2005	G 1.3 SOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2005	G 1.3 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2005	G 1.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GETZ(TB)	2005	G 1.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	GETZ(TB)	2005	G 1.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GETZ(TB)	2005	G 1.4 DOHC	AT [Automatic Transaxle]			√	√	√	
Europe/General	GETZ(TB)	2005	G 1.4 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GETZ(TB)	2005	G 1.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GETZ(TB)	2005	G 1.4 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2005	G 1.4 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2005	G 1.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	GETZ(TB)	2005	G 1.5 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	GETZ(TB)	2005	G 1.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	GETZ(TB)	2005	G 1.5 DOHC	AT [Automatic Transaxle]			√	√	√	
Europe/General	GETZ(TB)	2005	G 1.5 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	
Europe/General	GETZ(TB)	2005	G 1.5 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2005	G 1.5 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2005	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	GETZ(TB)	2005	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	GETZ(TB)	2005	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	GETZ(TB)	2005	G 1.6 DOHC	AT [Automatic Transaxle]			√	√	√	
Europe/General	GETZ(TB)	2005	G 1.6 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2005	G 1.6 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2004	D 1.5 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	GETZ(TB)	2004	D 1.5 TCI-D	AT [Automatic Transaxle]			√	√	√	
Europe/General	GETZ(TB)	2004	D 1.5 TCI-D	ABS [Anti - Lock Brake]	√	√	√	√	√	
Europe/General	GETZ(TB)	2004	D 1.5 TCI-D	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2004	D 1.5 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	GETZ(TB)	2004	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	GETZ(TB)	2004	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	GETZ(TB)	2004	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	GETZ(TB)	2004	G 1.1 SOHC	AT [Automatic Transaxle]			√	√	√	
Europe/General	GETZ(TB)	2004	G 1.1 SOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	
Europe/General	GETZ(TB)	2004	G 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2004	G 1.1 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2004	G 1.3 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	GETZ(TB)	2004	G 1.3 SOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	GETZ(TB)	2004	G 1.3 SOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	GETZ(TB)	2004	G 1.3 SOHC	AT [Automatic Transaxle]			√	√	√	
Europe/General	GETZ(TB)	2004	G 1.3 SOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	
Europe/General	GETZ(TB)	2004	G 1.3 SOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2004	G 1.3 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2004	G 1.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		

Europe/General	GETZ(TB)	2004	G 1.5 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	GETZ(TB)	2004	G 1.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	GETZ(TB)	2004	G 1.5 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2004	G 1.5 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	
Europe/General	GETZ(TB)	2004	G 1.5 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2004	G 1.5 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2004	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	GETZ(TB)	2004	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	GETZ(TB)	2004	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	GETZ(TB)	2004	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2004	G 1.6 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	
Europe/General	GETZ(TB)	2004	G 1.6 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2004	G 1.6 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2003	D 1.5 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	GETZ(TB)	2003	D 1.5 TCI-D	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2003	D 1.5 TCI-D	ABS [Anti - Lock Brake]	√	√	√	√	√	
Europe/General	GETZ(TB)	2003	D 1.5 TCI-D	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2003	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	GETZ(TB)	2003	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	GETZ(TB)	2003	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	GETZ(TB)	2003	G 1.1 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2003	G 1.1 SOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	
Europe/General	GETZ(TB)	2003	G 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2003	G 1.1 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2003	G 1.3 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	GETZ(TB)	2003	G 1.3 SOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	GETZ(TB)	2003	G 1.3 SOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	GETZ(TB)	2003	G 1.3 SOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2003	G 1.3 SOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	
Europe/General	GETZ(TB)	2003	G 1.3 SOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2003	G 1.3 SOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2003	G 1.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	GETZ(TB)	2003	G 1.5 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	GETZ(TB)	2003	G 1.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	GETZ(TB)	2003	G 1.5 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2003	G 1.5 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	
Europe/General	GETZ(TB)	2003	G 1.5 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2003	G 1.5 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GETZ(TB)	2003	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	GETZ(TB)	2003	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	GETZ(TB)	2003	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	GETZ(TB)	2003	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	GETZ(TB)	2003	G 1.6 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	
Europe/General	GETZ(TB)	2003	G 1.6 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0039
Europe/General	GETZ(TB)	2003	G 1.6 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091

Europe/General	GRAND i10/Xcent(BA)	2018	B 1.0 LPGI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	GRAND i10/Xcent(BA)	2018	B 1.0 LPGI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	GRAND i10/Xcent(BA)	2018	B 1.0 LPGI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2018	B 1.0 LPGI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2018	B 1.0 LPGI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2018	B 1.0 LPGI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	GRAND i10/Xcent(BA)	2018	B 1.0 LPGI	IMMO [Immobilizer]				√		
Europe/General	GRAND i10/Xcent(BA)	2018	B 1.0 LPGI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND i10/Xcent(BA)	2018	B 1.0 LPGI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2018	B 1.0 LPGI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2018	B 1.0 LPGI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2018	B 1.0 LPGI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND i10/Xcent(BA)	2018	D 1.2 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	GRAND i10/Xcent(BA)	2018	D 1.2 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	GRAND i10/Xcent(BA)	2018	D 1.2 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2018	D 1.2 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2018	D 1.2 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2018	D 1.2 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	GRAND i10/Xcent(BA)	2018	D 1.2 TCI-U2	TPMS [Tire Pressure Monitoring System]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2018	D 1.2 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	GRAND i10/Xcent(BA)	2018	D 1.2 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND i10/Xcent(BA)	2018	D 1.2 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2018	D 1.2 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2018	D 1.2 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	

Europe/General	GRAND i10/Xcent(BA)	2018	D 1.2 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.0 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.0 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.0 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.0 MPI	IMMO [Immobilizer]				√		
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.2 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.2 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.2 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.2 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.2 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.2 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.2 MPI	SJB [Smart Junction Block]	√	√	√	√	√	

Europe/General	GRAND i10/Xcent(BA)	2018	G 1.2 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2018	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND i10/Xcent(BA)	2017	B 1.0 LPGI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	GRAND i10/Xcent(BA)	2017	B 1.0 LPGI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	GRAND i10/Xcent(BA)	2017	B 1.0 LPGI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2017	B 1.0 LPGI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2017	B 1.0 LPGI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2017	B 1.0 LPGI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	GRAND i10/Xcent(BA)	2017	B 1.0 LPGI	IMMO [Immobilizer]				√		
Europe/General	GRAND i10/Xcent(BA)	2017	B 1.0 LPGI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND i10/Xcent(BA)	2017	B 1.0 LPGI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2017	B 1.0 LPGI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2017	B 1.0 LPGI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2017	B 1.0 LPGI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND i10/Xcent(BA)	2017	D 1.1 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	GRAND i10/Xcent(BA)	2017	D 1.1 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	GRAND i10/Xcent(BA)	2017	D 1.1 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2017	D 1.1 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2017	D 1.1 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	GRAND i10/Xcent(BA)	2017	D 1.1 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	GRAND i10/Xcent(BA)	2017	D 1.1 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND i10/Xcent(BA)	2017	D 1.1 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2017	D 1.1 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	

Europe/General	GRAND i10/Xcent(BA)	2017	D 1.1 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2017	D 1.1 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.0 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.0 MPI	IMMO [Immobilizer]				√		
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.2 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.2 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.2 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.2 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.2 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.2 MPI	SJB [Smart Junction Block]	√	√	√	√	√	

Europe/General	GRAND i10/Xcent(BA)	2017	G 1.2 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2017	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND i10/Xcent(BA)	2016	B 1.0 LPGI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	GRAND i10/Xcent(BA)	2016	B 1.0 LPGI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	GRAND i10/Xcent(BA)	2016	B 1.0 LPGI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2016	B 1.0 LPGI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2016	B 1.0 LPGI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2016	B 1.0 LPGI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	GRAND i10/Xcent(BA)	2016	B 1.0 LPGI	IMMO [Immobilizer]				√		
Europe/General	GRAND i10/Xcent(BA)	2016	B 1.0 LPGI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2016	B 1.0 LPGI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2016	B 1.0 LPGI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2016	B 1.0 LPGI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND i10/Xcent(BA)	2016	D 1.1 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	GRAND i10/Xcent(BA)	2016	D 1.1 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	GRAND i10/Xcent(BA)	2016	D 1.1 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2016	D 1.1 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2016	D 1.1 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2016	D 1.1 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	GRAND i10/Xcent(BA)	2016	D 1.1 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	GRAND i10/Xcent(BA)	2016	D 1.1 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND i10/Xcent(BA)	2016	D 1.1 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2016	D 1.1 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	

Europe/General	GRAND i10/Xcent(BA)	2016	D 1.1 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2016	D 1.1 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND i10/Xcent(BA)	2016	G 1.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	GRAND i10/Xcent(BA)	2016	G 1.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRAND i10/Xcent(BA)	2016	G 1.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	GRAND i10/Xcent(BA)	2016	G 1.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2016	G 1.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2016	G 1.0 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	GRAND i10/Xcent(BA)	2016	G 1.0 MPI	IMMO [Immobilizer]				√		
Europe/General	GRAND i10/Xcent(BA)	2016	G 1.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND i10/Xcent(BA)	2016	G 1.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2016	G 1.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2016	G 1.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2016	G 1.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND i10/Xcent(BA)	2016	G 1.2 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	GRAND i10/Xcent(BA)	2016	G 1.2 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRAND i10/Xcent(BA)	2016	G 1.2 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	GRAND i10/Xcent(BA)	2016	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2016	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2016	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2016	G 1.2 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	GRAND i10/Xcent(BA)	2016	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	GRAND i10/Xcent(BA)	2016	G 1.2 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND i10/Xcent(BA)	2016	G 1.2 MPI	SJB [Smart Junction Block]	√	√	√	√	√	

Europe/General	GRAND i10/Xcent(BA)	2016	G 1.2 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2016	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	IMMO [Immobilizer]				√		
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2015	B 1.0 LPGI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND i10/Xcent(BA)	2015	D 1.1 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	GRAND i10/Xcent(BA)	2015	D 1.1 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	GRAND i10/Xcent(BA)	2015	D 1.1 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2015	D 1.1 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2015	D 1.1 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2015	D 1.1 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	GRAND i10/Xcent(BA)	2015	D 1.1 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	GRAND i10/Xcent(BA)	2015	D 1.1 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND i10/Xcent(BA)	2015	D 1.1 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2015	D 1.1 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	

Europe/General	GRAND i10/Xcent(BA)	2015	D 1.1 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	IMMO [Immobilizer]				√		
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	CLU [Cluster Module]	√	√	√	√	√	

Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2015	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	IMMO [Immobilizer]				√		
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2014	B 1.0 LPGI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND i10/Xcent(BA)	2014	D 1.1 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	GRAND i10/Xcent(BA)	2014	D 1.1 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2014	D 1.1 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2014	D 1.1 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2014	D 1.1 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	GRAND i10/Xcent(BA)	2014	D 1.1 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	GRAND i10/Xcent(BA)	2014	D 1.1 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND i10/Xcent(BA)	2014	D 1.1 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2014	D 1.1 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2014	D 1.1 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	

Europe/General	GRAND i10/Xcent(BA)	2014	D 1.1 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	IMMO [Immobilizer]				√		
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	CLU [Cluster Module]	√	√	√	√	√	

Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND i10/Xcent(BA)	2014	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0116, 0035, 0013, 0061, 0035, 0158
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	AHS [Active Hood System]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	BCM [Body Control Module]	√	√	√	√	√	

Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	PTM [Power Trunk Module]	√	√	√	√		0113
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	ECALL [e - Call]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2018	D 2.2 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	AHS [Active Hood System]	√	√	√		√	

Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	PTM [Power Trunk Module]	√	√	√	√		0113
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	ECALL [e - Call]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0015, 0055, 0073, 0116, 0158
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	

Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	AHS [Active Hood System]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	PTM [Power Trunk Module]	√	√	√	√		0113
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	ECALL [e - Call]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2018	G 3.3 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0116, 0035, 0013, 0061, 0035, 0158
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024

Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	PTM [Power Trunk Module]	√	√	√	√		0113
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	ECALL [e - Call]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2017	D 2.2 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093

Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	PTM [Power Trunk Module]	√	√	√	√		0113
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128

Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	ECALL [e - Call]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	AHS [Active Hood System]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	BCM [Body Control Module]	√	√	√	√	√	

Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	PTM [Power Trunk Module]	√	√	√	√		0113
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	ECALL [e - Call]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2017	G 3.3 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0116, 0035, 0013, 0061, 0035, 0158
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System (After PE)]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System (Before PE)]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	AHS [Active Hood System]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129

Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	D 2.2 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	AHLS [Auto Headlamp Leveling System (Before PE)]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	AHLS [Auto Headlamp Leveling System (After PE)]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112

Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0015, 0055, 0073, 0116, 0158
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	AHLS [Auto Headlamp Leveling System (Before PE)]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	AHLS [Auto Headlamp Leveling System (After PE)]	√	√	√	√	√	

Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	AHS [Active Hood System]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2016	G 3.3 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	

Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	AHS [Active Hood System]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2015	D 2.2 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0015, 0055, 0073, 0116, 0158
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	

Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	AHS [Active Hood System]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2015	G 3.3 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	

Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	AHS [Active Hood System]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2014	D 2.2 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0015, 0055, 0073, 0116, 0158
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	

Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	AHS [Active Hood System]	√	√	√		√	
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	GRAND SANTAFE(NC)	2014	G 3.3 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRANDEUR(LX)	1998	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1998	G 2.4 SOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1998	G 2.5 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1998	G 3.0 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1998	G 3.0 SOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1998	G 3.5 SOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1997	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1997	G 2.4 SOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1997	G 2.5 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1997	G 3.0 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1997	G 3.0 SOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1997	G 3.5 SOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1996	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1996	G 2.4 SOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1996	G 2.5 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1996	G 3.0 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1996	G 3.0 SOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1996	G 3.5 SOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1995	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1995	G 2.4 SOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1995	G 2.5 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1995	G 3.0 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1995	G 3.0 SOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1995	G 3.5 SOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1994	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√	√		

Europe/General	GRANDEUR(LX)	1994	G 2.4 SOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1994	G 2.5 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1994	G 3.0 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1994	G 3.0 SOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(LX)	1994	G 3.5 SOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	GRANDEUR(XG)	2005	G 2.5 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	0015, 0116, 0120
Europe/General	GRANDEUR(XG)	2005	G 2.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	GRANDEUR(XG)	2005	G 2.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	GRANDEUR(XG)	2005	G 2.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2005	G 2.5 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2005	G 2.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GRANDEUR(XG)	2005	G 2.5 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	GRANDEUR(XG)	2005	G 2.5 DOHC	AHLS [AHLS]	√	√	√	√		0090
Europe/General	GRANDEUR(XG)	2005	G 2.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	ENGINE [Unleaded GEN (EST+)]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	ENGINE [Leaded All (EST+)]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	ENGINE [Unleaded IMMO (ZiO2)]	√	√	√	√	√	0015, 0116, 0120
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	ENGINE [Unleaded IMMO (EST+)]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	ECS [Electronic Control Suspension]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	AHLS [AHLS]	√	√	√	√		0090
Europe/General	GRANDEUR(XG)	2005	G 3.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GRANDEUR(XG)	2005	G 3.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	GRANDEUR(XG)	2005	G 3.5 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2005	G 3.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2005	G 3.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2005	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2005	G 3.5 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2005	G 3.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GRANDEUR(XG)	2005	G 3.5 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	GRANDEUR(XG)	2005	G 3.5 DOHC	ECS [Electronic Control Suspension]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2005	G 3.5 DOHC	AHLS [AHLS]	√	√	√	√		0090
Europe/General	GRANDEUR(XG)	2005	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GRANDEUR(XG)	2004	G 2.5 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	0015, 0116, 0120
Europe/General	GRANDEUR(XG)	2004	G 2.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	GRANDEUR(XG)	2004	G 2.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	GRANDEUR(XG)	2004	G 2.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2004	G 2.5 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2004	G 2.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064

Europe/General	GRANDEUR(XG)	2004	G 2.5 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	GRANDEUR(XG)	2004	G 2.5 DOHC	ECS [Electronic Control Suspension]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2004	G 2.5 DOHC	AHLS [AHLS]	√	√	√	√		0090
Europe/General	GRANDEUR(XG)	2004	G 2.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	ENGINE [Unleaded GEN (EST+)]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	ENGINE [Unleaded IMMO (EST+)]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	ENGINE [Unleaded IMMO (ZiO2)]	√	√	√	√	√	0015, 0116, 0120
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	ENGINE [Leaded (EST+)]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	ECS [Electronic Control Suspension]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	AHLS [AHLS]	√	√	√	√		0090
Europe/General	GRANDEUR(XG)	2004	G 3.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GRANDEUR(XG)	2004	G 3.5 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2004	G 3.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2004	G 3.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2004	G 3.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2004	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2004	G 3.5 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2004	G 3.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GRANDEUR(XG)	2004	G 3.5 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	GRANDEUR(XG)	2004	G 3.5 DOHC	ECS [Electronic Control Suspension]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2004	G 3.5 DOHC	AHLS [AHLS]	√	√	√	√		0090
Europe/General	GRANDEUR(XG)	2004	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	ENGINE [Unleaded IMMO (ZiO2)]	√	√	√	√	√	0015, 0116, 0120
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	ENGINE [Unleaded IMMO (TiO2)]	√	√	√	√	√	0015, 0120
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	ECS [Electronic Control Suspension]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	AHLS [AHLS]	√	√	√	√		0090
Europe/General	GRANDEUR(XG)	2003	G 2.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	ENGINE [Unleaded GEN (EST+)]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	ENGINE [Unleaded IMMO (EST+)]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	ENGINE [Unleaded IMMO (ZiO2)]	√	√	√	√	√	0015, 0116, 0120

Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	ECS [Electronic Control Suspension]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	AHLS [AHLS]	√	√	√	√		0090
Europe/General	GRANDEUR(XG)	2003	G 3.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GRANDEUR(XG)	2003	G 3.5 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2003	G 3.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2003	G 3.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2003	G 3.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2003	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2003	G 3.5 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2003	G 3.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GRANDEUR(XG)	2003	G 3.5 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	GRANDEUR(XG)	2003	G 3.5 DOHC	ECS [Electronic Control Suspension]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2003	G 3.5 DOHC	AHLS [AHLS]	√	√	√	√		0090
Europe/General	GRANDEUR(XG)	2003	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	0015, 0120
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	ECS [Electronic Control Suspension]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	AHLS [AHLS]	√	√	√	√		0090
Europe/General	GRANDEUR(XG)	2002	G 2.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	ENGINE [Unleaded IMMO (TiO2)]	√	√	√	√	√	0015, 0120
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	ENGINE [Unleaded GEN (EST+)]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	ENGINE [Unleaded IMMO (EST+)]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	ENGINE [Leaded (EST+)]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	AHLS [AHLS]	√	√	√	√		0090
Europe/General	GRANDEUR(XG)	2002	G 3.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GRANDEUR(XG)	2002	G 3.5 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2002	G 3.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2002	G 3.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2002	G 3.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	

Europe/General	GRANDEUR(XG)	2002	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2002	G 3.5 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2002	G 3.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GRANDEUR(XG)	2002	G 3.5 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GRANDEUR(XG)	2002	G 3.5 DOHC	ECS [Electronic Control Suspension]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2002	G 3.5 DOHC	AHLS [AHLS]	√	√	√	√		0090
Europe/General	GRANDEUR(XG)	2002	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	0015, 0120
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	ECS [Electronic Control Suspension]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	AHLS [AHLS]	√	√	√	√		0090
Europe/General	GRANDEUR(XG)	2001	G 2.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	ENGINE [Unleaded IMMO (TiO2)]	√	√	√	√	√	0015, 0120
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	ENGINE [Unleaded GEN (EST+)]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	ENGINE [Unleaded IMMO (EST+)]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	ENGINE [Leaded (EST+)]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	ECS [Electronic Control Suspension]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	AHLS [AHLS]	√	√	√	√		0090
Europe/General	GRANDEUR(XG)	2001	G 3.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GRANDEUR(XG)	2001	G 3.5 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2001	G 3.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2001	G 3.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2001	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2001	G 3.5 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2001	G 3.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GRANDEUR(XG)	2001	G 3.5 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GRANDEUR(XG)	2001	G 3.5 DOHC	ECS [Electronic Control Suspension]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2001	G 3.5 DOHC	AHLS [AHLS]	√	√	√	√		0090
Europe/General	GRANDEUR(XG)	2001	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	0015, 0120
Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	

Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	ECS [Electronic Control Suspension]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	AHLS [AHLS]	√	√	√	√		0090
Europe/General	GRANDEUR(XG)	2000	G 2.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	ENGINE [Unleaded IMMO (TiO2)]	√	√	√	√	√	0015, 0120
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	ENGINE [Unleaded GEN (EST+)]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	ENGINE [Unleaded IMMO (EST+)]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	ENGINE [Leaded (EST+)]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	ECS [Electronic Control Suspension]		√	√	√	√	
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	AHLS [AHLS]	√	√	√	√		0090
Europe/General	GRANDEUR(XG)	2000	G 3.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GRANDEUR(XG)	1999	G 2.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	GRANDEUR(XG)	1999	G 2.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	GRANDEUR(XG)	1999	G 2.5 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	0015, 0120
Europe/General	GRANDEUR(XG)	1999	G 2.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	1999	G 2.5 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	GRANDEUR(XG)	1999	G 2.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GRANDEUR(XG)	1999	G 2.5 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GRANDEUR(XG)	1999	G 2.5 DOHC	AHLS [AHLS]	√	√	√	√		0090
Europe/General	GRANDEUR(XG)	1999	G 2.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	ENGINE [Unleaded IMMO (TiO2)]	√	√	√	√	√	0015, 0120
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	ENGINE [Unleaded GEN (EST+)]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	ENGINE [Unleaded IMMO (EST+)]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	ENGINE [Leaded (EST+)]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	ECS [Electronic Control Suspension]		√	√	√	√	
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	AHLS [AHLS]	√	√	√	√		0090
Europe/General	GRANDEUR(XG)	1999	G 3.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 2.4 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158

Europe/General	GRANDEUR/AZE RA(HG)	2017	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 2.4 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0014, 0037, 0062, 0103, 0104
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 2.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 2.4 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 2.4 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 2.4 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 2.4 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 2.4 MPI	AMP [Amplifier]						0006
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 2.4 MPI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 2.4 MPI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 2.4 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 2.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 2.4 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 2.4 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 2.4 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122

Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.0 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0014, 0037, 0062, 0103, 0104
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.0 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.0 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.0 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.0 MPI	AMP [Amplifier]						0006
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.0 MPI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.0 MPI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.0 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.0 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.0 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0014, 0037, 0062, 0103, 0104

Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	AMP [Amplifier]						0006
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GRANDEUR/AZE RA(HG)	2017	G 3.3 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 2.4 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 2.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093

Europe/General	GRANDEUR/AZE RA(HG)	2016	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 2.4 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 2.4 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 2.4 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 2.4 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 2.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 2.4 MPI	AMP [Amplifier]						0006
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 2.4 MPI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 2.4 MPI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 2.4 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 2.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 2.4 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 2.4 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 2.4 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.0 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0014, 0037, 0062, 0103, 0104
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.0 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			

Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.0 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.0 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.0 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.0 MPI	AMP [Amplifier]						0006
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.0 MPI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.0 MPI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.0 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.0 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.0 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0014, 0037, 0062, 0103, 0104
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			

Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	AMP [Amplifier]						0006
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GRANDEUR/AZE RA(HG)	2016	G 3.3 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	ENGINE [Engine Control (2014.08.11~)]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	ENGINE [Unleaded All (~2014.08.10)]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	ENGINE [Leaded All (~2014.08.10)]	√	√	√	√		0116, 0015, 0073, 0013, 0013, 0120, 0116, 0158
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0014, 0037, 0062, 0103, 0104
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093

Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #2) (2014.08.11~)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #2) (~2014.08.10)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #1) (~2014.08.10)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #1) (2014.08.11~)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	AIRCON [Air Conditioner (~2014.08.10)]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	AIRCON [Air Conditioner (2014.08.11~)]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	SCC [Smart Cruise Control (~2014.08.10)]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	SMK [Smart Key Unit (2014.08.11~)]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	SMK [Smart Key Unit (~2014.08.10)]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	AMP [Amplifier]						0006
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	BCM [Body Control Module (2014.08.11~)]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	BCM [Body Control Module (~2014.08.10)]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	CLU [Cluster Module (2014.08.11~)]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	CLU [Cluster Module (~2014.08.10)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	MFSW [Multi Function Switch]	√	√	√	√		

Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0014, 0037, 0062, 0103, 0104
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	AIRBAG [Airbag (Event #2) (2014.08.11~)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	AIRBAG [Airbag (Event #2) (~2014.08.10)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	AIRBAG [Airbag (Event #1) (~2014.08.10)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	AIRBAG [Airbag (Event #1) (2014.08.11~)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	AIRCON [Air Conditioner (~2014.08.10)]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	AIRCON [Air Conditioner (2014.08.11~)]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	SCC [Smart Cruise Control (2014.08.11~)]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	SCC [Smart Cruise Control (~2014.08.10)]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	SMK [Smart Key Unit (~2014.08.10)]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	SMK [Smart Key Unit (2014.08.11~)]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	AMP [Amplifier]						0006
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	BCM [Body Control Module (~2014.08.10)]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	BCM [Body Control Module (2014.08.11~)]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	CLU [Cluster Module (2014.08.11~)]	√	√	√	√	√	

Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	CLU [Cluster Module (~2014.08.10)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GRANDEUR/AZE RA(HG)	2015	G 3.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 2.4 MPI	ENGINE [Leaded All]	√	√	√	√		0116, 0015, 0073, 0013, 0120, 0158
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 2.4 MPI	ENGINE [Unleaded All]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 2.4 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0014, 0037, 0062, 0103, 0104
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 2.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 2.4 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 2.4 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 2.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 2.4 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 2.4 MPI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 2.4 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 2.4 MPI	CLU [Cluster Module]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 2.4 MPI	SCM [Steering Column Module]	√	√	√	√	√	0142

Europe/General	GRANDEUR/AZE RA(HG)	2014	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 2.4 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 2.4 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 3.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 3.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 3.0 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0014, 0037, 0062, 0103, 0104
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 3.0 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 3.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 3.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 3.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 3.0 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 3.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 3.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 3.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 3.0 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 3.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 3.0 MPI	CLU [Cluster Module]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 3.0 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 3.0 MPI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 3.0 MPI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 3.0 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 3.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GRANDEUR/AZE RA(HG)	2014	G 3.0 MPI	CODE [Transmitter Code Saving]				√		0026

Europe/General	GRANDEUR/AZE RA(HG)	2013	G 2.4 MPI	ENGINE [Leaded All]	√	√	√	√		0116, 0015, 0073, 0013, 0120, 0158
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 2.4 MPI	ENGINE [Unleaded All]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 2.4 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0014, 0037, 0062, 0103, 0104
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 2.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 2.4 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 2.4 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 2.4 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 2.4 MPI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 2.4 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 2.4 MPI	CLU [Cluster Module]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 2.4 MPI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 2.4 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 2.4 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 3.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 3.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 3.0 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0014, 0037, 0062, 0103, 0104

Europe/General	GRANDEUR/AZE RA(HG)	2013	G 3.0 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 3.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 3.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 3.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 3.0 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 3.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 3.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 3.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 3.0 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 3.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 3.0 MPI	CLU [Cluster Module]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 3.0 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 3.0 MPI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 3.0 MPI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 3.0 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 3.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GRANDEUR/AZE RA(HG)	2013	G 3.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 2.4 MPI	ENGINE [Leaded All]	√	√	√	√		0116, 0015, 0073, 0013, 0120, 0158
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 2.4 MPI	ENGINE [Unleaded All]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 2.4 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0014, 0037, 0062, 0103, 0104
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 2.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			

Europe/General	GRANDEUR/AZE RA(HG)	2012	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 2.4 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 2.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 2.4 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 2.4 MPI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 2.4 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 2.4 MPI	CLU [Cluster Module]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 2.4 MPI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 2.4 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 2.4 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 3.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 3.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 3.0 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0014, 0037, 0062, 0103, 0104
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 3.0 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 3.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 3.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 3.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 3.0 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 3.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 3.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112

Europe/General	GRANDEUR/AZE RA(HG)	2012	G 3.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 3.0 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 3.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 3.0 MPI	CLU [Cluster Module]	√	√	√			
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 3.0 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 3.0 MPI	SCM [Steering Column Module]	√	√	√	√	√	0142
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 3.0 MPI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 3.0 MPI	MFSW [Multi Function Switch]	√	√	√	√		
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 3.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	GRANDEUR/AZE RA(HG)	2012	G 3.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	GRANDEUR/AZE RA(IG)	2018	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0096
Europe/General	GRANDEUR/AZE RA(IG)	2018	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	GRANDEUR/AZE RA(IG)	2018	G 3.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0096
Europe/General	GRANDEUR/AZE RA(IG)	2018	G 3.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	GRANDEUR/AZE RA(IG)	2018	G 3.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0096
Europe/General	GRANDEUR/AZE RA(IG)	2018	G 3.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	GRANDEUR/AZE RA(IG)	2018	G 3.5 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0096
Europe/General	GRANDEUR/AZE RA(IG)	2018	G 3.5 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	GRANDEUR/AZE RA(TG)	2011	D 2.2 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	D 2.2 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	D 2.2 TCI-D	AIRBAG [Airbag Control (General)]	√	√	√			0109
Europe/General	GRANDEUR/AZE RA(TG)	2011	D 2.2 TCI-D	AIRBAG [Airbag Control (NAS)]	√	√	√			0107, 0109
Europe/General	GRANDEUR/AZE RA(TG)	2011	D 2.2 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	D 2.2 TCI-D	EPS [Electronic Power Steering]		√	√	√		

Europe/General	GRANDEUR/AZE RA(TG)	2011	D 2.2 TCI-D	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2011	D 2.2 TCI-D	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2011	D 2.2 TCI-D	SMK [Smart Key Unit]	√	√	√	√	√	0136
Europe/General	GRANDEUR/AZE RA(TG)	2011	D 2.2 TCI-D	IFU [Interface Unit]	√	√	√		√	0032, 0070
Europe/General	GRANDEUR/AZE RA(TG)	2011	D 2.2 TCI-D	SMKCODE [Smart Key Code Saving]				√		0137
Europe/General	GRANDEUR/AZE RA(TG)	2011	D 2.2 TCI-D	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	D 2.2 TCI-D	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	D 2.2 TCI-D	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	D 2.2 TCI-D	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	D 2.2 TCI-D	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	D 2.2 TCI-D	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2011	D 2.2 TCI-D	CODE [Transmitter Code Saving]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0055
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0055
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 2.7 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 2.7 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 2.7 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 2.7 DOHC	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 2.7 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 2.7 DOHC	SMKCODE [Smart Key Code Saving]				√		0137
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 2.7 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0136

Europe/General	GRANDEUR/AZE RA(TG)	2011	G 2.7 DOHC	IFU [Interface Unit]	√	√	√		√	0032, 0070
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 2.7 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 2.7 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 2.7 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 2.7 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 2.7 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 2.7 DOHC	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.3 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.3 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.3 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.3 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.3 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.3 DOHC	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.3 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.3 DOHC	SMKCODE [Smart Key Code Saving]				√		0137
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.3 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0136
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.3 DOHC	IFU [Interface Unit]	√	√	√		√	0032, 0070
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.3 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.3 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.3 DOHC	ADM [Assist Door Module]	√	√	√	√	√	

Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.3 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.3 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.3 DOHC	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.3 DOHC	CODE [Transmitter Code Saving]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.8 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.8 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.8 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.8 DOHC	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.8 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				√		0137
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.8 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0136
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.8 DOHC	IFU [Interface Unit]	√	√	√		√	0032, 0070
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.8 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.8 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.8 DOHC	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2011	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		

Europe/General	GRANDEUR/AZE RA(TG)	2010	D 2.2 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	D 2.2 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(TG)	2010	D 2.2 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	D 2.2 TCI-D	AIRBAG [Airbag Control (NAS)]	√	√	√			0107, 0109
Europe/General	GRANDEUR/AZE RA(TG)	2010	D 2.2 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	D 2.2 TCI-D	EPS [Electronic Power Steering]		√	√	√		
Europe/General	GRANDEUR/AZE RA(TG)	2010	D 2.2 TCI-D	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2010	D 2.2 TCI-D	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2010	D 2.2 TCI-D	SMK [Smart Key Unit]	√	√	√	√	√	0136
Europe/General	GRANDEUR/AZE RA(TG)	2010	D 2.2 TCI-D	IFU [Interface Unit]	√	√	√		√	0032, 0070
Europe/General	GRANDEUR/AZE RA(TG)	2010	D 2.2 TCI-D	SMKCODE [Smart Key Code Saving]				√		0137
Europe/General	GRANDEUR/AZE RA(TG)	2010	D 2.2 TCI-D	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	D 2.2 TCI-D	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	D 2.2 TCI-D	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	D 2.2 TCI-D	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	D 2.2 TCI-D	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	D 2.2 TCI-D	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2010	D 2.2 TCI-D	CODE [Transmitter Code Saving]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0055
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0015, 0073
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			0109

Europe/General	GRANDEUR/AZE RA(TG)	2010	G 2.7 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 2.7 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 2.7 DOHC	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 2.7 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 2.7 DOHC	SMKCODE [Smart Key Code Saving]				√		0137
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 2.7 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0136
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 2.7 DOHC	IFU [Interface Unit]	√	√	√		√	0032, 0070
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 2.7 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 2.7 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 2.7 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 2.7 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 2.7 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 2.7 DOHC	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.3 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0015, 0073
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.3 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.3 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.3 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.3 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.3 DOHC	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.3 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091

Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.3 DOHC	SMKCODE [Smart Key Code Saving]				√		0137
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.3 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0136
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.3 DOHC	IFU [Interface Unit]	√	√	√		√	0032, 0070
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.3 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.3 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.3 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.3 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.3 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.3 DOHC	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.3 DOHC	CODE [Transmitter Code Saving]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0015, 0073
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.8 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.8 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.8 DOHC	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.8 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				√		0137
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.8 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0136
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.8 DOHC	IFU [Interface Unit]	√	√	√		√	0032, 0070
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.8 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	

Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.8 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.8 DOHC	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2010	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2010	L 2.7 DOHC	ENGINE [EMS ECU]	√	√	√	√	√	0015
Europe/General	GRANDEUR/AZE RA(TG)	2010	L 2.7 DOHC	ENGINE [IFB ECU]		√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	L 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(TG)	2010	L 2.7 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	L 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	GRANDEUR/AZE RA(TG)	2010	L 2.7 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	GRANDEUR/AZE RA(TG)	2010	L 2.7 DOHC	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2010	L 2.7 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2010	L 2.7 DOHC	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	GRANDEUR/AZE RA(TG)	2010	L 2.7 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129
Europe/General	GRANDEUR/AZE RA(TG)	2010	L 2.7 DOHC	SMKCODE [Smart Key Code Saving]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2010	L 2.7 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	L 2.7 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	L 2.7 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	L 2.7 DOHC	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2010	L 2.7 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	L 2.7 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2010	L 2.7 DOHC	CODE [Transmitter Code Saving]				√		

Europe/General	GRANDEUR/AZE RA(TG)	2009	D 2.2 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	D 2.2 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(TG)	2009	D 2.2 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	D 2.2 TCI-D	AIRBAG [Airbag Control (General)]	√	√	√			0109
Europe/General	GRANDEUR/AZE RA(TG)	2009	D 2.2 TCI-D	AIRBAG [Airbag Control (NAS)]	√	√	√			0107, 0109
Europe/General	GRANDEUR/AZE RA(TG)	2009	D 2.2 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	D 2.2 TCI-D	EPS [Electronic Power Steering]		√	√	√		
Europe/General	GRANDEUR/AZE RA(TG)	2009	D 2.2 TCI-D	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2009	D 2.2 TCI-D	SMK [Smart Key Unit]	√	√	√	√	√	0136
Europe/General	GRANDEUR/AZE RA(TG)	2009	D 2.2 TCI-D	IFU [Interface Unit]	√	√	√		√	0032, 0070
Europe/General	GRANDEUR/AZE RA(TG)	2009	D 2.2 TCI-D	SMKCODE [Smart Key Code Saving]				√		0137
Europe/General	GRANDEUR/AZE RA(TG)	2009	D 2.2 TCI-D	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	D 2.2 TCI-D	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	D 2.2 TCI-D	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	D 2.2 TCI-D	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	D 2.2 TCI-D	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	D 2.2 TCI-D	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2009	D 2.2 TCI-D	CODE [Transmitter Code Saving (2009.01.05~)]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2009	D 2.2 TCI-D	CODE [Transmitter Code Saving (~2009.01.04)]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0055
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0015, 0073
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122

Europe/General	GRANDEUR/AZE RA(TG)	2009	G 2.7 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 2.7 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 2.7 DOHC	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 2.7 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 2.7 DOHC	IFU [Interface Unit]	√	√	√		√	0032, 0070
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 2.7 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0136
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 2.7 DOHC	SMKCODE [Smart Key Code Saving]				√		0137
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 2.7 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 2.7 DOHC	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 2.7 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 2.7 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 2.7 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 2.7 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 2.7 DOHC	CODE [Transmitter Code Saving (2009.01.05~)]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 2.7 DOHC	CODE [Transmitter Code Saving (~2009.01.04)]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.3 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.3 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0015, 0073
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.3 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.3 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.3 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.3 DOHC	EPS [Electronic Power Steering]		√	√	√		

Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.3 DOHC	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.3 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.3 DOHC	IFU [Interface Unit]	√	√	√		√	0032, 0070
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.3 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0136
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.3 DOHC	SMKCODE [Smart Key Code Saving]				√		0137
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.3 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.3 DOHC	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.3 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.3 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.3 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.3 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.3 DOHC	CODE [Transmitter Code Saving (2009.01.05~)]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.3 DOHC	CODE [Transmitter Code Saving (~2009.01.04)]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0015, 0073
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.8 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.8 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.8 DOHC	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.8 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.8 DOHC	IFU [Interface Unit]	√	√	√		√	0032, 0070

Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.8 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0136
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				√		0137
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.8 DOHC	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.8 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.8 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.8 DOHC	CODE [Transmitter Code Saving (2009.01.05~)]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2009	G 3.8 DOHC	CODE [Transmitter Code Saving (~2009.01.04)]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	ENGINE [IFB ECU]		√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	ENGINE [EMS ECU]	√	√	√	√	√	0015
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	SMKCODE [Smart Key Code Saving (Button)]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	SMK [Smart Key Unit (Button)]	√	√	√	√	√	0058, 0106, 0129
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	IFU [Interface Unit (Key)]	√	√	√		√	0032, 0070
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	PDM [Power Distribution Module (Button)]	√	√	√	√	√	0042
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	SMK [Smart Key Unit (Key)]	√	√	√	√	√	0136
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	SMKCODE [Smart Key Code Saving (Key)]				√		0137

Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	BCM [Body Control Module (~2009.01.05)]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	DDM [Driver Door Module (~2009.01.05)]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	ADM [Assist Door Module (~2009.01.05)]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	IMS [Integrated Memory System (~2009.01.05)]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	TILT [Tilt / Telescope (~2009.01.05)]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	OPTION [User Option (~2009.01.05)]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	IMS [Integrated Memory System (2009.01.05~)]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	TILT [Tilt / Telescope (2009.01.05~)]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	OPTION [User Option (2009.01.05~)]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	BCM [Body Control Module (2009.01.05~)]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	DDM [Driver Door Module (2009.01.05~)]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	CODE [Transmitter Code Saving (2009.01.05~)]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2009	L 2.7 DOHC	CODE [Transmitter Code Saving (~2009.01.05)]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2008	D 2.2 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	D 2.2 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(TG)	2008	D 2.2 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	D 2.2 TCI-D	AIRBAG [Airbag Control (General)]	√	√	√			0109
Europe/General	GRANDEUR/AZE RA(TG)	2008	D 2.2 TCI-D	AIRBAG [Airbag Control (NAS)]	√	√	√			0107, 0109
Europe/General	GRANDEUR/AZE RA(TG)	2008	D 2.2 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	D 2.2 TCI-D	EPS [Electronic Power Steering]		√	√	√		
Europe/General	GRANDEUR/AZE RA(TG)	2008	D 2.2 TCI-D	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2008	D 2.2 TCI-D	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2008	D 2.2 TCI-D	SMK [Smart Key Unit]	√	√	√	√	√	0136
Europe/General	GRANDEUR/AZE RA(TG)	2008	D 2.2 TCI-D	IFU [Interface Unit]	√	√	√		√	0032, 0070

Europe/General	GRANDEUR/AZE RA(TG)	2008	D 2.2 TCI-D	SMKCODE [Smart Key Code Saving]				√		0137
Europe/General	GRANDEUR/AZE RA(TG)	2008	D 2.2 TCI-D	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	D 2.2 TCI-D	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	D 2.2 TCI-D	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	D 2.2 TCI-D	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	D 2.2 TCI-D	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	D 2.2 TCI-D	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0055
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0015, 0073
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 2.7 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 2.7 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 2.7 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 2.7 DOHC	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 2.7 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 2.7 DOHC	SMKCODE [Smart Key Code Saving]				√		0137
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 2.7 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0136
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 2.7 DOHC	IFU [Interface Unit]	√	√	√		√	0032, 0070
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 2.7 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 2.7 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 2.7 DOHC	ADM [Assist Door Module]	√	√	√	√	√	

Europe/General	GRANDEUR/AZE RA(TG)	2008	G 2.7 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 2.7 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 2.7 DOHC	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.3 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.3 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0015, 0073
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.3 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.3 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.3 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.3 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.3 DOHC	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.3 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.3 DOHC	SMKCODE [Smart Key Code Saving]				√		0137
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.3 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0136
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.3 DOHC	IFU [Interface Unit]	√	√	√		√	0032, 0070
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.3 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.3 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.3 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.3 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.3 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.3 DOHC	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015

Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0015, 0073
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.8 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.8 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.8 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.8 DOHC	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.8 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				√		0137
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.8 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0136
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.8 DOHC	IFU [Interface Unit]	√	√	√		√	0032, 0070
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.8 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.8 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	G 3.8 DOHC	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2008	L 2.7 DOHC	ENGINE [IFB ECU]		√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	L 2.7 DOHC	ENGINE [EMS ECU]	√	√	√	√	√	0015
Europe/General	GRANDEUR/AZE RA(TG)	2008	L 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(TG)	2008	L 2.7 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	L 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			0109

Europe/General	GRANDEUR/AZE RA(TG)	2008	L 2.7 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	L 2.7 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2008	L 2.7 DOHC	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2008	L 2.7 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	L 2.7 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	L 2.7 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	L 2.7 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	L 2.7 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2008	L 2.7 DOHC	CODE [Transmitter Code Saving]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2007	D 2.2 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	D 2.2 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(TG)	2007	D 2.2 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	D 2.2 TCI-D	AIRBAG [Airbag Control (General)]	√	√	√			0109
Europe/General	GRANDEUR/AZE RA(TG)	2007	D 2.2 TCI-D	AIRBAG [Airbag Control (NAS)]	√	√	√			0107, 0109
Europe/General	GRANDEUR/AZE RA(TG)	2007	D 2.2 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	D 2.2 TCI-D	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2007	D 2.2 TCI-D	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2007	D 2.2 TCI-D	SMK [Smart Key Unit]	√	√	√	√	√	0136
Europe/General	GRANDEUR/AZE RA(TG)	2007	D 2.2 TCI-D	IFU [Interface Unit]	√	√	√		√	0032, 0070
Europe/General	GRANDEUR/AZE RA(TG)	2007	D 2.2 TCI-D	SMKCODE [Smart Key Code Saving]				√		0137
Europe/General	GRANDEUR/AZE RA(TG)	2007	D 2.2 TCI-D	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	D 2.2 TCI-D	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	D 2.2 TCI-D	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	D 2.2 TCI-D	IMS [Integrated Memory System]	√	√	√	√	√	

Europe/General	GRANDEUR/AZE RA(TG)	2007	D 2.2 TCI-D	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	D 2.2 TCI-D	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2007	D 2.2 TCI-D	CODE [Transmitter Code Saving]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0055
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0015, 0073
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 2.7 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 2.7 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 2.7 DOHC	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 2.7 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 2.7 DOHC	SMKCODE [Smart Key Code Saving]				√		0137
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 2.7 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0136
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 2.7 DOHC	IFU [Interface Unit]	√	√	√		√	0032, 0070
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 2.7 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 2.7 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 2.7 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 2.7 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 2.7 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 2.7 DOHC	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.3 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015

Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.3 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0015, 0073
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.3 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.3 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.3 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.3 DOHC	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.3 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.3 DOHC	SMKCODE [Smart Key Code Saving]				√		0137
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.3 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0136
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.3 DOHC	IFU [Interface Unit]	√	√	√		√	0032, 0070
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.3 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.3 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.3 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.3 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.3 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.3 DOHC	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.3 DOHC	CODE [Transmitter Code Saving]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0015, 0073
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122

Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.8 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.8 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.8 DOHC	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.8 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				√		0137
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.8 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0136
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.8 DOHC	IFU [Interface Unit]	√	√	√		√	0032, 0070
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.8 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.8 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.8 DOHC	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2007	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2007	L 2.7 DOHC	ENGINE [IFB ECU]		√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	L 2.7 DOHC	ENGINE [EMS ECU]	√	√	√	√	√	0015
Europe/General	GRANDEUR/AZE RA(TG)	2007	L 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	GRANDEUR/AZE RA(TG)	2007	L 2.7 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	L 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	GRANDEUR/AZE RA(TG)	2007	L 2.7 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	L 2.7 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2007	L 2.7 DOHC	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2007	L 2.7 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	

Europe/General	GRANDEUR/AZE RA(TG)	2007	L 2.7 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	L 2.7 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	L 2.7 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2007	L 2.7 DOHC	CODE [Transmitter Code Saving]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 2.7 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 2.7 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 2.7 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 2.7 DOHC	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 2.7 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 2.7 DOHC	IFU [Interface Unit]	√	√	√		√	0032, 0070
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 2.7 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0136
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 2.7 DOHC	SMKCODE [Smart Key Code Saving]				√		0137
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 2.7 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 2.7 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 2.7 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 2.7 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 2.7 DOHC	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		

Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.3 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.3 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.3 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.3 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.3 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.3 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.3 DOHC	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.3 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.3 DOHC	IFU [Interface Unit]	√	√	√		√	0032, 0070
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.3 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0136
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.3 DOHC	SMKCODE [Smart Key Code Saving]				√		0137
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.3 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.3 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.3 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.3 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.3 DOHC	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.3 DOHC	CODE [Transmitter Code Saving]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	

Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.8 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.8 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.8 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.8 DOHC	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.8 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.8 DOHC	IFU [Interface Unit]	√	√	√		√	0032, 0070
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.8 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0136
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				√		0137
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.8 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.8 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.8 DOHC	OPTION [User Option]				√		
Europe/General	GRANDEUR/AZE RA(TG)	2006	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		
Europe/General	H-1 TRUCK(SR)	2009	D 2.5 TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-1 TRUCK(SR)	2009	D 2.5 TCI	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	H-1 TRUCK(SR)	2009	D 2.5 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	H-1 TRUCK(SR)	2009	D 2.5 TCI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1 TRUCK(SR)	2008	D 2.5 TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-1 TRUCK(SR)	2008	D 2.5 TCI	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	H-1 TRUCK(SR)	2008	D 2.5 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	H-1 TRUCK(SR)	2008	D 2.5 TCI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1 TRUCK(SR)	2007	D 2.5 TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-1 TRUCK(SR)	2007	D 2.5 TCI	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	H-1 TRUCK(SR)	2007	D 2.5 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	H-1 TRUCK(SR)	2007	D 2.5 TCI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1 TRUCK(SR)	2006	D 2.5 TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-1 TRUCK(SR)	2006	D 2.5 TCI	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	H-1 TRUCK(SR)	2006	D 2.5 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	H-1 TRUCK(SR)	2006	D 2.5 TCI	AIRBAG [Airbag Control]	√	√	√			

Europe/General	H-1 TRUCK(SR)	2005	D 2.5 TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-1 TRUCK(SR)	2005	D 2.5 TCI	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	H-1 TRUCK(SR)	2005	D 2.5 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	H-1 TRUCK(SR)	2005	D 2.5 TCI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1 TRUCK(SR)	2004	D 2.5 TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-1 TRUCK(SR)	2004	D 2.5 TCI	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	H-1 TRUCK(SR)	2004	D 2.5 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	H-1 TRUCK(SR)	2004	D 2.5 TCI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1 TRUCK(SR)	2003	D 2.5 TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-1 TRUCK(SR)	2003	D 2.5 TCI	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	H-1 TRUCK(SR)	2003	D 2.5 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	H-1 TRUCK(SR)	2003	D 2.5 TCI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1 TRUCK(SR)	2002	D 2.5 TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-1 TRUCK(SR)	2002	D 2.5 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	H-1 TRUCK(SR)	2002	D 2.5 TCI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1 TRUCK(SR)	2001	D 2.5 TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-1 TRUCK(SR)	2001	D 2.5 TCI	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	H-1 TRUCK(SR)	2001	D 2.5 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	H-1 TRUCK(SR)	2001	D 2.5 TCI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2009	D 2.5 TCI-4D56	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-1(A1)	2009	D 2.5 TCI-4D56	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2009	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2009	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2009	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2009	D 2.5 TCI-4D56	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	2009	D 2.5 TCI-A	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	H-1(A1)	2009	D 2.5 TCI-A	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2009	D 2.5 TCI-A	ABS [Anti - Lock Brake (2WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2009	D 2.5 TCI-A	ABS [Anti - Lock Brake (4WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2009	D 2.5 TCI-A	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2009	D 2.5 TCI-A	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	H-1(A1)	2009	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1(A1)	2009	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	H-1(A1)	2009	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	H-1(A1)	2009	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	H-1(A1)	2009	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2009	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2009	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2009	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2009	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	2008	D 2.5 TCI-4D56	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-1(A1)	2008	D 2.5 TCI-4D56	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2008	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2008	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2008	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	√	√	√			

Europe/General	H-1(A1)	2008	D 2.5 TCI-4D56	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	2008	D 2.5 TCI-A	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	H-1(A1)	2008	D 2.5 TCI-A	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2008	D 2.5 TCI-A	ABS [Anti - Lock Brake (2WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2008	D 2.5 TCI-A	ABS [Anti - Lock Brake (4WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2008	D 2.5 TCI-A	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2008	D 2.5 TCI-A	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	H-1(A1)	2008	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	H-1(A1)	2008	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	H-1(A1)	2008	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	H-1(A1)	2008	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2008	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2008	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2008	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2008	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	2007	D 2.5 TCI-4D56	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-1(A1)	2007	D 2.5 TCI-4D56	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2007	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2007	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2007	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2007	D 2.5 TCI-4D56	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	2007	D 2.5 TCI-A	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	H-1(A1)	2007	D 2.5 TCI-A	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2007	D 2.5 TCI-A	ABS [Anti - Lock Brake (2WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2007	D 2.5 TCI-A	ABS [Anti - Lock Brake (4WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2007	D 2.5 TCI-A	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2007	D 2.5 TCI-A	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	H-1(A1)	2007	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1(A1)	2007	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	H-1(A1)	2007	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	H-1(A1)	2007	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	H-1(A1)	2007	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2007	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2007	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2007	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2007	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	2006	D 2.5 TCI-4D56	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-1(A1)	2006	D 2.5 TCI-4D56	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2006	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2006	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2006	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2006	D 2.5 TCI-4D56	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	2006	D 2.5 TCI-A(WGT)	ENGINE [Engine Control (VGT)]	√	√	√	√	√	

Europe/General	H-1(A1)	2006	D 2.5 TCI-A(WGT)	ENGINE [Engine Control (WGT)]	√	√	√	√	√	
Europe/General	H-1(A1)	2006	D 2.5 TCI-A(WGT)	ABS [Anti - Lock Brake (2WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2006	D 2.5 TCI-A(WGT)	ABS [Anti - Lock Brake (4WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2006	D 2.5 TCI-A(WGT)	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2006	D 2.5 TCI-A(WGT)	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	H-1(A1)	2006	D 2.5 TCI-A(WGT)	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1(A1)	2006	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	H-1(A1)	2006	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	H-1(A1)	2006	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	H-1(A1)	2006	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2006	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2006	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2006	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2006	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	2005	D 2.5 TCI-4D56	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-1(A1)	2005	D 2.5 TCI-4D56	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2005	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2005	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2005	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2005	D 2.5 TCI-4D56	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	2005	D 2.5 TCI-A	ENGINE [Engine Control (VGT)]	√	√	√	√	√	
Europe/General	H-1(A1)	2005	D 2.5 TCI-A	ENGINE [Engine Control (WGT)]	√	√	√	√	√	
Europe/General	H-1(A1)	2005	D 2.5 TCI-A	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2005	D 2.5 TCI-A	ABS [Anti - Lock Brake (2WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2005	D 2.5 TCI-A	ABS [Anti - Lock Brake (4WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2005	D 2.5 TCI-A	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2005	D 2.5 TCI-A	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	H-1(A1)	2005	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1(A1)	2005	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	H-1(A1)	2005	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	H-1(A1)	2005	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	H-1(A1)	2005	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2005	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2005	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2005	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2004	D 2.5 TCI-4D56	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-1(A1)	2004	D 2.5 TCI-4D56	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2004	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2004	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2004	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	√	√	√			

Europe/General	H-1(A1)	2004	D 2.5 TCI-4D56	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	2004	D 2.5 TCI-A	ENGINE [Engine Control (VGT)]	√	√	√	√	√	
Europe/General	H-1(A1)	2004	D 2.5 TCI-A	ENGINE [Engine Control (WGT)]	√	√	√	√	√	
Europe/General	H-1(A1)	2004	D 2.5 TCI-A	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2004	D 2.5 TCI-A	ABS [Anti - Lock Brake (2WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2004	D 2.5 TCI-A	ABS [Anti - Lock Brake (4WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2004	D 2.5 TCI-A	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2004	D 2.5 TCI-A	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	H-1(A1)	2004	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1(A1)	2004	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	H-1(A1)	2004	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	H-1(A1)	2004	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	H-1(A1)	2004	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2004	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2004	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]	√	√	√	√	√	0064
Europe/General	H-1(A1)	2004	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2004	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	2003	D 2.5 TCI-4D56	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-1(A1)	2003	D 2.5 TCI-4D56	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2003	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]		√	√	√	√	0064
Europe/General	H-1(A1)	2003	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]		√	√	√	√	
Europe/General	H-1(A1)	2003	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2003	D 2.5 TCI-4D56	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	2003	D 2.5 TCI-A	ENGINE [Engine Control (VGT)]	√	√	√	√	√	
Europe/General	H-1(A1)	2003	D 2.5 TCI-A	ENGINE [Engine Control (WGT)]	√	√	√	√	√	
Europe/General	H-1(A1)	2003	D 2.5 TCI-A	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2003	D 2.5 TCI-A	ABS [Anti - Lock Brake (2WD)]		√	√	√	√	0064
Europe/General	H-1(A1)	2003	D 2.5 TCI-A	ABS [Anti - Lock Brake (4WD)]		√	√	√	√	
Europe/General	H-1(A1)	2003	D 2.5 TCI-A	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2003	D 2.5 TCI-A	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	H-1(A1)	2003	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1(A1)	2003	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	H-1(A1)	2003	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	H-1(A1)	2003	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	H-1(A1)	2003	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]		√	√	√	√	0064
Europe/General	H-1(A1)	2003	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]		√	√	√	√	
Europe/General	H-1(A1)	2003	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2003	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	2002	D 2.5 TCI-4D56	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-1(A1)	2002	D 2.5 TCI-4D56	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2002	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]		√	√	√	√	0064
Europe/General	H-1(A1)	2002	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]		√	√	√	√	
Europe/General	H-1(A1)	2002	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2002	D 2.5 TCI-4D56	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	2002	D 2.5 TCI-A	ENGINE [Engine Control (VGT)]	√	√	√	√	√	

Europe/General	H-1(A1)	2002	D 2.5 TCI-A	ENGINE [Engine Control (WGT)]	√	√	√	√	√	
Europe/General	H-1(A1)	2002	D 2.5 TCI-A	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2002	D 2.5 TCI-A	ABS [Anti - Lock Brake (2WD)]		√	√	√	√	0064
Europe/General	H-1(A1)	2002	D 2.5 TCI-A	ABS [Anti - Lock Brake (4WD)]		√	√	√	√	
Europe/General	H-1(A1)	2002	D 2.5 TCI-A	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2002	D 2.5 TCI-A	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	H-1(A1)	2002	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1(A1)	2002	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	H-1(A1)	2002	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	H-1(A1)	2002	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	H-1(A1)	2002	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2002	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]		√	√	√	√	0064
Europe/General	H-1(A1)	2002	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]		√	√	√	√	
Europe/General	H-1(A1)	2002	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2002	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	2001	D 2.5 TCI-4D56	ENGINE [Engine Control (TCI)]		√	√	√	√	
Europe/General	H-1(A1)	2001	D 2.5 TCI-4D56	ENGINE [Engine Control (T / C)]		√	√	√	√	
Europe/General	H-1(A1)	2001	D 2.5 TCI-4D56	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2001	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]		√	√	√	√	0064
Europe/General	H-1(A1)	2001	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]		√	√	√	√	
Europe/General	H-1(A1)	2001	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2001	D 2.5 TCI-4D56	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	2001	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2001	G 2.4 DOHC	ABS [Anti - Lock Brake (2WD)]		√	√	√	√	0064
Europe/General	H-1(A1)	2001	G 2.4 DOHC	ABS [Anti - Lock Brake (4WD)]		√	√	√	√	
Europe/General	H-1(A1)	2001	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2001	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	2001	G 2.4 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2001	G 2.4 SOHC	ABS [Anti - Lock Brake (4WD)]		√	√	√	√	
Europe/General	H-1(A1)	2001	G 2.4 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2001	G 2.4 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	2000	D 2.5 TCI-4D56	ENGINE [Engine Control (TCI)]		√	√	√	√	
Europe/General	H-1(A1)	2000	D 2.5 TCI-4D56	ENGINE [Engine Control (T / C)]		√	√	√	√	
Europe/General	H-1(A1)	2000	D 2.5 TCI-4D56	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2000	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]		√	√	√	√	0064
Europe/General	H-1(A1)	2000	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]		√	√	√	√	
Europe/General	H-1(A1)	2000	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2000	D 2.5 TCI-4D56	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	2000	G 2.4 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	2000	G 2.4 SOHC	ABS [Anti - Lock Brake (2WD)]		√	√	√	√	0064
Europe/General	H-1(A1)	2000	G 2.4 SOHC	ABS [Anti - Lock Brake (4WD)]		√	√	√	√	
Europe/General	H-1(A1)	2000	G 2.4 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	2000	G 2.4 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	1999	D 2.5 TCI-4D56	ENGINE [Engine Control (TCI)]		√	√	√	√	
Europe/General	H-1(A1)	1999	D 2.5 TCI-4D56	ENGINE [Engine Control (T / C)]		√	√	√	√	

Europe/General	H-1(A1)	1999	D 2.5 TCI-4D56	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	1999	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]		√	√	√	√	0064
Europe/General	H-1(A1)	1999	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]		√	√	√	√	
Europe/General	H-1(A1)	1999	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	1999	D 2.5 TCI-4D56	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	1999	G 2.4 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	1999	G 2.4 SOHC	ABS [Anti - Lock Brake (2WD)]		√	√	√	√	0064
Europe/General	H-1(A1)	1999	G 2.4 SOHC	ABS [Anti - Lock Brake (4WD)]		√	√	√	√	
Europe/General	H-1(A1)	1999	G 2.4 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	1999	G 2.4 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	1998	D 2.5 TCI-4D56	ENGINE [Engine Control (TCI)]		√	√	√	√	
Europe/General	H-1(A1)	1998	D 2.5 TCI-4D56	ENGINE [Engine Control (T / C)]		√	√	√	√	
Europe/General	H-1(A1)	1998	D 2.5 TCI-4D56	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	1998	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]		√	√	√	√	0064
Europe/General	H-1(A1)	1998	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]		√	√	√	√	
Europe/General	H-1(A1)	1998	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	1998	D 2.5 TCI-4D56	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	1998	G 2.4 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	1998	G 2.4 SOHC	ABS [Anti - Lock Brake (2WD)]		√	√	√	√	0064
Europe/General	H-1(A1)	1998	G 2.4 SOHC	ABS [Anti - Lock Brake (4WD)]		√	√	√	√	
Europe/General	H-1(A1)	1998	G 2.4 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	1998	G 2.4 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	1997	D 2.5 TCI-4D56	ENGINE [Engine Control (T / C)]		√	√	√	√	
Europe/General	H-1(A1)	1997	D 2.5 TCI-4D56	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	1997	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (2WD)]		√	√	√	√	0064
Europe/General	H-1(A1)	1997	D 2.5 TCI-4D56	ABS [Anti - Lock Brake (4WD)]		√	√	√	√	
Europe/General	H-1(A1)	1997	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	1997	D 2.5 TCI-4D56	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1(A1)	1997	G 2.4 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1(A1)	1997	G 2.4 SOHC	ABS [Anti - Lock Brake (2WD)]		√	√	√	√	0064
Europe/General	H-1(A1)	1997	G 2.4 SOHC	ABS [Anti - Lock Brake (4WD)]		√	√	√	√	
Europe/General	H-1(A1)	1997	G 2.4 SOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1(A1)	1997	G 2.4 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-4D56	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-4D56	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-4D56	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-4D56	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-4D56	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-4D56	TPMS [Tire Pressure Monitoring]	√	√	√		√	

Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-4D56	IMMO [Immobilizer]		√	√	√		0091, 0102, 0112, 0147
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-4D56	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-4D56	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-4D56	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-A2(Euro-5)	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-A2(Euro-5)	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0143
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-A2(Euro-5)	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-A2(Euro-5)	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-A2(Euro-5)	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-A2(Euro-5)	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-A2(Euro-5)	IMMO [Immobilizer]				√		
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-A2(Euro-5)	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-A2(Euro-5)	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-A2(Euro-5)	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-A2(Euro-6)	ENGINE [Engine Control]	√	√	√	√		0053, 0116, 0125, 0158
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-A2(Euro-6)	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0143
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-A2(Euro-6)	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-A2(Euro-6)	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-A2(Euro-6)	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-A2(Euro-6)	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-A2(Euro-6)	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-A2(Euro-6)	IMMO [Immobilizer]				√		
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-A2(Euro-6)	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-A2(Euro-6)	BHEATER [Fuel Fired Heater]		√	√	√	√	

Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-A2(Euro-6)	SCR [Selective Catalytic Reduction]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	D 2.5 TCI-A2(Euro-6)	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	G 2.4 DOHC	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	G 2.4 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	G 2.4 DOHC	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	G 2.4 DOHC	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	G 2.4 DOHC	IMMO [Immobilizer]				√		
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	G 2.4 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2018	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-4D56	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-4D56	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-4D56	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-4D56	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-4D56	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-4D56	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-4D56	IMMO [Immobilizer]		√	√	√		0091, 0102, 0112, 0147
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-4D56	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-4D56	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-4D56	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-A2(Euro-5)	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-A2(Euro-5)	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0143
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-A2(Euro-5)	ABSESP [ABS / ESP]	√	√	√	√	√	0064

Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-A2(Euro-5)	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-A2(Euro-5)	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-A2(Euro-5)	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-A2(Euro-5)	IMMO [Immobilizer]				√		
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-A2(Euro-5)	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-A2(Euro-5)	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-A2(Euro-5)	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-A2(Euro-6)	ENGINE [Engine Control]	√	√	√	√		0053, 0116, 0125, 0158
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-A2(Euro-6)	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0143
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-A2(Euro-6)	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-A2(Euro-6)	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-A2(Euro-6)	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-A2(Euro-6)	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-A2(Euro-6)	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-A2(Euro-6)	IMMO [Immobilizer]				√		
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-A2(Euro-6)	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-A2(Euro-6)	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-A2(Euro-6)	SCR [Selective Catalytic Reduction]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	D 2.5 TCI-A2(Euro-6)	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	G 2.4 DOHC	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	G 2.4 DOHC	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	G 2.4 DOHC	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	H-1/iMAX/iLOAD(TQ)	2017	G 2.4 DOHC	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	G 2.4 DOHC	IMMO [Immobilizer]				√		
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	G 2.4 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2017	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-4D56	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-4D56	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-4D56	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-4D56	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-4D56	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-4D56	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-4D56	IMMO [Immobilizer]		√	√	√		0091, 0102, 0112, 0147
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-4D56	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-4D56	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-4D56	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-A2(Euro-5)	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-A2(Euro-5)	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0143
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-A2(Euro-5)	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-A2(Euro-5)	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-A2(Euro-5)	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-A2(Euro-5)	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-A2(Euro-5)	IMMO [Immobilizer]				√		
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-A2(Euro-5)	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-A2(Euro-5)	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-A2(Euro-5)	CODE [Transmitter Code Saving]				√		0026

Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-A2(Euro-6)	ENGINE [Engine Control]	√	√	√	√		0053, 0116, 0125, 0158
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-A2(Euro-6)	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0143
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-A2(Euro-6)	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-A2(Euro-6)	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-A2(Euro-6)	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-A2(Euro-6)	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-A2(Euro-6)	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-A2(Euro-6)	IMMO [Immobilizer]				√		
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-A2(Euro-6)	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-A2(Euro-6)	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-A2(Euro-6)	SCR [Selective Catalytic Reduction]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	D 2.5 TCI-A2(Euro-6)	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	G 2.4 DOHC	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	G 2.4 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	G 2.4 DOHC	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	G 2.4 DOHC	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	G 2.4 DOHC	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	G 2.4 DOHC	IMMO [Immobilizer]				√		
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	G 2.4 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2016	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-4D56	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-4D56	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-4D56	ABSESP [ABS / ESP]	√	√	√	√	√	0064

Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-4D56	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-4D56	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-4D56	IMMO [Immobilizer]		√	√	√		0091, 0102, 0112, 0147
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-4D56	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-4D56	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-4D56	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-A2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-A2	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0143
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-A2	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-A2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-A2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-A2	IMMO [Immobilizer]				√		
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-A2	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-A2	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	D 2.5 TCI-A2	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0015, 0073, 0013, 0120, 0116, 0158
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0015, 0013, 0120, 0116, 0158
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0015, 0013, 0120, 0116, 0158
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	TPMS [Tire Pressure Monitoring]	√	√	√		√	

Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	IMMO [Immobilizer]				√		
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2015	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-4D56	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-4D56	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-4D56	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-4D56	IMMO [Immobilizer]		√	√	√		0091, 0102, 0112, 0147
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-4D56	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-4D56	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-4D56	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-A2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-A2	AT [Automatic Transaxle]	√	√	√	√	√	0143, 0122
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-A2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-A2	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-A2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-A2	IMMO [Immobilizer]				√		
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-A2	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-A2	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	D 2.5 TCI-A2	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0015, 0073, 0013, 0120, 0158
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122

Europe/General	H-1/iMAX/iLOAD(TQ)	2014	G 2.4 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	G 2.4 DOHC	IMMO [Immobilizer]				√		
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	G 2.4 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2014	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-4D56	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-4D56	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-4D56	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-4D56	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-4D56	IMMO [Immobilizer]		√	√	√		0091, 0102, 0112, 0147
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-4D56	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-4D56	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-4D56	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-A2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-A2	AT [Automatic Transaxle]	√	√	√	√	√	0143, 0122
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-A2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-A2	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-A2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-A2	IMMO [Immobilizer]				√		
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-A2	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	D 2.5 TCI-A2	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0015, 0073, 0013, 0120, 0158
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158

Europe/General	H-1/iMAX/iLOAD(TQ)	2013	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	G 2.4 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	G 2.4 DOHC	IMMO [Immobilizer]				√		
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	G 2.4 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2013	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-4D56	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-4D56	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-4D56	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-4D56	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-4D56	IMMO [Immobilizer]		√	√	√		0091, 0102, 0112, 0147
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-4D56	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-4D56	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-4D56	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A	AT [Automatic Transaxle]	√	√	√	√	√	0143, 0122
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		√	√	√	√	

Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A2	AT [Automatic Transaxle]	√	√	√	√	√	0143, 0122
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A2	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A2	IMMO [Immobilizer]				√		
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A2	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A2	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	D 2.5 TCI-A2	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0015, 0073, 0013, 0120, 0158
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	G 2.4 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	G 2.4 DOHC	IMMO [Immobilizer]				√		
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	G 2.4 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2012	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-4D56	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-4D56	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-4D56	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-4D56	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-4D56	IMMO [Immobilizer]		√	√	√		0091, 0102, 0112, 0147
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-4D56	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-4D56	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-4D56	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A	AT [Automatic Transaxle]	√	√	√	√	√	0143, 0122
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A2	AT [Automatic Transaxle]	√	√	√	√	√	0143, 0122
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A2	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A2	IMMO [Immobilizer]				√		
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A2	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A2	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	D 2.5 TCI-A2	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	

Europe/General	H-1/iMAX/iLOAD(TQ)	2011	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	G 2.4 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	G 2.4 DOHC	IMMO [Immobilizer]				√		
Europe/General	H-1/iMAX/iLOAD(TQ)	2011	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-4D56	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-4D56	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-4D56	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-4D56	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-4D56	IMMO [Immobilizer]		√	√	√		0091, 0102, 0112, 0147
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-4D56	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-4D56	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-4D56	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-A	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-A	AT [Automatic Transaxle]	√	√	√	√	√	0143, 0122
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-A	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-A	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-A	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-A	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-A	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	D 2.5 TCI-A	CODE [Transmitter Code Saving]				√		0026

Europe/General	H-1/iMAX/iLOAD(TQ)	2010	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	G 2.4 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	G 2.4 DOHC	IMMO [Immobilizer]				√		
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	G 2.4 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2010	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-4D56	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-4D56	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-4D56	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-4D56	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-4D56	IMMO [Immobilizer]		√	√	√		0091, 0102, 0112, 0147
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-4D56	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-4D56	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-4D56	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-A	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-A	AT [Automatic Transaxle]	√	√	√	√	√	0143, 0122
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-A	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-A	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-A	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-A	BCM [Body Control Module]	√			√	√	

Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	D 2.5 TCI-A	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	G 2.4 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	G 2.4 DOHC	IMMO [Immobilizer]				√		
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	G 2.4 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2009	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-4D56	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-4D56	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-4D56	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-4D56	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-4D56	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-4D56	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-4D56	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-4D56	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-A	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-A	AT [Automatic Transaxle]	√	√	√	√	√	0143, 0122
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-A	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-A	AIRBAG [Airbag Control]	√	√	√			

Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-A	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-A	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-A	BCM [Body Control Module]	√			√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-A	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	D 2.5 TCI-A	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	G 2.4 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	G 2.4 DOHC	IMMO [Immobilizer]				√		
Europe/General	H-1/iMAX/iLOAD(TQ)	2008	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	H-100 TRUCK(AU)	2003	D 2.5 TC/TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-100 TRUCK(AU)	2002	D 2.5 TC/TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-100 TRUCK(AU)	2001	D 2.5 TC/TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-100 TRUCK(AU)	2000	D 2.5 TC/TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-100 TRUCK(AU)	1999	D 2.5 TC/TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-100 TRUCK(AU)	1998	D 2.5 TC/TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-100 TRUCK(AU)	1997	D 2.5 TC/TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-100 TRUCK(AU)	1996	D 2.5 TC/TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	H-100 TRUCK(HR)	2018	D 2.5 TCI-A2	ENGINE [Engine Control]	√	√	√	√	√	0116, 0053, 0060, 0158
Europe/General	H-100 TRUCK(HR)	2018	D 2.5 TCI-A2	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0143
Europe/General	H-100 TRUCK(HR)	2018	D 2.5 TCI-A2	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	H-100 TRUCK(HR)	2018	D 2.5 TCI-A2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	H-100 TRUCK(HR)	2018	D 2.5 TCI-A2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	H-100 TRUCK(HR)	2018	D 2.5 TCI-A2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	H-100 TRUCK(HR)	2018	D 2.5 TCI-A2	IMMO [Immobilizer]				√		
Europe/General	H-100 TRUCK(HR)	2017	D 2.5 TCI-A2	ENGINE [Engine Control]	√	√	√	√	√	0060, 0053, 0060, 0116, 0158
Europe/General	H-100 TRUCK(HR)	2017	D 2.5 TCI-A2	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0143
Europe/General	H-100 TRUCK(HR)	2017	D 2.5 TCI-A2	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	H-100 TRUCK(HR)	2017	D 2.5 TCI-A2	AIRBAG [Airbag (Event #2)]	√	√	√			

Europe/General	H350(EU)	2018	D 2.5 TCI-A2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	H350(EU)	2018	D 2.5 TCI-A2	SCR [Selective Catalytic Reductio]	√	√	√	√	√	0153
Europe/General	H350(EU)	2017	D 2.5 TCI-A2	ENGINE [Engine Control]	√	√	√	√	√	0053, 0078
Europe/General	H350(EU)	2017	D 2.5 TCI-A2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	H350(EU)	2017	D 2.5 TCI-A2	SCR [Selective Catalytic Reductio]	√	√	√	√	√	0153
Europe/General	H350(EU)	2016	D 2.5 TCI-A2	ENGINE [Engine Control]	√	√	√	√	√	0053, 0078
Europe/General	H350(EU)	2016	D 2.5 TCI-A2	SCR [Selective Catalytic Reductio]	√	√	√	√	√	0153
Europe/General	H350(EU)	2015	D 2.5 TCI-A2	ENGINE [Engine Control]	√	√	√	√	√	0053, 0078
Europe/General	H350(EU)	2015	D 2.5 TCI-A2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	H350(EU)	2015	D 2.5 TCI-A2	SCR [Selective Catalytic Reductio]	√	√	√	√	√	0153
Europe/General	HB20(HB)	2018	F 1.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	HB20(HB)	2018	F 1.0 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	HB20(HB)	2018	F 1.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	HB20(HB)	2018	F 1.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	HB20(HB)	2018	F 1.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	HB20(HB)	2018	F 1.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	HB20(HB)	2018	F 1.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	HB20(HB)	2018	F 1.0 MPI	CLU [Cluster Module]	√			√	√	
Europe/General	HB20(HB)	2018	F 1.0 MPI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	HB20(HB)	2018	F 1.0 MPI	TMU [Telematics Unit]	√	√	√			
Europe/General	HB20(HB)	2018	F 1.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	HB20(HB)	2018	F 1.0 T-MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	HB20(HB)	2018	F 1.0 T-MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	HB20(HB)	2018	F 1.0 T-MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	HB20(HB)	2018	F 1.0 T-MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	HB20(HB)	2018	F 1.0 T-MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	HB20(HB)	2018	F 1.0 T-MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	HB20(HB)	2018	F 1.0 T-MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	HB20(HB)	2018	F 1.0 T-MPI	CLU [Cluster Module]	√			√	√	
Europe/General	HB20(HB)	2018	F 1.0 T-MPI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	HB20(HB)	2018	F 1.0 T-MPI	TMU [Telematics Unit]	√	√	√			
Europe/General	HB20(HB)	2018	F 1.0 T-MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	HB20(HB)	2018	F 1.6 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	HB20(HB)	2018	F 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	HB20(HB)	2018	F 1.6 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	HB20(HB)	2018	F 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	HB20(HB)	2018	F 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	HB20(HB)	2018	F 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	HB20(HB)	2018	F 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	HB20(HB)	2018	F 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	HB20(HB)	2018	F 1.6 MPI	CLU [Cluster Module]	√			√	√	
Europe/General	HB20(HB)	2018	F 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	HB20(HB)	2018	F 1.6 MPI	TMU [Telematics Unit]	√	√	√			
Europe/General	HB20(HB)	2018	F 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	HB20(HB)	2017	F 1.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158

Europe/General	HB20(HB)	2017	F 1.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	HB20(HB)	2017	F 1.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	HB20(HB)	2017	F 1.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	HB20(HB)	2017	F 1.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	HB20(HB)	2017	F 1.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	HB20(HB)	2017	F 1.0 MPI	CLU [Cluster Module]	√			√	√	
Europe/General	HB20(HB)	2017	F 1.0 MPI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	HB20(HB)	2017	F 1.0 MPI	TMU [Telematics Unit]	√	√	√			
Europe/General	HB20(HB)	2017	F 1.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	HB20(HB)	2017	F 1.0 T-MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	HB20(HB)	2017	F 1.0 T-MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	HB20(HB)	2017	F 1.0 T-MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	HB20(HB)	2017	F 1.0 T-MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	HB20(HB)	2017	F 1.0 T-MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	HB20(HB)	2017	F 1.0 T-MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	HB20(HB)	2017	F 1.0 T-MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	HB20(HB)	2017	F 1.0 T-MPI	CLU [Cluster Module]	√			√	√	
Europe/General	HB20(HB)	2017	F 1.0 T-MPI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	HB20(HB)	2017	F 1.0 T-MPI	TMU [Telematics Unit]	√	√	√			
Europe/General	HB20(HB)	2017	F 1.0 T-MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	HB20(HB)	2017	F 1.6 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	HB20(HB)	2017	F 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	HB20(HB)	2017	F 1.6 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	HB20(HB)	2017	F 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	HB20(HB)	2017	F 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	HB20(HB)	2017	F 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	HB20(HB)	2017	F 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	HB20(HB)	2017	F 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	HB20(HB)	2017	F 1.6 MPI	CLU [Cluster Module]	√			√	√	
Europe/General	HB20(HB)	2017	F 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	HB20(HB)	2017	F 1.6 MPI	TMU [Telematics Unit]	√	√	√			
Europe/General	HB20(HB)	2017	F 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	HB20(HB)	2016	F 1.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	HB20(HB)	2016	F 1.0 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	HB20(HB)	2016	F 1.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	HB20(HB)	2016	F 1.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	HB20(HB)	2016	F 1.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	HB20(HB)	2016	F 1.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	HB20(HB)	2016	F 1.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	HB20(HB)	2016	F 1.0 MPI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	HB20(HB)	2016	F 1.0 MPI	TMU [Telematics Unit]	√	√	√			
Europe/General	HB20(HB)	2016	F 1.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	HB20(HB)	2016	F 1.0 T-MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	HB20(HB)	2016	F 1.0 T-MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	HB20(HB)	2016	F 1.0 T-MPI	AIRBAG [Airbag (Event #2)]	√	√	√			

Europe/General	HB20(HB)	2016	F 1.0 T-MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	HB20(HB)	2016	F 1.0 T-MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	HB20(HB)	2016	F 1.0 T-MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	HB20(HB)	2016	F 1.0 T-MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	HB20(HB)	2016	F 1.0 T-MPI	CLU [Cluster Module]	√			√	√	
Europe/General	HB20(HB)	2016	F 1.0 T-MPI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	HB20(HB)	2016	F 1.0 T-MPI	TMU [Telematics Unit]	√	√	√			
Europe/General	HB20(HB)	2016	F 1.0 T-MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	HB20(HB)	2016	F 1.6 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	HB20(HB)	2016	F 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	HB20(HB)	2016	F 1.6 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	HB20(HB)	2016	F 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	HB20(HB)	2016	F 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	HB20(HB)	2016	F 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	HB20(HB)	2016	F 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	HB20(HB)	2016	F 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	HB20(HB)	2016	F 1.6 MPI	CLU [Cluster Module]	√			√	√	
Europe/General	HB20(HB)	2016	F 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	HB20(HB)	2016	F 1.6 MPI	TMU [Telematics Unit]	√	√	√			
Europe/General	HB20(HB)	2016	F 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	HB20(HB)	2015	F 1.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	HB20(HB)	2015	F 1.0 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	HB20(HB)	2015	F 1.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	HB20(HB)	2015	F 1.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	HB20(HB)	2015	F 1.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	HB20(HB)	2015	F 1.0 MPI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	HB20(HB)	2015	F 1.0 MPI	TMU [Telematics Unit]	√	√	√			
Europe/General	HB20(HB)	2015	F 1.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	HB20(HB)	2015	F 1.6 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	HB20(HB)	2015	F 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	HB20(HB)	2015	F 1.6 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	HB20(HB)	2015	F 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	HB20(HB)	2015	F 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	HB20(HB)	2015	F 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	HB20(HB)	2015	F 1.6 MPI	TMU [Telematics Unit]	√	√	√			
Europe/General	HB20(HB)	2015	F 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	HB20(HB)	2014	F 1.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	HB20(HB)	2014	F 1.0 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	HB20(HB)	2014	F 1.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	HB20(HB)	2014	F 1.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	HB20(HB)	2014	F 1.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	HB20(HB)	2014	F 1.0 MPI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	HB20(HB)	2014	F 1.0 MPI	TMU [Telematics Unit]	√	√	√			
Europe/General	HB20(HB)	2014	F 1.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	HB20(HB)	2014	F 1.6 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158

Europe/General	HB20(HB)	2014	F 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	HB20(HB)	2014	F 1.6 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	HB20(HB)	2014	F 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	HB20(HB)	2014	F 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	HB20(HB)	2014	F 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	HB20(HB)	2014	F 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	HB20(HB)	2014	F 1.6 MPI	TMU [Telematics Unit]	√	√	√			
Europe/General	HB20(HB)	2014	F 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	HB20(HB)	2013	F 1.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	HB20(HB)	2013	F 1.0 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	HB20(HB)	2013	F 1.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	HB20(HB)	2013	F 1.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	HB20(HB)	2013	F 1.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	HB20(HB)	2013	F 1.0 MPI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	HB20(HB)	2013	F 1.0 MPI	TMU [Telematics Unit]	√	√	√			
Europe/General	HB20(HB)	2013	F 1.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	HB20(HB)	2013	F 1.6 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	HB20(HB)	2013	F 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	HB20(HB)	2013	F 1.6 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	HB20(HB)	2013	F 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	HB20(HB)	2013	F 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	HB20(HB)	2013	F 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	HB20(HB)	2013	F 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	HB20(HB)	2013	F 1.6 MPI	TMU [Telematics Unit]	√	√	√			
Europe/General	HB20(HB)	2013	F 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	HD COUPE(GK)	2008	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	HD COUPE(GK)	2008	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	HD COUPE(GK)	2008	G 1.6 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	HD COUPE(GK)	2008	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	HD COUPE(GK)	2008	G 1.6 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	HD COUPE(GK)	2008	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	HD COUPE(GK)	2008	G 1.6 DOHC	BCM [Body Control Module]				√	√	
Europe/General	HD COUPE(GK)	2008	G 1.6 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0015, 0073, 0120
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0120, 0015, 0120
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0120, 0015, 0120
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055, 0120
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	BCM [Body Control Module]				√	√	
Europe/General	HD COUPE(GK)	2008	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		√	√	√	√	0015, 0055, 0116, 0117, 0120

Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0120
Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	IMMO [Immobilizer]		√		√		0102
Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	BCM [Body Control Module]				√	√	
Europe/General	HD COUPE(GK)	2008	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	HD COUPE(GK)	2007	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	HD COUPE(GK)	2007	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	HD COUPE(GK)	2007	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	HD COUPE(GK)	2007	G 1.6 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	HD COUPE(GK)	2007	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	HD COUPE(GK)	2007	G 1.6 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	HD COUPE(GK)	2007	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	HD COUPE(GK)	2007	G 1.6 DOHC	BCM [Body Control Module]				√	√	
Europe/General	HD COUPE(GK)	2007	G 1.6 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0015, 0073, 0073, 0120
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120, 0015, 0120
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055, 0120
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	BCM [Body Control Module]				√	√	
Europe/General	HD COUPE(GK)	2007	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		√	√	√	√	0015, 0055, 0116, 0117, 0120
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0120
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	IMMO [Immobilizer]		√		√		0102
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	BCM [Body Control Module]				√	√	
Europe/General	HD COUPE(GK)	2007	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	HD COUPE(GK)	2006	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	HD COUPE(GK)	2006	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	HD COUPE(GK)	2006	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	HD COUPE(GK)	2006	G 1.6 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	HD COUPE(GK)	2006	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			

Europe/General	HD COUPE(GK)	2006	G 1.6 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	HD COUPE(GK)	2006	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	HD COUPE(GK)	2006	G 1.6 DOHC	BCM [Body Control Module]				√	√	
Europe/General	HD COUPE(GK)	2006	G 1.6 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0116, 0117, 0120
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	BCM [Body Control Module]				√	√	
Europe/General	HD COUPE(GK)	2006	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	HD COUPE(GK)	2006	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0120
Europe/General	HD COUPE(GK)	2006	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	HD COUPE(GK)	2006	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	HD COUPE(GK)	2006	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	HD COUPE(GK)	2006	G 2.7 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	HD COUPE(GK)	2006	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	HD COUPE(GK)	2006	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	HD COUPE(GK)	2006	G 2.7 DOHC	IMMO [Immobilizer]			√	√		0102
Europe/General	HD COUPE(GK)	2006	G 2.7 DOHC	BCM [Body Control Module]				√	√	
Europe/General	HD COUPE(GK)	2006	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	HD COUPE(GK)	2005	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	HD COUPE(GK)	2005	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	HD COUPE(GK)	2005	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	HD COUPE(GK)	2005	G 1.6 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	HD COUPE(GK)	2005	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	HD COUPE(GK)	2005	G 1.6 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	HD COUPE(GK)	2005	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	HD COUPE(GK)	2005	G 1.6 DOHC	BCM [Body Control Module]				√	√	
Europe/General	HD COUPE(GK)	2005	G 1.6 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0116, 0117, 0120
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	BCM [Body Control Module]				√	√	
Europe/General	HD COUPE(GK)	2005	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026

Europe/General	HD COUPE(GK)	2005	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		√	√	√	√	0015, 0055, 0116, 0117, 0120
Europe/General	HD COUPE(GK)	2005	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0120
Europe/General	HD COUPE(GK)	2005	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	HD COUPE(GK)	2005	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	HD COUPE(GK)	2005	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	HD COUPE(GK)	2005	G 2.7 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	HD COUPE(GK)	2005	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	HD COUPE(GK)	2005	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	HD COUPE(GK)	2005	G 2.7 DOHC	IMMO [Immobilizer]		√		√		0102
Europe/General	HD COUPE(GK)	2005	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	HD COUPE(GK)	2004	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	HD COUPE(GK)	2004	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	HD COUPE(GK)	2004	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	HD COUPE(GK)	2004	G 1.6 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	HD COUPE(GK)	2004	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	HD COUPE(GK)	2004	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	HD COUPE(GK)	2004	G 1.6 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	HD COUPE(GK)	2004	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	HD COUPE(GK)	2004	G 1.6 DOHC	BCM [Body Control Module]				√	√	
Europe/General	HD COUPE(GK)	2004	G 1.6 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0120
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	BCM [Body Control Module]				√	√	
Europe/General	HD COUPE(GK)	2004	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0120
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		√	√	√	√	0015, 0055, 0117, 0120
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	IMMO [Immobilizer]		√		√		0102
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	BCM [Body Control Module]				√	√	
Europe/General	HD COUPE(GK)	2004	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	HD COUPE(GK)	2003	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		

Europe/General	HD COUPE(GK)	2003	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	HD COUPE(GK)	2003	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	HD COUPE(GK)	2003	G 1.6 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	HD COUPE(GK)	2003	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	HD COUPE(GK)	2003	G 1.6 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	HD COUPE(GK)	2003	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	HD COUPE(GK)	2003	G 1.6 DOHC	BCM [Body Control Module]				√	√	
Europe/General	HD COUPE(GK)	2003	G 1.6 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	ENGINE [Unleaded (+CVVT) OBD - II]	√	√	√	√	√	0015, 0055, 0120
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	ENGINE [Unleaded (+CVVT) EOBD]	√	√	√	√	√	0015, 0120
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	ENGINE [Unleaded (+CVVT) GEN]	√	√	√	√	√	0015, 0120
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	ENGINE [Unleaded (- CVVT) GEN]	√	√	√	√	√	0015, 0120
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	ENGINE [Unleaded (- CVVT) EOBD]	√	√	√	√	√	0015, 0120
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	ENGINE [Unleaded (- CVVT) OBD - II]	√	√	√	√	√	0015, 0055, 0117, 0120
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	BCM [Body Control Module]				√	√	
Europe/General	HD COUPE(GK)	2003	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	ENGINE [Unleaded (Zr O2S) EOBD]	√	√	√	√	√	0015, 0116, 0120
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	ENGINE [Unleaded (Zr O2S) OBD - II]		√	√	√	√	0015, 0055, 0117, 0120
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	ENGINE [Unleaded (Ti O2S) EOBD]	√	√	√	√	√	0015, 0120
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	ENGINE [Unleaded (Ti O2S) OBD - II]	√	√	√	√	√	0117, 0015, 0120, 0055
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	IMMO [Immobilizer]		√		√		0102
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	BCM [Body Control Module]				√	√	
Europe/General	HD COUPE(GK)	2003	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	HD COUPE(GK)	2002	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	HD COUPE(GK)	2002	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	HD COUPE(GK)	2002	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	HD COUPE(GK)	2002	G 1.6 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	HD COUPE(GK)	2002	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	HD COUPE(GK)	2002	G 1.6 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	HD COUPE(GK)	2002	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	HD COUPE(GK)	2002	G 1.6 DOHC	BCM [Body Control Module]				√	√	

Europe/General	HD COUPE(GK)	2002	G 1.6 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0117, 0120
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	BCM [Body Control Module]				√	√	
Europe/General	HD COUPE(GK)	2002	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0117, 0015, 0120, 0055
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	IMMO [Immobilizer]		√		√		0102
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	BCM [Body Control Module]				√	√	
Europe/General	HD COUPE(GK)	2002	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	HD COUPE(RC)	2001	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	HD COUPE(RC)	2001	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	HD COUPE(RC)	2001	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	HD COUPE(RC)	2001	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	HD COUPE(RC)	2001	G 1.6 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	HD COUPE(RC)	2001	G 1.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	HD COUPE(RC)	2001	G 1.8 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	HD COUPE(RC)	2001	G 1.8 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	HD COUPE(RC)	2001	G 1.8 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	HD COUPE(RC)	2001	G 1.8 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	HD COUPE(RC)	2001	G 2.0 DOHC	ENGINE [Unleaded OBD - II]		√	√	√		
Europe/General	HD COUPE(RC)	2001	G 2.0 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	HD COUPE(RC)	2001	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	HD COUPE(RC)	2001	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	HD COUPE(RC)	2001	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	HD COUPE(RC)	2000	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	HD COUPE(RC)	2000	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	HD COUPE(RC)	2000	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	HD COUPE(RC)	2000	G 1.6 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	HD COUPE(RC)	2000	G 1.8 DOHC	AT [Automatic Transaxle]		√	√	√	√	

Europe/General	HD COUPE(RC)	1997	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	HD COUPE(RC)	1997	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	HD COUPE(RC)	1997	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	i10(IA)	2018	B 1.0 LPGI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i10(IA)	2018	B 1.0 LPGI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	i10(IA)	2018	B 1.0 LPGI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i10(IA)	2018	B 1.0 LPGI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i10(IA)	2018	B 1.0 LPGI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i10(IA)	2018	B 1.0 LPGI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(IA)	2018	B 1.0 LPGI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i10(IA)	2018	B 1.0 LPGI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	i10(IA)	2018	B 1.0 LPGI	IMMO [Immobilizer]				√		
Europe/General	i10(IA)	2018	B 1.0 LPGI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i10(IA)	2018	B 1.0 LPGI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i10(IA)	2018	B 1.0 LPGI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i10(IA)	2018	B 1.0 LPGI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i10(IA)	2018	B 1.0 LPGI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i10(IA)	2018	G 1.0 MPI-KWP	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i10(IA)	2018	G 1.0 MPI-KWP	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(IA)	2018	G 1.0 MPI-KWP	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	i10(IA)	2018	G 1.0 MPI-KWP	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i10(IA)	2018	G 1.0 MPI-KWP	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i10(IA)	2018	G 1.0 MPI-KWP	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(IA)	2018	G 1.0 MPI-KWP	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i10(IA)	2018	G 1.0 MPI-KWP	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	i10(IA)	2018	G 1.0 MPI-KWP	IMMO [Immobilizer]				√		
Europe/General	i10(IA)	2018	G 1.0 MPI-KWP	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i10(IA)	2018	G 1.0 MPI-KWP	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i10(IA)	2018	G 1.0 MPI-KWP	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i10(IA)	2018	G 1.0 MPI-KWP	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i10(IA)	2018	G 1.0 MPI-KWP	CODE [Transmitter Code Saving]				√		0026
Europe/General	i10(IA)	2018	G 1.0 MPI-UDS	ENGINE [Engine Control]	√	√	√	√		0015, 0072, 0116, 0158
Europe/General	i10(IA)	2018	G 1.0 MPI-UDS	AT [Automatic Transaxle]	√	√	√	√	√	0122

Europe/General	i10(IA)	2018	G 1.0 MPI-UDS	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	i10(IA)	2018	G 1.0 MPI-UDS	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i10(IA)	2018	G 1.0 MPI-UDS	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i10(IA)	2018	G 1.0 MPI-UDS	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i10(IA)	2018	G 1.0 MPI-UDS	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(IA)	2018	G 1.0 MPI-UDS	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i10(IA)	2018	G 1.0 MPI-UDS	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	i10(IA)	2018	G 1.0 MPI-UDS	IMMO [Immobilizer]				√		
Europe/General	i10(IA)	2018	G 1.0 MPI-UDS	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i10(IA)	2018	G 1.0 MPI-UDS	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i10(IA)	2018	G 1.0 MPI-UDS	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i10(IA)	2018	G 1.0 MPI-UDS	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i10(IA)	2018	G 1.0 MPI-UDS	CODE [Transmitter Code Saving]				√		0026
Europe/General	i10(IA)	2018	G 1.2 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i10(IA)	2018	G 1.2 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(IA)	2018	G 1.2 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	i10(IA)	2018	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i10(IA)	2018	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i10(IA)	2018	G 1.2 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(IA)	2018	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i10(IA)	2018	G 1.2 MPI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	i10(IA)	2018	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	i10(IA)	2018	G 1.2 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i10(IA)	2018	G 1.2 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i10(IA)	2018	G 1.2 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i10(IA)	2018	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i10(IA)	2018	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i10(IA)	2017	B 1.0 LPGI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i10(IA)	2017	B 1.0 LPGI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	i10(IA)	2017	B 1.0 LPGI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i10(IA)	2017	B 1.0 LPGI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i10(IA)	2017	B 1.0 LPGI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i10(IA)	2017	B 1.0 LPGI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(IA)	2017	B 1.0 LPGI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i10(IA)	2017	B 1.0 LPGI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	i10(IA)	2017	B 1.0 LPGI	IMMO [Immobilizer]				√		
Europe/General	i10(IA)	2017	B 1.0 LPGI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i10(IA)	2017	B 1.0 LPGI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i10(IA)	2017	B 1.0 LPGI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i10(IA)	2017	B 1.0 LPGI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i10(IA)	2017	B 1.0 LPGI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i10(IA)	2017	G 1.0 MPI-KWP	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i10(IA)	2017	G 1.0 MPI-KWP	AT [Automatic Transaxle]	√	√	√	√	√	0122

Europe/General	i10(IA)	2017	G 1.0 MPI-KWP	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	i10(IA)	2017	G 1.0 MPI-KWP	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i10(IA)	2017	G 1.0 MPI-KWP	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i10(IA)	2017	G 1.0 MPI-KWP	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i10(IA)	2017	G 1.0 MPI-KWP	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(IA)	2017	G 1.0 MPI-KWP	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i10(IA)	2017	G 1.0 MPI-KWP	IMMO [Immobilizer]				√		
Europe/General	i10(IA)	2017	G 1.0 MPI-KWP	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i10(IA)	2017	G 1.0 MPI-KWP	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i10(IA)	2017	G 1.0 MPI-KWP	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i10(IA)	2017	G 1.0 MPI-KWP	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i10(IA)	2017	G 1.0 MPI-KWP	CODE [Transmitter Code Saving]				√		0026
Europe/General	i10(IA)	2017	G 1.0 MPI-UDS	ENGINE [Engine Control]	√	√	√	√		0015, 0072, 0116, 0158
Europe/General	i10(IA)	2017	G 1.0 MPI-UDS	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(IA)	2017	G 1.0 MPI-UDS	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	i10(IA)	2017	G 1.0 MPI-UDS	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i10(IA)	2017	G 1.0 MPI-UDS	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i10(IA)	2017	G 1.0 MPI-UDS	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i10(IA)	2017	G 1.0 MPI-UDS	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(IA)	2017	G 1.0 MPI-UDS	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i10(IA)	2017	G 1.0 MPI-UDS	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	i10(IA)	2017	G 1.0 MPI-UDS	IMMO [Immobilizer]				√		
Europe/General	i10(IA)	2017	G 1.0 MPI-UDS	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i10(IA)	2017	G 1.0 MPI-UDS	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i10(IA)	2017	G 1.0 MPI-UDS	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i10(IA)	2017	G 1.0 MPI-UDS	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i10(IA)	2017	G 1.0 MPI-UDS	CODE [Transmitter Code Saving]				√		0026
Europe/General	i10(IA)	2017	G 1.2 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i10(IA)	2017	G 1.2 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(IA)	2017	G 1.2 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	i10(IA)	2017	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i10(IA)	2017	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i10(IA)	2017	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i10(IA)	2017	G 1.2 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(IA)	2017	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			

Europe/General	i10(IA)	2017	G 1.2 MPI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	i10(IA)	2017	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	i10(IA)	2017	G 1.2 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i10(IA)	2017	G 1.2 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i10(IA)	2017	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i10(IA)	2017	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i10(IA)	2016	B 1.0 LPGI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i10(IA)	2016	B 1.0 LPGI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	i10(IA)	2016	B 1.0 LPGI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i10(IA)	2016	B 1.0 LPGI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i10(IA)	2016	B 1.0 LPGI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i10(IA)	2016	B 1.0 LPGI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(IA)	2016	B 1.0 LPGI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i10(IA)	2016	B 1.0 LPGI	IMMO [Immobilizer]				√		
Europe/General	i10(IA)	2016	B 1.0 LPGI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i10(IA)	2016	B 1.0 LPGI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i10(IA)	2016	B 1.0 LPGI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i10(IA)	2016	B 1.0 LPGI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i10(IA)	2016	B 1.0 LPGI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i10(IA)	2016	G 1.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i10(IA)	2016	G 1.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(IA)	2016	G 1.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	i10(IA)	2016	G 1.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i10(IA)	2016	G 1.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i10(IA)	2016	G 1.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i10(IA)	2016	G 1.0 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(IA)	2016	G 1.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i10(IA)	2016	G 1.0 MPI	IMMO [Immobilizer]				√		
Europe/General	i10(IA)	2016	G 1.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i10(IA)	2016	G 1.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i10(IA)	2016	G 1.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i10(IA)	2016	G 1.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i10(IA)	2016	G 1.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i10(IA)	2016	G 1.2 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i10(IA)	2016	G 1.2 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(IA)	2016	G 1.2 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	i10(IA)	2016	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i10(IA)	2016	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i10(IA)	2016	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i10(IA)	2016	G 1.2 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(IA)	2016	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i10(IA)	2016	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	i10(IA)	2016	G 1.2 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i10(IA)	2016	G 1.2 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i10(IA)	2016	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	

Europe/General	i10(IA)	2016	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i10(IA)	2015	B 1.0 LPGI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i10(IA)	2015	B 1.0 LPGI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	i10(IA)	2015	B 1.0 LPGI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i10(IA)	2015	B 1.0 LPGI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i10(IA)	2015	B 1.0 LPGI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i10(IA)	2015	B 1.0 LPGI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(IA)	2015	B 1.0 LPGI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i10(IA)	2015	B 1.0 LPGI	IMMO [Immobilizer]				√		
Europe/General	i10(IA)	2015	B 1.0 LPGI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i10(IA)	2015	B 1.0 LPGI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i10(IA)	2015	B 1.0 LPGI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i10(IA)	2015	B 1.0 LPGI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i10(IA)	2015	B 1.0 LPGI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i10(IA)	2015	G 1.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i10(IA)	2015	G 1.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(IA)	2015	G 1.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	i10(IA)	2015	G 1.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i10(IA)	2015	G 1.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i10(IA)	2015	G 1.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i10(IA)	2015	G 1.0 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(IA)	2015	G 1.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i10(IA)	2015	G 1.0 MPI	IMMO [Immobilizer]				√		
Europe/General	i10(IA)	2015	G 1.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i10(IA)	2015	G 1.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i10(IA)	2015	G 1.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i10(IA)	2015	G 1.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i10(IA)	2015	G 1.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i10(IA)	2015	G 1.2 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i10(IA)	2015	G 1.2 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(IA)	2015	G 1.2 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	i10(IA)	2015	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i10(IA)	2015	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i10(IA)	2015	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i10(IA)	2015	G 1.2 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(IA)	2015	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i10(IA)	2015	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	i10(IA)	2015	G 1.2 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i10(IA)	2015	G 1.2 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i10(IA)	2015	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i10(IA)	2015	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i10(IA)	2014	B 1.0 LPGI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i10(IA)	2014	B 1.0 LPGI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	i10(IA)	2014	B 1.0 LPGI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i10(IA)	2014	B 1.0 LPGI	AIRBAG [Airbag (Event #1)]	√	√	√			

Europe/General	i10(IA)	2014	B 1.0 LPGI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i10(IA)	2014	B 1.0 LPGI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(IA)	2014	B 1.0 LPGI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i10(IA)	2014	B 1.0 LPGI	IMMO [Immobilizer]				√		
Europe/General	i10(IA)	2014	B 1.0 LPGI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i10(IA)	2014	B 1.0 LPGI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i10(IA)	2014	B 1.0 LPGI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i10(IA)	2014	B 1.0 LPGI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i10(IA)	2014	B 1.0 LPGI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i10(IA)	2014	G 1.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i10(IA)	2014	G 1.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(IA)	2014	G 1.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	i10(IA)	2014	G 1.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i10(IA)	2014	G 1.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i10(IA)	2014	G 1.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i10(IA)	2014	G 1.0 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(IA)	2014	G 1.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i10(IA)	2014	G 1.0 MPI	IMMO [Immobilizer]				√		
Europe/General	i10(IA)	2014	G 1.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i10(IA)	2014	G 1.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i10(IA)	2014	G 1.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i10(IA)	2014	G 1.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i10(IA)	2014	G 1.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i10(IA)	2014	G 1.2 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i10(IA)	2014	G 1.2 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(IA)	2014	G 1.2 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0088, 0092, 0108
Europe/General	i10(IA)	2014	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i10(IA)	2014	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i10(IA)	2014	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i10(IA)	2014	G 1.2 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(IA)	2014	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i10(IA)	2014	G 1.2 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i10(IA)	2014	G 1.2 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i10(IA)	2014	G 1.2 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i10(IA)	2014	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i10(IA)	2014	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i10(PA)	2017	B 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0013, 0120, 0158
Europe/General	i10(PA)	2017	B 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2017	B 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0120, 0072, 0013, 0120, 0116, 0158
Europe/General	i10(PA)	2017	B 1.1 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2017	B 1.1 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2017	B 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2017	B 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		

Europe/General	i10(PA)	2017	B 1.1 SOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2017	G 1.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2017	G 1.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2017	G 1.0 DOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2017	G 1.0 DOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2017	G 1.0 DOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2017	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0013, 0120, 0158
Europe/General	i10(PA)	2017	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2017	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2017	G 1.1 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2017	G 1.1 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2017	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2017	G 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2017	G 1.1 SOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2017	G 1.2 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0013, 0120, 0116, 0158
Europe/General	i10(PA)	2017	G 1.2 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0072, 0013, 0120, 0116, 0158
Europe/General	i10(PA)	2017	G 1.2 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0072, 0013, 0120, 0116, 0158
Europe/General	i10(PA)	2017	G 1.2 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2017	G 1.2 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2017	G 1.2 DOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2017	G 1.2 DOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2017	G 1.2 DOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2016	B 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0013, 0120, 0158
Europe/General	i10(PA)	2016	B 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2016	B 1.1 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2016	B 1.1 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2016	B 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2016	B 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2016	B 1.1 SOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2016	G 1.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2016	G 1.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2016	G 1.0 DOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2016	G 1.0 DOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2016	G 1.0 DOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2016	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0013, 0120, 0158
Europe/General	i10(PA)	2016	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2016	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2016	G 1.1 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2016	G 1.1 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2016	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2016	G 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2016	G 1.1 SOHC	IMMO [Immobilizer]				√		

Europe/General	i10(PA)	2016	G 1.2 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0013, 0120, 0116, 0158
Europe/General	i10(PA)	2016	G 1.2 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0072, 0013, 0120, 0116, 0158
Europe/General	i10(PA)	2016	G 1.2 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0072, 0013, 0120, 0116, 0158
Europe/General	i10(PA)	2016	G 1.2 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2016	G 1.2 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2016	G 1.2 DOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2016	G 1.2 DOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2016	G 1.2 DOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2015	B 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0013, 0120, 0158
Europe/General	i10(PA)	2015	B 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2015	B 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2015	B 1.1 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2015	B 1.1 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2015	B 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2015	B 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2015	B 1.1 SOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2015	G 1.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2015	G 1.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2015	G 1.0 DOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2015	G 1.0 DOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2015	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0013, 0120, 0158
Europe/General	i10(PA)	2015	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2015	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2015	G 1.1 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2015	G 1.1 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2015	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2015	G 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2015	G 1.1 SOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2015	G 1.2 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0013, 0120, 0116, 0158
Europe/General	i10(PA)	2015	G 1.2 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0072, 0013, 0120, 0116, 0158
Europe/General	i10(PA)	2015	G 1.2 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0072, 0013, 0120, 0116, 0158
Europe/General	i10(PA)	2015	G 1.2 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2015	G 1.2 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2015	G 1.2 DOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2015	G 1.2 DOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2015	G 1.2 DOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2014	B 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0013, 0120, 0158
Europe/General	i10(PA)	2014	B 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2014	B 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2014	B 1.1 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2014	B 1.1 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064

Europe/General	i10(PA)	2014	B 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2014	B 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2014	B 1.1 SOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2014	G 1.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2014	G 1.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2014	G 1.0 DOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2014	G 1.0 DOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2014	G 1.0 DOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2014	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0013, 0120, 0158
Europe/General	i10(PA)	2014	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2014	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2014	G 1.1 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2014	G 1.1 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2014	G 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2014	G 1.1 SOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2014	G 1.2 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0013, 0120, 0116, 0158
Europe/General	i10(PA)	2014	G 1.2 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0072, 0013, 0120, 0116, 0158
Europe/General	i10(PA)	2014	G 1.2 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0072, 0013, 0120, 0116, 0158
Europe/General	i10(PA)	2014	G 1.2 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2014	G 1.2 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2014	G 1.2 DOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2014	G 1.2 DOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2014	G 1.2 DOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2013	B 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0013, 0120, 0158
Europe/General	i10(PA)	2013	B 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2013	B 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2013	B 1.1 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2013	B 1.1 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2013	B 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2013	B 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2013	B 1.1 SOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2013	G 1.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2013	G 1.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2013	G 1.0 DOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2013	G 1.0 DOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2013	G 1.0 DOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2013	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0013, 0120, 0158
Europe/General	i10(PA)	2013	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2013	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2013	G 1.1 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2013	G 1.1 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2013	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			0110

Europe/General	i10(PA)	2013	G 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2013	G 1.1 SOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2013	G 1.2 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0013, 0120, 0116, 0158
Europe/General	i10(PA)	2013	G 1.2 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0072, 0013, 0120, 0116, 0158
Europe/General	i10(PA)	2013	G 1.2 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0072, 0013, 0120, 0116, 0158
Europe/General	i10(PA)	2013	G 1.2 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2013	G 1.2 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2013	G 1.2 DOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2013	G 1.2 DOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2012	B 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0013, 0120, 0158
Europe/General	i10(PA)	2012	B 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2012	B 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2012	B 1.1 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2012	B 1.1 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2012	B 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2012	B 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2012	B 1.1 SOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2012	G 1.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2012	G 1.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2012	G 1.0 DOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2012	G 1.0 DOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2012	G 1.0 DOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2012	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0013, 0120, 0158
Europe/General	i10(PA)	2012	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2012	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2012	G 1.1 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2012	G 1.1 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2012	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2012	G 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2012	G 1.1 SOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2012	G 1.2 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0013, 0120, 0116, 0158
Europe/General	i10(PA)	2012	G 1.2 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0072, 0013, 0120, 0116, 0158
Europe/General	i10(PA)	2012	G 1.2 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0072, 0013, 0120, 0116, 0158
Europe/General	i10(PA)	2012	G 1.2 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2012	G 1.2 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2012	G 1.2 DOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2012	G 1.2 DOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2012	G 1.2 DOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2011	G 1.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2011	G 1.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2011	G 1.0 DOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2011	G 1.0 DOHC	EPS [Electronic Power Steering]	√	√	√	√		

Europe/General	i10(PA)	2011	G 1.0 DOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2011	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2011	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0072, 0013, 0158
Europe/General	i10(PA)	2011	G 1.1 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2011	G 1.1 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2011	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2011	G 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2011	G 1.1 SOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2011	G 1.2 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0013, 0120, 0116, 0158
Europe/General	i10(PA)	2011	G 1.2 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0072, 0013, 0120, 0116, 0158
Europe/General	i10(PA)	2011	G 1.2 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0072, 0013, 0120, 0116, 0158
Europe/General	i10(PA)	2011	G 1.2 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2011	G 1.2 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2011	G 1.2 DOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2011	G 1.2 DOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2011	G 1.2 DOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2010	D 1.1 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i10(PA)	2010	D 1.1 TCI-U	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2010	D 1.1 TCI-U	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2010	D 1.1 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2010	D 1.1 TCI-U	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	i10(PA)	2010	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	i10(PA)	2010	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	i10(PA)	2010	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	i10(PA)	2010	G 1.1 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2010	G 1.1 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2010	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2010	G 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2010	G 1.1 SOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2010	G 1.2 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i10(PA)	2010	G 1.2 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i10(PA)	2010	G 1.2 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i10(PA)	2010	G 1.2 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2010	G 1.2 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i10(PA)	2010	G 1.2 DOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2010	G 1.2 DOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2010	G 1.2 DOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2009	D 1.1 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i10(PA)	2009	D 1.1 TCI-U	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2009	D 1.1 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2009	D 1.1 TCI-U	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	i10(PA)	2009	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	

Europe/General	i10(PA)	2009	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	i10(PA)	2009	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	i10(PA)	2009	G 1.1 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2009	G 1.1 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i10(PA)	2009	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2009	G 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2009	G 1.1 SOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2009	G 1.2 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i10(PA)	2009	G 1.2 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i10(PA)	2009	G 1.2 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i10(PA)	2009	G 1.2 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2009	G 1.2 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i10(PA)	2009	G 1.2 DOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2009	G 1.2 DOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2009	G 1.2 DOHC	IMMO [Immobilizer]				√		
Europe/General	i10(PA)	2008	D 1.1 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i10(PA)	2008	D 1.1 TCI-U	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i10(PA)	2008	D 1.1 TCI-U	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2008	D 1.1 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2008	D 1.1 TCI-U	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	i10(PA)	2008	G 1.1 SOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	i10(PA)	2008	G 1.1 SOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	i10(PA)	2008	G 1.1 SOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	i10(PA)	2008	G 1.1 SOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i10(PA)	2008	G 1.1 SOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i10(PA)	2008	G 1.1 SOHC	AIRBAG [Airbag Control]	√	√	√			0110
Europe/General	i10(PA)	2008	G 1.1 SOHC	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i10(PA)	2008	G 1.1 SOHC	IMMO [Immobilizer]				√		
Europe/General	i20(GB)	2018	D 1.1 TCI-U2	ENGINE [Engine Control]	√	√	√	√		0029, 0060, 0116
Europe/General	i20(GB)	2018	D 1.1 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i20(GB)	2018	D 1.1 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(GB)	2018	D 1.1 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(GB)	2018	D 1.1 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(GB)	2018	D 1.1 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(GB)	2018	D 1.1 TCI-U2	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(GB)	2018	D 1.1 TCI-U2	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i20(GB)	2018	D 1.1 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(GB)	2018	D 1.1 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(GB)	2018	D 1.1 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(GB)	2018	D 1.1 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(GB)	2018	D 1.1 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	i20(GB)	2018	D 1.1 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(GB)	2018	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√		0013, 0035, 0061, 0116, 0158
Europe/General	i20(GB)	2018	D 1.4 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064

Europe/General	i20(GB)	2018	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(GB)	2018	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(GB)	2018	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(GB)	2018	D 1.4 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(GB)	2018	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i20(GB)	2018	D 1.4 TCI-U2	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(GB)	2018	D 1.4 TCI-U2	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i20(GB)	2018	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(GB)	2018	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(GB)	2018	D 1.4 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(GB)	2018	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(GB)	2018	D 1.4 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	i20(GB)	2018	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(GB)	2018	G 1.0 T-GDI	ENGINE [Engine Control]	√	√	√	√		0015, 0072, 0116, 0158
Europe/General	i20(GB)	2018	G 1.0 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i20(GB)	2018	G 1.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(GB)	2018	G 1.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(GB)	2018	G 1.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(GB)	2018	G 1.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(GB)	2018	G 1.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i20(GB)	2018	G 1.0 T-GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(GB)	2018	G 1.0 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i20(GB)	2018	G 1.0 T-GDI	IMMO [Immobilizer]				√		
Europe/General	i20(GB)	2018	G 1.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(GB)	2018	G 1.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(GB)	2018	G 1.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(GB)	2018	G 1.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	i20(GB)	2018	G 1.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(GB)	2018	G 1.2 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(GB)	2018	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(GB)	2018	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(GB)	2018	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(GB)	2018	G 1.2 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(GB)	2018	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i20(GB)	2018	G 1.2 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(GB)	2018	G 1.2 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i20(GB)	2018	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(GB)	2018	G 1.2 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(GB)	2018	G 1.2 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(GB)	2018	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(GB)	2018	G 1.2 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	i20(GB)	2018	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(GB)	2018	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(GB)	2018	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(GB)	2018	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	i20(GB)	2018	G 1.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(GB)	2018	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i20(GB)	2018	G 1.4 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(GB)	2018	G 1.4 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i20(GB)	2018	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(GB)	2018	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(GB)	2018	G 1.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	i20(GB)	2018	G 1.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(GB)	2018	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(GB)	2018	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(GB)	2018	G 1.4 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(GB)	2018	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(GB)	2018	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i20(GB)	2017	D 1.1 TCI-U2	ENGINE [Engine Control]	√	√	√	√		0029, 0060, 0116
Europe/General	i20(GB)	2017	D 1.1 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i20(GB)	2017	D 1.1 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(GB)	2017	D 1.1 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(GB)	2017	D 1.1 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(GB)	2017	D 1.1 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(GB)	2017	D 1.1 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i20(GB)	2017	D 1.1 TCI-U2	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(GB)	2017	D 1.1 TCI-U2	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i20(GB)	2017	D 1.1 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(GB)	2017	D 1.1 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(GB)	2017	D 1.1 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(GB)	2017	D 1.1 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	i20(GB)	2017	D 1.1 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(GB)	2017	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√		0013, 0035, 0061, 0116, 0158
Europe/General	i20(GB)	2017	D 1.4 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i20(GB)	2017	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(GB)	2017	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(GB)	2017	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(GB)	2017	D 1.4 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(GB)	2017	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i20(GB)	2017	D 1.4 TCI-U2	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(GB)	2017	D 1.4 TCI-U2	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i20(GB)	2017	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(GB)	2017	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(GB)	2017	D 1.4 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(GB)	2017	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(GB)	2017	D 1.4 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	i20(GB)	2017	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(GB)	2017	G 1.0 T-GDI	ENGINE [Engine Control]	√	√	√	√		0015, 0072, 0116, 0158
Europe/General	i20(GB)	2017	G 1.0 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i20(GB)	2017	G 1.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			

Europe/General	i20(GB)	2017	G 1.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(GB)	2017	G 1.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(GB)	2017	G 1.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(GB)	2017	G 1.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i20(GB)	2017	G 1.0 T-GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(GB)	2017	G 1.0 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i20(GB)	2017	G 1.0 T-GDI	IMMO [Immobilizer]				√		
Europe/General	i20(GB)	2017	G 1.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(GB)	2017	G 1.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(GB)	2017	G 1.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(GB)	2017	G 1.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	i20(GB)	2017	G 1.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(GB)	2017	G 1.2 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(GB)	2017	G 1.2 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i20(GB)	2017	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(GB)	2017	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(GB)	2017	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(GB)	2017	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i20(GB)	2017	G 1.2 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(GB)	2017	G 1.2 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i20(GB)	2017	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(GB)	2017	G 1.2 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(GB)	2017	G 1.2 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(GB)	2017	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(GB)	2017	G 1.2 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	i20(GB)	2017	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(GB)	2017	G 1.4 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(GB)	2017	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(GB)	2017	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i20(GB)	2017	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(GB)	2017	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(GB)	2017	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(GB)	2017	G 1.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(GB)	2017	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i20(GB)	2017	G 1.4 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(GB)	2017	G 1.4 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i20(GB)	2017	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(GB)	2017	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(GB)	2017	G 1.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	i20(GB)	2017	G 1.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(GB)	2017	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(GB)	2017	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(GB)	2016	D 1.1 TCI-U2	ENGINE [Engine Control]	√	√	√	√		0029, 0060, 0116
Europe/General	i20(GB)	2016	D 1.1 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i20(GB)	2016	D 1.1 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			

Europe/General	i20(GB)	2016	D 1.1 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(GB)	2016	D 1.1 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(GB)	2016	D 1.1 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(GB)	2016	D 1.1 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i20(GB)	2016	D 1.1 TCI-U2	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(GB)	2016	D 1.1 TCI-U2	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i20(GB)	2016	D 1.1 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(GB)	2016	D 1.1 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(GB)	2016	D 1.1 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(GB)	2016	D 1.1 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(GB)	2016	D 1.1 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	i20(GB)	2016	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√		0013, 0035, 0061, 0116, 0158
Europe/General	i20(GB)	2016	D 1.4 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i20(GB)	2016	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(GB)	2016	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(GB)	2016	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(GB)	2016	D 1.4 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(GB)	2016	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i20(GB)	2016	D 1.4 TCI-U2	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(GB)	2016	D 1.4 TCI-U2	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i20(GB)	2016	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(GB)	2016	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(GB)	2016	D 1.4 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(GB)	2016	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(GB)	2016	D 1.4 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	i20(GB)	2016	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(GB)	2016	G 1.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(GB)	2016	G 1.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(GB)	2016	G 1.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(GB)	2016	G 1.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(GB)	2016	G 1.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i20(GB)	2016	G 1.0 T-GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(GB)	2016	G 1.0 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i20(GB)	2016	G 1.0 T-GDI	IMMO [Immobilizer]				√		
Europe/General	i20(GB)	2016	G 1.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(GB)	2016	G 1.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(GB)	2016	G 1.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(GB)	2016	G 1.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	i20(GB)	2016	G 1.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(GB)	2016	G 1.0 T-GDI	ENGINE [Engine Control]	√	√	√	√		0015, 0072, 0116, 0158
Europe/General	i20(GB)	2016	G 1.0 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i20(GB)	2016	G 1.2 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(GB)	2016	G 1.2 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i20(GB)	2016	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(GB)	2016	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			

Europe/General	i20(GB)	2016	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(GB)	2016	G 1.2 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(GB)	2016	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i20(GB)	2016	G 1.2 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(GB)	2016	G 1.2 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i20(GB)	2016	G 1.2 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(GB)	2016	G 1.2 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(GB)	2016	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(GB)	2016	G 1.2 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	i20(GB)	2016	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(GB)	2016	G 1.4 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(GB)	2016	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(GB)	2016	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i20(GB)	2016	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(GB)	2016	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(GB)	2016	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(GB)	2016	G 1.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(GB)	2016	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i20(GB)	2016	G 1.4 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(GB)	2016	G 1.4 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i20(GB)	2016	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(GB)	2016	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(GB)	2016	G 1.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	i20(GB)	2016	G 1.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(GB)	2016	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(GB)	2016	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	ENGINE [Engine Control]	√	√	√	√		0029, 0060, 0116
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	i20(GB)	2015	D 1.1 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√		0013, 0035, 0061, 0116, 0158
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	i20(GB)	2015	D 1.4 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	i20(GB)	2015	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(GB)	2015	G 1.2 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(GB)	2015	G 1.2 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i20(GB)	2015	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(GB)	2015	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(GB)	2015	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(GB)	2015	G 1.2 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(GB)	2015	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i20(GB)	2015	G 1.2 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(GB)	2015	G 1.2 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i20(GB)	2015	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(GB)	2015	G 1.2 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(GB)	2015	G 1.2 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(GB)	2015	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(GB)	2015	G 1.2 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	i20(GB)	2015	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(GB)	2015	G 1.4 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(GB)	2015	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(GB)	2015	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i20(GB)	2015	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(GB)	2015	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(GB)	2015	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(GB)	2015	G 1.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(GB)	2015	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i20(GB)	2015	G 1.4 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(GB)	2015	G 1.4 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i20(GB)	2015	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(GB)	2015	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(GB)	2015	G 1.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	i20(GB)	2015	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(GB)	2015	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(GB)	2014	D 1.1 TCI-U2	ENGINE [Engine Control]	√	√	√	√		0029, 0060, 0116
Europe/General	i20(GB)	2014	D 1.1 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i20(GB)	2014	D 1.1 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(GB)	2014	D 1.1 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(GB)	2014	D 1.1 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	i20(GB)	2014	D 1.1 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(GB)	2014	D 1.1 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i20(GB)	2014	D 1.1 TCI-U2	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(GB)	2014	D 1.1 TCI-U2	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i20(GB)	2014	D 1.1 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(GB)	2014	D 1.1 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(GB)	2014	D 1.1 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(GB)	2014	D 1.1 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(GB)	2014	D 1.1 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	i20(GB)	2014	D 1.1 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(GB)	2014	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√		0013, 0035, 0061, 0116, 0158
Europe/General	i20(GB)	2014	D 1.4 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i20(GB)	2014	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(GB)	2014	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(GB)	2014	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(GB)	2014	D 1.4 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(GB)	2014	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i20(GB)	2014	D 1.4 TCI-U2	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(GB)	2014	D 1.4 TCI-U2	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i20(GB)	2014	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(GB)	2014	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(GB)	2014	D 1.4 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(GB)	2014	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(GB)	2014	D 1.4 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	i20(GB)	2014	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(GB)	2014	G 1.2 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(GB)	2014	G 1.2 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i20(GB)	2014	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(GB)	2014	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(GB)	2014	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(GB)	2014	G 1.2 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(GB)	2014	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i20(GB)	2014	G 1.2 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i20(GB)	2014	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(GB)	2014	G 1.2 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(GB)	2014	G 1.2 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(GB)	2014	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(GB)	2014	G 1.2 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	i20(GB)	2014	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(GB)	2014	G 1.4 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(GB)	2014	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(GB)	2014	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i20(GB)	2014	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(GB)	2014	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(GB)	2014	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	i20(GB)	2014	G 1.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(GB)	2014	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	i20(GB)	2014	G 1.4 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(GB)	2014	G 1.4 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i20(GB)	2014	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(GB)	2014	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(GB)	2014	G 1.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	i20(GB)	2014	G 1.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(GB)	2014	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(GB)	2014	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(IB)	2019	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i20(IB)	2019	D 1.4 TCI-U2	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	i20(IB)	2019	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(IB)	2019	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(IB)	2019	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(IB)	2019	D 1.4 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(IB)	2019	D 1.4 TCI-U2	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(IB)	2019	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(IB)	2019	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(IB)	2019	D 1.4 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(IB)	2019	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(IB)	2019	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(IB)	2019	G 1.2 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(IB)	2019	G 1.2 MPI	AT [Continuously Variable Transmission]	√	√	√	√		0122
Europe/General	i20(IB)	2019	G 1.2 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	i20(IB)	2019	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(IB)	2019	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(IB)	2019	G 1.2 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(IB)	2019	G 1.2 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(IB)	2019	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(IB)	2019	G 1.2 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(IB)	2019	G 1.2 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(IB)	2019	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(IB)	2019	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(IB)	2019	G 1.4 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(IB)	2019	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(IB)	2019	G 1.4 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	i20(IB)	2019	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(IB)	2019	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(IB)	2019	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(IB)	2019	G 1.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(IB)	2019	G 1.4 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(IB)	2019	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(IB)	2019	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(IB)	2019	G 1.4 MPI	CLU [Cluster Module]	√	√	√	√	√	

Europe/General	i20(IB)	2019	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(IB)	2019	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(IB)	2018	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i20(IB)	2018	D 1.4 TCI-U2	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	i20(IB)	2018	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(IB)	2018	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(IB)	2018	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(IB)	2018	D 1.4 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(IB)	2018	D 1.4 TCI-U2	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(IB)	2018	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(IB)	2018	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(IB)	2018	D 1.4 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(IB)	2018	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(IB)	2018	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(IB)	2018	G 1.2 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(IB)	2018	G 1.2 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	i20(IB)	2018	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(IB)	2018	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(IB)	2018	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(IB)	2018	G 1.2 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(IB)	2018	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(IB)	2018	G 1.2 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(IB)	2018	G 1.2 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(IB)	2018	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(IB)	2018	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(IB)	2018	G 1.4 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(IB)	2018	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(IB)	2018	G 1.4 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	i20(IB)	2018	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(IB)	2018	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(IB)	2018	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(IB)	2018	G 1.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(IB)	2018	G 1.4 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(IB)	2018	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(IB)	2018	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(IB)	2018	G 1.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(IB)	2018	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(IB)	2018	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(IB)	2017	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i20(IB)	2017	D 1.4 TCI-U2	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	i20(IB)	2017	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(IB)	2017	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(IB)	2017	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(IB)	2017	D 1.4 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(IB)	2017	D 1.4 TCI-U2	PGS [Parking Guide System]	√	√	√	√		

Europe/General	i20(IB)	2017	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(IB)	2017	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(IB)	2017	D 1.4 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(IB)	2017	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(IB)	2017	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(IB)	2017	G 1.2 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(IB)	2017	G 1.2 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	i20(IB)	2017	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(IB)	2017	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(IB)	2017	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(IB)	2017	G 1.2 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(IB)	2017	G 1.2 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(IB)	2017	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(IB)	2017	G 1.2 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(IB)	2017	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(IB)	2017	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(IB)	2017	G 1.4 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(IB)	2017	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(IB)	2017	G 1.4 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	i20(IB)	2017	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(IB)	2017	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(IB)	2017	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(IB)	2017	G 1.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(IB)	2017	G 1.4 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(IB)	2017	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(IB)	2017	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(IB)	2017	G 1.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(IB)	2017	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(IB)	2017	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(IB)	2016	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i20(IB)	2016	D 1.4 TCI-U2	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	i20(IB)	2016	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(IB)	2016	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(IB)	2016	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(IB)	2016	D 1.4 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(IB)	2016	D 1.4 TCI-U2	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(IB)	2016	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(IB)	2016	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(IB)	2016	D 1.4 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(IB)	2016	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(IB)	2016	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(IB)	2016	G 1.2 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(IB)	2016	G 1.2 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	i20(IB)	2016	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(IB)	2016	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			

Europe/General	i20(IB)	2016	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(IB)	2016	G 1.2 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(IB)	2016	G 1.2 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(IB)	2016	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(IB)	2016	G 1.2 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(IB)	2016	G 1.2 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(IB)	2016	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(IB)	2016	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(IB)	2016	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(IB)	2016	G 1.4 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	i20(IB)	2016	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(IB)	2016	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(IB)	2016	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(IB)	2016	G 1.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(IB)	2016	G 1.4 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(IB)	2016	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(IB)	2016	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(IB)	2016	G 1.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(IB)	2016	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(IB)	2016	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(IB)	2015	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i20(IB)	2015	D 1.4 TCI-U2	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	i20(IB)	2015	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(IB)	2015	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(IB)	2015	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(IB)	2015	D 1.4 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(IB)	2015	D 1.4 TCI-U2	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(IB)	2015	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(IB)	2015	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(IB)	2015	D 1.4 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(IB)	2015	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(IB)	2015	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(IB)	2015	G 1.2 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(IB)	2015	G 1.2 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	i20(IB)	2015	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(IB)	2015	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(IB)	2015	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(IB)	2015	G 1.2 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(IB)	2015	G 1.2 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(IB)	2015	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(IB)	2015	G 1.2 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(IB)	2015	G 1.2 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(IB)	2015	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(IB)	2015	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(IB)	2015	G 1.4 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158

Europe/General	i20(IB)	2015	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(IB)	2015	G 1.4 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	i20(IB)	2015	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(IB)	2015	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(IB)	2015	G 1.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(IB)	2015	G 1.4 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i20(IB)	2015	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(IB)	2015	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(IB)	2015	G 1.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(IB)	2015	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(IB)	2015	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(IB)	2014	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i20(IB)	2014	D 1.4 TCI-U2	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	i20(IB)	2014	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(IB)	2014	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(IB)	2014	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(IB)	2014	D 1.4 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(IB)	2014	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(IB)	2014	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(IB)	2014	D 1.4 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(IB)	2014	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(IB)	2014	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(IB)	2014	G 1.2 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(IB)	2014	G 1.2 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	i20(IB)	2014	G 1.2 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(IB)	2014	G 1.2 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(IB)	2014	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(IB)	2014	G 1.2 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(IB)	2014	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(IB)	2014	G 1.2 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(IB)	2014	G 1.2 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(IB)	2014	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(IB)	2014	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(IB)	2014	G 1.4 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(IB)	2014	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(IB)	2014	G 1.4 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	i20(IB)	2014	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i20(IB)	2014	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i20(IB)	2014	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(IB)	2014	G 1.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i20(IB)	2014	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(IB)	2014	G 1.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i20(IB)	2014	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(IB)	2014	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2016	D 1.1 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060

Europe/General	i20(PB)	2016	D 1.1 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2016	D 1.1 TCI-U2	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2016	D 1.1 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2016	D 1.1 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2016	D 1.1 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2016	D 1.1 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2016	D 1.1 TCI-U2	SMK [Smart Key Unit (W / ESCL)]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(PB)	2016	D 1.1 TCI-U2	SMK [Smart Key Unit (WO / ESCL)]	√	√	√	√	√	0027, 0058, 0129
Europe/General	i20(PB)	2016	D 1.1 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(PB)	2016	D 1.1 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2016	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	i20(PB)	2016	D 1.4 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2016	D 1.4 TCI-U2	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2016	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2016	D 1.4 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2016	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2016	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2016	D 1.4 TCI-U2	SMK [Smart Key Unit (W / ESCL)]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(PB)	2016	D 1.4 TCI-U2	SMK [Smart Key Unit (WO / ESCL)]	√	√	√	√	√	0027, 0058, 0129
Europe/General	i20(PB)	2016	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(PB)	2016	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2016	G 1.2 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(PB)	2016	G 1.2 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2016	G 1.2 MPI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2016	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2016	G 1.2 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2016	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2016	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2016	G 1.2 MPI	SMK [Smart Key Unit (W / ESCL)]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(PB)	2016	G 1.2 MPI	SMK [Smart Key Unit (WO / ESCL)]	√	√	√	√	√	0027, 0058, 0129
Europe/General	i20(PB)	2016	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(PB)	2016	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2016	G 1.4 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i20(PB)	2016	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2016	G 1.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2016	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2016	G 1.4 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2016	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2016	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2016	G 1.4 MPI	SMK [Smart Key Unit (W / ESCL)]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(PB)	2016	G 1.4 MPI	SMK [Smart Key Unit (WO / ESCL)]	√	√	√	√	√	0027, 0058, 0129
Europe/General	i20(PB)	2016	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(PB)	2016	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2015	D 1.1 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	i20(PB)	2015	D 1.1 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064

Europe/General	i20(PB)	2015	D 1.1 TCI-U2	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2015	D 1.1 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2015	D 1.1 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2015	D 1.1 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2015	D 1.1 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2015	D 1.1 TCI-U2	SMK [Smart Key Unit (W / ESCL)]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(PB)	2015	D 1.1 TCI-U2	SMK [Smart Key Unit (WO / ESCL)]	√	√	√	√	√	0027, 0058, 0129
Europe/General	i20(PB)	2015	D 1.1 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(PB)	2015	D 1.1 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2015	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	i20(PB)	2015	D 1.4 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2015	D 1.4 TCI-U2	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2015	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2015	D 1.4 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2015	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2015	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2015	D 1.4 TCI-U2	SMK [Smart Key Unit (W / ESCL)]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(PB)	2015	D 1.4 TCI-U2	SMK [Smart Key Unit (WO / ESCL)]	√	√	√	√	√	0027, 0058, 0129
Europe/General	i20(PB)	2015	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(PB)	2015	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2015	G 1.2 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(PB)	2015	G 1.2 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2015	G 1.2 MPI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2015	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2015	G 1.2 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2015	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2015	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2015	G 1.2 MPI	SMK [Smart Key Unit (W / ESCL)]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(PB)	2015	G 1.2 MPI	SMK [Smart Key Unit (WO / ESCL)]	√	√	√	√	√	0027, 0058, 0129
Europe/General	i20(PB)	2015	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2015	G 1.4 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i20(PB)	2015	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2015	G 1.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2015	G 1.4 MPI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2015	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2015	G 1.4 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2015	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2015	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2015	G 1.4 MPI	SMK [Smart Key Unit (W / ESCL)]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(PB)	2015	G 1.4 MPI	SMK [Smart Key Unit (WO / ESCL)]	√	√	√	√	√	0027, 0058, 0129
Europe/General	i20(PB)	2015	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(PB)	2015	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2014	D 1.1 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	i20(PB)	2014	D 1.1 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2014	D 1.1 TCI-U2	AIRBAG [Airbag Control]	√	√	√			

Europe/General	i20(PB)	2014	D 1.1 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2014	D 1.1 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2014	D 1.1 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2014	D 1.1 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2014	D 1.1 TCI-U2	SMK [Smart Key Unit (W / ESCL)]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(PB)	2014	D 1.1 TCI-U2	SMK [Smart Key Unit (WO / ESCL)]	√	√	√	√	√	0027, 0058, 0129
Europe/General	i20(PB)	2014	D 1.1 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(PB)	2014	D 1.1 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2014	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	i20(PB)	2014	D 1.4 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2014	D 1.4 TCI-U2	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2014	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2014	D 1.4 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2014	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2014	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2014	D 1.4 TCI-U2	SMK [Smart Key Unit (W / ESCL)]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(PB)	2014	D 1.4 TCI-U2	SMK [Smart Key Unit (WO / ESCL)]	√	√	√	√	√	0027, 0058, 0129
Europe/General	i20(PB)	2014	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(PB)	2014	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2014	G 1.2 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(PB)	2014	G 1.2 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2014	G 1.2 MPI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2014	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2014	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2014	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2014	G 1.2 MPI	SMK [Smart Key Unit (W / ESCL)]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(PB)	2014	G 1.2 MPI	SMK [Smart Key Unit (WO / ESCL)]	√	√	√	√	√	0027, 0058, 0129
Europe/General	i20(PB)	2014	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(PB)	2014	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2014	G 1.4 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i20(PB)	2014	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2014	G 1.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2014	G 1.4 MPI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2014	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2014	G 1.4 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2014	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2014	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2014	G 1.4 MPI	SMK [Smart Key Unit (W / ESCL)]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(PB)	2014	G 1.4 MPI	SMK [Smart Key Unit (WO / ESCL)]	√	√	√	√	√	0027, 0058, 0129
Europe/General	i20(PB)	2014	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(PB)	2014	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2013	D 1.1 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	i20(PB)	2013	D 1.1 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2013	D 1.1 TCI-U2	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2013	D 1.1 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	i20(PB)	2013	D 1.1 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2013	D 1.1 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2013	D 1.1 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2013	D 1.1 TCI-U2	SMK [Smart Key Unit (W / ESCL)]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(PB)	2013	D 1.1 TCI-U2	SMK [Smart Key Unit (WO / ESCL)]	√	√	√	√	√	0027, 0058, 0129
Europe/General	i20(PB)	2013	D 1.1 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(PB)	2013	D 1.1 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2013	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	i20(PB)	2013	D 1.4 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2013	D 1.4 TCI-U2	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2013	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2013	D 1.4 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2013	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2013	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2013	D 1.4 TCI-U2	SMK [Smart Key Unit (W / ESCL)]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(PB)	2013	D 1.4 TCI-U2	SMK [Smart Key Unit (WO / ESCL)]	√	√	√	√	√	0027, 0058, 0129
Europe/General	i20(PB)	2013	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(PB)	2013	G 1.2 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i20(PB)	2013	G 1.2 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2013	G 1.2 MPI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2013	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2013	G 1.2 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2013	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2013	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2013	G 1.2 MPI	SMK [Smart Key Unit (W / ESCL)]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(PB)	2013	G 1.2 MPI	SMK [Smart Key Unit (WO / ESCL)]	√	√	√	√	√	0027, 0058, 0129
Europe/General	i20(PB)	2013	G 1.2 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(PB)	2013	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2013	G 1.4 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i20(PB)	2013	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2013	G 1.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2013	G 1.4 MPI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2013	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2013	G 1.4 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2013	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2013	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2013	G 1.4 MPI	SMK [Smart Key Unit (W / ESCL)]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i20(PB)	2013	G 1.4 MPI	SMK [Smart Key Unit (WO / ESCL)]	√	√	√	√	√	0027, 0058, 0129
Europe/General	i20(PB)	2013	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i20(PB)	2013	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2012	D 1.4 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i20(PB)	2012	D 1.4 TCI-U	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2012	D 1.4 TCI-U	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2012	D 1.4 TCI-U	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2012	D 1.4 TCI-U	AIRCON [Air Conditioner (Turkey)]	√	√	√	√	√	

Europe/General	i20(PB)	2012	D 1.4 TCI-U	AIRCON [Air Conditioner (India)]	√	√	√	√	√	
Europe/General	i20(PB)	2012	D 1.4 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2012	D 1.4 TCI-U	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2012	D 1.4 TCI-U	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2012	D 1.4 TCI-U	BCM [Body Control Module]	√			√	√	
Europe/General	i20(PB)	2012	D 1.4 TCI-U	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2012	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	i20(PB)	2012	D 1.4 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2012	D 1.4 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2012	D 1.4 TCI-U2	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2012	D 1.4 TCI-U2	AIRCON [Air Conditioner (Turkey)]	√	√	√	√	√	
Europe/General	i20(PB)	2012	D 1.4 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2012	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2012	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2012	D 1.4 TCI-U2	BCM [Body Control Module]	√			√	√	
Europe/General	i20(PB)	2012	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2012	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i20(PB)	2012	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2012	D 1.6 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2012	D 1.6 TCI-U2	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2012	D 1.6 TCI-U2	AIRCON [Air Conditioner (Turkey)]	√	√	√	√	√	
Europe/General	i20(PB)	2012	D 1.6 TCI-U2	AIRCON [Air Conditioner (India)]	√	√	√	√	√	
Europe/General	i20(PB)	2012	D 1.6 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2012	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2012	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2012	D 1.6 TCI-U2	BCM [Body Control Module]	√			√	√	
Europe/General	i20(PB)	2012	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2012	G 1.2 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i20(PB)	2012	G 1.2 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i20(PB)	2012	G 1.2 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i20(PB)	2012	G 1.2 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2012	G 1.2 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2012	G 1.2 MPI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2012	G 1.2 MPI	AIRCON [Air Conditioner (Turkey)]	√	√	√	√	√	
Europe/General	i20(PB)	2012	G 1.2 MPI	AIRCON [Air Conditioner (India)]	√	√	√	√	√	
Europe/General	i20(PB)	2012	G 1.2 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2012	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2012	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2012	G 1.2 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i20(PB)	2012	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2012	G 1.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i20(PB)	2012	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i20(PB)	2012	G 1.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i20(PB)	2012	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2012	G 1.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064

Europe/General	i20(PB)	2012	G 1.4 MPI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2012	G 1.4 MPI	AIRCON [Air Conditioner (Turkey)]	√	√	√	√	√	
Europe/General	i20(PB)	2012	G 1.4 MPI	AIRCON [Air Conditioner (India)]	√	√	√	√	√	
Europe/General	i20(PB)	2012	G 1.4 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2012	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2012	G 1.4 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i20(PB)	2012	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2012	G 1.6 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i20(PB)	2012	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i20(PB)	2012	G 1.6 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i20(PB)	2012	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2012	G 1.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2012	G 1.6 MPI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2012	G 1.6 MPI	AIRCON [Air Conditioner (Turkey)]	√	√	√	√	√	
Europe/General	i20(PB)	2012	G 1.6 MPI	AIRCON [Air Conditioner (India)]	√	√	√	√	√	
Europe/General	i20(PB)	2012	G 1.6 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2012	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2012	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2012	G 1.6 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i20(PB)	2012	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2011	D 1.4 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i20(PB)	2011	D 1.4 TCI-U	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2011	D 1.4 TCI-U	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2011	D 1.4 TCI-U	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2011	D 1.4 TCI-U	AIRCON [Air Conditioner (Turkey)]	√	√	√	√	√	
Europe/General	i20(PB)	2011	D 1.4 TCI-U	AIRCON [Air Conditioner (India)]	√	√	√	√	√	
Europe/General	i20(PB)	2011	D 1.4 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2011	D 1.4 TCI-U	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2011	D 1.4 TCI-U	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2011	D 1.4 TCI-U	BCM [Body Control Module]	√			√	√	
Europe/General	i20(PB)	2011	D 1.4 TCI-U	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2011	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	i20(PB)	2011	D 1.4 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2011	D 1.4 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2011	D 1.4 TCI-U2	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2011	D 1.4 TCI-U2	AIRCON [Air Conditioner (Turkey)]	√	√	√	√	√	
Europe/General	i20(PB)	2011	D 1.4 TCI-U2	AIRCON [Air Conditioner (India)]	√	√	√	√	√	
Europe/General	i20(PB)	2011	D 1.4 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2011	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2011	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2011	D 1.4 TCI-U2	BCM [Body Control Module]	√			√	√	
Europe/General	i20(PB)	2011	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2011	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i20(PB)	2011	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2011	D 1.6 TCI-U2	AIRBAG [Airbag Control]	√	√	√			

Europe/General	i20(PB)	2011	D 1.6 TCI-U2	AIRCON [Air Conditioner (Turkey)]	√	√	√	√	√	
Europe/General	i20(PB)	2011	D 1.6 TCI-U2	AIRCON [Air Conditioner (India)]	√	√	√	√	√	
Europe/General	i20(PB)	2011	D 1.6 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2011	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2011	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2011	D 1.6 TCI-U2	BCM [Body Control Module]	√			√	√	
Europe/General	i20(PB)	2011	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2011	G 1.2 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i20(PB)	2011	G 1.2 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i20(PB)	2011	G 1.2 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i20(PB)	2011	G 1.2 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2011	G 1.2 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2011	G 1.2 MPI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2011	G 1.2 MPI	AIRCON [Air Conditioner (Turkey)]	√	√	√	√	√	
Europe/General	i20(PB)	2011	G 1.2 MPI	AIRCON [Air Conditioner (India)]	√	√	√	√	√	
Europe/General	i20(PB)	2011	G 1.2 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2011	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2011	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2011	G 1.2 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i20(PB)	2011	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2011	G 1.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i20(PB)	2011	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i20(PB)	2011	G 1.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i20(PB)	2011	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2011	G 1.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2011	G 1.4 MPI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2011	G 1.4 MPI	AIRCON [Air Conditioner (Turkey)]	√	√	√	√	√	
Europe/General	i20(PB)	2011	G 1.4 MPI	AIRCON [Air Conditioner (India)]	√	√	√	√	√	
Europe/General	i20(PB)	2011	G 1.4 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2011	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2011	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2011	G 1.4 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i20(PB)	2011	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2011	G 1.6 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i20(PB)	2011	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i20(PB)	2011	G 1.6 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i20(PB)	2011	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2011	G 1.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i20(PB)	2011	G 1.6 MPI	AIRCON [Air Conditioner (Turkey)]	√	√	√	√	√	
Europe/General	i20(PB)	2011	G 1.6 MPI	AIRCON [Air Conditioner (India)]	√	√	√	√	√	
Europe/General	i20(PB)	2011	G 1.6 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2011	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2011	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2011	G 1.6 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i20(PB)	2011	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026

Europe/General	i20(PB)	2010	D 1.4 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i20(PB)	2010	D 1.4 TCI-U	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2010	D 1.4 TCI-U	ESP [Electronic Stability Program]	√	√	√	√	√	0011
Europe/General	i20(PB)	2010	D 1.4 TCI-U	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2010	D 1.4 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2010	D 1.4 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2010	D 1.4 TCI-U	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2010	D 1.4 TCI-U	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2010	D 1.4 TCI-U	BCM [Body Control Module]	√			√	√	
Europe/General	i20(PB)	2010	D 1.4 TCI-U	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2010	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	i20(PB)	2010	D 1.4 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2010	D 1.4 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0011
Europe/General	i20(PB)	2010	D 1.4 TCI-U2	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2010	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2010	D 1.4 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2010	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2010	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2010	D 1.4 TCI-U2	BCM [Body Control Module]	√			√	√	
Europe/General	i20(PB)	2010	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2010	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i20(PB)	2010	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2010	D 1.6 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0011
Europe/General	i20(PB)	2010	D 1.6 TCI-U2	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2010	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2010	D 1.6 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2010	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2010	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2010	D 1.6 TCI-U2	BCM [Body Control Module]	√			√	√	
Europe/General	i20(PB)	2010	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2010	G 1.2 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i20(PB)	2010	G 1.2 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i20(PB)	2010	G 1.2 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2010	G 1.2 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0011
Europe/General	i20(PB)	2010	G 1.2 MPI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2010	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2010	G 1.2 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2010	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2010	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2010	G 1.2 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i20(PB)	2010	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2010	G 1.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i20(PB)	2010	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i20(PB)	2010	G 1.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i20(PB)	2010	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122

Europe/General	i20(PB)	2010	G 1.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0011
Europe/General	i20(PB)	2010	G 1.4 MPI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2010	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2010	G 1.4 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2010	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2010	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2010	G 1.4 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i20(PB)	2010	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2010	G 1.6 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i20(PB)	2010	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i20(PB)	2010	G 1.6 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i20(PB)	2010	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2010	G 1.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0011
Europe/General	i20(PB)	2010	G 1.6 MPI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2010	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2010	G 1.6 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2010	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2010	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2010	G 1.6 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i20(PB)	2010	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2009	D 1.4 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i20(PB)	2009	D 1.4 TCI-U	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2009	D 1.4 TCI-U	ESP [Electronic Stability Program]	√	√	√	√	√	0011
Europe/General	i20(PB)	2009	D 1.4 TCI-U	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2009	D 1.4 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2009	D 1.4 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2009	D 1.4 TCI-U	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2009	D 1.4 TCI-U	BCM [Body Control Module]	√			√	√	
Europe/General	i20(PB)	2009	D 1.4 TCI-U	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2009	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i20(PB)	2009	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2009	D 1.6 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0011
Europe/General	i20(PB)	2009	D 1.6 TCI-U2	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2009	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2009	D 1.6 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2009	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2009	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2009	D 1.6 TCI-U2	BCM [Body Control Module]	√			√	√	
Europe/General	i20(PB)	2009	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2009	G 1.2 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i20(PB)	2009	G 1.2 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i20(PB)	2009	G 1.2 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i20(PB)	2009	G 1.2 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2009	G 1.2 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0011
Europe/General	i20(PB)	2009	G 1.2 MPI	AIRBAG [Airbag Control]	√	√	√			

Europe/General	i20(PB)	2009	G 1.2 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2009	G 1.2 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2009	G 1.2 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2009	G 1.2 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2009	G 1.2 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i20(PB)	2009	G 1.2 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2009	G 1.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i20(PB)	2009	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i20(PB)	2009	G 1.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i20(PB)	2009	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2009	G 1.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0011
Europe/General	i20(PB)	2009	G 1.4 MPI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2009	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2009	G 1.4 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2009	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2009	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2009	G 1.4 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i20(PB)	2009	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i20(PB)	2009	G 1.6 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i20(PB)	2009	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i20(PB)	2009	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i20(PB)	2009	G 1.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0011
Europe/General	i20(PB)	2009	G 1.6 MPI	AIRBAG [Airbag Control]	√	√	√			
Europe/General	i20(PB)	2009	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i20(PB)	2009	G 1.6 MPI	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	i20(PB)	2009	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i20(PB)	2009	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	i20(PB)	2009	G 1.6 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i20(PB)	2009	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	ENGINE [Engine Control (ISG+ / CPF -)]	√	√	√	√	√	
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	ENGINE [Engine Control (ISG+ / CPF+)]	√	√	√	√	√	
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	ENGINE [Engine Control (ISG - / CPF+)]	√	√	√	√	√	
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	ENGINE [Engine Control (ISG - / CPF -)]	√	√	√	√	√	
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	BCM [Body Control Module]	√			√	√	
Europe/General	i30(FDe)	2012	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(FDe)	2012	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	

Europe/General	i30(FDe)	2012	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(FDe)	2012	D 2.0 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30(FDe)	2012	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30(FDe)	2012	D 2.0 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(FDe)	2012	D 2.0 TCI-D	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30(FDe)	2012	D 2.0 TCI-D	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30(FDe)	2012	D 2.0 TCI-D	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	i30(FDe)	2012	D 2.0 TCI-D	BCM [Body Control Module]	√			√	√	
Europe/General	i30(FDe)	2012	D 2.0 TCI-D	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(FDe)	2012	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0040, 0013, 0120, 0116, 0158
Europe/General	i30(FDe)	2012	G 1.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0072, 0040, 0013, 0120, 0116, 0158
Europe/General	i30(FDe)	2012	G 1.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0072, 0040, 0013, 0120, 0116, 0158
Europe/General	i30(FDe)	2012	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(FDe)	2012	G 1.4 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30(FDe)	2012	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(FDe)	2012	G 1.4 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30(FDe)	2012	G 1.4 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30(FDe)	2012	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i30(FDe)	2012	G 1.4 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30(FDe)	2012	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(FDe)	2012	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0040, 0013, 0120, 0158
Europe/General	i30(FDe)	2012	G 1.6 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0072, 0040, 0013, 0120, 0116, 0158
Europe/General	i30(FDe)	2012	G 1.6 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0072, 0040, 0013, 0120, 0116, 0158
Europe/General	i30(FDe)	2012	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(FDe)	2012	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30(FDe)	2012	G 1.6 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30(FDe)	2012	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(FDe)	2012	G 1.6 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30(FDe)	2012	G 1.6 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30(FDe)	2012	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	i30(FDe)	2012	G 1.6 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30(FDe)	2012	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(FDe)	2012	G 2.0 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30(FDe)	2012	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i30(FDe)	2012	G 2.0 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30(FDe)	2012	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(FDe)	2012	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30(FDe)	2012	G 2.0 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30(FDe)	2012	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	i30(FDe)	2012	G 2.0 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30(FDe)	2012	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30(FDe)	2012	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	i30(FDe)	2012	G 2.0 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30(FDe)	2012	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(FDe)	2011	D 1.6 TCI-U	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(FDe)	2011	D 1.6 TCI-U	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30(FDe)	2011	D 1.6 TCI-U	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30(FDe)	2011	D 1.6 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	i30(FDe)	2011	D 1.6 TCI-U	BCM [Body Control Module]	√			√	√	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	ENGINE [Engine Control (ISG+ / CPF -)]	√	√	√	√	√	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	ENGINE [Engine Control (ISG+ / CPF+)]	√	√	√	√	√	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	ENGINE [Engine Control (ISG - / CPF+)]	√	√	√	√	√	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	ENGINE [Engine Control (ISG - / CPF -)]	√	√	√	√	√	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	BCM [Body Control Module]	√			√	√	
Europe/General	i30(FDe)	2011	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(FDe)	2011	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i30(FDe)	2011	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(FDe)	2011	D 2.0 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30(FDe)	2011	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30(FDe)	2011	D 2.0 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(FDe)	2011	D 2.0 TCI-D	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30(FDe)	2011	D 2.0 TCI-D	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30(FDe)	2011	D 2.0 TCI-D	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	i30(FDe)	2011	D 2.0 TCI-D	BCM [Body Control Module]	√			√	√	
Europe/General	i30(FDe)	2011	D 2.0 TCI-D	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(FDe)	2011	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0040, 0013, 0120, 0158
Europe/General	i30(FDe)	2011	G 1.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0072, 0040, 0013, 0120, 0116, 0158

Europe/General	i30(FDe)	2011	G 1.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0072, 0040, 0013, 0120, 0116, 0158
Europe/General	i30(FDe)	2011	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(FDe)	2011	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30(FDe)	2011	G 1.4 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30(FDe)	2011	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(FDe)	2011	G 1.4 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30(FDe)	2011	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i30(FDe)	2011	G 1.4 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30(FDe)	2011	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(FDe)	2011	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0040, 0013, 0120, 0158
Europe/General	i30(FDe)	2011	G 1.6 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0072, 0040, 0013, 0120, 0116, 0158
Europe/General	i30(FDe)	2011	G 1.6 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0072, 0040, 0013, 0120, 0116, 0158
Europe/General	i30(FDe)	2011	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(FDe)	2011	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30(FDe)	2011	G 1.6 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30(FDe)	2011	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(FDe)	2011	G 1.6 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30(FDe)	2011	G 1.6 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30(FDe)	2011	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	i30(FDe)	2011	G 1.6 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30(FDe)	2011	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(FDe)	2011	G 2.0 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30(FDe)	2011	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i30(FDe)	2011	G 2.0 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30(FDe)	2011	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(FDe)	2011	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30(FDe)	2011	G 2.0 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30(FDe)	2011	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(FDe)	2011	G 2.0 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30(FDe)	2011	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30(FDe)	2011	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	i30(FDe)	2011	G 2.0 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30(FDe)	2011	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(FDe)	2010	D 1.6 TCI-U	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(FDe)	2010	D 1.6 TCI-U	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30(FDe)	2010	D 1.6 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30(FDe)	2010	D 1.6 TCI-U	TPMS [Tire Pressure Monitoring System]	√	√	√		√	

Europe/General	i30(FDe)	2010	D 1.6 TCI-U	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	i30(FDe)	2010	D 1.6 TCI-U	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	ENGINE [Engine Control (ISG+ / CPF -)]	√	√	√	√	√	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	ENGINE [Engine Control (ISG+ / CPF+)]	√	√	√	√	√	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	ENGINE [Engine Control (ISG - / CPF+)]	√	√	√	√	√	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	ENGINE [Engine Control (ISG - / CPF -)]	√	√	√	√	√	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	BCM [Body Control Module]	√			√	√	
Europe/General	i30(FDe)	2010	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(FDe)	2010	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i30(FDe)	2010	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(FDe)	2010	D 2.0 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30(FDe)	2010	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30(FDe)	2010	D 2.0 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(FDe)	2010	D 2.0 TCI-D	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30(FDe)	2010	D 2.0 TCI-D	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30(FDe)	2010	D 2.0 TCI-D	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	i30(FDe)	2010	D 2.0 TCI-D	BCM [Body Control Module]	√			√	√	
Europe/General	i30(FDe)	2010	D 2.0 TCI-D	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(FDe)	2010	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i30(FDe)	2010	G 1.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30(FDe)	2010	G 1.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30(FDe)	2010	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(FDe)	2010	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30(FDe)	2010	G 1.4 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30(FDe)	2010	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(FDe)	2010	G 1.4 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30(FDe)	2010	G 1.4 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30(FDe)	2010	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i30(FDe)	2010	G 1.4 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30(FDe)	2010	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(FDe)	2010	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i30(FDe)	2010	G 1.6 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30(FDe)	2010	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(FDe)	2010	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30(FDe)	2010	G 1.6 MPI	AIRBAG [Airbag Control]	√	√	√			0109

Europe/General	i30(FDe)	2010	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(FDe)	2010	G 1.6 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30(FDe)	2010	G 1.6 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30(FDe)	2010	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	i30(FDe)	2010	G 1.6 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30(FDe)	2010	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(FDe)	2010	G 2.0 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30(FDe)	2010	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i30(FDe)	2010	G 2.0 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30(FDe)	2010	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(FDe)	2010	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30(FDe)	2010	G 2.0 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30(FDe)	2010	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(FDe)	2010	G 2.0 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30(FDe)	2010	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30(FDe)	2010	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	i30(FDe)	2010	G 2.0 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30(FDe)	2010	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(FDe)	2009	D 1.6 TCI-U	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	
Europe/General	i30(FDe)	2009	D 1.6 TCI-U	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	
Europe/General	i30(FDe)	2009	D 1.6 TCI-U	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(FDe)	2009	D 1.6 TCI-U	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30(FDe)	2009	D 1.6 TCI-U	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30(FDe)	2009	D 1.6 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(FDe)	2009	D 1.6 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30(FDe)	2009	D 1.6 TCI-U	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30(FDe)	2009	D 1.6 TCI-U	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	i30(FDe)	2009	D 1.6 TCI-U	BCM [Body Control Module]	√			√	√	
Europe/General	i30(FDe)	2009	D 1.6 TCI-U	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(FDe)	2009	D 1.6 TCI-U2	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	
Europe/General	i30(FDe)	2009	D 1.6 TCI-U2	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	
Europe/General	i30(FDe)	2009	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(FDe)	2009	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30(FDe)	2009	D 1.6 TCI-U2	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30(FDe)	2009	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(FDe)	2009	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30(FDe)	2009	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i30(FDe)	2009	D 1.6 TCI-U2	BCM [Body Control Module]	√			√	√	
Europe/General	i30(FDe)	2009	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(FDe)	2009	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i30(FDe)	2009	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(FDe)	2009	D 2.0 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30(FDe)	2009	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30(FDe)	2009	D 2.0 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	i30(FDe)	2009	D 2.0 TCI-D	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30(FDe)	2009	D 2.0 TCI-D	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30(FDe)	2009	D 2.0 TCI-D	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	i30(FDe)	2009	D 2.0 TCI-D	BCM [Body Control Module]	√			√	√	
Europe/General	i30(FDe)	2009	D 2.0 TCI-D	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(FDe)	2009	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i30(FDe)	2009	G 1.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30(FDe)	2009	G 1.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30(FDe)	2009	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(FDe)	2009	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30(FDe)	2009	G 1.4 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30(FDe)	2009	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(FDe)	2009	G 1.4 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30(FDe)	2009	G 1.4 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30(FDe)	2009	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i30(FDe)	2009	G 1.4 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30(FDe)	2009	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(FDe)	2009	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i30(FDe)	2009	G 1.6 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30(FDe)	2009	G 1.6 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30(FDe)	2009	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(FDe)	2009	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30(FDe)	2009	G 1.6 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30(FDe)	2009	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(FDe)	2009	G 1.6 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30(FDe)	2009	G 1.6 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30(FDe)	2009	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	i30(FDe)	2009	G 1.6 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30(FDe)	2009	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(FDe)	2009	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0120
Europe/General	i30(FDe)	2009	G 2.0 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	i30(FDe)	2009	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(FDe)	2009	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30(FDe)	2009	G 2.0 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30(FDe)	2009	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(FDe)	2009	G 2.0 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30(FDe)	2009	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30(FDe)	2009	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	i30(FDe)	2009	G 2.0 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30(FDe)	2009	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2018	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	i30(GD)	2018	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2018	D 1.6 TCI-U2	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	i30(GD)	2018	D 1.6 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064

Europe/General	i30(GD)	2018	D 1.6 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2018	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2018	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2018	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2018	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(GD)	2018	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GD)	2018	D 1.6 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GD)	2018	D 1.6 TCI-U2	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
Europe/General	i30(GD)	2018	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2018	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2018	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2018	D 1.6 TCI-U2	SERVICE [Service Reminder]	√					
Europe/General	i30(GD)	2018	D 1.6 TCI-U2	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GD)	2018	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2018	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2018	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2018	F 1.6 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i30(GD)	2018	F 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2018	F 1.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GD)	2018	F 1.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2018	F 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2018	F 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2018	F 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2018	F 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(GD)	2018	F 1.6 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GD)	2018	F 1.6 MPI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
Europe/General	i30(GD)	2018	F 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2018	F 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2018	F 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2018	F 1.6 MPI	SERVICE [Service Reminder]	√					
Europe/General	i30(GD)	2018	F 1.6 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GD)	2018	F 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2018	F 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2018	F 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2018	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	i30(GD)	2018	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i30(GD)	2018	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2018	G 1.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GD)	2018	G 1.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2018	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2018	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2018	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	i30(GD)	2018	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(GD)	2018	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GD)	2018	G 1.6 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GD)	2018	G 1.6 MPI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
Europe/General	i30(GD)	2018	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2018	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2018	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2018	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2018	G 1.6 MPI	SERVICE [Service Reminder]	√					
Europe/General	i30(GD)	2018	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2018	G 1.6 MPI	CLU VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GD)	2018	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2018	G 1.8 MPI	ENGINE [Leaded All]	√	√	√	√		0116, 0015, 0073, 0013, 0120, 0158
Europe/General	i30(GD)	2018	G 1.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	i30(GD)	2018	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2018	G 1.8 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2018	G 1.8 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GD)	2018	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2018	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2018	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2018	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GD)	2018	G 1.8 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GD)	2018	G 1.8 MPI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
Europe/General	i30(GD)	2018	G 1.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2018	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2018	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2018	G 1.8 MPI	SERVICE [Service Reminder]	√					
Europe/General	i30(GD)	2018	G 1.8 MPI	CLU VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GD)	2018	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2018	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2018	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2018	G 2.0 GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(GD)	2018	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2018	G 2.0 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GD)	2018	G 2.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2018	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2018	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2018	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2018	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(GD)	2018	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GD)	2018	G 2.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GD)	2018	G 2.0 GDI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090

Europe/General	i30(GD)	2018	G 2.0 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2018	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2018	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2018	G 2.0 GDI	SERVICE [Service Reminder]	√					
Europe/General	i30(GD)	2018	G 2.0 GDI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GD)	2018	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2018	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2018	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2017	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	i30(GD)	2017	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2017	D 1.6 TCI-U2	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	i30(GD)	2017	D 1.6 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GD)	2017	D 1.6 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2017	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2017	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2017	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2017	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(GD)	2017	D 1.6 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GD)	2017	D 1.6 TCI-U2	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
Europe/General	i30(GD)	2017	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2017	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2017	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2017	D 1.6 TCI-U2	SERVICE [Service Reminder]	√					
Europe/General	i30(GD)	2017	D 1.6 TCI-U2	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GD)	2017	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2017	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2017	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2017	F 1.6 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i30(GD)	2017	F 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2017	F 1.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GD)	2017	F 1.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2017	F 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2017	F 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2017	F 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2017	F 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(GD)	2017	F 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GD)	2017	F 1.6 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GD)	2017	F 1.6 MPI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
Europe/General	i30(GD)	2017	F 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2017	F 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2017	F 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2017	F 1.6 MPI	SERVICE [Service Reminder]	√					
Europe/General	i30(GD)	2017	F 1.6 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			

Europe/General	i30(GD)	2017	F 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2017	F 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2017	F 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2017	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	i30(GD)	2017	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i30(GD)	2017	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2017	G 1.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GD)	2017	G 1.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2017	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2017	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2017	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2017	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(GD)	2017	G 1.6 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GD)	2017	G 1.6 MPI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
Europe/General	i30(GD)	2017	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2017	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2017	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2017	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2017	G 1.6 MPI	SERVICE [Service Reminder]	√					
Europe/General	i30(GD)	2017	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2017	G 1.6 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GD)	2017	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2017	G 1.8 MPI	ENGINE [Leaded All]	√	√	√	√		0116, 0015, 0073, 0013, 0120, 0158
Europe/General	i30(GD)	2017	G 1.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	i30(GD)	2017	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2017	G 1.8 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2017	G 1.8 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GD)	2017	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2017	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2017	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2017	G 1.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(GD)	2017	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GD)	2017	G 1.8 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GD)	2017	G 1.8 MPI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
Europe/General	i30(GD)	2017	G 1.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2017	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2017	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2017	G 1.8 MPI	SERVICE [Service Reminder]	√					
Europe/General	i30(GD)	2017	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GD)	2017	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2017	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2017	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026

Europe/General	i30(GD)	2017	G 2.0 GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(GD)	2017	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2017	G 2.0 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GD)	2017	G 2.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2017	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2017	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2017	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2017	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(GD)	2017	G 2.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GD)	2017	G 2.0 GDI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
Europe/General	i30(GD)	2017	G 2.0 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2017	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2017	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2017	G 2.0 GDI	SERVICE [Service Reminder]	√					
Europe/General	i30(GD)	2017	G 2.0 GDI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GD)	2017	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2017	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2017	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2016	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	i30(GD)	2016	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2016	D 1.6 TCI-U2	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	i30(GD)	2016	D 1.6 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GD)	2016	D 1.6 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2016	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2016	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2016	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2016	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(GD)	2016	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GD)	2016	D 1.6 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GD)	2016	D 1.6 TCI-U2	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
Europe/General	i30(GD)	2016	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2016	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2016	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2016	D 1.6 TCI-U2	SERVICE [Service Reminder]	√					
Europe/General	i30(GD)	2016	D 1.6 TCI-U2	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GD)	2016	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2016	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2016	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2016	F 1.6 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i30(GD)	2016	F 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2016	F 1.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GD)	2016	F 1.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2016	F 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			

Europe/General	i30(GD)	2016	F 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2016	F 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2016	F 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(GD)	2016	F 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GD)	2016	F 1.6 MPI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
Europe/General	i30(GD)	2016	F 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2016	F 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2016	F 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2016	F 1.6 MPI	SERVICE [Service Reminder]	√					
Europe/General	i30(GD)	2016	F 1.6 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GD)	2016	F 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2016	F 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2016	F 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2016	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	i30(GD)	2016	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i30(GD)	2016	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2016	G 1.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GD)	2016	G 1.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2016	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2016	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2016	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2016	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(GD)	2016	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GD)	2016	G 1.6 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GD)	2016	G 1.6 MPI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
Europe/General	i30(GD)	2016	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2016	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2016	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2016	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2016	G 1.6 MPI	SERVICE [Service Reminder]	√					
Europe/General	i30(GD)	2016	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2016	G 1.6 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GD)	2016	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2016	G 1.8 MPI	ENGINE [Leaded All]	√	√	√	√		0116, 0015, 0073, 0013, 0120, 0158
Europe/General	i30(GD)	2016	G 1.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	i30(GD)	2016	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2016	G 1.8 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2016	G 1.8 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GD)	2016	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2016	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2016	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2016	G 1.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		

Europe/General	i30(GD)	2016	G 1.8 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GD)	2016	G 1.8 MPI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
Europe/General	i30(GD)	2016	G 1.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2016	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2016	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2016	G 1.8 MPI	SERVICE [Service Reminder]	√					
Europe/General	i30(GD)	2016	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GD)	2016	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2016	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2016	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2016	G 2.0 GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(GD)	2016	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2016	G 2.0 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GD)	2016	G 2.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2016	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2016	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2016	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2016	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(GD)	2016	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GD)	2016	G 2.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GD)	2016	G 2.0 GDI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
Europe/General	i30(GD)	2016	G 2.0 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2016	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2016	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2016	G 2.0 GDI	SERVICE [Service Reminder]	√					
Europe/General	i30(GD)	2016	G 2.0 GDI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GD)	2016	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2016	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2016	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	

Europe/General	i30(GD)	2014	D 1.6 TCI-U2	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2014	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2014	F 1.6 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i30(GD)	2014	F 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2014	F 1.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GD)	2014	F 1.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2014	F 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2014	F 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2014	F 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2014	F 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	i30(GD)	2014	F 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GD)	2014	F 1.6 MPI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
Europe/General	i30(GD)	2014	F 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2014	F 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2014	F 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2014	F 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2014	F 1.6 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GD)	2014	F 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2014	F 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2014	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i30(GD)	2014	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	i30(GD)	2014	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2014	G 1.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GD)	2014	G 1.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2014	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2014	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	i30(GD)	2014	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GD)	2014	G 1.6 MPI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
Europe/General	i30(GD)	2014	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2014	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2014	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2014	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2014	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2014	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2014	G 1.8 MPI	ENGINE [Leaded All]	√	√	√	√		0116, 0015, 0073, 0013, 0120, 0158
Europe/General	i30(GD)	2014	G 1.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	i30(GD)	2014	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2014	G 1.8 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GD)	2014	G 1.8 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062

Europe/General	i30(GD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2014	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2014	G 1.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	i30(GD)	2014	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GD)	2014	G 1.8 MPI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
Europe/General	i30(GD)	2014	G 1.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2014	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2014	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2014	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2014	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GD)	2014	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2014	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2014	G 2.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i30(GD)	2014	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2014	G 2.0 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GD)	2014	G 2.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2014	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2014	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	i30(GD)	2014	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GD)	2014	G 2.0 GDI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
Europe/General	i30(GD)	2014	G 2.0 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2014	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2014	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2014	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2014	G 2.0 GDI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GD)	2014	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2014	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	

Europe/General	i30(GD)	2013	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2013	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2013	F 1.6 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i30(GD)	2013	F 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2013	F 1.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GD)	2013	F 1.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2013	F 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2013	F 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2013	F 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2013	F 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	i30(GD)	2013	F 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GD)	2013	F 1.6 MPI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
Europe/General	i30(GD)	2013	F 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2013	F 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2013	F 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2013	F 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2013	F 1.6 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GD)	2013	F 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2013	F 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2013	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i30(GD)	2013	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	i30(GD)	2013	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2013	G 1.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GD)	2013	G 1.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2013	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2013	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	i30(GD)	2013	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GD)	2013	G 1.6 MPI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
Europe/General	i30(GD)	2013	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2013	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2013	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2013	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2013	G 1.6 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GD)	2013	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2013	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2013	G 1.8 MPI	ENGINE [Leaded All]	√	√	√	√		0116, 0015, 0073, 0013, 0120, 0158
Europe/General	i30(GD)	2013	G 1.8 MPI	ENGINE [Unleaded All]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	i30(GD)	2013	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2013	G 1.8 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064

Europe/General	i30(GD)	2013	G 1.8 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2013	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2013	G 1.8 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	i30(GD)	2013	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GD)	2013	G 1.8 MPI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
Europe/General	i30(GD)	2013	G 1.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2013	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2013	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2013	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2013	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GD)	2013	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2013	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GD)	2013	G 2.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i30(GD)	2013	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GD)	2013	G 2.0 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GD)	2013	G 2.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GD)	2013	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GD)	2013	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GD)	2013	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GD)	2013	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	i30(GD)	2013	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GD)	2013	G 2.0 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GD)	2013	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GD)	2013	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GD)	2013	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GD)	2013	G 2.0 GDI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GD)	2013	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GD)	2013	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2017	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0116, 0060, 0013, 0061, 0035, 0158
Europe/General	i30(GDe)	2017	D 1.4 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2017	D 1.4 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2017	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2017	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2017	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	D 1.4 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	i30(GDe)	2017	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2017	D 1.4 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	D 1.4 TCI-U2	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i30(GDe)	2017	D 1.4 TCI-U2	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2017	D 1.4 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2017	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129

Europe/General	i30(GDe)	2017	D 1.4 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	D 1.4 TCI-U2	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2017	D 1.4 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2017	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	i30(GDe)	2017	D 1.6 TCI-U2	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	i30(GDe)	2017	D 1.6 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2017	D 1.6 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2017	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2017	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2017	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	D 1.6 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	i30(GDe)	2017	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2017	D 1.6 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	D 1.6 TCI-U2	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i30(GDe)	2017	D 1.6 TCI-U2	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2017	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2017	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	D 1.6 TCI-U2	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2017	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2017	G 1.4 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(GDe)	2017	G 1.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2017	G 1.4 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2017	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2017	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2017	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	G 1.4 MPI	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	i30(GDe)	2017	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2017	G 1.4 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	G 1.4 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i30(GDe)	2017	G 1.4 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2017	G 1.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2017	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2017	G 1.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	G 1.4 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2017	G 1.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2017	G 1.6 GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(GDe)	2017	G 1.6 GDI	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	i30(GDe)	2017	G 1.6 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2017	G 1.6 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062

Europe/General	i30(GDe)	2017	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2017	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2017	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	G 1.6 GDI	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	i30(GDe)	2017	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2017	G 1.6 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	G 1.6 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i30(GDe)	2017	G 1.6 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2017	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2017	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2017	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	G 1.6 GDI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2017	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2017	G 1.6 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(GDe)	2017	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GDe)	2017	G 1.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2017	G 1.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2017	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2017	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2017	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	G 1.6 MPI	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	i30(GDe)	2017	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2017	G 1.6 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	G 1.6 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i30(GDe)	2017	G 1.6 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2017	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2017	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2017	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	G 1.6 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2017	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2017	G 1.6 T-GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(GDe)	2017	G 1.6 T-GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2017	G 1.6 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2017	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	G 1.6 T-GDI	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	i30(GDe)	2017	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2017	G 1.6 T-GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i30(GDe)	2017	G 1.6 T-GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2017	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112

Europe/General	i30(GDe)	2017	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2017	G 1.6 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	G 1.6 T-GDI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2017	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2017	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2016	D 1.4 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2016	D 1.4 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2016	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2016	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2016	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	D 1.4 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	i30(GDe)	2016	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2016	D 1.4 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	D 1.4 TCI-U2	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i30(GDe)	2016	D 1.4 TCI-U2	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2016	D 1.4 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2016	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2016	D 1.4 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	D 1.4 TCI-U2	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2016	D 1.4 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2016	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	i30(GDe)	2016	D 1.6 TCI-U2	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	i30(GDe)	2016	D 1.6 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2016	D 1.6 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2016	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2016	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2016	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	D 1.6 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	i30(GDe)	2016	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2016	D 1.6 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	D 1.6 TCI-U2	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i30(GDe)	2016	D 1.6 TCI-U2	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2016	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2016	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2016	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	D 1.6 TCI-U2	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2016	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2016	G 1.4 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(GDe)	2016	G 1.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2016	G 1.4 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062

Europe/General	i30(GDe)	2016	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2016	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	G 1.4 MPI	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	i30(GDe)	2016	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2016	G 1.4 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	G 1.4 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i30(GDe)	2016	G 1.4 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2016	G 1.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2016	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2016	G 1.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	G 1.4 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2016	G 1.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2016	G 1.6 GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(GDe)	2016	G 1.6 GDI	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	i30(GDe)	2016	G 1.6 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2016	G 1.6 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2016	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2016	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2016	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	G 1.6 GDI	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	i30(GDe)	2016	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2016	G 1.6 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	G 1.6 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i30(GDe)	2016	G 1.6 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2016	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2016	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2016	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	G 1.6 GDI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2016	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2016	G 1.6 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(GDe)	2016	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GDe)	2016	G 1.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2016	G 1.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2016	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2016	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2016	G 1.6 MPI	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	i30(GDe)	2016	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2016	G 1.6 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	G 1.6 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i30(GDe)	2016	G 1.6 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2016	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112

Europe/General	i30(GDe)	2016	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2016	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	G 1.6 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2016	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2016	G 1.6 T-GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(GDe)	2016	G 1.6 T-GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2016	G 1.6 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2016	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2016	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2016	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	G 1.6 T-GDI	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	i30(GDe)	2016	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2016	G 1.6 T-GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i30(GDe)	2016	G 1.6 T-GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2016	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2016	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2016	G 1.6 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	G 1.6 T-GDI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2016	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2016	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062

Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2015	G 1.4 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(GDe)	2015	G 1.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2015	G 1.4 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2015	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2015	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2015	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	G 1.4 MPI	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	i30(GDe)	2015	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2015	G 1.4 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	G 1.4 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i30(GDe)	2015	G 1.4 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2015	G 1.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2015	G 1.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	G 1.4 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2015	G 1.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2015	G 1.6 GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(GDe)	2015	G 1.6 GDI	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	i30(GDe)	2015	G 1.6 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2015	G 1.6 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2015	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	G 1.6 GDI	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	i30(GDe)	2015	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2015	G 1.6 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	G 1.6 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i30(GDe)	2015	G 1.6 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2015	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112

Europe/General	i30(GDe)	2015	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2015	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	G 1.6 GDI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2015	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2015	G 1.6 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(GDe)	2015	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GDe)	2015	G 1.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2015	G 1.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2015	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	G 1.6 MPI	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	i30(GDe)	2015	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2015	G 1.6 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	G 1.6 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i30(GDe)	2015	G 1.6 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2015	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2015	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2015	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2015	G 1.6 T-GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(GDe)	2015	G 1.6 T-GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2015	G 1.6 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2015	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2015	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2015	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	G 1.6 T-GDI	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	i30(GDe)	2015	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2015	G 1.6 T-GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	i30(GDe)	2015	G 1.6 T-GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2015	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2015	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2015	G 1.6 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	G 1.6 T-GDI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2015	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2015	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062

Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2014	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2014	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2014	G 1.4 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(GDe)	2014	G 1.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2014	G 1.4 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2014	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2014	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2014	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2014	G 1.4 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	i30(GDe)	2014	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2014	G 1.4 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2014	G 1.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2014	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2014	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2014	G 1.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2014	G 1.4 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2014	G 1.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2014	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026

Europe/General	i30(GDe)	2014	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i30(GDe)	2014	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GDe)	2014	G 1.6 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2014	G 1.6 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2014	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2014	G 1.6 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	i30(GDe)	2014	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2014	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2014	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2014	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2014	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2014	G 1.6 GDI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2014	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2014	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2014	G 1.6 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(GDe)	2014	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GDe)	2014	G 1.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2014	G 1.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2014	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2014	G 1.6 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	i30(GDe)	2014	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2014	G 1.6 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2014	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2014	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2014	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2014	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2014	G 1.6 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2014	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2014	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	

Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2013	D 1.4 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2013	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2013	G 1.4 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(GDe)	2013	G 1.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2013	G 1.4 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2013	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2013	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2013	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2013	G 1.4 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	i30(GDe)	2013	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2013	G 1.4 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2013	G 1.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2013	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2013	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2013	G 1.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2013	G 1.4 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2013	G 1.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2013	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2013	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i30(GDe)	2013	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GDe)	2013	G 1.6 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2013	G 1.6 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2013	G 1.6 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	i30(GDe)	2013	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2013	G 1.6 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021

Europe/General	i30(GDe)	2013	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2013	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2013	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2013	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2013	G 1.6 GDI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2013	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2013	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(GDe)	2013	G 1.6 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(GDe)	2013	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30(GDe)	2013	G 1.6 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	i30(GDe)	2013	G 1.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
Europe/General	i30(GDe)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(GDe)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(GDe)	2013	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(GDe)	2013	G 1.6 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	i30(GDe)	2013	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i30(GDe)	2013	G 1.6 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i30(GDe)	2013	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(GDe)	2013	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i30(GDe)	2013	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2013	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(GDe)	2013	G 1.6 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
Europe/General	i30(GDe)	2013	G 1.6 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i30(GDe)	2013	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(PD)	2018	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	i30(PD)	2018	D 1.6 TCI-U2	AT [Dual Clutch Transmission]	√	√	√	√		0022, 0025
Europe/General	i30(PD)	2018	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0154
Europe/General	i30(PD)	2018	D 1.6 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	i30(PD)	2018	D 1.6 TCI-U2	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	i30(PD)	2018	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(PD)	2018	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(PD)	2018	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(PD)	2018	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(PD)	2018	D 1.6 TCI-U2	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i30(PD)	2018	D 1.6 TCI-U2	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	i30(PD)	2018	D 1.6 TCI-U2	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	i30(PD)	2018	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(PD)	2018	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	i30(PD)	2018	D 1.6 TCI-U2	AMP [Amplifier]						0006
Europe/General	i30(PD)	2018	D 1.6 TCI-U2	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	i30(PD)	2018	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(PD)	2018	D 1.6 TCI-U2	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	i30(PD)	2018	D 1.6 TCI-U2	IBU - TPMS [IBU - TPMS]	√	√	√			

Europe/General	i30(PD)	2018	D 1.6 TCI-U2	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052
Europe/General	i30(PD)	2018	D 1.6 TCI-U2	ECALL [e - Call]	√	√	√			
Europe/General	i30(PD)	2018	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(PD)	2018	G 1.4 T-GDI	ENGINE [Engine Control]	√	√	√	√		0015, 0072, 0116, 0158
Europe/General	i30(PD)	2018	G 1.4 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		0022, 0025
Europe/General	i30(PD)	2018	G 1.4 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0154
Europe/General	i30(PD)	2018	G 1.4 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	i30(PD)	2018	G 1.4 T-GDI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	i30(PD)	2018	G 1.4 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(PD)	2018	G 1.4 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(PD)	2018	G 1.4 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(PD)	2018	G 1.4 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(PD)	2018	G 1.4 T-GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i30(PD)	2018	G 1.4 T-GDI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	i30(PD)	2018	G 1.4 T-GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	i30(PD)	2018	G 1.4 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	i30(PD)	2018	G 1.4 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(PD)	2018	G 1.4 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	i30(PD)	2018	G 1.4 T-GDI	AMP [Amplifier]						0006
Europe/General	i30(PD)	2018	G 1.4 T-GDI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	i30(PD)	2018	G 1.4 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(PD)	2018	G 1.4 T-GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	i30(PD)	2018	G 1.4 T-GDI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	i30(PD)	2018	G 1.4 T-GDI	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052
Europe/General	i30(PD)	2018	G 1.4 T-GDI	ECALL [e - Call]	√	√	√			
Europe/General	i30(PD)	2018	G 1.4 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(PD)	2018	G 1.6 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(PD)	2018	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	i30(PD)	2018	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0154
Europe/General	i30(PD)	2018	G 1.6 MPI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	i30(PD)	2018	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(PD)	2018	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(PD)	2018	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(PD)	2018	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(PD)	2018	G 1.6 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i30(PD)	2018	G 1.6 MPI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	i30(PD)	2018	G 1.6 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	i30(PD)	2018	G 1.6 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	i30(PD)	2018	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(PD)	2018	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	i30(PD)	2018	G 1.6 MPI	AMP [Amplifier]						0006
Europe/General	i30(PD)	2018	G 1.6 MPI	IBU - BCM [IBU - BCM]	√	√	√	√	√	

Europe/General	i30(PD)	2018	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(PD)	2018	G 1.6 MPI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	i30(PD)	2018	G 1.6 MPI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	i30(PD)	2018	G 1.6 MPI	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052
Europe/General	i30(PD)	2018	G 1.6 MPI	ECALL [e - Call]	√	√	√			
Europe/General	i30(PD)	2018	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(PD)	2018	G 1.6 T-GDI	ENGINE [Engine Control]	√	√	√	√		0015, 0072, 0116, 0158
Europe/General	i30(PD)	2018	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		0022, 0025
Europe/General	i30(PD)	2018	G 1.6 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0154
Europe/General	i30(PD)	2018	G 1.6 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	i30(PD)	2018	G 1.6 T-GDI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	i30(PD)	2018	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(PD)	2018	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(PD)	2018	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(PD)	2018	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(PD)	2018	G 1.6 T-GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i30(PD)	2018	G 1.6 T-GDI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	i30(PD)	2018	G 1.6 T-GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	i30(PD)	2018	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	i30(PD)	2018	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(PD)	2018	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	i30(PD)	2018	G 1.6 T-GDI	AMP [Amplifier]						0006
Europe/General	i30(PD)	2018	G 1.6 T-GDI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	i30(PD)	2018	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(PD)	2018	G 1.6 T-GDI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	i30(PD)	2018	G 1.6 T-GDI	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052
Europe/General	i30(PD)	2018	G 1.6 T-GDI	ECALL [e - Call]	√	√	√			
Europe/General	i30(PD)	2018	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(PD)	2018	G 2.0 GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(PD)	2018	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	i30(PD)	2018	G 2.0 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0154
Europe/General	i30(PD)	2018	G 2.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	i30(PD)	2018	G 2.0 GDI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	i30(PD)	2018	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(PD)	2018	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(PD)	2018	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(PD)	2018	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(PD)	2018	G 2.0 GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i30(PD)	2018	G 2.0 GDI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	i30(PD)	2018	G 2.0 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	i30(PD)	2018	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	i30(PD)	2018	G 2.0 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112

Europe/General	i30(PD)	2018	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	i30(PD)	2018	G 2.0 GDI	AMP [Amplifier]						0006
Europe/General	i30(PD)	2018	G 2.0 GDI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	i30(PD)	2018	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(PD)	2018	G 2.0 GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	i30(PD)	2018	G 2.0 GDI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	i30(PD)	2018	G 2.0 GDI	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052
Europe/General	i30(PD)	2018	G 2.0 GDI	ECALL [e - Call]	√	√	√			
Europe/General	i30(PD)	2018	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	AT [Dual Clutch Transmission]	√	√	√	√		0022, 0025
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	ABS [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	AHLS [Auto Headlamp Leveling System (5DR)]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	AHLS [Auto Headlamp Leveling System (WGN)]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	AHLS [Auto Headlamp Leveling System (Fastback)]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	ECALL [e - Call]	√	√	√			
Europe/General	i30(PDE)	2018	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	ENGINE [Engine Control]	√	√	√	√		0015, 0072, 0116, 0158
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	ABS [ABS / ESP]	√	√	√	√	√	0064

Europe/General	i30(PDE)	2018	G 1.0 T-GDI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	AHLS [Auto Headlamp Leveling System (5DR)]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	AHLS [Auto Headlamp Leveling System (WGN)]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	AHLS [Auto Headlamp Leveling System (Fastback)]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	ECALL [e - Call]	√	√	√			
Europe/General	i30(PDE)	2018	G 1.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(PDE)	2018	G 1.4 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(PDE)	2018	G 1.4 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.4 MPI	ABS [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30(PDE)	2018	G 1.4 MPI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	i30(PDE)	2018	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(PDE)	2018	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(PDE)	2018	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(PDE)	2018	G 1.4 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i30(PDE)	2018	G 1.4 MPI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	i30(PDE)	2018	G 1.4 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.4 MPI	AHLS [Auto Headlamp Leveling System (5DR)]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.4 MPI	AHLS [Auto Headlamp Leveling System (WGN)]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.4 MPI	AHLS [Auto Headlamp Leveling System (Fastback)]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.4 MPI	AAF [Active Air Flap]	√	√	√	√	√	

Europe/General	i30(PDE)	2018	G 1.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(PDE)	2018	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	i30(PDE)	2018	G 1.4 MPI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.4 MPI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	i30(PDE)	2018	G 1.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.4 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.4 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.4 MPI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.4 MPI	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052
Europe/General	i30(PDE)	2018	G 1.4 MPI	ECALL [e - Call]	√	√	√			
Europe/General	i30(PDE)	2018	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	ENGINE [Engine Control]	√	√	√	√		0015, 0072, 0116, 0158
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		0022, 0025
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	ABS [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	AHLS [Auto Headlamp Leveling System (5DR)]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	AHLS [Auto Headlamp Leveling System (WGN)]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	AHLS [Auto Headlamp Leveling System (Fastback)]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	ECALL [e - Call]	√	√	√			
Europe/General	i30(PDE)	2018	G 1.4 T-GDI	CODE [Transmitter Code Saving]				√		0026

Europe/General	i30(PDE)	2018	G 1.6 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(PDE)	2018	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	i30(PDE)	2018	G 1.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.6 MPI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	i30(PDE)	2018	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(PDE)	2018	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(PDE)	2018	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(PDE)	2018	G 1.6 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i30(PDE)	2018	G 1.6 MPI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	i30(PDE)	2018	G 1.6 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.6 MPI	AHLS [Auto Headlamp Leveling System (5DR)]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.6 MPI	AHLS [Auto Headlamp Leveling System (WGN)]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.6 MPI	AHLS [Auto Headlamp Leveling System (Fastback)]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.6 MPI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(PDE)	2018	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	i30(PDE)	2018	G 1.6 MPI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.6 MPI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	i30(PDE)	2018	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.6 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.6 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.6 MPI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	i30(PDE)	2018	G 1.6 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i30(PDE)	2018	G 1.6 MPI	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052
Europe/General	i30(PDE)	2018	G 1.6 MPI	ECALL [e - Call]	√	√	√			
Europe/General	i30(PDE)	2018	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	AT [Dual Clutch Transmission]	√	√	√	√		0022, 0025
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	ABS [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112

Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	ECALL [e - Call]	√	√	√			
Europe/General	i30(PDE)	2017	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	ENGINE [Engine Control]	√	√	√	√		0015, 0072, 0116, 0158
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	ABS [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	ECALL [e - Call]	√	√	√			
Europe/General	i30(PDE)	2017	G 1.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(PDE)	2017	G 1.4 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(PDE)	2017	G 1.4 MPI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	i30(PDE)	2017	G 1.4 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.4 MPI	ABS [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30(PDE)	2017	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(PDE)	2017	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(PDE)	2017	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	i30(PDE)	2017	G 1.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(PDE)	2017	G 1.4 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i30(PDE)	2017	G 1.4 MPI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	i30(PDE)	2017	G 1.4 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.4 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.4 MPI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(PDE)	2017	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	i30(PDE)	2017	G 1.4 MPI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.4 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.4 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.4 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i30(PDE)	2017	G 1.4 MPI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.4 MPI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	i30(PDE)	2017	G 1.4 MPI	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052
Europe/General	i30(PDE)	2017	G 1.4 MPI	ECALL [e - Call]	√	√	√			
Europe/General	i30(PDE)	2017	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	ENGINE [Engine Control]	√	√	√	√		0015, 0072, 0116, 0158
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		0022, 0025
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	ABS [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052
Europe/General	i30(PDE)	2017	G 1.4 T-GDI	ECALL [e - Call]	√	√	√			

Europe/General	i30(PDE)	2017	G 1.4 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30(PDE)	2017	G 1.6 MPI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	i30(PDE)	2017	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	i30(PDE)	2017	G 1.6 MPI	ABS [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30(PDE)	2017	G 1.6 MPI	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	i30(PDE)	2017	G 1.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30(PDE)	2017	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i30(PDE)	2017	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30(PDE)	2017	G 1.6 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i30(PDE)	2017	G 1.6 MPI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	i30(PDE)	2017	G 1.6 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.6 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.6 MPI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30(PDE)	2017	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	i30(PDE)	2017	G 1.6 MPI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.6 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.6 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.6 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i30(PDE)	2017	G 1.6 MPI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30(PDE)	2017	G 1.6 MPI	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052
Europe/General	i30(PDE)	2017	G 1.6 MPI	ECALL [e - Call]	√	√	√			
Europe/General	i30(PDE)	2017	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U	ENGINE [Engine (CPF+)]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U	ENGINE [Engine (CPF -)]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091

Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	ENGINE [ISG (+) / CPF (-)]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	ENGINE [ISG (+) / CPF (+)]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	ENGINE [ISG (-) / CPF (+)]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	ENGINE [ISG (-) / CPF (-)]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 2.0 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 2.0 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 2.0 TCI-D	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 2.0 TCI-D	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 2.0 TCI-D	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 2.0 TCI-D	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	D 2.0 TCI-D	CODE [Transmitter Code Saving]				√		0026

Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0040, 0013, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0072, 0040, 0013, 0120, 0116, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0072, 0040, 0013, 0120, 0116, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0040, 0013, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0072, 0040, 0013, 0120, 0116, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0072, 0040, 0013, 0120, 0116, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 2.0 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158

Europe/General	i30/ELANTRA NEOS(FD)	2012	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 2.0 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 2.0 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 2.0 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 2.0 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2012	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U	ENGINE [Engine (CPF+)]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U	ENGINE [Engine (CPF -)]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	ENGINE [ISG (+) / CPF (-)]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	ENGINE [ISG (-) / CPF (+)]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	ENGINE [ISG (-) / CPF (-)]	√	√	√	√	√	

Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 2.0 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 2.0 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 2.0 TCI-D	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 2.0 TCI-D	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 2.0 TCI-D	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	i30/ELANTRA NEOS(FD)	2011	D 2.0 TCI-D	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0040, 0013, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0072, 0040, 0013, 0120, 0116, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0072, 0040, 0013, 0120, 0116, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	AIRBAG [Airbag Control]	√	√	√			0109

Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0072, 0073, 0040, 0013, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0072, 0040, 0013, 0120, 0116, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0072, 0040, 0013, 0120, 0116, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2011	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	ENGINE [ISG (+) / CPF (-)]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	ENGINE [ISG (+) / CPF (+)]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	ENGINE [ISG (-) / CPF (+)]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	ENGINE [ISG (-) / CPF (-)]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		0094

Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 2.0 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 2.0 TCI-D	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 2.0 TCI-D	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 2.0 TCI-D	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 2.0 TCI-D	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	D 2.0 TCI-D	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	BCM [Body Control Module]	√			√	√	

Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.6 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.6 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.6 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.6 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.6 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 2.0 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 2.0 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 2.0 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 2.0 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	i30/ELANTRA NEOS(FD)	2010	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	

Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U2	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U2	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U2	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U2	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U2	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 2.0 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			0109

Europe/General	i30/ELANTRA NEOS(FD)	2009	D 2.0 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 2.0 TCI-D	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 2.0 TCI-D	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 2.0 TCI-D	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 2.0 TCI-D	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	D 2.0 TCI-D	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.4 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.4 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.4 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 2.0 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0120
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0120
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 2.0 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 2.0 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 2.0 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2009	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 1.6 TCI-U	ENGINE [Engine (CPF+)]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 1.6 TCI-U	ENGINE [Engine (CPF -)]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 1.6 TCI-U	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 1.6 TCI-U	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 1.6 TCI-U	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 1.6 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 1.6 TCI-U	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 1.6 TCI-U	TPMS [TPMS]	√	√	√		√	

Europe/General	i30/ELANTRA NEOS(FD)	2008	D 1.6 TCI-U	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 1.6 TCI-U	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 1.6 TCI-U	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 2.0 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 2.0 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 2.0 TCI-D	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 2.0 TCI-D	TPMS [TPMS]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 2.0 TCI-D	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 2.0 TCI-D	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2008	D 2.0 TCI-D	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	TPMS [TPMS]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026

Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.6 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0116, 0120, 0158
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.6 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.6 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.6 MPI	TPMS [TPMS]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.6 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 2.0 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0120
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√	√	0073, 0120
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 2.0 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0120
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 2.0 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 2.0 MPI	EPS [Electronic Power Steering]	√	√	√	√		0094
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 2.0 MPI	TPMS [TPMS]	√	√	√		√	
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	i30/ELANTRA NEOS(FD)	2008	G 2.0 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0123, 0158
Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0154
Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			

Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	ELSD [Electronic Limited Slip Differential]	√	√	√	√	√	0011
Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052
Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	ECALL [e - Call]	√	√	√			
Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	ESG [Electronic Sound Generator]	√	√	√			
Europe/General	i30N(PDEN)	2018	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2018	D 1.7 TCI-U2	ENGINE [Engine Control (Low Power)]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	i40(VF)	2018	D 1.7 TCI-U2	ENGINE [Engine Control (High Power)]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	i40(VF)	2018	D 1.7 TCI-U2	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	i40(VF)	2018	D 1.7 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i40(VF)	2018	D 1.7 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2018	D 1.7 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2018	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2018	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2018	D 1.7 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2018	D 1.7 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√		0094, 0150
Europe/General	i40(VF)	2018	D 1.7 TCI-U2	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	i40(VF)	2018	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2018	D 1.7 TCI-U2	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2018	D 1.7 TCI-U2	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2018	D 1.7 TCI-U2	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2018	D 1.7 TCI-U2	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2018	D 1.7 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2018	D 1.7 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2018	D 1.7 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2018	D 1.7 TCI-U2	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2018	D 1.7 TCI-U2	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2018	D 1.7 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2018	D 1.7 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	

Europe/General	i40(VF)	2018	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2018	G 1.6 GDI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	i40(VF)	2018	G 1.6 GDI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i40(VF)	2018	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2018	G 1.6 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2018	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2018	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2018	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2018	G 1.6 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094, 0150
Europe/General	i40(VF)	2018	G 1.6 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	i40(VF)	2018	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2018	G 1.6 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2018	G 1.6 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2018	G 1.6 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2018	G 1.6 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2018	G 1.6 GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2018	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2018	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2018	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2018	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2018	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2018	G 1.6 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2018	G 1.6 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2018	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2018	G 2.0 GDI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	i40(VF)	2018	G 2.0 GDI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i40(VF)	2018	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i40(VF)	2018	G 2.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2018	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2018	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2018	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2018	G 2.0 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094, 0150
Europe/General	i40(VF)	2018	G 2.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	i40(VF)	2018	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2018	G 2.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2018	G 2.0 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2018	G 2.0 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2018	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2018	G 2.0 GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2018	G 2.0 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2018	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2018	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2018	G 2.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133

Europe/General	i40(VF)	2018	G 2.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2018	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2018	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2018	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2018	G 2.0 MPI	ENGINE [Unleaded All]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	i40(VF)	2018	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√		0116, 0015, 0073, 0013, 0120, 0158
Europe/General	i40(VF)	2018	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i40(VF)	2018	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2018	G 2.0 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2018	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2018	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2018	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2018	G 2.0 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094, 0150
Europe/General	i40(VF)	2018	G 2.0 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	i40(VF)	2018	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2018	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2018	G 2.0 MPI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2018	G 2.0 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2018	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2018	G 2.0 MPI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2018	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2018	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2018	G 2.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2018	G 2.0 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2018	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2018	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2018	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	ENGINE [Engine Control (Low Power)]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	ENGINE [Engine Control (High Power)]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√		0094, 0150
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	AAF [Active Air Flap]	√	√	√	√	√	

Europe/General	i40(VF)	2017	D 1.7 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2017	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2017	G 1.6 GDI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	i40(VF)	2017	G 1.6 GDI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i40(VF)	2017	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2017	G 1.6 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2017	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2017	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2017	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2017	G 1.6 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094, 0150
Europe/General	i40(VF)	2017	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2017	G 1.6 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2017	G 1.6 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2017	G 1.6 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2017	G 1.6 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2017	G 1.6 GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2017	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2017	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2017	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2017	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2017	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2017	G 1.6 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2017	G 1.6 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2017	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2017	G 2.0 GDI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	i40(VF)	2017	G 2.0 GDI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i40(VF)	2017	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i40(VF)	2017	G 2.0 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2017	G 2.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2017	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2017	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2017	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2017	G 2.0 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094, 0150
Europe/General	i40(VF)	2017	G 2.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	i40(VF)	2017	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2017	G 2.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2017	G 2.0 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		

Europe/General	i40(VF)	2017	G 2.0 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2017	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2017	G 2.0 GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2017	G 2.0 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2017	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2017	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2017	G 2.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2017	G 2.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2017	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2017	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2017	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2017	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√		0116, 0015, 0073, 0013, 0120, 0158
Europe/General	i40(VF)	2017	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i40(VF)	2017	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2017	G 2.0 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2017	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2017	G 2.0 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094, 0150
Europe/General	i40(VF)	2017	G 2.0 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	i40(VF)	2017	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2017	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2017	G 2.0 MPI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2017	G 2.0 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2017	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2017	G 2.0 MPI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2017	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2017	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2017	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2017	G 2.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2017	G 2.0 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2017	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2017	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2017	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2016	D 1.7 TCI-U2	ENGINE [Engine Control (Low Power)]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	i40(VF)	2016	D 1.7 TCI-U2	ENGINE [Engine Control (High Power)]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	i40(VF)	2016	D 1.7 TCI-U2	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	i40(VF)	2016	D 1.7 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i40(VF)	2016	D 1.7 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2016	D 1.7 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2016	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2016	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2016	D 1.7 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2016	D 1.7 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√		0094, 0150

Europe/General	i40(VF)	2016	D 1.7 TCI-U2	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	i40(VF)	2016	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2016	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2016	D 1.7 TCI-U2	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2016	D 1.7 TCI-U2	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2016	D 1.7 TCI-U2	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2016	D 1.7 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2016	D 1.7 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2016	D 1.7 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2016	D 1.7 TCI-U2	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2016	D 1.7 TCI-U2	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2016	D 1.7 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2016	D 1.7 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2016	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2016	G 1.6 GDI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	i40(VF)	2016	G 1.6 GDI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i40(VF)	2016	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2016	G 1.6 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2016	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2016	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2016	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2016	G 1.6 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094, 0150
Europe/General	i40(VF)	2016	G 1.6 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	i40(VF)	2016	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2016	G 1.6 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2016	G 1.6 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2016	G 1.6 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2016	G 1.6 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2016	G 1.6 GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2016	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2016	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2016	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2016	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2016	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2016	G 1.6 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2016	G 1.6 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2016	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2016	G 2.0 GDI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	i40(VF)	2016	G 2.0 GDI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i40(VF)	2016	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i40(VF)	2016	G 2.0 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2016	G 2.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2016	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			

Europe/General	i40(VF)	2016	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2016	G 2.0 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094, 0150
Europe/General	i40(VF)	2016	G 2.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	i40(VF)	2016	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2016	G 2.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2016	G 2.0 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2016	G 2.0 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2016	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2016	G 2.0 GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2016	G 2.0 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2016	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2016	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2016	G 2.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2016	G 2.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2016	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2016	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2016	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2016	G 2.0 MPI	ENGINE [Unleaded All]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	i40(VF)	2016	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√		0116, 0015, 0073, 0013, 0120, 0158
Europe/General	i40(VF)	2016	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i40(VF)	2016	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2016	G 2.0 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2016	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2016	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2016	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2016	G 2.0 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094, 0150
Europe/General	i40(VF)	2016	G 2.0 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	i40(VF)	2016	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2016	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2016	G 2.0 MPI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2016	G 2.0 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2016	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2016	G 2.0 MPI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2016	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2016	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2016	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2016	G 2.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2016	G 2.0 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2016	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2016	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	ENGINE [Engine Control (Low power)]	√	√	√	√	√	
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	ENGINE [Engine Control (High power)]	√	√	√	√	√	
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093

Europe/General	i40(VF)	2015	D 1.7 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		0094, 0150
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2015	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2015	G 1.6 GDI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	i40(VF)	2015	G 1.6 GDI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i40(VF)	2015	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2015	G 1.6 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2015	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2015	G 1.6 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094, 0150
Europe/General	i40(VF)	2015	G 1.6 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	i40(VF)	2015	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2015	G 1.6 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2015	G 1.6 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2015	G 1.6 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2015	G 1.6 GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2015	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2015	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2015	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2015	G 1.6 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2015	G 1.6 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2015	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2015	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2015	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2015	G 2.0 GDI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158

Europe/General	i40(VF)	2015	G 2.0 GDI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i40(VF)	2015	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i40(VF)	2015	G 2.0 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2015	G 2.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2015	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2015	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094, 0150
Europe/General	i40(VF)	2015	G 2.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	i40(VF)	2015	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2015	G 2.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2015	G 2.0 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2015	G 2.0 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2015	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2015	G 2.0 GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2015	G 2.0 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2015	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2015	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2015	G 2.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2015	G 2.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2015	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2015	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2015	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2015	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√		0116, 0015, 0073, 0013, 0120, 0158
Europe/General	i40(VF)	2015	G 2.0 MPI	ENGINE [Unleaded All]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	i40(VF)	2015	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i40(VF)	2015	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2015	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2015	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094, 0150
Europe/General	i40(VF)	2015	G 2.0 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
Europe/General	i40(VF)	2015	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2015	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2015	G 2.0 MPI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2015	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2015	G 2.0 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2015	G 2.0 MPI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2015	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2015	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2015	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2015	G 2.0 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2015	G 2.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2015	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	

Europe/General	i40(VF)	2015	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2015	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	ENGINE [Engine Control (Low power)]	√	√	√	√	√	
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	ENGINE [Engine Control (High power)]	√	√	√	√	√	
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		0094, 0150
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2014	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2014	G 1.6 GDI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	i40(VF)	2014	G 1.6 GDI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i40(VF)	2014	G 1.6 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2014	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2014	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2014	G 1.6 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094, 0150
Europe/General	i40(VF)	2014	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2014	G 1.6 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2014	G 1.6 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2014	G 1.6 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2014	G 1.6 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2014	G 1.6 GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2014	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2014	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2014	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2014	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2014	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2014	G 1.6 GDI	PTM [Power Trunk Module]	√	√	√	√		

Europe/General	i40(VF)	2014	G 1.6 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2014	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2014	G 2.0 GDI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	i40(VF)	2014	G 2.0 GDI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i40(VF)	2014	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i40(VF)	2014	G 2.0 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2014	G 2.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2014	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2014	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094, 0150
Europe/General	i40(VF)	2014	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2014	G 2.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2014	G 2.0 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2014	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2014	G 2.0 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2014	G 2.0 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2014	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2014	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2014	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2014	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2014	G 2.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2014	G 2.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2014	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2014	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√		0116, 0015, 0073, 0013, 0120, 0158
Europe/General	i40(VF)	2014	G 2.0 MPI	ENGINE [Unleaded All]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	i40(VF)	2014	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i40(VF)	2014	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2014	G 2.0 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2014	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2014	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2014	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2014	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094, 0150
Europe/General	i40(VF)	2014	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2014	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2014	G 2.0 MPI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2014	G 2.0 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2014	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2014	G 2.0 MPI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2014	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2014	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2014	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2014	G 2.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133

Europe/General	i40(VF)	2014	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2014	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2014	G 2.0 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2014	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	ENGINE [Engine Control (Low power)]	√	√	√	√	√	
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	ENGINE [Engine Control (High power)]	√	√	√	√	√	
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		0150, 0094
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2013	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2013	G 1.6 GDI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	i40(VF)	2013	G 1.6 GDI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i40(VF)	2013	G 1.6 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2013	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2013	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2013	G 1.6 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0150, 0094
Europe/General	i40(VF)	2013	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2013	G 1.6 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2013	G 1.6 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2013	G 1.6 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2013	G 1.6 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2013	G 1.6 GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2013	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2013	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2013	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2013	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	

Europe/General	i40(VF)	2013	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2013	G 1.6 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2013	G 1.6 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2013	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2013	G 2.0 GDI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	i40(VF)	2013	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i40(VF)	2013	G 2.0 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2013	G 2.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2013	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2013	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2013	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2013	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0150, 0094
Europe/General	i40(VF)	2013	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2013	G 2.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2013	G 2.0 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2013	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2013	G 2.0 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2013	G 2.0 GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2013	G 2.0 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2013	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2013	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2013	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2013	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2013	G 2.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2013	G 2.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2013	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2013	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√		0116, 0015, 0073, 0013, 0120, 0158
Europe/General	i40(VF)	2013	G 2.0 MPI	ENGINE [Unleaded All]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	i40(VF)	2013	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i40(VF)	2013	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2013	G 2.0 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2013	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2013	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0150, 0094
Europe/General	i40(VF)	2013	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2013	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2013	G 2.0 MPI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2013	G 2.0 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2013	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2013	G 2.0 MPI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2013	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2013	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129

Europe/General	i40(VF)	2013	G 2.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2013	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2013	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2013	G 2.0 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2013	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	ENGINE [Engine Control (Low power)]	√	√	√	√	√	
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	ENGINE [Engine Control (High power)]	√	√	√	√	√	
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		0150, 0094, 0150, 0094
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2012	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2012	G 1.6 GDI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	i40(VF)	2012	G 1.6 GDI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i40(VF)	2012	G 1.6 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2012	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2012	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2012	G 1.6 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0150, 0094
Europe/General	i40(VF)	2012	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2012	G 1.6 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2012	G 1.6 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2012	G 1.6 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2012	G 1.6 GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2012	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2012	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2012	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	

Europe/General	i40(VF)	2012	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2012	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2012	G 1.6 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2012	G 1.6 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2012	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2012	G 2.0 GDI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	i40(VF)	2012	G 2.0 GDI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	i40(VF)	2012	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i40(VF)	2012	G 2.0 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2012	G 2.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0103, 0104
Europe/General	i40(VF)	2012	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2012	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2012	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2012	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0150, 0094
Europe/General	i40(VF)	2012	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2012	G 2.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2012	G 2.0 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2012	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2012	G 2.0 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2012	G 2.0 GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2012	G 2.0 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	i40(VF)	2012	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2012	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2012	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2012	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2012	G 2.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2012	G 2.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2012	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	i40(VF)	2012	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√		0116, 0015, 0073, 0013, 0120, 0158
Europe/General	i40(VF)	2012	G 2.0 MPI	ENGINE [Unleaded All]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	i40(VF)	2012	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	i40(VF)	2012	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	i40(VF)	2012	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	i40(VF)	2012	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	i40(VF)	2012	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	i40(VF)	2012	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0150, 0094
Europe/General	i40(VF)	2012	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	i40(VF)	2012	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	i40(VF)	2012	G 2.0 MPI	LKAS [Lane Keeping Assist System]	√	√	√	√		
Europe/General	i40(VF)	2012	G 2.0 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	i40(VF)	2012	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	i40(VF)	2012	G 2.0 MPI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	i40(VF)	2012	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112

Europe/General	i40(VF)	2012	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	i40(VF)	2012	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	i40(VF)	2012	G 2.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	i40(VF)	2012	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	i40(VF)	2012	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	i40(VF)	2012	G 2.0 MPI	PTM [Power Trunk Module]	√	√	√	√		
Europe/General	i40(VF)	2012	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	IONIQ electric(AE EV)	2018	88KW	MCU [EV Motor Control System]	√	√	√	√	√	0038, 0046, 0075
Europe/General	IONIQ electric(AE EV)	2018	88KW	BMS [EV Battery System]	√	√	√	√	√	0130
Europe/General	IONIQ electric(AE EV)	2018	88KW	VCULDC [VCULDC]	√	√	√	√	√	0083, 0116, 0126, 0127
Europe/General	IONIQ electric(AE EV)	2018	88KW	EPB [Electric Parking Brake]	√	√	√	√	√	0014, 0019
Europe/General	IONIQ electric(AE EV)	2018	88KW	ESPAHB [ESP / AHB]	√	√	√	√	√	0059, 0069
Europe/General	IONIQ electric(AE EV)	2018	88KW	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	IONIQ electric(AE EV)	2018	88KW	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	IONIQ electric(AE EV)	2018	88KW	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	IONIQ electric(AE EV)	2018	88KW	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	IONIQ electric(AE EV)	2018	88KW	OBC [On Board Charger]	√	√	√	√		
Europe/General	IONIQ electric(AE EV)	2018	88KW	CCM [Charging Control Module]	√	√	√	√		
Europe/General	IONIQ electric(AE EV)	2018	88KW	PGS [Parking Guide System]	√	√	√	√		
Europe/General	IONIQ electric(AE EV)	2018	88KW	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	IONIQ electric(AE EV)	2018	88KW	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016, 0017
Europe/General	IONIQ electric(AE EV)	2018	88KW	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016, 0017
Europe/General	IONIQ electric(AE EV)	2018	88KW	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	IONIQ electric(AE EV)	2018	88KW	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	IONIQ electric(AE EV)	2018	88KW	ESHIFTER_BS [E - Shifter]	√	√	√	√	√	
Europe/General	IONIQ electric(AE EV)	2018	88KW	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	IONIQ electric(AE EV)	2018	88KW	AMP [Amplifier]						0006

Europe/General	IONIQ electric(AE EV)	2018	88KW	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	IONIQ electric(AE EV)	2018	88KW	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	IONIQ electric(AE EV)	2018	88KW	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	IONIQ electric(AE EV)	2018	88KW	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	IONIQ electric(AE EV)	2018	88KW	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	IONIQ electric(AE EV)	2018	88KW	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	IONIQ electric(AE EV)	2018	88KW	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	IONIQ electric(AE EV)	2018	88KW	IGPM [Integrated Gateway Power Module]	√	√	√	√	√	0052
Europe/General	IONIQ electric(AE EV)	2018	88KW	ECALL [e - Call]	√	√	√			
Europe/General	IONIQ electric(AE EV)	2018	88KW	VESS [Virtual Engine Sound System]	√	√	√		√	
Europe/General	IONIQ electric(AE EV)	2017	88KW	MCU [EV Motor Control System]	√	√	√	√	√	0038, 0046, 0075
Europe/General	IONIQ electric(AE EV)	2017	88KW	VCULDC [VCULDC]	√	√	√	√	√	0083, 0116, 0126, 0127
Europe/General	IONIQ electric(AE EV)	2017	88KW	EPB [Electric Parking Brake]	√	√	√	√	√	0014, 0019
Europe/General	IONIQ electric(AE EV)	2017	88KW	ESPAHB [ESP / AHB]	√	√	√	√	√	0059, 0069
Europe/General	IONIQ electric(AE EV)	2017	88KW	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	IONIQ electric(AE EV)	2017	88KW	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	IONIQ electric(AE EV)	2017	88KW	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	IONIQ electric(AE EV)	2017	88KW	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	IONIQ electric(AE EV)	2017	88KW	OBC [On Board Charger]	√	√	√	√		
Europe/General	IONIQ electric(AE EV)	2017	88KW	CCM [Charging Control Module]	√	√	√	√		
Europe/General	IONIQ electric(AE EV)	2017	88KW	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	IONIQ electric(AE EV)	2017	88KW	PGS [Parking Guide System]	√	√	√	√		
Europe/General	IONIQ electric(AE EV)	2017	88KW	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	IONIQ electric(AE EV)	2017	88KW	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016, 0017

Europe/General	IONIQ electric(AE EV)	2017	88KW	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016, 0017
Europe/General	IONIQ electric(AE EV)	2017	88KW	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	IONIQ electric(AE EV)	2017	88KW	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	IONIQ electric(AE EV)	2017	88KW	ESHIFTER_BS [E - Shifter]	√	√	√	√	√	
Europe/General	IONIQ electric(AE EV)	2017	88KW	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	IONIQ electric(AE EV)	2017	88KW	AMP [Amplifier]						0006
Europe/General	IONIQ electric(AE EV)	2017	88KW	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	IONIQ electric(AE EV)	2017	88KW	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	IONIQ electric(AE EV)	2017	88KW	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	IONIQ electric(AE EV)	2017	88KW	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	IONIQ electric(AE EV)	2017	88KW	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	IONIQ electric(AE EV)	2017	88KW	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	IONIQ electric(AE EV)	2017	88KW	IGPM [Integrated Gateway Power Module]	√	√	√	√	√	0052
Europe/General	IONIQ electric(AE EV)	2017	88KW	ECALL [e - Call]	√	√	√			
Europe/General	IONIQ electric(AE EV)	2017	88KW	VESS [Virtual Engine Sound System]	√	√	√		√	
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0158
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	MCU [HEV Motor Control System]	√	√	√	√		0046, 0065, 0101
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	BMS [HEV Battery System]	√	√	√	√	√	0130, 0001, 0080, 0130
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	ESPAHB [ESP / AHB]	√	√	√	√	√	0059, 0069
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	PGS [Parking Guide System]	√	√	√	√		
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016, 0017
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	AAF - L [Active Air Flap - Left]	√	√	√	√	√	
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	AAF - R [Active Air Flap - Right]	√				√	
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	AMP [Amplifier]						0006
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	IBU - BCM [Integrated Body Control Unit - BCM]	√	√	√	√	√	
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	IBU - TPMS [Integrated Body Control Unit - TPMS]	√	√	√			
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	ECALL [e - Call]	√	√	√			
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	VESS [Virtual Engine Sound System]	√	√	√		√	
Europe/General	IONIQ hybrid(AE HEV)	2018	G 1.6 GDI HEV	CODE [Transmitter Code Saving]				√		0026
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0158
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	MCU [HEV Motor Control System]	√	√	√	√		0046, 0065, 0101
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	BMS [HEV Battery System]	√	√	√	√	√	

Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	ESPAHB [ESP / AHB]	√	√	√	√	√	0059, 0069
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	PGS [Parking Guide System]	√	√	√	√		
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016, 0017
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016, 0017
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	AAF - L [Active Air Flap - Left]	√	√	√	√	√	
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	AAF - R [Active Air Flap - Right]	√				√	
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	AMP [Amplifier]						0006
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	IBU - BCM [Integrated Body Control Unit - BCM]	√	√	√	√	√	
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	IBU - TPMS [Integrated Body Control Unit - TPMS]	√	√	√			
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	IGPM [Integrated Gateway Power Control Module]	√	√	√	√	√	0052
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	ECALL [e - Call]	√	√	√			

Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	VESS [Virtual Engine Sound System]	√	√	√		√	
Europe/General	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	CODE [Transmitter Code Saving]				√		0026
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0158
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	MCU [Motor Control System]	√	√	√	√		0046, 0065, 0066, 0101
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	BMS [PHEV Battery System]	√	√	√	√	√	0130
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	ESPAHB [ESP / AHB]	√	√	√	√	√	0059, 0069
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	OBC [On Board Charger]	√	√	√	√		
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	PGS [Parking Guide System]	√	√	√	√		
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016, 0017
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016, 0017
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	AAF - L [Active Air Flap - Left]	√	√	√	√	√	
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	AAF - R [Active Air Flap - Right]	√				√	
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	AMP [Amplifier]						0006
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	DDM [Driver Door Module]	√	√	√	√	√	

Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	IGPM [Integrated Gateway Power Module]	√	√	√	√	√	0052
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	ECALL [e - Call]	√	√	√			
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	VESS [Virtual Engine Sound System]	√	√	√		√	
Europe/General	IONIQ PHEV(AE PHEV)	2018	G 1.6 GDI PHEV	CODE [Transmitter Code Saving]				√		0026
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0158
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	MCU [Motor Control System]	√	√	√	√		0046, 0065, 0066, 0101
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	BMS [PHEV Battery System]	√	√	√	√	√	0130
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	SCCAEB [SCC / AEB]	√	√	√	√		
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	OBC [On Board Charger]	√	√	√	√		
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	PGS [Parking Guide System]	√	√	√	√		
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016, 0017
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016, 0017
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067

Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	AAF - L [Active Air Flap - Left]	√	√	√	√	√	
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	AAF - R [Active Air Flap - Right]	√				√	
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	AMP [Amplifier]						0006
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	IGPM [Integrated Gateway Power Module]	√	√	√	√	√	0052
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	ECALL [e - Call]	√	√	√			
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	VESS [Virtual Engine Sound System]	√	√	√		√	
Europe/General	IONIQ PHEV(AE PHEV)	2017	G 1.6 GDI PHEV	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2018	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	ix20(JC)	2018	D 1.4 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2018	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2018	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2018	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2018	D 1.4 TCI-U2	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2018	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2018	D 1.4 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2018	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2018	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2018	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2018	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	ix20(JC)	2018	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2018	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2018	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2018	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2018	D 1.6 TCI-U2	EPS [Power Steering]	√	√	√	√		0094

Europe/General	ix20(JC)	2018	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√	√	√	
Europe/General	ix20(JC)	2018	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2018	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2018	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2018	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2018	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ix20(JC)	2018	G 1.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2018	G 1.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2018	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2018	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2018	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2018	G 1.4 MPI	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2018	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2018	G 1.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2018	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2018	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2018	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2018	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ix20(JC)	2018	G 1.6 MPI	ENGINE [Unleaded GEN]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2018	G 1.6 MPI	ENGINE [Unleaded EOBD]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2018	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix20(JC)	2018	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2018	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2018	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2018	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2018	G 1.6 MPI	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2018	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2018	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2018	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2018	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2018	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2017	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	ix20(JC)	2017	D 1.4 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2017	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2017	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2017	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2017	D 1.4 TCI-U2	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2017	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2017	D 1.4 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2017	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2017	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2017	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2017	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158

Europe/General	ix20(JC)	2017	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2017	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2017	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2017	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2017	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2017	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2017	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2017	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2017	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2017	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ix20(JC)	2017	G 1.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2017	G 1.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2017	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2017	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2017	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2017	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2017	G 1.4 MPI	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2017	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2017	G 1.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2017	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2017	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2017	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2017	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ix20(JC)	2017	G 1.6 MPI	ENGINE [Unleaded GEN]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2017	G 1.6 MPI	ENGINE [Unleaded EOBD]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2017	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix20(JC)	2017	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2017	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2017	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2017	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2017	G 1.6 MPI	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2017	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2017	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2017	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2017	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2017	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2016	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	ix20(JC)	2016	D 1.4 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2016	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2016	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2016	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2016	D 1.4 TCI-U2	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2016	D 1.4 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112

Europe/General	ix20(JC)	2016	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2016	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2016	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2016	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	ix20(JC)	2016	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2016	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2016	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2016	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2016	D 1.6 TCI-U2	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2016	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2016	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2016	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2016	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2016	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2016	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ix20(JC)	2016	G 1.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2016	G 1.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2016	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2016	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2016	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2016	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2016	G 1.4 MPI	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2016	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2016	G 1.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2016	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2016	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2016	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2016	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ix20(JC)	2016	G 1.6 MPI	ENGINE [Unleaded GEN]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2016	G 1.6 MPI	ENGINE [Unleaded EOBD]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2016	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix20(JC)	2016	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2016	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2016	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2016	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2016	G 1.6 MPI	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2016	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2016	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2016	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2016	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2015	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	ix20(JC)	2015	D 1.4 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2015	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			

Europe/General	ix20(JC)	2015	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2015	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2015	D 1.4 TCI-U2	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2015	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2015	D 1.4 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2015	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2015	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2015	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2015	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ix20(JC)	2015	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2015	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2015	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2015	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2015	D 1.6 TCI-U2	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2015	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2015	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2015	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2015	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2015	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2015	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ix20(JC)	2015	G 1.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2015	G 1.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2015	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2015	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2015	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2015	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2015	G 1.4 MPI	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2015	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2015	G 1.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2015	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2015	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2015	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2015	G 1.6 MPI	ENGINE [Unleaded GEN]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2015	G 1.6 MPI	ENGINE [Unleaded EOBD]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2015	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix20(JC)	2015	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2015	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2015	G 1.6 MPI	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2015	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2015	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2015	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2015	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	

Europe/General	ix20(JC)	2015	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2014	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	ix20(JC)	2014	D 1.4 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2014	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2014	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2014	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2014	D 1.4 TCI-U2	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2014	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2014	D 1.4 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2014	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2014	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2014	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2014	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ix20(JC)	2014	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2014	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2014	D 1.6 TCI-U2	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2014	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2014	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2014	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2014	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2014	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2014	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ix20(JC)	2014	G 1.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2014	G 1.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2014	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2014	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2014	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2014	G 1.4 MPI	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2014	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2014	G 1.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2014	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2014	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2014	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2014	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ix20(JC)	2014	G 1.6 MPI	ENGINE [Unleaded GEN]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2014	G 1.6 MPI	ENGINE [Unleaded EOBD]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2014	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix20(JC)	2014	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2014	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	ix20(JC)	2014	G 1.6 MPI	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2014	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2014	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2014	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2014	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2014	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2013	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	ix20(JC)	2013	D 1.4 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2013	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2013	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2013	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2013	D 1.4 TCI-U2	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2013	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2013	D 1.4 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2013	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2013	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2013	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2013	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ix20(JC)	2013	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2013	D 1.6 TCI-U2	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2013	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2013	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2013	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2013	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2013	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2013	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ix20(JC)	2013	G 1.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2013	G 1.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2013	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2013	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2013	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2013	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2013	G 1.4 MPI	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2013	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2013	G 1.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2013	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2013	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2013	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2013	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ix20(JC)	2013	G 1.6 MPI	ENGINE [Unleaded GEN]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2013	G 1.6 MPI	ENGINE [Unleaded EOBD]	√	√	√	√		0013, 0040, 0072, 0116, 0158

Europe/General	ix20(JC)	2013	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix20(JC)	2013	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2013	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2013	G 1.6 MPI	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2013	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2013	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2013	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2013	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2013	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2012	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	ix20(JC)	2012	D 1.4 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2012	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2012	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2012	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2012	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2012	D 1.4 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2012	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2012	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2012	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2012	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ix20(JC)	2012	D 1.6 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2012	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2012	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2012	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2012	D 1.6 TCI-U2	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2012	D 1.6 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2012	D 1.6 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2012	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2012	D 1.6 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2012	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2012	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ix20(JC)	2012	G 1.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2012	G 1.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2012	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2012	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2012	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2012	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2012	G 1.4 MPI	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2012	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2012	G 1.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2012	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2012	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	

Europe/General	ix20(JC)	2012	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2012	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ix20(JC)	2012	G 1.6 MPI	ENGINE [Unleaded GEN]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2012	G 1.6 MPI	ENGINE [Unleaded EOBD]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2012	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix20(JC)	2012	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2012	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2012	G 1.6 MPI	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2012	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2012	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2012	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2012	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2011	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	ix20(JC)	2011	D 1.4 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2011	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2011	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2011	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2011	D 1.4 TCI-U2	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2011	D 1.4 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2011	D 1.4 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2011	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2011	D 1.4 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2011	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2011	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ix20(JC)	2011	G 1.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2011	G 1.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2011	G 1.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2011	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2011	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2011	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2011	G 1.4 MPI	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2011	G 1.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2011	G 1.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	ix20(JC)	2011	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2011	G 1.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2011	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix20(JC)	2011	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	ix20(JC)	2011	G 1.6 MPI	ENGINE [Unleaded GEN]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2011	G 1.6 MPI	ENGINE [Unleaded EOBD]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix20(JC)	2011	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122

Europe/General	ix20(JC)	2011	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix20(JC)	2011	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix20(JC)	2011	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix20(JC)	2011	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix20(JC)	2011	G 1.6 MPI	EPS [Power Steering]	√	√	√	√		0094
Europe/General	ix20(JC)	2011	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix20(JC)	2011	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0042, 0043, 0058, 0129
Europe/General	ix20(JC)	2011	G 1.6 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix20(JC)	2011	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35 FCEV(LM FCEV)	2018	100KW	MCU [FCEV Motor Control System]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2018	100KW	BMS [EV Battery System]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2018	100KW	HSCU [Hydrogen Storage System]	√	√	√	√	√	0115
Europe/General	ix35 FCEV(LM FCEV)	2018	100KW	HDC [High DC / DC Convertor]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2018	100KW	LDC [Low DC / DC Converter]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2018	100KW	FPD [Fuel Processing Driver]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2018	100KW	FCU [Fuel Cell System]	√	√	√	√	√	0012, 0045, 0057, 0139, 0141
Europe/General	ix35 FCEV(LM FCEV)	2018	100KW	SVM [Stack Volt Monitor]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2018	100KW	BPCU [Blower Pump Control Unit]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2018	100KW	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ix35 FCEV(LM FCEV)	2018	100KW	AHB [Active Hydraulic Booster]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2018	100KW	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35 FCEV(LM FCEV)	2018	100KW	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35 FCEV(LM FCEV)	2018	100KW	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2018	100KW	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2018	100KW	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix35 FCEV(LM FCEV)	2018	100KW	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	ix35 FCEV(LM FCEV)	2018	100KW	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix35 FCEV(LM FCEV)	2018	100KW	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129

Europe/General	ix35 FCEV(LM FCEV)	2018	100KW	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2017	100KW	MCU [FCEV Motor Control System]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2017	100KW	BMS [EV Battery System]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2017	100KW	HSCU [Hydrogen Storage System]	√	√	√	√	√	0115
Europe/General	ix35 FCEV(LM FCEV)	2017	100KW	HDC [High DC / DC Convertor]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2017	100KW	LDC [Low DC / DC Converter]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2017	100KW	FPD [Fuel Processing Driver]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2017	100KW	FCU [Fuel Cell System]	√	√	√	√	√	0012, 0045, 0057, 0139, 0141
Europe/General	ix35 FCEV(LM FCEV)	2017	100KW	SVM [Stack Volt Monitor]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2017	100KW	BPCU [Blower Pump Control Unit]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2017	100KW	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ix35 FCEV(LM FCEV)	2017	100KW	AHB [Active Hydraulic Booster]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2017	100KW	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35 FCEV(LM FCEV)	2017	100KW	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35 FCEV(LM FCEV)	2017	100KW	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2017	100KW	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2017	100KW	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix35 FCEV(LM FCEV)	2017	100KW	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	ix35 FCEV(LM FCEV)	2017	100KW	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix35 FCEV(LM FCEV)	2017	100KW	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	ix35 FCEV(LM FCEV)	2017	100KW	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2016	100KW	MCU [FCEV Motor Control System]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2016	100KW	BMS [EV Battery System]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2016	100KW	HSCU [Hydrogen Storage System]	√	√	√	√	√	0115

Europe/General	ix35 FCEV(LM FCEV)	2016	100KW	HDC [High DC / DC Convertor]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2016	100KW	LDC [Low DC / DC Converter]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2016	100KW	FPD [Fuel Processing Driver]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2016	100KW	FCU [Fuel Cell System]	√	√	√	√	√	0012, 0045, 0057, 0139, 0141
Europe/General	ix35 FCEV(LM FCEV)	2016	100KW	SVM [Stack Volt Monitor]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2016	100KW	BPCU [Blower Pump Control Unit]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2016	100KW	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ix35 FCEV(LM FCEV)	2016	100KW	AHB [Active Hydraulic Booster]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2016	100KW	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35 FCEV(LM FCEV)	2016	100KW	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35 FCEV(LM FCEV)	2016	100KW	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2016	100KW	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2016	100KW	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix35 FCEV(LM FCEV)	2016	100KW	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	ix35 FCEV(LM FCEV)	2016	100KW	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix35 FCEV(LM FCEV)	2016	100KW	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	ix35 FCEV(LM FCEV)	2016	100KW	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	MCU [FCEV Motor Control System]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	BMS [EV Battery System]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	HSCU [Hydrogen Storage System]	√	√	√	√	√	0115
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	HDC [High DC / DC Convertor]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	LDC [Low DC / DC Converter]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	FPD [Fuel Processing Driver]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	FCU [Fuel Cell System]	√	√	√	√	√	0012, 0045, 0057, 0139, 0141

Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	SVM [Stack Volt Monitor]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	BPCU [Blower Pump Control Unit]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	AHB [Active Hydraulic Booster]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	ix35 FCEV(LM FCEV)	2015	100KW	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	MCU [FCEV Motor Control System]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	BMS [EV Battery System]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	HSCU [Hydrogen Storage System]	√	√	√	√	√	0115
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	HDC [High DC / DC Convertor]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	LDC [Low DC / DC Converter]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	FPD [Fuel Processing Driver]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	FCU [Fuel Cell System]	√	√	√	√	√	0012, 0045, 0057, 0139, 0141
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	SVM [Stack Volt Monitor]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	BPCU [Blower Pump Control Unit]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	AHB [Active Hydraulic Booster]	√	√	√	√	√	

Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	EPS [Electronic Power Steering]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	ix35 FCEV(LM FCEV)	2014	100KW	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	MCU [FCEV Motor Control System]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	BMS [EV Battery System]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	HSCU [Hydrogen Storage System]	√	√	√	√	√	0115
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	HDC [High DC / DC Convertor]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	LDC [Low DC / DC Converter]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	FPD [Fuel Processing Driver]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	FCU [Fuel Cell System]	√	√	√	√	√	0012, 0045, 0057, 0139, 0141
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	SVM [Stack Volt Monitor]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	BPCU [Blower Pump Control Unit]	√	√	√	√		
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	AHB [Active Hydraulic Booster]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	EPS [Electronic Power Steering]	√	√	√	√		

Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	ix35 FCEV(LM FCEV)	2013	100KW	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	D 1.7 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	D 1.7 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2016	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2016	D 1.7 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	D 1.7 TCI-U2	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	ix35(EL)	2016	D 1.7 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ix35(EL)	2016	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ix35(EL)	2016	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ix35(EL)	2016	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	D 1.7 TCI-U2	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ix35(EL)	2016	D 1.7 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2016	D 1.7 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ix35(EL)	2016	D 1.7 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	D 1.7 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(High Power)	ENGINE [Engine Control]	√	√	√	√	√	0035, 0061, 0089
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(High Power)	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(High Power)	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(High Power)	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(High Power)	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(High Power)	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(High Power)	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(High Power)	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(High Power)	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(High Power)	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(High Power)	SPAS [Smart Parking Assist System]	√	√	√	√	√	

Europe/General	ix35(EL)	2016	D 2.0 TCI-R(High Power)	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(High Power)	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(High Power)	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(High Power)	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(High Power)	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(Low Power)	ENGINE [Engine Control]	√	√	√	√	√	0061, 0089
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(Low Power)	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(Low Power)	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(Low Power)	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(Low Power)	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(Low Power)	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(Low Power)	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(Low Power)	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(Low Power)	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(Low Power)	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(Low Power)	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(Low Power)	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(Low Power)	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(Low Power)	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(Low Power)	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	D 2.0 TCI-R(Low Power)	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2016	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix35(EL)	2016	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix35(EL)	2016	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2016	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2016	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	ix35(EL)	2016	G 1.6 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	ix35(EL)	2016	G 1.6 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ix35(EL)	2016	G 1.6 GDI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ix35(EL)	2016	G 1.6 GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ix35(EL)	2016	G 1.6 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	G 1.6 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ix35(EL)	2016	G 1.6 GDI	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2016	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ix35(EL)	2016	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2016	G 2.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix35(EL)	2016	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix35(EL)	2016	G 2.0 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2016	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2016	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	G 2.0 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	ix35(EL)	2016	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ix35(EL)	2016	G 2.0 GDI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ix35(EL)	2016	G 2.0 GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ix35(EL)	2016	G 2.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ix35(EL)	2016	G 2.0 GDI	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2016	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ix35(EL)	2016	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2016	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	ix35(EL)	2016	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix35(EL)	2016	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2016	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	ix35(EL)	2016	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ix35(EL)	2016	G 2.0 MPI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ix35(EL)	2016	G 2.0 MPI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ix35(EL)	2016	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ix35(EL)	2016	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2016	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ix35(EL)	2016	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2016	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	

Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(High Power)	ENGINE [Engine Control]	√	√	√	√	√	0035, 0061, 0089
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(High Power)	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(High Power)	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(High Power)	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(High Power)	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(High Power)	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(High Power)	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(High Power)	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(High Power)	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(High Power)	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(High Power)	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(High Power)	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(High Power)	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(High Power)	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(High Power)	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(High Power)	CODE [Transmitter Code Saving]				√		0026

Europe/General	ix35(EL)	2015	D 2.0 TCI-R(Low Power)	ENGINE [Engine Control]	√	√	√	√	√	0061, 0089
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(Low Power)	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(Low Power)	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(Low Power)	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(Low Power)	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(Low Power)	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(Low Power)	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(Low Power)	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(Low Power)	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(Low Power)	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(Low Power)	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(Low Power)	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(Low Power)	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(Low Power)	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(Low Power)	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	D 2.0 TCI-R(Low Power)	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2015	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix35(EL)	2015	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix35(EL)	2015	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2015	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	G 1.6 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	ix35(EL)	2015	G 1.6 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ix35(EL)	2015	G 1.6 GDI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ix35(EL)	2015	G 1.6 GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ix35(EL)	2015	G 1.6 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	G 1.6 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ix35(EL)	2015	G 1.6 GDI	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2015	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ix35(EL)	2015	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	

Europe/General	ix35(EL)	2015	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2015	G 2.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix35(EL)	2015	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix35(EL)	2015	G 2.0 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2015	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	G 2.0 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	ix35(EL)	2015	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ix35(EL)	2015	G 2.0 GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ix35(EL)	2015	G 2.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ix35(EL)	2015	G 2.0 GDI	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2015	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ix35(EL)	2015	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2015	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	ix35(EL)	2015	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix35(EL)	2015	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2015	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	ix35(EL)	2015	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ix35(EL)	2015	G 2.0 MPI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ix35(EL)	2015	G 2.0 MPI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ix35(EL)	2015	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ix35(EL)	2015	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2015	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ix35(EL)	2015	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2015	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090

Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(High Power)	ENGINE [Engine Control]	√	√	√	√	√	0035, 0061, 0089
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(High Power)	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(High Power)	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(High Power)	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(High Power)	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(High Power)	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(High Power)	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(High Power)	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(High Power)	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(High Power)	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(High Power)	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(High Power)	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(High Power)	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(High Power)	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(High Power)	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(High Power)	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(High Power)	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(Low Power)	ENGINE [Engine Control]	√	√	√	√	√	0061, 0089
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(Low Power)	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(Low Power)	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(Low Power)	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(Low Power)	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	ix35(EL)	2014	D 2.0 TCI-R(Low Power)	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(Low Power)	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(Low Power)	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(Low Power)	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(Low Power)	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(Low Power)	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(Low Power)	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(Low Power)	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(Low Power)	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(Low Power)	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	D 2.0 TCI-R(Low Power)	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2014	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix35(EL)	2014	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix35(EL)	2014	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2014	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	G 1.6 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	ix35(EL)	2014	G 1.6 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ix35(EL)	2014	G 1.6 GDI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ix35(EL)	2014	G 1.6 GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ix35(EL)	2014	G 1.6 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	G 1.6 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ix35(EL)	2014	G 1.6 GDI	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2014	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ix35(EL)	2014	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2014	G 2.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix35(EL)	2014	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix35(EL)	2014	G 2.0 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2014	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	G 2.0 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	ix35(EL)	2014	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ix35(EL)	2014	G 2.0 GDI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	

Europe/General	ix35(EL)	2014	G 2.0 GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	G 2.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ix35(EL)	2014	G 2.0 GDI	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2014	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ix35(EL)	2014	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2014	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	ix35(EL)	2014	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix35(EL)	2014	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2014	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2014	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	ix35(EL)	2014	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	ix35(EL)	2014	G 2.0 MPI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	ix35(EL)	2014	G 2.0 MPI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	ix35(EL)	2014	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	ix35(EL)	2014	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2014	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	ix35(EL)	2014	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2014	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	EPS [Power Steering]	√	√	√	√		
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2013	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	0061, 0089
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	0061, 0089
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093

Europe/General	ix35(EL)	2013	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	EPS [Power Steering]	√	√	√	√		
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2013	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2013	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix35(EL)	2013	G 1.6 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	ix35(EL)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2013	G 1.6 GDI	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	ix35(EL)	2013	G 1.6 GDI	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	ix35(EL)	2013	G 1.6 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	ix35(EL)	2013	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix35(EL)	2013	G 1.6 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2013	G 1.6 GDI	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2013	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	ix35(EL)	2013	G 1.6 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	ix35(EL)	2013	G 1.6 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix35(EL)	2013	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2013	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2013	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2013	G 2.0 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0015, 0013, 0120, 0116, 0158
Europe/General	ix35(EL)	2013	G 2.0 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0015, 0013, 0120, 0116, 0158
Europe/General	ix35(EL)	2013	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√	√	0116, 0015, 0015, 0073, 0013, 0120, 0116, 0158
Europe/General	ix35(EL)	2013	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix35(EL)	2013	G 2.0 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	ix35(EL)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2013	G 2.0 MPI	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	ix35(EL)	2013	G 2.0 MPI	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	ix35(EL)	2013	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	ix35(EL)	2013	G 2.0 MPI	EPS [Power Steering]	√	√	√	√		

Europe/General	ix35(EL)	2013	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√	√	√	
Europe/General	ix35(EL)	2013	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2013	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2013	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	ix35(EL)	2013	G 2.0 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	ix35(EL)	2013	G 2.0 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix35(EL)	2013	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2013	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2013	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	EPS [Power Steering]	√	√	√	√		
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2012	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	0061, 0089
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	0061, 0089
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	EPS [Power Steering]	√	√	√	√		
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2012	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2012	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158

Europe/General	ix35(EL)	2012	G 1.6 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	ix35(EL)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2012	G 1.6 GDI	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	ix35(EL)	2012	G 1.6 GDI	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	ix35(EL)	2012	G 1.6 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	ix35(EL)	2012	G 1.6 GDI	EPS [Power Steering]	√	√	√	√		
Europe/General	ix35(EL)	2012	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix35(EL)	2012	G 1.6 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2012	G 1.6 GDI	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2012	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	ix35(EL)	2012	G 1.6 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix35(EL)	2012	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2012	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2012	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2012	G 2.0 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158
Europe/General	ix35(EL)	2012	G 2.0 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158
Europe/General	ix35(EL)	2012	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√	√	0116, 0015, 0073, 0013, 0120, 0158
Europe/General	ix35(EL)	2012	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix35(EL)	2012	G 2.0 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	ix35(EL)	2012	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2012	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2012	G 2.0 MPI	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	ix35(EL)	2012	G 2.0 MPI	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	ix35(EL)	2012	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	ix35(EL)	2012	G 2.0 MPI	EPS [Power Steering]	√	√	√	√		
Europe/General	ix35(EL)	2012	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix35(EL)	2012	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2012	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2012	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	ix35(EL)	2012	G 2.0 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	ix35(EL)	2012	G 2.0 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix35(EL)	2012	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2012	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2012	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	EPS [Power Steering]	√	√	√	√		
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	

Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2011	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	0061, 0089
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	0061, 0089
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	EPS [Power Steering]	√	√	√	√		
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2011	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2011	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	ix35(EL)	2011	G 1.6 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	ix35(EL)	2011	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2011	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2011	G 1.6 GDI	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	ix35(EL)	2011	G 1.6 GDI	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	ix35(EL)	2011	G 1.6 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	ix35(EL)	2011	G 1.6 GDI	EPS [Power Steering]	√	√	√	√		
Europe/General	ix35(EL)	2011	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix35(EL)	2011	G 1.6 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2011	G 1.6 GDI	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2011	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	ix35(EL)	2011	G 1.6 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	ix35(EL)	2011	G 1.6 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix35(EL)	2011	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2011	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2011	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2011	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	ix35(EL)	2011	G 2.0 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	

Europe/General	ix35(EL)	2011	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix35(EL)	2011	G 2.0 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	ix35(EL)	2011	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2011	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2011	G 2.0 MPI	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	ix35(EL)	2011	G 2.0 MPI	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	ix35(EL)	2011	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	ix35(EL)	2011	G 2.0 MPI	EPS [Power Steering]	√	√	√	√		
Europe/General	ix35(EL)	2011	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix35(EL)	2011	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	ix35(EL)	2011	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2011	G 2.0 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix35(EL)	2011	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	ix35(EL)	2011	G 2.0 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	ix35(EL)	2011	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2011	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2011	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	0061, 0089
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	0061, 0089
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	EPS [Power Steering]	√	√	√	√		
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2010	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix35(EL)	2010	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	ix35(EL)	2010	G 2.0 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	ix35(EL)	2010	G 2.0 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	ix35(EL)	2010	G 2.0 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	ix35(EL)	2010	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	ix35(EL)	2010	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	ix35(EL)	2010	G 2.0 MPI	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	ix35(EL)	2010	G 2.0 MPI	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	ix35(EL)	2010	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	ix35(EL)	2010	G 2.0 MPI	EPS [Power Steering]	√	√	√	√		

Europe/General	ix35(EL)	2010	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix35(EL)	2010	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	ix35(EL)	2010	G 2.0 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix35(EL)	2010	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	ix35(EL)	2010	G 2.0 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	ix35(EL)	2010	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	ix35(EL)	2010	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	ix35(EL)	2010	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	ix55/VERACRUZ(EN)	2013	D 3.0 TCI-S2	ENGINE [Engine Control]	√	√	√	√	√	0035, 0061
Europe/General	ix55/VERACRUZ(EN)	2013	D 3.0 TCI-S2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix55/VERACRUZ(EN)	2013	D 3.0 TCI-S2	ESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix55/VERACRUZ(EN)	2013	D 3.0 TCI-S2	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ix55/VERACRUZ(EN)	2013	D 3.0 TCI-S2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2013	D 3.0 TCI-S2	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	ix55/VERACRUZ(EN)	2013	D 3.0 TCI-S2	EPS [Electronic Power Steering]		√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2013	D 3.0 TCI-S2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix55/VERACRUZ(EN)	2013	D 3.0 TCI-S2	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	ix55/VERACRUZ(EN)	2013	D 3.0 TCI-S2	IMMO [Immobilizer]				√		
Europe/General	ix55/VERACRUZ(EN)	2013	D 3.0 TCI-S2	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2013	D 3.0 TCI-S2	SMK [Smart Key Unit]	√	√	√		√	0097
Europe/General	ix55/VERACRUZ(EN)	2013	D 3.0 TCI-S2	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2013	D 3.0 TCI-S2	IMS [IMS]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2013	D 3.0 TCI-S2	OPTION [User Option]				√		
Europe/General	ix55/VERACRUZ(EN)	2013	D 3.0 TCI-S2	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2013	D 3.0 TCI-S2	BCM [Body Control Module]	√	√	√		√	
Europe/General	ix55/VERACRUZ(EN)	2013	D 3.0 TCI-S2	PTG [Power Tailgate]	√	√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2013	D 3.0 TCI-S2	CODE [Transmitter Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2013	G 3.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0158

Europe/General	ix55/VERACRUZ(EN)	2013	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2013	G 3.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2013	G 3.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2013	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0160
Europe/General	ix55/VERACRUZ(EN)	2013	G 3.8 DOHC	ESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix55/VERACRUZ(EN)	2013	G 3.8 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ix55/VERACRUZ(EN)	2013	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2013	G 3.8 DOHC	4WD [4WD Control]		√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2013	G 3.8 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2013	G 3.8 DOHC	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix55/VERACRUZ(EN)	2013	G 3.8 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	ix55/VERACRUZ(EN)	2013	G 3.8 DOHC	IMMO [Immobilizer]				√		
Europe/General	ix55/VERACRUZ(EN)	2013	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2013	G 3.8 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2013	G 3.8 DOHC	OPTION [User Option]				√		
Europe/General	ix55/VERACRUZ(EN)	2013	G 3.8 DOHC	IMS [IMS]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2013	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2013	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2013	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	ix55/VERACRUZ(EN)	2013	G 3.8 DOHC	PTG [Power Tailgate]	√	√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2013	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2012	D 3.0 TCI-S2	ENGINE [Engine Control]	√	√	√	√	√	0035, 0061
Europe/General	ix55/VERACRUZ(EN)	2012	D 3.0 TCI-S2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	ix55/VERACRUZ(EN)	2012	D 3.0 TCI-S2	ESP [ABS / ESP]	√	√	√	√	√	0064

Europe/General	ix55/VERACRUZ(EN)	2012	D 3.0 TCI-S2	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ix55/VERACRUZ(EN)	2012	D 3.0 TCI-S2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2012	D 3.0 TCI-S2	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	ix55/VERACRUZ(EN)	2012	D 3.0 TCI-S2	EPS [Electronic Power Steering]		√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2012	D 3.0 TCI-S2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix55/VERACRUZ(EN)	2012	D 3.0 TCI-S2	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	ix55/VERACRUZ(EN)	2012	D 3.0 TCI-S2	IMMO [Immobilizer]				√		
Europe/General	ix55/VERACRUZ(EN)	2012	D 3.0 TCI-S2	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2012	D 3.0 TCI-S2	SMK [Smart Key Unit]	√	√	√		√	0097
Europe/General	ix55/VERACRUZ(EN)	2012	D 3.0 TCI-S2	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2012	D 3.0 TCI-S2	IMS [IMS]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2012	D 3.0 TCI-S2	OPTION [User Option]				√		
Europe/General	ix55/VERACRUZ(EN)	2012	D 3.0 TCI-S2	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2012	D 3.0 TCI-S2	BCM [Body Control Module]	√	√	√		√	
Europe/General	ix55/VERACRUZ(EN)	2012	D 3.0 TCI-S2	PTG [Power Tailgate]	√	√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2012	D 3.0 TCI-S2	CODE [Transmitter Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2012	G 3.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2012	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2012	G 3.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2012	G 3.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2012	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0160
Europe/General	ix55/VERACRUZ(EN)	2012	G 3.8 DOHC	ESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix55/VERACRUZ(EN)	2012	G 3.8 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ix55/VERACRUZ(EN)	2012	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	ix55/VERACRUZ(EN)	2012	G 3.8 DOHC	4WD [4WD Control]		√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2012	G 3.8 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2012	G 3.8 DOHC	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix55/VERACRUZ(EN)	2012	G 3.8 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	ix55/VERACRUZ(EN)	2012	G 3.8 DOHC	IMMO [Immobilizer]				√		
Europe/General	ix55/VERACRUZ(EN)	2012	G 3.8 DOHC	SMK [Smart Key Unit]	√	√	√		√	0097
Europe/General	ix55/VERACRUZ(EN)	2012	G 3.8 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2012	G 3.8 DOHC	OPTION [User Option]				√		
Europe/General	ix55/VERACRUZ(EN)	2012	G 3.8 DOHC	IMS [IMS]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2012	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2012	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2012	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	ix55/VERACRUZ(EN)	2012	G 3.8 DOHC	PTG [Power Tailgate]	√	√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2012	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2011	D 3.0 TCI-S	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2011	D 3.0 TCI-S	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2011	D 3.0 TCI-S	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0160
Europe/General	ix55/VERACRUZ(EN)	2011	D 3.0 TCI-S	ESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix55/VERACRUZ(EN)	2011	D 3.0 TCI-S	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ix55/VERACRUZ(EN)	2011	D 3.0 TCI-S	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2011	D 3.0 TCI-S	4WD [4WD Control]		√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2011	D 3.0 TCI-S	EPS [Electronic Power Steering]		√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2011	D 3.0 TCI-S	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix55/VERACRUZ(EN)	2011	D 3.0 TCI-S	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135

Europe/General	ix55/VERACRUZ(EN)	2011	D 3.0 TCI-S	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
Europe/General	ix55/VERACRUZ(EN)	2011	D 3.0 TCI-S	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2011	D 3.0 TCI-S	BCM [Body Control Module]	√	√	√		√	
Europe/General	ix55/VERACRUZ(EN)	2011	D 3.0 TCI-S	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2011	D 3.0 TCI-S	OPTION [User Option]				√		
Europe/General	ix55/VERACRUZ(EN)	2011	D 3.0 TCI-S	IMS [IMS]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2011	D 3.0 TCI-S	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2011	D 3.0 TCI-S	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2011	D 3.0 TCI-S	PTG [Power Tailgate]	√	√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2011	D 3.0 TCI-S	CODE [Transmitter Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2011	G 3.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2011	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2011	G 3.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2011	G 3.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2011	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0160
Europe/General	ix55/VERACRUZ(EN)	2011	G 3.8 DOHC	ESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix55/VERACRUZ(EN)	2011	G 3.8 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ix55/VERACRUZ(EN)	2011	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2011	G 3.8 DOHC	4WD [4WD Control]		√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2011	G 3.8 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2011	G 3.8 DOHC	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix55/VERACRUZ(EN)	2011	G 3.8 DOHC	IMMO [Immobilizer]				√		
Europe/General	ix55/VERACRUZ(EN)	2011	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2011	G 3.8 DOHC	SMK [Smart Key Unit]	√	√	√		√	0097

Europe/General	ix55/VERACRUZ(EN)	2011	G 3.8 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2011	G 3.8 DOHC	OPTION [User Option]				√		
Europe/General	ix55/VERACRUZ(EN)	2011	G 3.8 DOHC	IMS [IMS]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2011	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2011	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2011	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	ix55/VERACRUZ(EN)	2011	G 3.8 DOHC	PTG [Power Tailgate]	√	√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2011	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2010	D 3.0 TCI-S	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2010	D 3.0 TCI-S	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2010	D 3.0 TCI-S	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0160
Europe/General	ix55/VERACRUZ(EN)	2010	D 3.0 TCI-S	ESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix55/VERACRUZ(EN)	2010	D 3.0 TCI-S	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ix55/VERACRUZ(EN)	2010	D 3.0 TCI-S	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2010	D 3.0 TCI-S	4WD [4WD Control]		√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2010	D 3.0 TCI-S	EPS [Electronic Power Steering]		√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2010	D 3.0 TCI-S	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix55/VERACRUZ(EN)	2010	D 3.0 TCI-S	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
Europe/General	ix55/VERACRUZ(EN)	2010	D 3.0 TCI-S	SMK [Smart Key Unit]	√	√	√		√	0097
Europe/General	ix55/VERACRUZ(EN)	2010	D 3.0 TCI-S	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2010	D 3.0 TCI-S	BCM [Body Control Module]	√	√	√		√	
Europe/General	ix55/VERACRUZ(EN)	2010	D 3.0 TCI-S	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2010	D 3.0 TCI-S	OPTION [User Option]				√		
Europe/General	ix55/VERACRUZ(EN)	2010	D 3.0 TCI-S	IMS [IMS]	√	√	√	√	√	

Europe/General	ix55/VERACRUZ(EN)	2010	D 3.0 TCI-S	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2010	D 3.0 TCI-S	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2010	D 3.0 TCI-S	PTG [Power Tailgate]	√	√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2010	D 3.0 TCI-S	CODE [Transmitter Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2010	G 3.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2010	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2010	G 3.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2010	G 3.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2010	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0160
Europe/General	ix55/VERACRUZ(EN)	2010	G 3.8 DOHC	ESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	ix55/VERACRUZ(EN)	2010	G 3.8 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ix55/VERACRUZ(EN)	2010	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2010	G 3.8 DOHC	4WD [4WD Control]		√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2010	G 3.8 DOHC	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix55/VERACRUZ(EN)	2010	G 3.8 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	ix55/VERACRUZ(EN)	2010	G 3.8 DOHC	IMMO [Immobilizer]				√		
Europe/General	ix55/VERACRUZ(EN)	2010	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2010	G 3.8 DOHC	SMK [Smart Key Unit]	√	√	√		√	0097
Europe/General	ix55/VERACRUZ(EN)	2010	G 3.8 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2010	G 3.8 DOHC	OPTION [User Option]				√		
Europe/General	ix55/VERACRUZ(EN)	2010	G 3.8 DOHC	IMS [IMS]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2010	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2010	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2010	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	

Europe/General	ix55/VERACRUZ(EN)	2010	G 3.8 DOHC	PTG [Power Tailgate]	√	√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2010	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2009	D 3.0 TCI-S	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2009	D 3.0 TCI-S	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2009	D 3.0 TCI-S	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0160
Europe/General	ix55/VERACRUZ(EN)	2009	D 3.0 TCI-S	ESP [Electronic Stability Program]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2009	D 3.0 TCI-S	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ix55/VERACRUZ(EN)	2009	D 3.0 TCI-S	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2009	D 3.0 TCI-S	4WD [4WD Control]		√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2009	D 3.0 TCI-S	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix55/VERACRUZ(EN)	2009	D 3.0 TCI-S	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	ix55/VERACRUZ(EN)	2009	D 3.0 TCI-S	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
Europe/General	ix55/VERACRUZ(EN)	2009	D 3.0 TCI-S	SMK [Smart Key Unit]	√	√	√		√	0097
Europe/General	ix55/VERACRUZ(EN)	2009	D 3.0 TCI-S	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2009	D 3.0 TCI-S	BCM [Body Control Module]	√	√	√		√	
Europe/General	ix55/VERACRUZ(EN)	2009	D 3.0 TCI-S	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2009	D 3.0 TCI-S	OPTION [User Option]				√		
Europe/General	ix55/VERACRUZ(EN)	2009	D 3.0 TCI-S	IMS [IMS]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2009	D 3.0 TCI-S	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2009	D 3.0 TCI-S	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2009	D 3.0 TCI-S	PTG [Power Tailgate]	√	√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2009	D 3.0 TCI-S	CODE [Transmitter Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2009	G 3.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2009	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0116, 0158

Europe/General	ix55/VERACRUZ(EN)	2009	G 3.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2009	G 3.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2009	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0160
Europe/General	ix55/VERACRUZ(EN)	2009	G 3.8 DOHC	ESP [Electronic Stability Program]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2009	G 3.8 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ix55/VERACRUZ(EN)	2009	G 3.8 DOHC	4WD [4WD Control]		√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2009	G 3.8 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2009	G 3.8 DOHC	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	ix55/VERACRUZ(EN)	2009	G 3.8 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	ix55/VERACRUZ(EN)	2009	G 3.8 DOHC	IMMO [Immobilizer]				√		
Europe/General	ix55/VERACRUZ(EN)	2009	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2009	G 3.8 DOHC	SMK [Smart Key Unit]	√	√	√		√	0097
Europe/General	ix55/VERACRUZ(EN)	2009	G 3.8 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2009	G 3.8 DOHC	OPTION [User Option]				√		
Europe/General	ix55/VERACRUZ(EN)	2009	G 3.8 DOHC	IMS [IMS]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2009	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2009	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2009	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	ix55/VERACRUZ(EN)	2009	G 3.8 DOHC	PTG [Power Tailgate]	√	√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2009	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2008	D 3.0 TCI-S	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2008	D 3.0 TCI-S	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0160
Europe/General	ix55/VERACRUZ(EN)	2008	D 3.0 TCI-S	ESP [Electronic Stability Program]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2008	D 3.0 TCI-S	AIRBAG [Airbag Control]	√	√	√			

Europe/General	ix55/VERACRUZ(EN)	2008	D 3.0 TCI-S	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2008	D 3.0 TCI-S	EPS [Electronic Power Steering]		√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2008	D 3.0 TCI-S	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	ix55/VERACRUZ(EN)	2008	D 3.0 TCI-S	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
Europe/General	ix55/VERACRUZ(EN)	2008	D 3.0 TCI-S	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2008	D 3.0 TCI-S	SMK [Smart Key Unit]	√	√	√		√	0097
Europe/General	ix55/VERACRUZ(EN)	2008	D 3.0 TCI-S	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2008	D 3.0 TCI-S	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2008	D 3.0 TCI-S	IMS [IMS]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2008	D 3.0 TCI-S	OPTION [User Option]				√		
Europe/General	ix55/VERACRUZ(EN)	2008	D 3.0 TCI-S	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2008	D 3.0 TCI-S	BCM [Body Control Module]	√	√	√		√	
Europe/General	ix55/VERACRUZ(EN)	2008	D 3.0 TCI-S	PTG [Power Tailgate]	√	√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2008	D 3.0 TCI-S	CODE [Transmitter Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2008	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2008	G 3.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2008	G 3.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2008	G 3.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2008	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0160
Europe/General	ix55/VERACRUZ(EN)	2008	G 3.8 DOHC	ESP [Electronic Stability Program]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2008	G 3.8 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ix55/VERACRUZ(EN)	2008	G 3.8 DOHC	4WD [4WD Control]		√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2008	G 3.8 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2008	G 3.8 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135

Europe/General	ix55/VERACRUZ(EN)	2008	G 3.8 DOHC	IMMO [Immobilizer]				√		
Europe/General	ix55/VERACRUZ(EN)	2008	G 3.8 DOHC	SMK [Smart Key Unit]	√	√	√		√	0097
Europe/General	ix55/VERACRUZ(EN)	2008	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2008	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	ix55/VERACRUZ(EN)	2008	G 3.8 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2008	G 3.8 DOHC	OPTION [User Option]				√		
Europe/General	ix55/VERACRUZ(EN)	2008	G 3.8 DOHC	IMS [IMS]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2008	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2008	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2008	G 3.8 DOHC	PTG [Power Tailgate]	√	√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2008	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2007	D 3.0 TCI-S	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2007	D 3.0 TCI-S	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0160
Europe/General	ix55/VERACRUZ(EN)	2007	D 3.0 TCI-S	ESP [Electronic Stability Program]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2007	D 3.0 TCI-S	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ix55/VERACRUZ(EN)	2007	D 3.0 TCI-S	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2007	D 3.0 TCI-S	4WD [4WD Control]		√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2007	D 3.0 TCI-S	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	ix55/VERACRUZ(EN)	2007	D 3.0 TCI-S	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
Europe/General	ix55/VERACRUZ(EN)	2007	D 3.0 TCI-S	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2007	D 3.0 TCI-S	SMK [Smart Key Unit]	√	√	√		√	0097
Europe/General	ix55/VERACRUZ(EN)	2007	D 3.0 TCI-S	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2007	D 3.0 TCI-S	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2007	D 3.0 TCI-S	IMS [IMS]	√	√	√	√	√	

Europe/General	ix55/VERACRUZ(EN)	2007	D 3.0 TCI-S	OPTION [User Option]				√		
Europe/General	ix55/VERACRUZ(EN)	2007	D 3.0 TCI-S	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2007	D 3.0 TCI-S	BCM [Body Control Module]	√	√	√		√	
Europe/General	ix55/VERACRUZ(EN)	2007	D 3.0 TCI-S	PTG [Power Tailgate]	√	√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2007	D 3.0 TCI-S	CODE [Transmitter Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2007	G 3.8 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2007	G 3.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2007	G 3.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2007	G 3.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0158
Europe/General	ix55/VERACRUZ(EN)	2007	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122, 0160
Europe/General	ix55/VERACRUZ(EN)	2007	G 3.8 DOHC	ESP [Electronic Stability Program]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2007	G 3.8 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	ix55/VERACRUZ(EN)	2007	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2007	G 3.8 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2007	G 3.8 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090, 0135
Europe/General	ix55/VERACRUZ(EN)	2007	G 3.8 DOHC	IMMO [Immobilizer]				√		
Europe/General	ix55/VERACRUZ(EN)	2007	G 3.8 DOHC	SMK [Smart Key Unit]	√	√	√		√	0097
Europe/General	ix55/VERACRUZ(EN)	2007	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				√		
Europe/General	ix55/VERACRUZ(EN)	2007	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
Europe/General	ix55/VERACRUZ(EN)	2007	G 3.8 DOHC	TILT [Tilt / Telescope]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2007	G 3.8 DOHC	OPTION [User Option]				√		
Europe/General	ix55/VERACRUZ(EN)	2007	G 3.8 DOHC	IMS [IMS]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2007	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	ix55/VERACRUZ(EN)	2007	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	

Europe/General	ix55/VERACRUZ(EN)	2007	G 3.8 DOHC	PTG [Power Tailgate]	√	√	√	√		
Europe/General	ix55/VERACRUZ(EN)	2007	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		
Europe/General	KONA(OS)	2018	G 1.0 T-GDI	ENGINE [Engine Control]	√	√	√	√		0015, 0072, 0116, 0158
Europe/General	KONA(OS)	2018	G 1.0 T-GDI	ABSESP [ABS / ESP]	√	√	√	√		0064, 0108
Europe/General	KONA(OS)	2018	G 1.0 T-GDI	FCA [Forward Collision - Avoidance Assist]	√	√	√	√		
Europe/General	KONA(OS)	2018	G 1.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	KONA(OS)	2018	G 1.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	KONA(OS)	2018	G 1.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	KONA(OS)	2018	G 1.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0096
Europe/General	KONA(OS)	2018	G 1.0 T-GDI	RVM [Rear View Monitor with Parking Guidance]	√	√	√	√		
Europe/General	KONA(OS)	2018	G 1.0 T-GDI	LKA [Lane Keeping Assist]	√	√	√	√		
Europe/General	KONA(OS)	2018	G 1.0 T-GDI	BCW [Blind - Spot Collision Warning]	√	√	√	√	√	
Europe/General	KONA(OS)	2018	G 1.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	KONA(OS)	2018	G 1.0 T-GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	KONA(OS)	2018	G 1.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	KONA(OS)	2018	G 1.0 T-GDI	AMP [Amplifier]						0006
Europe/General	KONA(OS)	2018	G 1.0 T-GDI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	KONA(OS)	2018	G 1.0 T-GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	KONA(OS)	2018	G 1.0 T-GDI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	KONA(OS)	2018	G 1.0 T-GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	KONA(OS)	2018	G 1.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	KONA(OS)	2018	G 1.0 T-GDI	IGPM [Integrated Gateway Power Module]	√	√	√	√	√	0052
Europe/General	KONA(OS)	2018	G 1.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	KONA(OS)	2018	G 1.6 T-GDI	ENGINE [Engine Control]	√	√	√	√		0015, 0072, 0116, 0158
Europe/General	KONA(OS)	2018	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		0022, 0025
Europe/General	KONA(OS)	2018	G 1.6 T-GDI	ABSESP [ABS / ESP]	√	√	√	√		0064, 0108
Europe/General	KONA(OS)	2018	G 1.6 T-GDI	FCA [Forward Collision - Avoidance Assist]	√	√	√	√		
Europe/General	KONA(OS)	2018	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	KONA(OS)	2018	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	KONA(OS)	2018	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	KONA(OS)	2018	G 1.6 T-GDI	4WD [4WD]	√	√	√	√	√	0023, 0024
Europe/General	KONA(OS)	2018	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0096
Europe/General	KONA(OS)	2018	G 1.6 T-GDI	RVM [Rear View Monitor with Parking Guidance]	√	√	√	√		
Europe/General	KONA(OS)	2018	G 1.6 T-GDI	LKA [Lane Keeping Assist]	√	√	√	√		
Europe/General	KONA(OS)	2018	G 1.6 T-GDI	BCW [Blind - Spot Collision Warning]	√	√	√	√	√	
Europe/General	KONA(OS)	2018	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	KONA(OS)	2018	G 1.6 T-GDI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	KONA(OS)	2018	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	KONA(OS)	2018	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129

Europe/General	KONA(OS)	2018	G 1.6 T-GDI	AMP [Amplifier]						0006
Europe/General	KONA(OS)	2018	G 1.6 T-GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	KONA(OS)	2018	G 1.6 T-GDI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	KONA(OS)	2018	G 1.6 T-GDI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	KONA(OS)	2018	G 1.6 T-GDI	HUD [Head Up Display]	√	√	√	√		
Europe/General	KONA(OS)	2018	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	KONA(OS)	2018	G 1.6 T-GDI	IGPM [Integrated Gateway Power Module]	√	√	√	√	√	0052
Europe/General	KONA(OS)	2018	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	KONA(OS)	2018	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0158
Europe/General	KONA(OS)	2018	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	KONA(OS)	2018	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√		0064, 0108
Europe/General	KONA(OS)	2018	G 2.0 MPI	FCA [Forward Collision - Avoidance Assist]	√	√	√	√		
Europe/General	KONA(OS)	2018	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	KONA(OS)	2018	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	KONA(OS)	2018	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0096
Europe/General	KONA(OS)	2018	G 2.0 MPI	RVM [Rear View Monitor with Parking Guidance]	√	√	√	√		
Europe/General	KONA(OS)	2018	G 2.0 MPI	LKA [Lane Keeping Assist]	√	√	√	√		
Europe/General	KONA(OS)	2018	G 2.0 MPI	BCW [Blind - Spot Collision Warning]	√	√	√	√	√	
Europe/General	KONA(OS)	2018	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	KONA(OS)	2018	G 2.0 MPI	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	KONA(OS)	2018	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	KONA(OS)	2018	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	KONA(OS)	2018	G 2.0 MPI	AMP [Amplifier]						0006
Europe/General	KONA(OS)	2018	G 2.0 MPI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	KONA(OS)	2018	G 2.0 MPI	IBU - TPMS [IBU - TPMS]	√	√	√			
Europe/General	KONA(OS)	2018	G 2.0 MPI	IBU - BCM [IBU - BCM]	√	√	√	√	√	
Europe/General	KONA(OS)	2018	G 2.0 MPI	HUD [Head Up Display]	√	√	√	√		
Europe/General	KONA(OS)	2018	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	KONA(OS)	2018	G 2.0 MPI	IGPM [Integrated Gateway Power Module]	√	√	√	√	√	0052
Europe/General	KONA(OS)	2018	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	MARCIA(H1)	1998	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	MARCIA(H1)	1998	G 2.5 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	MARCIA(H1)	1997	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	MARCIA(H1)	1997	G 2.5 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	MARCIA(H1)	1996	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	MARCIA(H1)	1996	G 2.5 DOHC	AIRBAG [Airbag Control]		√	√	√		
Europe/General	MATRIX(FC)	2011	D 1.5 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2011	D 1.5 TCI-U	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2011	D 1.5 TCI-U	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	MATRIX(FC)	2011	D 1.5 TCI-U	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2011	D 1.5 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	MATRIX(FC)	2011	D 1.5 TCI-U	IMMO [Immobilizer]				√		0112, 0147, 0138, 0091, 0102, 0086, 0091, 0112
Europe/General	MATRIX(FC)	2011	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2011	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	MATRIX(FC)	2011	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2011	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	MATRIX(FC)	2011	G 1.6 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2011	G 1.6 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	MATRIX(FC)	2011	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2011	G 1.6 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2011	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	MATRIX(FC)	2011	G 1.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	MATRIX(FC)	2011	G 1.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	MATRIX(FC)	2011	G 1.8 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	MATRIX(FC)	2011	G 1.8 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2011	G 1.8 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	MATRIX(FC)	2011	G 1.8 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2011	G 1.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2011	G 1.8 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	MATRIX(FC)	2010	D 1.5 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2010	D 1.5 TCI-U	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2010	D 1.5 TCI-U	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	MATRIX(FC)	2010	D 1.5 TCI-U	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2010	D 1.5 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2010	D 1.5 TCI-U	IMMO [Immobilizer]				√		0112, 0147, 0138, 0091, 0102, 0086, 0091, 0112
Europe/General	MATRIX(FC)	2010	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2010	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	MATRIX(FC)	2010	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2010	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	MATRIX(FC)	2010	G 1.6 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2010	G 1.6 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	MATRIX(FC)	2010	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2010	G 1.6 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2010	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	MATRIX(FC)	2010	G 1.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	MATRIX(FC)	2010	G 1.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	MATRIX(FC)	2010	G 1.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	MATRIX(FC)	2010	G 1.8 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	MATRIX(FC)	2010	G 1.8 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2010	G 1.8 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	MATRIX(FC)	2010	G 1.8 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2010	G 1.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2010	G 1.8 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	MATRIX(FC)	2009	D 1.5 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	

Europe/General	MATRIX(FC)	2009	D 1.5 TCI-U	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2009	D 1.5 TCI-U	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	MATRIX(FC)	2009	D 1.5 TCI-U	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2009	D 1.5 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2009	D 1.5 TCI-U	IMMO [Immobilizer]				√		0112, 0147, 0138, 0091, 0102, 0086, 0091, 0112
Europe/General	MATRIX(FC)	2009	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2009	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2009	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	MATRIX(FC)	2009	G 1.6 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2009	G 1.6 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	MATRIX(FC)	2009	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2009	G 1.6 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2009	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	MATRIX(FC)	2009	G 1.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	MATRIX(FC)	2009	G 1.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	MATRIX(FC)	2009	G 1.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	MATRIX(FC)	2009	G 1.8 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	MATRIX(FC)	2009	G 1.8 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2009	G 1.8 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	MATRIX(FC)	2009	G 1.8 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2009	G 1.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2009	G 1.8 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	MATRIX(FC)	2008	D 1.5 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2008	D 1.5 TCI-U	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2008	D 1.5 TCI-U	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	MATRIX(FC)	2008	D 1.5 TCI-U	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2008	D 1.5 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2008	D 1.5 TCI-U	IMMO [Immobilizer]				√		0112, 0147, 0138, 0091, 0102, 0086, 0091, 0112
Europe/General	MATRIX(FC)	2008	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2008	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	MATRIX(FC)	2008	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2008	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	MATRIX(FC)	2008	G 1.6 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2008	G 1.6 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	MATRIX(FC)	2008	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2008	G 1.6 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2008	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	MATRIX(FC)	2008	G 1.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	MATRIX(FC)	2008	G 1.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	MATRIX(FC)	2008	G 1.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	MATRIX(FC)	2008	G 1.8 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	MATRIX(FC)	2008	G 1.8 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2008	G 1.8 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	0064

Europe/General	MATRIX(FC)	2008	G 1.8 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2008	G 1.8 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	MATRIX(FC)	2007	D 1.5 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2007	D 1.5 TCI-U	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2007	D 1.5 TCI-U	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	MATRIX(FC)	2007	D 1.5 TCI-U	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2007	D 1.5 TCI-U	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2007	D 1.5 TCI-U	IMMO [Immobilizer]				√		0112, 0147, 0138, 0091, 0102, 0086, 0091, 0112
Europe/General	MATRIX(FC)	2007	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2007	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	MATRIX(FC)	2007	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2007	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	MATRIX(FC)	2007	G 1.6 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2007	G 1.6 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	MATRIX(FC)	2007	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2007	G 1.6 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2007	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	MATRIX(FC)	2007	G 1.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	MATRIX(FC)	2007	G 1.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	MATRIX(FC)	2007	G 1.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	MATRIX(FC)	2007	G 1.8 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	MATRIX(FC)	2007	G 1.8 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2007	G 1.8 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	MATRIX(FC)	2007	G 1.8 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2007	G 1.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2007	G 1.8 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	MATRIX(FC)	2006	D 1.5 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2006	D 1.5 TCI-U	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2006	D 1.5 TCI-U	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	MATRIX(FC)	2006	D 1.5 TCI-U	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2006	D 1.5 TCI-U	IMMO [Immobilizer]				√		0147, 0112, 0091, 0102, 0147, 0091
Europe/General	MATRIX(FC)	2006	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2006	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	MATRIX(FC)	2006	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2006	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	MATRIX(FC)	2006	G 1.6 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2006	G 1.6 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	MATRIX(FC)	2006	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2006	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	MATRIX(FC)	2006	G 1.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	MATRIX(FC)	2006	G 1.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	MATRIX(FC)	2006	G 1.8 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	MATRIX(FC)	2006	G 1.8 DOHC	TCS [Traction Control]		√	√	√	√	

Europe/General	MATRIX(FC)	2006	G 1.8 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	MATRIX(FC)	2006	G 1.8 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2006	G 1.8 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	MATRIX(FC)	2005	D 1.5 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2005	D 1.5 TCI-D	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2005	D 1.5 TCI-D	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	MATRIX(FC)	2005	D 1.5 TCI-D	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2005	D 1.5 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	MATRIX(FC)	2005	D 1.5 TCI-U	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2005	D 1.5 TCI-U	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2005	D 1.5 TCI-U	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	MATRIX(FC)	2005	D 1.5 TCI-U	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2005	D 1.5 TCI-U	IMMO [Immobilizer]				√		0147, 0112, 0091, 0102, 0147, 0091
Europe/General	MATRIX(FC)	2005	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	MATRIX(FC)	2005	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	MATRIX(FC)	2005	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	MATRIX(FC)	2005	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	MATRIX(FC)	2005	G 1.6 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2005	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	MATRIX(FC)	2005	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2005	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	MATRIX(FC)	2005	G 1.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	MATRIX(FC)	2005	G 1.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	MATRIX(FC)	2005	G 1.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	MATRIX(FC)	2005	G 1.8 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	MATRIX(FC)	2005	G 1.8 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2005	G 1.8 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	MATRIX(FC)	2005	G 1.8 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2005	G 1.8 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	MATRIX(FC)	2004	D 1.5 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2004	D 1.5 TCI-D	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2004	D 1.5 TCI-D	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	MATRIX(FC)	2004	D 1.5 TCI-D	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2004	D 1.5 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	MATRIX(FC)	2004	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	MATRIX(FC)	2004	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	MATRIX(FC)	2004	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	MATRIX(FC)	2004	G 1.6 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2004	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	MATRIX(FC)	2004	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2004	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	MATRIX(FC)	2004	G 1.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	MATRIX(FC)	2004	G 1.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	MATRIX(FC)	2004	G 1.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120

Europe/General	MATRIX(FC)	2004	G 1.8 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	MATRIX(FC)	2004	G 1.8 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2004	G 1.8 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	MATRIX(FC)	2004	G 1.8 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2004	G 1.8 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	MATRIX(FC)	2003	D 1.5 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2003	D 1.5 TCI-D	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2003	D 1.5 TCI-D	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	MATRIX(FC)	2003	D 1.5 TCI-D	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2003	D 1.5 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	MATRIX(FC)	2003	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	MATRIX(FC)	2003	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	MATRIX(FC)	2003	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	MATRIX(FC)	2003	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	MATRIX(FC)	2003	G 1.6 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2003	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	MATRIX(FC)	2003	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2003	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	MATRIX(FC)	2003	G 1.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	MATRIX(FC)	2003	G 1.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	MATRIX(FC)	2003	G 1.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	MATRIX(FC)	2003	G 1.8 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	MATRIX(FC)	2003	G 1.8 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2003	G 1.8 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	MATRIX(FC)	2003	G 1.8 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2003	G 1.8 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	MATRIX(FC)	2002	D 1.5 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	MATRIX(FC)	2002	D 1.5 TCI-D	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2002	D 1.5 TCI-D	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	MATRIX(FC)	2002	D 1.5 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	MATRIX(FC)	2002	G 1.6 DOHC	ENGINE [Unleaded GEN]	√	√	√	√		
Europe/General	MATRIX(FC)	2002	G 1.6 DOHC	ENGINE [Leaded All]	√	√	√	√		0073
Europe/General	MATRIX(FC)	2002	G 1.6 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√		
Europe/General	MATRIX(FC)	2002	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	MATRIX(FC)	2002	G 1.6 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2002	G 1.6 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	MATRIX(FC)	2002	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
Europe/General	MATRIX(FC)	2002	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	MATRIX(FC)	2002	G 1.8 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	MATRIX(FC)	2002	G 1.8 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	MATRIX(FC)	2002	G 1.8 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	MATRIX(FC)	2002	G 1.8 DOHC	AT [Automatic Transaxle]		√	√	√	√	
Europe/General	MATRIX(FC)	2002	G 1.8 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	MATRIX(FC)	2002	G 1.8 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	MATRIX(FC)	2002	G 1.8 DOHC	AIRBAG [Airbag Control]	√	√	√	√		

Europe/General	MATRIX(FC)	2002	G 1.8 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0013, 0123, 0120, 0158
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0007, 0122, 0122
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	ODS [PODS - F]	√	√	√	√		
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133

Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0013, 0123, 0120, 0158
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0007, 0122, 0122
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	MCS [Multi - View Camera System]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	

Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE SPORT(DMA)	2018	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0013, 0123, 0120, 0158
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0007, 0122, 0122
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	ODS [PODS - F]	√	√	√	√		
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	MCS [Multi - View Camera System]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112

Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0013, 0123, 0120, 0158
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0007, 0122, 0122
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	ODS [PODS - F]	√	√	√	√		
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021

Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	ODS [PODS - F]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	

Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	ODS [PODS - F]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	

Europe/General	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	ODS [PODS - F]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016

Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	ODS [PODS - F]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016

Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	ODS [PODS - F]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016

Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	PTG [Power Tail Gate]	√	√	√	√		
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	ODS [PODS - F]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	

Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	PTG [Power Tail Gate]	√	√	√	√		
Europe/General	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	ODS [PODS - F]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	

Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	PTG [Power Tail Gate]	√	√	√	√		
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	ODS [PODS - F]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094

Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	PTG [Power Tail Gate]	√	√	√	√		
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	0061
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	0061
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	IMMO [Immobilizer]				√		
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2013	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	0061

Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	0061
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	IMMO [Immobilizer]				√		
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2013	D 2.2 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0015, 0120, 0158
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0120, 0158, 0055
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0120, 0158
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	IMMO [Immobilizer]				√		
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2013	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0158
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0158
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0158
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	IMMO [Immobilizer]				√		
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042

Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2013	G 3.5 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	0061
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	0061
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	IMMO [Immobilizer]				√		
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2012	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	0061
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	0061
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	IMMO [Immobilizer]				√		
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2012	D 2.2 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0120, 0158, 0055
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0120, 0158
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	IMMO [Immobilizer]				√		

Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2012	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0158
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0158
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0158
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	IMMO [Immobilizer]				√		
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2012	G 3.5 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	0061
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	0061
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	IMMO [Immobilizer]				√		
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2011	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	0061
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	0061
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	4WD [4WD Control]		√	√	√		

Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling]	√	√	√	√	√	0090
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	IMMO [Immobilizer]				√		
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2011	D 2.2 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0015, 0120, 0158
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0120, 0158, 0055
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0120, 0158
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	IMMO [Immobilizer]				√		
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2011	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0158
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0158
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0158
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	IMMO [Immobilizer]				√		
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2011	G 3.5 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	0061
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	0061
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0064

Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	IMMO [Immobilizer]				√		
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2010	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	AIRBAG [Airbag (GEN)]	√	√	√			0109
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	IMMO [Immobilizer]				√		0112, 0138, 0091, 0102, 0086, 0147
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-D	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	0061
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	0061
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	IMMO [Immobilizer]				√		
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2010	D 2.2 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0015, 0120, 0158
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0120, 0158, 0055
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0120, 0158
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122

Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	IMMO [Immobilizer]				√		
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2010	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0158
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0158
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0158
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	IMMO [Immobilizer]				√		
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2010	G 3.5 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	AIRBAG [Airbag (NAS)]	√	√	√			0107, 0109
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	AIRBAG [Airbag (GEN)]	√	√	√			0109
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	IMMO [Immobilizer]				√		0112, 0138, 0091, 0102, 0086, 0147
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2009	D 2.2 TCI-D	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0158
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0015, 0073, 0158

Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0158
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0116, 0015, 0158, 0055, 0055
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2009	G 2.7 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0158
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0158
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0158
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2009	G 3.3 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	AIRBAG [Airbag (NAS)]	√	√	√			0107, 0109
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	AIRBAG [Airbag (GEN)]	√	√	√			0109
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	IMMO [Immobilizer]				√		0112, 0138, 0091, 0102, 0086, 0147
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2008	D 2.2 TCI-D	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0158
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0158
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0158
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	AIRBAG [Airbag Control]	√	√	√			0109

Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2008	G 2.7 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0158
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0158
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0158
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2008	G 3.3 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	AIRBAG [Airbag (NAS)]	√	√	√			0107, 0109
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	AIRBAG [Airbag (GEN)]	√	√	√			0109
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2007	D 2.2 TCI-D	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0158
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0158
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0158
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091

Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2007	G 2.7 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0158
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0158
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0158
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0116, 0158
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	4WD [4WD Control]		√	√	√		
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2007	G 3.3 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2006	D 2.2 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2006	D 2.2 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2006	D 2.2 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2006	D 2.2 TCI-D	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SANTAFE(CM)	2006	D 2.2 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2006	D 2.2 TCI-D	4WD [4WD Control]		√	√			
Europe/General	SANTAFE(CM)	2006	D 2.2 TCI-D	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SANTAFE(CM)	2006	D 2.2 TCI-D	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2006	D 2.2 TCI-D	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	SANTAFE(CM)	2006	D 2.2 TCI-D	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2006	D 2.2 TCI-D	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	4WD [4WD Control]		√	√			
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	BCM [Body Control Module]	√			√	√	
Europe/General	SANTAFE(CM)	2006	G 2.7 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0089, 0035, 0061, 0013, 0035, 0116, 0158
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	EPB [Electric Parking Brake]	√	√	√	√	√	0037

Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	AMP [Amplifier]						0006
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE(DM)	2018	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0116, 0035, 0013, 0061, 0035, 0158
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	

Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	AHS [Active Hood System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	AMP [Amplifier]						0006
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	ECALL [e - Call]	√	√	√			
Europe/General	SANTAFE(DM)	2018	D 2.2 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0013, 0123, 0120, 0158
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0007, 0122, 0122
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	AMP [Amplifier]						0006
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	ECALL [e - Call]	√	√	√			
Europe/General	SANTAFE(DM)	2018	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122

Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	AMP [Amplifier]						0006
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	ECALL [e - Call]	√	√	√			
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2018	G 2.4 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016

Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	AMP [Amplifier]						0006
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	ECALL [e - Call]	√	√	√			
Europe/General	SANTAFE(DM)	2018	G 3.3 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0089, 0035, 0061, 0013, 0035, 0116, 0158
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	AMP [Amplifier]						0006
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	ECALL [e - Call]	√	√	√			

Europe/General	SANTAFE(DM)	2017	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0116, 0035, 0013, 0061, 0035, 0158
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	AMP [Amplifier]						0006
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	ECALL [e - Call]	√	√	√			
Europe/General	SANTAFE(DM)	2017	D 2.2 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0013, 0123, 0120, 0158
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0007, 0122, 0122
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	

Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	AMP [Amplifier]						0006
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	ECALL [e - Call]	√	√	√			
Europe/General	SANTAFE(DM)	2017	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	AMP [Amplifier]						0006
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128

Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	ECALL [e - Call]	√	√	√			
Europe/General	SANTAFE(DM)	2017	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	AMP [Amplifier]						0006
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	ECALL [e - Call]	√	√	√			
Europe/General	SANTAFE(DM)	2017	G 3.3 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0089, 0035, 0061, 0013, 0035, 0116, 0158
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	

Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling System (After PE)]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling System (Before PE)]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	AMP [Amplifier]						0006
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	ECALL [e - Call]	√	√	√			
Europe/General	SANTAFE(DM)	2016	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0116, 0035, 0013, 0061, 0035, 0158
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System (After PE)]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System (Before PE)]	√	√	√	√	√	

Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	AHS [Active Hood System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	AMP [Amplifier]						0006
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	ECALL [e - Call]	√	√	√			
Europe/General	SANTAFE(DM)	2016	D 2.2 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0013, 0123, 0120, 0158
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0007, 0122, 0122
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	AHLS [Auto Headlamp Leveling System (After PE)]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	AHLS [Auto Headlamp Leveling System (Before PE)]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	AMP [Amplifier]						0006
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128

Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	ECALL [e - Call]	√	√	√			
Europe/General	SANTAFE(DM)	2016	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	AHLS [Auto Headlamp Leveling System (After PE)]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	AHLS [Auto Headlamp Leveling System (Before PE)]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	AMP [Amplifier]						0006
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	ECALL [e - Call]	√	√	√			
Europe/General	SANTAFE(DM)	2016	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024

Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	AHLS [Auto Headlamp Leveling System (After PE)]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	AHLS [Auto Headlamp Leveling System (Before PE)]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	AMP [Amplifier]						0006
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	ECALL [e - Call]	√	√	√			
Europe/General	SANTAFE(DM)	2016	G 3.3 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0035, 0061, 0089
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling System (after PE)]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling System (before PE)]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	AHS [Active Hood System]	√	√	√		√	

Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	AMP [Amplifier]						0006
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System (after PE)]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System (before PE)]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	AMP [Amplifier]						0006
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE(DM)	2015	D 2.2 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037

Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	AHLS [Auto Headlamp Leveling System (before PE)]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	AHLS [Auto Headlamp Leveling System (after PE)]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	AMP [Amplifier]						0006
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE(DM)	2015	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	ENGINE [Leaded All]		√	√			0013, 0015, 0073, 0116, 0120, 0158
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	AHLS [Auto Headlamp Leveling System (before PE)]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	

Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	AHLS [Auto Headlamp Leveling System (after PE)]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	AMP [Amplifier]						0006
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE(DM)	2015	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0015, 0055, 0073, 0116, 0158
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	AVM [Around View Monitor System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	AHLS [Auto Headlamp Leveling System (before PE)]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	AHLS [Auto Headlamp Leveling System (after PE)]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	AMP [Amplifier]						0006
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	SANTAFE(DM)	2015	G 3.3 MPI	CODE [Transmitter Code Saving]				√		0026

Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0035, 0061, 0089
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	ADM [Assist Door Module]	√	√	√	√	√	

Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	D 2.2 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	ENGINE [Leaded All]		√	√			0013, 0015, 0073, 0116, 0120, 0158
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	ADM [Assist Door Module]	√	√	√	√	√	

Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2014	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0015, 0055, 0073, 0116, 0158
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2014	G 3.3 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0035, 0061, 0089
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	

Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	AHS [Active Hood System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	D 2.2 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		

Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2013	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0015, 0055, 0073, 0116, 0158
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0055, 0116, 0158
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DM)	2013	G 3.3 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2018	D 2.2 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DMI)	2017	D 2.2 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2017	D 2.2 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DMI)	2017	D 2.2 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2017	D 2.2 TCI-R	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DMI)	2017	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			

Europe/General	SANTAFE(DMI)	2017	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DMI)	2017	D 2.2 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DMI)	2017	D 2.2 TCI-R	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	SANTAFE(DMI)	2017	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DMI)	2017	D 2.2 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2017	D 2.2 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	SANTAFE(DMI)	2017	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2017	D 2.2 TCI-R	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2017	D 2.2 TCI-R	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DMI)	2017	D 2.2 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DMI)	2017	D 2.2 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DMI)	2017	D 2.2 TCI-R	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2017	D 2.2 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2017	D 2.2 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2017	D 2.2 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DMI)	2017	D 2.2 TCI-R	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2017	D 2.2 TCI-R	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2017	D 2.2 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DMI)	2016	D 2.2 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2016	D 2.2 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DMI)	2016	D 2.2 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2016	D 2.2 TCI-R	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DMI)	2016	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DMI)	2016	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DMI)	2016	D 2.2 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2016	D 2.2 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DMI)	2016	D 2.2 TCI-R	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	SANTAFE(DMI)	2016	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DMI)	2016	D 2.2 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2016	D 2.2 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	SANTAFE(DMI)	2016	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2016	D 2.2 TCI-R	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2016	D 2.2 TCI-R	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DMI)	2016	D 2.2 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DMI)	2016	D 2.2 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DMI)	2016	D 2.2 TCI-R	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2016	D 2.2 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2016	D 2.2 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2016	D 2.2 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DMI)	2016	D 2.2 TCI-R	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2016	D 2.2 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	EPB [Electric Parking Brake]	√	√	√	√	√	0037

Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	AHS [Active Hood System]	√	√	√		√	
Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2015	D 2.2 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	EPB [Electric Parking Brake]	√	√	√	√	√	0037
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	EPS [Motor driven Power Steering]	√	√	√	√		
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	PSM [Power Seat Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SANTAFE(DMI)	2014	D 2.2 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	ENGINE [D 2.0 TCI - D (VGT)]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	ENGINE [D 2.0 TCI - D (WGT)]	√	√	√	√	√	

Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	TCS [Traction Control]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	ABS [2WD]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	ABS [4WD]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	AIRBAG [NAS]	√	√	√			0111
Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	AIRBAG [General]	√	√	√			
Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	4WD [4WD Control]		√	√			
Europe/General	SANTAFE(SM)	2006	D 2.0 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	TCS [Traction Control]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	ABS [2WD]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	ABS [4WD]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	AIRBAG [NAS]	√	√	√			0111
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	AIRBAG [General]	√	√	√			
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	4WD [4WD Control]		√	√			
Europe/General	SANTAFE(SM)	2006	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	TCS [Traction Control]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	ABS [2WD]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	ABS [4WD]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	AIRBAG [NAS]	√	√	√			0111
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	4WD [4WD Control]		√	√			
Europe/General	SANTAFE(SM)	2006	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0120
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0120
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		√	√	√	√	0015, 0055, 0117, 0120
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	TCS [Traction Control]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	ABS [2WD]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	ABS [4WD]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	AIRBAG [NAS]	√	√	√			0111
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	AIRBAG [General]	√	√	√			
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	4WD [4WD Control]		√	√			
Europe/General	SANTAFE(SM)	2006	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SANTAFE(SM)	2006	G 3.5 DOHC	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2006	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2006	G 3.5 DOHC	TCS [Traction Control]	√	√	√	√	√	0064

Europe/General	SANTAFE(SM)	2006	G 3.5 DOHC	ABS [2WD]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2006	G 3.5 DOHC	ABS [4WD]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2006	G 3.5 DOHC	AIRBAG [NAS]	√	√	√			0111
Europe/General	SANTAFE(SM)	2006	G 3.5 DOHC	AIRBAG [General]	√	√	√			
Europe/General	SANTAFE(SM)	2006	G 3.5 DOHC	4WD [4WD Control]		√	√			
Europe/General	SANTAFE(SM)	2006	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	ENGINE [D 2.0 TCI - D (VGT)]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	ENGINE [D 2.0 TCI - D (WGT)]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	TCS [Traction Control]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	ABS [2WD]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	ABS [4WD]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	AIRBAG [NAS]	√	√	√			0111
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	AIRBAG [General]	√	√	√			
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	4WD [4WD Control]		√	√			
Europe/General	SANTAFE(SM)	2005	D 2.0 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	TCS [Traction Control]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	ABS [2WD]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	AIRBAG [NAS]	√	√	√			0111
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	AIRBAG [General]	√	√	√			
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	4WD [4WD Control]		√	√			
Europe/General	SANTAFE(SM)	2005	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	TCS [Traction Control]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	ABS [2WD]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	ABS [4WD]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	AIRBAG [NAS]	√	√	√			0111
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	AIRBAG [General]	√	√	√			
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	4WD [4WD Control]		√	√			
Europe/General	SANTAFE(SM)	2005	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0120
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0120
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		√	√	√	√	0015, 0055, 0117, 0120
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	TCS [Traction Control]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	ABS [2WD]	√	√	√	√	√	0064

Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	ABS [4WD]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	AIRBAG [NAS]	√	√	√			0111
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	AIRBAG [General]	√	√	√			
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	4WD [4WD Control]		√	√			
Europe/General	SANTAFE(SM)	2005	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SANTAFE(SM)	2005	G 3.5 DOHC	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2005	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2005	G 3.5 DOHC	TCS [Traction Control]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2005	G 3.5 DOHC	ABS [2WD]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2005	G 3.5 DOHC	ABS [4WD]	√	√	√	√	√	0064
Europe/General	SANTAFE(SM)	2005	G 3.5 DOHC	AIRBAG [NAS]	√	√	√			0111
Europe/General	SANTAFE(SM)	2005	G 3.5 DOHC	AIRBAG [General]	√	√	√			
Europe/General	SANTAFE(SM)	2005	G 3.5 DOHC	4WD [4WD Control]		√	√			
Europe/General	SANTAFE(SM)	2005	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SANTAFE(SM)	2004	D 2.0 TCI-D	ENGINE [D 2.0 TCI - D (VGT)]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2004	D 2.0 TCI-D	ENGINE [D 2.0 TCI - D (WGT)]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2004	D 2.0 TCI-D	TCS [Traction Control]		√	√	√	√	
Europe/General	SANTAFE(SM)	2004	D 2.0 TCI-D	ABS [2WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2004	D 2.0 TCI-D	ABS [4WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2004	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SANTAFE(SM)	2004	D 2.0 TCI-D	4WD [4WD Control]		√	√			
Europe/General	SANTAFE(SM)	2004	D 2.0 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	SANTAFE(SM)	2004	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2004	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2004	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	SANTAFE(SM)	2004	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2004	G 2.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SANTAFE(SM)	2004	G 2.0 DOHC	ABS [2WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2004	G 2.0 DOHC	ABS [4WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2004	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SANTAFE(SM)	2004	G 2.0 DOHC	4WD [4WD Control]		√	√			
Europe/General	SANTAFE(SM)	2004	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SANTAFE(SM)	2004	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	SANTAFE(SM)	2004	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2004	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2004	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	SANTAFE(SM)	2004	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2004	G 2.4 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SANTAFE(SM)	2004	G 2.4 DOHC	ABS [2WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2004	G 2.4 DOHC	ABS [4WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2004	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SANTAFE(SM)	2004	G 2.4 DOHC	4WD [4WD Control]		√	√			
Europe/General	SANTAFE(SM)	2004	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SANTAFE(SM)	2004	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0120
Europe/General	SANTAFE(SM)	2004	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0120

Europe/General	SANTAFE(SM)	2004	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		√	√	√	√	0015, 0055, 0117, 0120
Europe/General	SANTAFE(SM)	2004	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	SANTAFE(SM)	2004	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2004	G 2.7 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SANTAFE(SM)	2004	G 2.7 DOHC	ABS [2WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2004	G 2.7 DOHC	ABS [4WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2004	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SANTAFE(SM)	2004	G 2.7 DOHC	4WD [4WD Control]		√	√			
Europe/General	SANTAFE(SM)	2004	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SANTAFE(SM)	2004	G 3.5 DOHC	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2004	G 3.5 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SANTAFE(SM)	2004	G 3.5 DOHC	ABS [2WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2004	G 3.5 DOHC	ABS [4WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2004	G 3.5 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SANTAFE(SM)	2004	G 3.5 DOHC	4WD [4WD Control]		√	√			
Europe/General	SANTAFE(SM)	2004	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SANTAFE(SM)	2003	D 2.0 TCI-D	ENGINE [D 2.0 TCI - D (VGT)]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2003	D 2.0 TCI-D	ENGINE [D 2.0 TCI - D (WGT)]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2003	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2003	D 2.0 TCI-D	TCS [Traction Control]		√	√	√	√	
Europe/General	SANTAFE(SM)	2003	D 2.0 TCI-D	ABS [2WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2003	D 2.0 TCI-D	ABS [4WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2003	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SANTAFE(SM)	2003	D 2.0 TCI-D	4WD [4WD Control]		√	√			
Europe/General	SANTAFE(SM)	2003	D 2.0 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	SANTAFE(SM)	2003	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2003	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2003	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	SANTAFE(SM)	2003	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2003	G 2.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SANTAFE(SM)	2003	G 2.0 DOHC	ABS [2WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2003	G 2.0 DOHC	ABS [4WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2003	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SANTAFE(SM)	2003	G 2.0 DOHC	4WD [4WD Control]		√	√			
Europe/General	SANTAFE(SM)	2003	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SANTAFE(SM)	2003	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	SANTAFE(SM)	2003	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2003	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2003	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	SANTAFE(SM)	2003	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2003	G 2.4 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SANTAFE(SM)	2003	G 2.4 DOHC	ABS [2WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2003	G 2.4 DOHC	ABS [4WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2003	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SANTAFE(SM)	2003	G 2.4 DOHC	4WD [4WD Control]		√	√			

Europe/General	SANTAFE(SM)	2003	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	ENGINE [Unleaded OBD - II (TiO2)]	√	√	√	√	√	0117, 0015, 0120, 0055
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	ENGINE [Unleaded EOBD (TiO2)]	√	√	√	√	√	0015, 0120
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	ABS [2WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	ABS [4WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	4WD [4WD Control]		√	√			
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	ENGINE [Unleaded GEN (ZrO2)]	√	√	√	√	√	0015, 0116, 0120
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	ENGINE [Unleaded EOBD (ZrO2)]	√	√	√	√	√	0015, 0116, 0120
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	ENGINE [Unleaded OBD - II (ZrO2)]		√	√	√	√	0015, 0055, 0117, 0120
Europe/General	SANTAFE(SM)	2003	G 2.7 DOHC	ENGINE [Unleaded GEN (TiO2)]	√	√	√	√	√	0015, 0120
Europe/General	SANTAFE(SM)	2002	D 2.0 TCI-D	ENGINE [D 2.0 TCI - D (VGT)]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2002	D 2.0 TCI-D	ENGINE [D 2.0 TCI - D (WGT)]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2002	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2002	D 2.0 TCI-D	TCS [Traction Control]		√	√	√	√	
Europe/General	SANTAFE(SM)	2002	D 2.0 TCI-D	ABS [2WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2002	D 2.0 TCI-D	ABS [4WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2002	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SANTAFE(SM)	2002	D 2.0 TCI-D	4WD [4WD Control]		√	√			
Europe/General	SANTAFE(SM)	2002	D 2.0 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	SANTAFE(SM)	2002	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2002	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2002	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	SANTAFE(SM)	2002	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2002	G 2.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SANTAFE(SM)	2002	G 2.0 DOHC	ABS [2WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2002	G 2.0 DOHC	ABS [4WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2002	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SANTAFE(SM)	2002	G 2.0 DOHC	4WD [4WD Control]		√	√			
Europe/General	SANTAFE(SM)	2002	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SANTAFE(SM)	2002	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	SANTAFE(SM)	2002	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2002	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2002	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	SANTAFE(SM)	2002	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2002	G 2.4 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SANTAFE(SM)	2002	G 2.4 DOHC	ABS [2WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2002	G 2.4 DOHC	ABS [4WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2002	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SANTAFE(SM)	2002	G 2.4 DOHC	4WD [4WD Control]		√	√			
Europe/General	SANTAFE(SM)	2002	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	SANTAFE(SM)	2002	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0117, 0015, 0120, 0055

Europe/General	SANTAFE(SM)	2002	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	SANTAFE(SM)	2002	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	SANTAFE(SM)	2002	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2002	G 2.7 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SANTAFE(SM)	2002	G 2.7 DOHC	ABS [2WD]		√	√	√	√	
Europe/General	SANTAFE(SM)	2002	G 2.7 DOHC	ABS [4WD]			√	√	√	
Europe/General	SANTAFE(SM)	2002	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SANTAFE(SM)	2002	G 2.7 DOHC	4WD [4WD Control]			√	√		
Europe/General	SANTAFE(SM)	2002	G 2.7 DOHC	IMMO [Immobilizer]			√	√	√	0074, 0098, 0099, 0102
Europe/General	SANTAFE(SM)	2001	D 2.0 TCI-D	ENGINE [D 2.0 TCI - D (WGT)]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2001	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2001	D 2.0 TCI-D	TCS [Traction Control]			√	√	√	
Europe/General	SANTAFE(SM)	2001	D 2.0 TCI-D	ABS [2WD]			√	√	√	
Europe/General	SANTAFE(SM)	2001	D 2.0 TCI-D	ABS [4WD]			√	√	√	
Europe/General	SANTAFE(SM)	2001	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SANTAFE(SM)	2001	D 2.0 TCI-D	4WD [4WD Control]			√	√		
Europe/General	SANTAFE(SM)	2001	D 2.0 TCI-D	IMMO [Immobilizer]					√	0091, 0102, 0112, 0147
Europe/General	SANTAFE(SM)	2001	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2001	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2001	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	SANTAFE(SM)	2001	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2001	G 2.0 DOHC	TCS [Traction Control]			√	√	√	
Europe/General	SANTAFE(SM)	2001	G 2.0 DOHC	ABS [2WD]			√	√	√	
Europe/General	SANTAFE(SM)	2001	G 2.0 DOHC	ABS [4WD]			√	√	√	
Europe/General	SANTAFE(SM)	2001	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SANTAFE(SM)	2001	G 2.0 DOHC	4WD [4WD Control]			√	√		
Europe/General	SANTAFE(SM)	2001	G 2.0 DOHC	IMMO [Immobilizer]			√	√	√	0074, 0098, 0099, 0102
Europe/General	SANTAFE(SM)	2001	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	SANTAFE(SM)	2001	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2001	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2001	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073
Europe/General	SANTAFE(SM)	2001	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2001	G 2.4 DOHC	TCS [Traction Control]			√	√	√	
Europe/General	SANTAFE(SM)	2001	G 2.4 DOHC	ABS [2WD]			√	√	√	
Europe/General	SANTAFE(SM)	2001	G 2.4 DOHC	ABS [4WD]			√	√	√	
Europe/General	SANTAFE(SM)	2001	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SANTAFE(SM)	2001	G 2.4 DOHC	4WD [4WD Control]			√	√		
Europe/General	SANTAFE(SM)	2001	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	SANTAFE(SM)	2001	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0117, 0015, 0120, 0055
Europe/General	SANTAFE(SM)	2001	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	SANTAFE(SM)	2001	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	SANTAFE(SM)	2001	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SANTAFE(SM)	2001	G 2.7 DOHC	TCS [Traction Control]			√	√	√	
Europe/General	SANTAFE(SM)	2001	G 2.7 DOHC	ABS [2WD]			√	√	√	
Europe/General	SANTAFE(SM)	2001	G 2.7 DOHC	ABS [4WD]			√	√	√	

Europe/General	SCOUPE(L1)	1994	G 1.5 SOHC	ENGINE [Leaded All]		√	√	√	√	
Europe/General	SCOUPE(L1)	1994	G 1.5 SOHC	ENGINE [Unleaded T / C (94~96)]		√	√	√	√	
Europe/General	SCOUPE(L1)	1994	G 1.5 SOHC	ENGINE [Unleaded GEN]		√	√	√	√	
Europe/General	SCOUPE(L1)	1993	G 1.5 SOHC(Bosch)	ENGINE [Leaded All]		√	√	√	√	
Europe/General	SCOUPE(L1)	1993	G 1.5 SOHC(Melco)	ENGINE [Leaded All]		√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0158
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	MCU [HEV Motor Control System]	√	√	√	√		0046, 0101
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	HCULDC [HCU / LDC]	√	√	√	√	√	0048, 0049, 0050, 0083
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	BMS [HEV Battery System]	√	√	√	√	√	0130
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	AT [Automatic Transaxle]	√	√	√	√		0036, 0122
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	ESPAHB [ESP / AHB]	√	√	√	√	√	0059, 0069
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	TPMS [Tire Pressure Monitoring System]	√	√	√			
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	PGS [Parking Guide System]	√	√	√	√		
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	AVM [Around View Monitor System]	√	√	√	√	√	0008
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	AAF [Active Air Flap]	√	√	√	√	√	

Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	AMP [Amplifier]						0006
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	IPM [Inter Panel Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	ECALL [e - Call]	√	√	√			
Europe/General	SONATA HYBRID(LF HEV)	2018	G 2.0 HEV	VESS [Virtual Engine Sound System]	√	√	√		√	
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0158
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	MCU [HEV Motor Control System]	√	√	√	√		0046, 0101
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	HCULDC [HCU / LDC]	√	√	√	√	√	0031, 0049, 0050, 0083
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	BMS [HEV Battery System]	√	√	√	√	√	0130
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	AT [Automatic Transaxle]	√	√	√	√		0036, 0122
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	ESPAHB [ESP / AHB]	√	√	√	√	√	0059, 0064, 0069
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	SPAS [Smart Parking Assist System]	√	√	√	√	√	

Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	LDWS [Lane Departure Warning System]	√	√	√	√		0132
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	AMP [Amplifier]						0006
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	IPM [Inter Panel Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	CGW [Central Gateway]	√	√	√			0052
Europe/General	SONATA HYBRID(LF HEV)	2017	G 2.0 HEV	VESS [Virtual Engine Sound System]	√	√	√		√	
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0158
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	MCU [HEV Motor Control System]	√	√	√	√		0046, 0101
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	HCULDC [HCU / LDC]	√	√	√	√	√	0031, 0049, 0050, 0083
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	BMS [HEV Battery System]	√	√	√	√	√	0130
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	AT [Automatic Transaxle]	√	√	√	√		0036, 0122
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	ESPAHB [ESP / AHB]	√	√	√	√	√	0059, 0064, 0069
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	LDWS [Lane Departure Warning System]	√	√	√	√		0132
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	AMP [Amplifier]						0006
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	IPM [Inter Panel Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	CGW [Central Gateway]	√	√	√			0052
Europe/General	SONATA HYBRID(LF HEV)	2016	G 2.0 HEV	VESS [Virtual Engine Sound System]	√	√	√		√	
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0158
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	MCU [HEV Motor Control System]	√	√	√	√		0046, 0101
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	HCULDC [HCU / LDC]	√	√	√	√	√	0031, 0049, 0050, 0083
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	BMS [HEV Battery System]	√	√	√	√	√	0130
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	ESPAHB [ESP / AHB]	√	√	√	√	√	0059, 0064, 0069
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	AIRBAG [Airbag (Event #2)]	√	√	√			

Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	LDWS [Lane Departure Warning System]	√	√	√	√		0132
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	AMP [Amplifier]						0006
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	IPM [Inter Panel Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	CGW [Central Gateway]	√	√	√			0052
Europe/General	SONATA HYBRID(LF HEV)	2015	G 2.0 HEV	VESS [Virtual Engine Sound System]	√	√	√		√	
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0158
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	MCU [HEV Motor Control System]	√	√	√	√		0046, 0101
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	HCULDC [HCU / LDC]	√	√	√	√	√	0031, 0049, 0050, 0083

Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	BMS [HEV Battery System]	√	√	√	√	√	0130
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	AT [Automatic Transaxle]	√	√	√	√		0036, 0122
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	ESCAHB [ESC / AHB]	√	√	√	√	√	0059, 0064, 0069
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	ODS [Weight Classification System]	√	√	√	√		
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	LDWS [Lane Departure Warning System]	√	√	√	√		0132
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	AMP [Amplifier]						0006

Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	TMU [Telematics Unit]	√	√	√			
Europe/General	SONATA HYBRID(LF HEV)- U.S.	2016	G 2.0 HEV	VESS [Virtual Engine Sound System]	√	√	√		√	
Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0054, 0120, 0158
Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	MCU [HEV Motor System]	√	√	√	√	√	0046, 0101
Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	HCU [HEV Control System]	√	√	√	√		0031, 0049, 0050, 0083
Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	BMS [HEV Battery System]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	LDC [Low DC / DC Converter]	√	√	√	√		
Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	AT [Automatic Transaxle]	√	√	√	√	√	0036, 0122
Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	AHB [Active Hydraulic Booster]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	ODS [Weight Classification System]	√	√	√	√		0156
Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	EPS [Power Steering]	√	√	√	√		0094, 0096, 0094
Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	IMMO [Immobilizer]				√		
Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	TMU [Telematics Unit]	√	√	√			
Europe/General	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0054, 0120, 0158
Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	MCU [HEV Motor System]	√	√	√	√	√	0046, 0101
Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	HCU [HEV Control System]	√	√	√	√		0031, 0049, 0050, 0083
Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	BMS [HEV Battery System]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	LDC [Low DC / DC Converter]	√	√	√	√		
Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	AT [Automatic Transaxle]	√	√	√	√	√	0036, 0122
Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	AHB [Active Hydraulic Booster]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	ODS [Weight Classification System]	√	√	√	√		0156
Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	EPS [Power Steering]	√	√	√	√		0094, 0096, 0094
Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	IMMO [Immobilizer]				√		
Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	TMU [Telematics Unit]	√	√	√			
Europe/General	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2014	G 2.4 HEV	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0054, 0120, 0158
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2014	G 2.4 HEV	MCU [HEV Motor System]	√	√	√	√	√	0046, 0101
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2014	G 2.4 HEV	HCU [HEV Control System]	√	√	√	√		0031, 0049, 0050, 0083
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2014	G 2.4 HEV	BMS [HEV Battery System]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2014	G 2.4 HEV	LDC [Low DC / DC Converter]	√	√	√	√		
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2014	G 2.4 HEV	AT [Automatic Transaxle]	√	√	√	√	√	0036, 0122
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2014	G 2.4 HEV	AHB [Active Hydraulic Booster]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2014	G 2.4 HEV	ODS [Weight Classification System]	√	√	√	√		0156

Europe/General	SONATA HYBRID(YF HEV)- U.S.	2014	G 2.4 HEV	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2014	G 2.4 HEV	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2014	G 2.4 HEV	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2014	G 2.4 HEV	EPS [Power Steering]	√	√	√	√		0094, 0096, 0094
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2014	G 2.4 HEV	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2014	G 2.4 HEV	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2014	G 2.4 HEV	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2014	G 2.4 HEV	IMMO [Immobilizer]				√		
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2014	G 2.4 HEV	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2014	G 2.4 HEV	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2014	G 2.4 HEV	PDM [Power Distribution Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2014	G 2.4 HEV	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2014	G 2.4 HEV	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2014	G 2.4 HEV	TMU [Telematics Unit]	√	√	√			
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2014	G 2.4 HEV	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2013	G 2.4 HEV	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0054, 0120, 0158

Europe/General	SONATA HYBRID(YF HEV)- U.S.	2013	G 2.4 HEV	MCU [HEV Motor System]	√	√	√	√	√	0046, 0101
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2013	G 2.4 HEV	HCU [HEV Control System]	√	√	√	√		0031, 0049, 0050, 0083
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2013	G 2.4 HEV	BMS [HEV Battery System]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2013	G 2.4 HEV	LDC [Low DC / DC Converter]	√	√	√	√		
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2013	G 2.4 HEV	AT [Automatic Transaxle]	√	√	√	√	√	0036, 0122
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2013	G 2.4 HEV	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2013	G 2.4 HEV	AHB [Active Hydraulic Booster]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2013	G 2.4 HEV	ODS [Weight Classification System]	√	√	√	√		0156
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2013	G 2.4 HEV	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2013	G 2.4 HEV	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2013	G 2.4 HEV	EPS [Power Steering]	√	√	√	√		0094, 0096, 0094
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2013	G 2.4 HEV	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2013	G 2.4 HEV	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2013	G 2.4 HEV	AAF [Active Air Flap]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2013	G 2.4 HEV	IMMO [Immobilizer]				√		
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2013	G 2.4 HEV	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144

Europe/General	SONATA HYBRID(YF HEV)- U.S.	2013	G 2.4 HEV	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2013	G 2.4 HEV	PDM [Power Distribution Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2013	G 2.4 HEV	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2013	G 2.4 HEV	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2013	G 2.4 HEV	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA HYBRID(YF HEV)- U.S.	2013	G 2.4 HEV	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(EF)	2006	G 2.0 DOHC	ENGINE [Engine Control (RUSSIA)]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2006	G 2.0 DOHC	ENGINE [Engine Control (EOBD)]	√	√	√	√	√	
Europe/General	SONATA(EF)	2006	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	2006	G 2.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SONATA(EF)	2006	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(EF)	2006	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	SONATA(EF)	2006	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	2006	G 2.0 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	SONATA(EF)	2005	G 2.0 DOHC	ENGINE [Engine Control (RUSSIA)]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2005	G 2.0 DOHC	ENGINE [Engine Control (EOBD)]	√	√	√	√	√	
Europe/General	SONATA(EF)	2005	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	2005	G 2.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SONATA(EF)	2005	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(EF)	2005	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	SONATA(EF)	2005	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	2005	G 2.0 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	SONATA(EF)	2005	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0120
Europe/General	SONATA(EF)	2005	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		√	√	√	√	0015, 0055, 0117, 0120
Europe/General	SONATA(EF)	2005	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	SONATA(EF)	2005	G 2.7 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2005	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2005	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	2005	G 2.7 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SONATA(EF)	2005	G 2.7 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(EF)	2005	G 2.7 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	SONATA(EF)	2005	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	2005	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(EF)	2004	G 2.0 DOHC	ENGINE [Unleaded GEN (Siemens)]	√	√	√	√	√	0015, 0120

Europe/General	SONATA(EF)	2004	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	SONATA(EF)	2004	G 2.0 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	SONATA(EF)	2004	G 2.0 DOHC	ENGINE [Unleaded GEN (Melco)]	√	√	√	√	√	
Europe/General	SONATA(EF)	2004	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA(EF)	2004	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	2004	G 2.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SONATA(EF)	2004	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(EF)	2004	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	2004	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	ENGINE [Unleaded GEN (Siemens)]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	ENGINE [Unleaded GEN (Melco)]	√	√	√	√	√	
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	2004	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(EF)	2004	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0120
Europe/General	SONATA(EF)	2004	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		√	√	√	√	0015, 0055, 0117, 0120
Europe/General	SONATA(EF)	2004	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	SONATA(EF)	2004	G 2.7 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2004	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2004	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	2004	G 2.7 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SONATA(EF)	2004	G 2.7 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(EF)	2004	G 2.7 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	SONATA(EF)	2004	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	2004	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(EF)	2003	G 2.0 DOHC	ENGINE [Unleaded GEN (Siemens)]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2003	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	SONATA(EF)	2003	G 2.0 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	SONATA(EF)	2003	G 2.0 DOHC	ENGINE [Unleaded GEN (Melco)]	√	√	√	√	√	
Europe/General	SONATA(EF)	2003	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA(EF)	2003	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	2003	G 2.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SONATA(EF)	2003	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(EF)	2003	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	SONATA(EF)	2003	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	2003	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(EF)	2003	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	SONATA(EF)	2003	G 2.4 DOHC	ENGINE [Unleaded GEN (Siemens)]	√	√	√	√	√	0015, 0120

Europe/General	SONATA(EF)	2003	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	SONATA(EF)	2003	G 2.4 DOHC	ENGINE [Unleaded GEN (Melco)]	√	√	√	√	√	
Europe/General	SONATA(EF)	2003	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA(EF)	2003	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	2003	G 2.4 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SONATA(EF)	2003	G 2.4 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(EF)	2003	G 2.4 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	SONATA(EF)	2003	G 2.4 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	2003	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	ENGINE [Unleaded (Ti O2S) EOBD]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	ENGINE [Unleaded (Ti O2S) OBD - II]	√	√	√	√	√	0015, 0055, 0117, 0120
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	ENGINE [Unleaded (Zr O2S) OBD - II]		√	√	√	√	0015, 0055, 0117, 0120
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	ENGINE [Unleaded (Zr O2S) EOBD]	√	√	√	√	√	0015, 0116, 0120
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	2003	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(EF)	2002	G 2.0 DOHC	ENGINE [Unleaded GEN (Siemens)]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2002	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	SONATA(EF)	2002	G 2.0 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	SONATA(EF)	2002	G 2.0 DOHC	ENGINE [Unleaded GEN (Melco)]	√	√	√	√	√	
Europe/General	SONATA(EF)	2002	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA(EF)	2002	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	2002	G 2.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SONATA(EF)	2002	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(EF)	2002	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	SONATA(EF)	2002	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	2002	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	ENGINE [Unleaded GEN (Siemens)]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	ENGINE [Unleaded GEN (Melco)]	√	√	√	√	√	
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	2002	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(EF)	2002	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120

Europe/General	SONATA(EF)	2002	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	SONATA(EF)	2002	G 2.7 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2002	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0117, 0120
Europe/General	SONATA(EF)	2002	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2002	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	2002	G 2.7 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SONATA(EF)	2002	G 2.7 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(EF)	2002	G 2.7 DOHC	AIRBAG [Airbag Control]		√	√			
Europe/General	SONATA(EF)	2002	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	2002	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(EF)	2001	G 2.0 DOHC	ENGINE [Unleaded GEN (Siemens)]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2001	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	SONATA(EF)	2001	G 2.0 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	SONATA(EF)	2001	G 2.0 DOHC	ENGINE [Unleaded GEN (Melco)]	√	√	√	√	√	
Europe/General	SONATA(EF)	2001	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA(EF)	2001	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	2001	G 2.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SONATA(EF)	2001	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(EF)	2001	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SONATA(EF)	2001	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	2001	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	ENGINE [Unleaded GEN (Siemens)]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	ENGINE [Unleaded GEN (Melco)]	√	√	√	√	√	
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	2001	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(EF)	2001	G 2.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2001	G 2.5 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2001	G 2.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0117, 0120
Europe/General	SONATA(EF)	2001	G 2.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2001	G 2.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	2001	G 2.5 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SONATA(EF)	2001	G 2.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(EF)	2001	G 2.5 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SONATA(EF)	2001	G 2.5 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	2001	G 2.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(EF)	2001	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2001	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120

Europe/General	SONATA(EF)	2001	G 2.7 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2001	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0117, 0120
Europe/General	SONATA(EF)	2001	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2001	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	2001	G 2.7 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SONATA(EF)	2001	G 2.7 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(EF)	2001	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SONATA(EF)	2001	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	2001	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(EF)	2000	G 2.0 DOHC	ENGINE [Unleaded GEN (Siemens)]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2000	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	SONATA(EF)	2000	G 2.0 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	SONATA(EF)	2000	G 2.0 DOHC	ENGINE [Unleaded GEN (Melco)]	√	√	√	√	√	
Europe/General	SONATA(EF)	2000	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA(EF)	2000	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	2000	G 2.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SONATA(EF)	2000	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(EF)	2000	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SONATA(EF)	2000	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	2000	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	ENGINE [Unleaded GEN (Siemens)]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	ENGINE [Unleaded GEN (Melco)]	√	√	√	√	√	
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	2000	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(EF)	2000	G 2.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0073, 0120
Europe/General	SONATA(EF)	2000	G 2.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2000	G 2.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	SONATA(EF)	2000	G 2.5 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2000	G 2.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2000	G 2.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	2000	G 2.5 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SONATA(EF)	2000	G 2.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(EF)	2000	G 2.5 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SONATA(EF)	2000	G 2.5 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	2000	G 2.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(EF)	2000	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2000	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	SONATA(EF)	2000	G 2.7 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	0015, 0120

Europe/General	SONATA(EF)	2000	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0117, 0120
Europe/General	SONATA(EF)	2000	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	2000	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	2000	G 2.7 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SONATA(EF)	2000	G 2.7 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(EF)	2000	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SONATA(EF)	2000	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	2000	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(EF)	1999	G 2.0 DOHC	ENGINE [Unleaded GEN (Melco)]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	1999	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	SONATA(EF)	1999	G 2.0 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	SONATA(EF)	1999	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA(EF)	1999	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	1999	G 2.0 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SONATA(EF)	1999	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(EF)	1999	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SONATA(EF)	1999	G 2.0 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	1999	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0055
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	ENGINE [Unleaded GEN (Siemens)]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	1999	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(EF)	1999	G 2.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0073, 0120
Europe/General	SONATA(EF)	1999	G 2.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	1999	G 2.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	SONATA(EF)	1999	G 2.5 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	1999	G 2.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	1999	G 2.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	1999	G 2.5 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SONATA(EF)	1999	G 2.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(EF)	1999	G 2.5 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SONATA(EF)	1999	G 2.5 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	1999	G 2.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(EF)	1999	G 2.7 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0073, 0120
Europe/General	SONATA(EF)	1999	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	1999	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	SONATA(EF)	1999	G 2.7 DOHC	ENGINE [Unleaded IMMO]	√	√	√	√	√	0015, 0120
Europe/General	SONATA(EF)	1999	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120

Europe/General	SONATA(EF)	1999	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(EF)	1999	G 2.7 DOHC	TCS [Traction Control]		√	√	√	√	
Europe/General	SONATA(EF)	1999	G 2.7 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(EF)	1999	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	SONATA(EF)	1999	G 2.7 DOHC	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA(EF)	1999	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(LF)	2018	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SONATA(LF)	2018	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	SONATA(LF)	2018	G 2.0 MPI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	SONATA(LF)	2018	G 2.0 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SONATA(LF)	2018	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LF)	2018	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LF)	2018	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LF)	2018	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LF)	2018	G 2.0 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	SONATA(LF)	2018	G 2.0 MPI	AVM [Around View Monitor System]	√	√	√	√	√	0008
Europe/General	SONATA(LF)	2018	G 2.0 MPI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	SONATA(LF)	2018	G 2.0 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2018	G 2.0 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2018	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA(LF)	2018	G 2.0 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SONATA(LF)	2018	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LF)	2018	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	SONATA(LF)	2018	G 2.0 MPI	CDP [CD Player]	√	√	√		√	
Europe/General	SONATA(LF)	2018	G 2.0 MPI	AMP [Amplifier]						0006
Europe/General	SONATA(LF)	2018	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LF)	2018	G 2.0 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.0 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LF)	2018	G 2.0 MPI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LF)	2018	G 2.0 MPI	ECALL [e - Call]	√	√	√			
Europe/General	SONATA(LF)	2018	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0123, 0158
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			

Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	AVM [Around View Monitor System]	√	√	√	√	√	0008
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	CDP [CD Player]	√	√	√		√	
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	AMP [Amplifier]						0006
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	ECALL [e - Call]	√	√	√			
Europe/General	SONATA(LF)	2018	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(LF)	2018	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0123, 0158
Europe/General	SONATA(LF)	2018	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	SONATA(LF)	2018	G 2.4 GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	SONATA(LF)	2018	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.4 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SONATA(LF)	2018	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LF)	2018	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LF)	2018	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LF)	2018	G 2.4 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LF)	2018	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LF)	2018	G 2.4 GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	SONATA(LF)	2018	G 2.4 GDI	AVM [Around View Monitor System]	√	√	√	√	√	0008
Europe/General	SONATA(LF)	2018	G 2.4 GDI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	SONATA(LF)	2018	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2018	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2018	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA(LF)	2018	G 2.4 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021

Europe/General	SONATA(LF)	2018	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LF)	2018	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	SONATA(LF)	2018	G 2.4 GDI	CDP [CD Player]	√	√	√		√	
Europe/General	SONATA(LF)	2018	G 2.4 GDI	AMP [Amplifier]						0006
Europe/General	SONATA(LF)	2018	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LF)	2018	G 2.4 GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LF)	2018	G 2.4 GDI	ECALL [e - Call]	√	√	√			
Europe/General	SONATA(LF)	2018	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(LF)	2018	G 2.4 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SONATA(LF)	2018	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(LF)	2018	G 2.4 MPI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	SONATA(LF)	2018	G 2.4 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SONATA(LF)	2018	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LF)	2018	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LF)	2018	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LF)	2018	G 2.4 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LF)	2018	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LF)	2018	G 2.4 MPI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	SONATA(LF)	2018	G 2.4 MPI	AVM [Around View Monitor System]	√	√	√	√	√	0008
Europe/General	SONATA(LF)	2018	G 2.4 MPI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	SONATA(LF)	2018	G 2.4 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2018	G 2.4 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2018	G 2.4 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA(LF)	2018	G 2.4 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SONATA(LF)	2018	G 2.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LF)	2018	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	SONATA(LF)	2018	G 2.4 MPI	CDP [CD Player]	√	√	√		√	
Europe/General	SONATA(LF)	2018	G 2.4 MPI	AMP [Amplifier]						0006
Europe/General	SONATA(LF)	2018	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LF)	2018	G 2.4 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.4 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.4 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LF)	2018	G 2.4 MPI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	SONATA(LF)	2018	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LF)	2018	G 2.4 MPI	ECALL [e - Call]	√	√	√			

Europe/General	SONATA(LF)	2017	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SONATA(LF)	2017	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(LF)	2017	G 2.0 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LF)	2017	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SONATA(LF)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LF)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LF)	2017	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(LF)	2017	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LF)	2017	G 2.0 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LF)	2017	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LF)	2017	G 2.0 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2017	G 2.0 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2017	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA(LF)	2017	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LF)	2017	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	SONATA(LF)	2017	G 2.0 MPI	AMP [Amplifier]						0006
Europe/General	SONATA(LF)	2017	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2017	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LF)	2017	G 2.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LF)	2017	G 2.0 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2017	G 2.0 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2017	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LF)	2017	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(LF)	2017	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0123, 0158
Europe/General	SONATA(LF)	2017	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	SONATA(LF)	2017	G 2.0 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LF)	2017	G 2.0 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SONATA(LF)	2017	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LF)	2017	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LF)	2017	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(LF)	2017	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LF)	2017	G 2.0 T-GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LF)	2017	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LF)	2017	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2017	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2017	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA(LF)	2017	G 2.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LF)	2017	G 2.0 T-GDI	AMP [Amplifier]						0006
Europe/General	SONATA(LF)	2017	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2017	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LF)	2017	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LF)	2017	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2017	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	

Europe/General	SONATA(LF)	2017	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LF)	2017	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(LF)	2017	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0123, 0158
Europe/General	SONATA(LF)	2017	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	SONATA(LF)	2017	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LF)	2017	G 2.4 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SONATA(LF)	2017	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LF)	2017	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LF)	2017	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(LF)	2017	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LF)	2017	G 2.4 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LF)	2017	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LF)	2017	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2017	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2017	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA(LF)	2017	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LF)	2017	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	SONATA(LF)	2017	G 2.4 GDI	AMP [Amplifier]						0006
Europe/General	SONATA(LF)	2017	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2017	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LF)	2017	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LF)	2017	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2017	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2017	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LF)	2017	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(LF)	2017	G 2.4 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SONATA(LF)	2017	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(LF)	2017	G 2.4 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LF)	2017	G 2.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SONATA(LF)	2017	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LF)	2017	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LF)	2017	G 2.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LF)	2017	G 2.4 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LF)	2017	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LF)	2017	G 2.4 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2017	G 2.4 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2017	G 2.4 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA(LF)	2017	G 2.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LF)	2017	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	SONATA(LF)	2017	G 2.4 MPI	AMP [Amplifier]						0006
Europe/General	SONATA(LF)	2017	G 2.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2017	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128

Europe/General	SONATA(LF)	2017	G 2.4 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LF)	2017	G 2.4 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2017	G 2.4 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2017	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LF)	2017	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(LF)	2016	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SONATA(LF)	2016	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(LF)	2016	G 2.0 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LF)	2016	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SONATA(LF)	2016	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LF)	2016	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LF)	2016	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(LF)	2016	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LF)	2016	G 2.0 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LF)	2016	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LF)	2016	G 2.0 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2016	G 2.0 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2016	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA(LF)	2016	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LF)	2016	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	SONATA(LF)	2016	G 2.0 MPI	AMP [Amplifier]						0006
Europe/General	SONATA(LF)	2016	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2016	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LF)	2016	G 2.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LF)	2016	G 2.0 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2016	G 2.0 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2016	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LF)	2016	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0123, 0158
Europe/General	SONATA(LF)	2016	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	SONATA(LF)	2016	G 2.0 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LF)	2016	G 2.0 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SONATA(LF)	2016	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LF)	2016	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LF)	2016	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(LF)	2016	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LF)	2016	G 2.0 T-GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LF)	2016	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LF)	2016	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2016	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2016	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA(LF)	2016	G 2.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LF)	2016	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129

Europe/General	SONATA(LF)	2016	G 2.0 T-GDI	AMP [Amplifier]						0006
Europe/General	SONATA(LF)	2016	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2016	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LF)	2016	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LF)	2016	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2016	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2016	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LF)	2016	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(LF)	2016	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0123, 0158
Europe/General	SONATA(LF)	2016	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	SONATA(LF)	2016	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LF)	2016	G 2.4 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SONATA(LF)	2016	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LF)	2016	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LF)	2016	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(LF)	2016	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LF)	2016	G 2.4 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LF)	2016	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LF)	2016	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2016	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2016	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA(LF)	2016	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LF)	2016	G 2.4 GDI	AMP [Amplifier]						0006
Europe/General	SONATA(LF)	2016	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2016	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LF)	2016	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LF)	2016	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2016	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2016	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LF)	2016	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(LF)	2016	G 2.4 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SONATA(LF)	2016	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(LF)	2016	G 2.4 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LF)	2016	G 2.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SONATA(LF)	2016	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LF)	2016	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LF)	2016	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(LF)	2016	G 2.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LF)	2016	G 2.4 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LF)	2016	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LF)	2016	G 2.4 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2016	G 2.4 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2016	G 2.4 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA(LF)	2016	G 2.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112

Europe/General	SONATA(LF)	2016	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	SONATA(LF)	2016	G 2.4 MPI	AMP [Amplifier]						0006
Europe/General	SONATA(LF)	2016	G 2.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2016	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LF)	2016	G 2.4 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LF)	2016	G 2.4 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2016	G 2.4 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2016	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LF)	2016	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(LF)	2015	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SONATA(LF)	2015	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(LF)	2015	G 2.0 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LF)	2015	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SONATA(LF)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LF)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LF)	2015	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(LF)	2015	G 2.0 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LF)	2015	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LF)	2015	G 2.0 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2015	G 2.0 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2015	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA(LF)	2015	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LF)	2015	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	SONATA(LF)	2015	G 2.0 MPI	AMP [Amplifier]						0006
Europe/General	SONATA(LF)	2015	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2015	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LF)	2015	G 2.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LF)	2015	G 2.0 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2015	G 2.0 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2015	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LF)	2015	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0123, 0158
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016

Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	AMP [Amplifier]						0006
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2015	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LF)	2015	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0123, 0158
Europe/General	SONATA(LF)	2015	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	SONATA(LF)	2015	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LF)	2015	G 2.4 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SONATA(LF)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LF)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LF)	2015	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(LF)	2015	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LF)	2015	G 2.4 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LF)	2015	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LF)	2015	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2015	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2015	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA(LF)	2015	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LF)	2015	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0041, 0042, 0043, 0058, 0129
Europe/General	SONATA(LF)	2015	G 2.4 GDI	AMP [Amplifier]						0006
Europe/General	SONATA(LF)	2015	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2015	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LF)	2015	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LF)	2015	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2015	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2015	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LF)	2015	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(LF)	2015	G 2.4 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SONATA(LF)	2015	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(LF)	2015	G 2.4 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LF)	2015	G 2.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	SONATA(LF)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LF)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LF)	2015	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(LF)	2015	G 2.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094

Europe/General	SONATA(LF)	2015	G 2.4 MPI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LF)	2015	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LF)	2015	G 2.4 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2015	G 2.4 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LF)	2015	G 2.4 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA(LF)	2015	G 2.4 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LF)	2015	G 2.4 MPI	AMP [Amplifier]						0006
Europe/General	SONATA(LF)	2015	G 2.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2015	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LF)	2015	G 2.4 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LF)	2015	G 2.4 MPI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2015	G 2.4 MPI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LF)	2015	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LF)	2015	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	ENGINE [Engine Control]	√	√	√	√		0015, 0072, 0116, 0158
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	EPB [Electronic Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	OCS [Occupant Classification System]	√	√	√	√		
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	AIRCON [FATC / MTC]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	MCS [Multi - View Camera System]	√	√	√	√	√	0008
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	AMP [Amplifier]						0006
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	CDP [CD Player]	√	√	√		√	
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LFA)	2018	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026

Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√		0122
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	EPB [Electronic Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	OCS [Occupant Classification System]	√	√	√	√		
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	AIRCON [FATC / MTC]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	MCS [Multi - View Camera System]	√	√	√	√	√	0008
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	AMP [Amplifier]						0006
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	CDP [CD Player]	√	√	√		√	
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LFA)	2018	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0123, 0158
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	EPB [Electronic Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	OCS [Occupant Classification System]	√	√	√	√		
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	AIRCON [FATC / MTC]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	PGS [Parking Guide System]	√	√	√	√		
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	MCS [Multi - View Camera System]	√	√	√	√	√	0008

Europe/General	SONATA(LFA)	2018	G 2.4 GDI	MFC [Multi Function Camera]	√	√	√	√		
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	AMP [Amplifier]						0006
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	CDP [CD Player]	√	√	√		√	
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LFA)	2018	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	ODS [Occupant Classification Sensor]	√	√	√	√		
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	AIRCON [FATC / MTC]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0132
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	SONATA(LFA)	2017	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0123, 0158
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	

Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	ODS [Occupant Classification Sensor]	√	√	√	√		
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	AIRCON [FATC / MTC]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0132
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	AMP [Amplifier]						0006
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	SONATA(LFA)	2017	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0123, 0158
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	AIRCON [FATC / MTC]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0132
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	AMP [Amplifier]						0006
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	

Europe/General	SONATA(LFA)	2017	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	SONATA(LFA)	2017	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	ODS [Occupant Classification Sensor]	√	√	√	√		
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	AIRCON [FATC / MTC]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0132
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	AMP [Amplifier]						0006
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	SONATA(LFA)	2016	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0123, 0158
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	ODS [Occupant Classification Sensor]	√	√	√	√		
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	AIRCON [FATC / MTC]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0132
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067

Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	AMP [Amplifier]						0006
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	SONATA(LFA)	2016	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0123, 0158
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	ODS [Occupant Classification Sensor]	√	√	√	√		
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	AIRCON [FATC / MTC]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0132
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	AMP [Amplifier]						0006
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	SONATA(LFA)	2016	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	ODS [Occupant Classification Sensor]	√	√	√	√		
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	AIRCON [FATC / MTC]	√	√	√	√	√	

Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0132
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	AMP [Amplifier]						0006
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	SONATA(LFA)	2015	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0123, 0158
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	ODS [Occupant Classification Sensor]	√	√	√	√		
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	AIRCON [FATC / MTC]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0132
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	AMP [Amplifier]						0006
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	SONATA(LFA)	2015	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026

Europe/General	SONATA(LFA)	2015	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0123, 0158
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	ODS [Occupant Classification Sensor]	√	√	√	√		
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	AIRCON [FATC / MTC]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	SCC [Smart Cruise Control]	√	√	√	√		
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0132
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	AMP [Amplifier]						0006
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	0151
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	SONATA(LFA)	2015	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	AT [Automatic Transaxle]		√	√	√	√	0122
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	AGCS [AGCS]	√	√	√	√	√	
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	SMK [Smart Key Unit]	√	√	√	√	√	0097, 0129, 0043, 0106, 0058
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	BCM [BODY CONTROL MODULE]	√			√	√	
Europe/General	SONATA(NF)	2010	D 2.0 TCI-D	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0015, 0120, 0158
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0120, 0158
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0015, 0120, 0116, 0158
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	AT [Automatic Transaxle]		√	√	√	√	0122
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			0109

Europe/General	SONATA(NF)	2010	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	IMMO [Immobilizer]				√		
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0097, 0129, 0043, 0106, 0058
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	SONATA(NF)	2010	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0015, 0120, 0116, 0158
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0015, 0120, 0116, 0158, 0055
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0015, 0120, 0116, 0158
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0015, 0073, 0120, 0116, 0158
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	AGCS [AGCS]	√	√	√	√	√	
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	IMMO [Immobilizer]				√		
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0097, 0129, 0043, 0106, 0058
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	SONATA(NF)	2010	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0015, 0073
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	AGCS [AGCS]	√	√	√	√	√	
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0097, 0129, 0043, 0106, 0058
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(NF)	2010	G 3.3 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	AT [Automatic Transaxle]		√	√	√	√	0122
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			0109

Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	AGCS [AGCS]	√	√	√	√	√	
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	SMK [Smart Key Unit]	√	√	√	√	√	0097, 0129, 0043, 0106, 0058
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	BCM [BODY CONTROL MODULE]	√			√	√	
Europe/General	SONATA(NF)	2009	D 2.0 TCI-D	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0015, 0120, 0158
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0120, 0158
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0120, 0158
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	AT [Automatic Transaxle]		√	√	√	√	0122
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	AGCS [AGCS]	√	√	√	√	√	
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	IMMO [Immobilizer]				√		
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0097, 0129, 0043, 0106, 0058
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	SONATA(NF)	2009	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0120, 0158
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0116, 0015, 0120, 0158
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0120, 0158
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0073, 0015, 0120, 0158
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	AGCS [AGCS]	√	√	√	√	√	
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	IMMO [Immobilizer]				√		
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	SONATA(NF)	2009	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0015, 0073
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	AIRBAG [Airbag Control]	√	√	√			0109

Europe/General	SONATA(NF)	2009	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	AGCS [AGCS]	√	√	√	√	√	
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0097, 0129, 0043, 0106, 0058
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	SONATA(NF)	2009	G 3.3 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	AT [Automatic Transaxle]		√	√	√	√	0122
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	AGCS [AGCS]	√	√	√	√	√	
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	IMMO [Immobilizer]				√		
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	SMK [Smart Key Unit]	√	√	√	√	√	0097, 0129, 0043, 0106, 0058
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	BCM [Body Control Module]	√			√	√	
Europe/General	SONATA(NF)	2008	D 2.0 TCI-D	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0146, 0015, 0073, 0120, 0116, 0158
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0146, 0015, 0120, 0116, 0158
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0146, 0015, 0120, 0116, 0158
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0097, 0129, 0043, 0106, 0058
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	SONATA(NF)	2008	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0015, 0073, 0120, 0116, 0158
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0015, 0120, 0116, 0158
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0015, 0120, 0116, 0158
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0116, 0117, 0015, 0015, 0120, 0116, 0158, 0055
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			0109

Europe/General	SONATA(NF)	2008	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0097, 0129, 0043, 0106, 0058
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	SONATA(NF)	2008	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0015, 0073
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	AGCS [AGCS]	√	√	√	√	√	
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0097, 0129, 0043, 0106, 0058
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(NF)	2008	G 3.3 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	SONATA(NF)	2007	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	SONATA(NF)	2007	D 2.0 TCI-D	AT [Automatic Transaxle]		√	√	√	√	0122
Europe/General	SONATA(NF)	2007	D 2.0 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SONATA(NF)	2007	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SONATA(NF)	2007	D 2.0 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(NF)	2007	D 2.0 TCI-D	IMMO [Immobilizer]				√		
Europe/General	SONATA(NF)	2007	D 2.0 TCI-D	BCM [Body Control Module]	√			√	√	
Europe/General	SONATA(NF)	2007	D 2.0 TCI-D	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(NF)	2007	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	SONATA(NF)	2007	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	SONATA(NF)	2007	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA(NF)	2007	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(NF)	2007	G 2.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SONATA(NF)	2007	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SONATA(NF)	2007	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(NF)	2007	G 2.0 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	SONATA(NF)	2007	G 2.0 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	SONATA(NF)	2007	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(NF)	2007	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	SONATA(NF)	2007	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	SONATA(NF)	2007	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	

Europe/General	SONATA(NF)	2007	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	SONATA(NF)	2007	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(NF)	2007	G 2.4 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SONATA(NF)	2007	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SONATA(NF)	2007	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(NF)	2007	G 2.4 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SONATA(NF)	2007	G 2.4 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	SONATA(NF)	2007	G 2.4 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	SONATA(NF)	2007	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0015, 0073
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	SONATA(NF)	2007	G 3.3 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(NF)	2006	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(NF)	2006	D 2.0 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SONATA(NF)	2006	D 2.0 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	D 2.0 TCI-D	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SONATA(NF)	2006	D 2.0 TCI-D	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	D 2.0 TCI-D	IMMO [Immobilizer]				√		
Europe/General	SONATA(NF)	2006	D 2.0 TCI-D	BCM [Body Control Module]	√			√	√	
Europe/General	SONATA(NF)	2006	D 2.0 TCI-D	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	SONATA(NF)	2006	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	

Europe/General	SONATA(NF)	2006	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	AT [5 - Speed]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	AT [4 - Speed]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	SONATA(NF)	2006	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	SONATA(NF)	2006	G 3.3 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	SONATA(NF)	2005	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	EPS [Electronic Power Steering]		√	√	√		

Europe/General	SONATA(NF)	2005	G 2.4 DOHC	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	IMMO [Immobilizer]				√	√	0147, 0112, 0102, 0091
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	SONATA(NF)	2005	G 2.4 DOHC	CODE [Transmitter Code Saving]				√	√	0026
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	EPS [Electronic Power Steering]		√	√	√		
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	ECS [Electronic Control Suspension]	√	√	√	√	√	
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	IMMO [Immobilizer]				√	√	0147, 0112, 0102, 0091
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	BCM [Body Control Module]	√			√	√	
Europe/General	SONATA(NF)	2005	G 3.3 DOHC	CODE [Transmitter Code Saving]				√	√	0026
Europe/General	SONATA(Y3)	1998	G 1.8 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(Y3)	1998	G 1.8 DOHC	AIRBAG [AIRBAG]		√	√	√		
Europe/General	SONATA(Y3)	1998	G 1.8 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(Y3)	1998	G 1.8 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(Y3)	1998	G 1.8 SOHC	AIRBAG [AIRBAG]		√	√	√		
Europe/General	SONATA(Y3)	1998	G 1.8 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(Y3)	1998	G 2.0 DOHC	ENGINE [Unleaded OBD - II]		√	√	√	√	
Europe/General	SONATA(Y3)	1998	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(Y3)	1998	G 2.0 DOHC	AIRBAG [AIRBAG]		√	√	√		
Europe/General	SONATA(Y3)	1998	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(Y3)	1998	G 2.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(Y3)	1998	G 2.0 SOHC	AIRBAG [AIRBAG]		√	√	√		
Europe/General	SONATA(Y3)	1998	G 2.0 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(Y3)	1998	G 3.0 SOHC	ENGINE [Unleaded OBD - II]		√	√	√	√	
Europe/General	SONATA(Y3)	1998	G 3.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(Y3)	1998	G 3.0 SOHC	AIRBAG [AIRBAG]		√	√	√		
Europe/General	SONATA(Y3)	1998	G 3.0 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(Y3)	1997	G 1.8 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(Y3)	1997	G 1.8 DOHC	AIRBAG [AIRBAG]		√	√	√		
Europe/General	SONATA(Y3)	1997	G 1.8 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(Y3)	1997	G 1.8 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(Y3)	1997	G 1.8 SOHC	AIRBAG [AIRBAG]		√	√	√		
Europe/General	SONATA(Y3)	1997	G 1.8 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(Y3)	1997	G 2.0 DOHC	ENGINE [Unleaded OBD - II]		√	√	√	√	
Europe/General	SONATA(Y3)	1997	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(Y3)	1997	G 2.0 DOHC	AIRBAG [AIRBAG]		√	√	√		
Europe/General	SONATA(Y3)	1997	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(Y3)	1997	G 2.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(Y3)	1997	G 2.0 SOHC	AIRBAG [AIRBAG]		√	√	√		

Europe/General	SONATA(Y3)	1994	G 3.0 SOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	SONATA(Y3)	1994	G 3.0 SOHC	AIRBAG [AIRBAG]		√	√	√		
Europe/General	SONATA(Y3)	1994	G 3.0 SOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	SONATA(YFA)-U.S.	2014	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0105, 0116, 0120, 0158
Europe/General	SONATA(YFA)-U.S.	2014	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(YFA)-U.S.	2014	G 2.0 T-GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0011
Europe/General	SONATA(YFA)-U.S.	2014	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(YFA)-U.S.	2014	G 2.0 T-GDI	ODS [Weight Classification System]	√	√	√	√		0156
Europe/General	SONATA(YFA)-U.S.	2014	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(YFA)-U.S.	2014	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2014	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(YFA)-U.S.	2014	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SONATA(YFA)-U.S.	2014	G 2.0 T-GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2014	G 2.0 T-GDI	IMMO [Immobilizer]				√		
Europe/General	SONATA(YFA)-U.S.	2014	G 2.0 T-GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(YFA)-U.S.	2014	G 2.0 T-GDI	PDM [Power Distribution Module]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2014	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
Europe/General	SONATA(YFA)-U.S.	2014	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2014	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2014	G 2.0 T-GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	SONATA(YFA)-U.S.	2014	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(YFA)-U.S.	2014	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0116, 0120, 0158
Europe/General	SONATA(YFA)-U.S.	2014	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(YFA)-U.S.	2014	G 2.4 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0011
Europe/General	SONATA(YFA)-U.S.	2014	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(YFA)-U.S.	2014	G 2.4 GDI	ODS [Weight Classification System]	√	√	√	√		0156

Europe/General	SONATA(YFA)-U.S.	2014	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(YFA)-U.S.	2014	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2014	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(YFA)-U.S.	2014	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SONATA(YFA)-U.S.	2014	G 2.4 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2014	G 2.4 GDI	IMMO [Immobilizer]				√		
Europe/General	SONATA(YFA)-U.S.	2014	G 2.4 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(YFA)-U.S.	2014	G 2.4 GDI	PDM [Power Distribution Module]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2014	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
Europe/General	SONATA(YFA)-U.S.	2014	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2014	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2014	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2014	G 2.4 GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	SONATA(YFA)-U.S.	2013	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(YFA)-U.S.	2013	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SONATA(YFA)-U.S.	2013	G 2.0 T-GDI	IMMO [Immobilizer]				√		
Europe/General	SONATA(YFA)-U.S.	2013	G 2.0 T-GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(YFA)-U.S.	2013	G 2.0 T-GDI	PDM [Power Distribution Module]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2013	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
Europe/General	SONATA(YFA)-U.S.	2013	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2013	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2013	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2013	G 2.0 T-GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	SONATA(YFA)-U.S.	2013	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026

Europe/General	SONATA(YFA)-U.S.	2013	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0105, 0116, 0120, 0158
Europe/General	SONATA(YFA)-U.S.	2013	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(YFA)-U.S.	2013	G 2.0 T-GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0011
Europe/General	SONATA(YFA)-U.S.	2013	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(YFA)-U.S.	2013	G 2.0 T-GDI	ODS [Weight Classification System]	√	√	√	√		0156
Europe/General	SONATA(YFA)-U.S.	2013	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(YFA)-U.S.	2013	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2013	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0116, 0120, 0158
Europe/General	SONATA(YFA)-U.S.	2013	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(YFA)-U.S.	2013	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(YFA)-U.S.	2013	G 2.4 GDI	ODS [Weight Classification System]	√	√	√	√		0156
Europe/General	SONATA(YFA)-U.S.	2013	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(YFA)-U.S.	2013	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2013	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(YFA)-U.S.	2013	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SONATA(YFA)-U.S.	2013	G 2.4 GDI	IMMO [Immobilizer]				√		
Europe/General	SONATA(YFA)-U.S.	2013	G 2.4 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(YFA)-U.S.	2013	G 2.4 GDI	PDM [Power Distribution Module]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2013	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
Europe/General	SONATA(YFA)-U.S.	2013	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2013	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2013	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2013	G 2.4 GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	SONATA(YFA)-U.S.	2013	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026

Europe/General	SONATA(YFA)-U.S.	2012	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0105, 0116, 0120, 0158
Europe/General	SONATA(YFA)-U.S.	2012	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(YFA)-U.S.	2012	G 2.0 T-GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0011
Europe/General	SONATA(YFA)-U.S.	2012	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(YFA)-U.S.	2012	G 2.0 T-GDI	ODS [Weight Classification System]	√	√	√	√		0156
Europe/General	SONATA(YFA)-U.S.	2012	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2012	G 2.0 T-GDI	EPS [Motor Driven Power Steering (~September23 / 2011)]	√	√	√	√		0094
Europe/General	SONATA(YFA)-U.S.	2012	G 2.0 T-GDI	EPS [Motor Driven Power Steering (September24 / 2011~)]	√	√	√	√		0094
Europe/General	SONATA(YFA)-U.S.	2012	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SONATA(YFA)-U.S.	2012	G 2.0 T-GDI	IMMO [Immobilizer]				√		
Europe/General	SONATA(YFA)-U.S.	2012	G 2.0 T-GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(YFA)-U.S.	2012	G 2.0 T-GDI	PDM [Power Distribution Module]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2012	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
Europe/General	SONATA(YFA)-U.S.	2012	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2012	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2012	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2012	G 2.0 T-GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	SONATA(YFA)-U.S.	2012	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(YFA)-U.S.	2012	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0116, 0120, 0158
Europe/General	SONATA(YFA)-U.S.	2012	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(YFA)-U.S.	2012	G 2.4 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0011
Europe/General	SONATA(YFA)-U.S.	2012	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(YFA)-U.S.	2012	G 2.4 GDI	ODS [Weight Classification System]	√	√	√	√		0156
Europe/General	SONATA(YFA)-U.S.	2012	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			

Europe/General	SONATA(YFA)-U.S.	2012	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2012	G 2.4 GDI	EPS [Motor Driven Power Steering (September24 / 2011~)]	√	√	√	√		0094
Europe/General	SONATA(YFA)-U.S.	2012	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SONATA(YFA)-U.S.	2012	G 2.4 GDI	IMMO [Immobilizer]				√		
Europe/General	SONATA(YFA)-U.S.	2012	G 2.4 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(YFA)-U.S.	2012	G 2.4 GDI	PDM [Power Distribution Module]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2012	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
Europe/General	SONATA(YFA)-U.S.	2012	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2012	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2012	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2012	G 2.4 GDI	TMU [Telematics Unit]	√	√	√			
Europe/General	SONATA(YFA)-U.S.	2012	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(YFA)-U.S.	2011	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0105, 0116, 0120, 0158
Europe/General	SONATA(YFA)-U.S.	2011	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(YFA)-U.S.	2011	G 2.0 T-GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0011
Europe/General	SONATA(YFA)-U.S.	2011	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(YFA)-U.S.	2011	G 2.0 T-GDI	ODS [Weight Classification System]	√	√	√	√		0156
Europe/General	SONATA(YFA)-U.S.	2011	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(YFA)-U.S.	2011	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2011	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(YFA)-U.S.	2011	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SONATA(YFA)-U.S.	2011	G 2.0 T-GDI	PDM [Power Distribution Module]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2011	G 2.0 T-GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(YFA)-U.S.	2011	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144

Europe/General	SONATA(YFA)-U.S.	2011	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2011	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2011	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2011	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(YFA)-U.S.	2011	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0116, 0120, 0158
Europe/General	SONATA(YFA)-U.S.	2011	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(YFA)-U.S.	2011	G 2.4 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0011
Europe/General	SONATA(YFA)-U.S.	2011	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(YFA)-U.S.	2011	G 2.4 GDI	ODS [Weight Classification System]	√	√	√	√		0156
Europe/General	SONATA(YFA)-U.S.	2011	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(YFA)-U.S.	2011	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2011	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	SONATA(YFA)-U.S.	2011	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	SONATA(YFA)-U.S.	2011	G 2.4 GDI	IMMO [Immobilizer]				√		
Europe/General	SONATA(YFA)-U.S.	2011	G 2.4 GDI	PDM [Power Distribution Module]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2011	G 2.4 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(YFA)-U.S.	2011	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
Europe/General	SONATA(YFA)-U.S.	2011	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2011	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA(YFA)-U.S.	2011	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(YFI)	2015	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	SONATA(YFI)	2015	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(YFI)	2015	G 2.4 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	SONATA(YFI)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(YFI)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(YFI)	2015	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(YFI)	2015	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	SONATA(YFI)	2015	G 2.4 GDI	IMMO [Immobilizer]				√		

Europe/General	SONATA(YFI)	2015	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SONATA(YFI)	2015	G 2.4 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(YFI)	2015	G 2.4 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA(YFI)	2015	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA(YFI)	2015	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(YFI)	2015	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA(YFI)	2015	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	IMMO [Immobilizer]				√		
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA(YFI)	2014	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	IMMO [Immobilizer]				√		
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA(YFI)	2013	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	IMMO [Immobilizer]				√		
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129

Europe/General	SONATA(YFI)	2012	G 2.4 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA(YFI)	2012	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	ENGINE [Leaded All]		√	√			0013, 0015, 0073, 0116, 0120, 0158
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	ESP [Electronic Stability Program (Mobis)]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	ESP [Electronic Stability Program (Bosch)]	√	√	√	√	√	0064, 0011
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2015	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0015, 0013, 0120, 0116, 0158
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	ESP [Electronic Stability Program (Mobis)]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	ESP [Electronic Stability Program (Bosch)]	√	√	√	√	√	0064, 0011
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	IMMO [Immobilizer]				√		
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2015	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0015, 0013, 0120, 0116, 0158
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	0116, 0015, 0015, 0073, 0013, 0120, 0116, 0158
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0015, 0013, 0120, 0116, 0158

Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	ESP [Electronic Stability Program (Mobis)]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	ESP [Electronic Stability Program (Bosch)]	√	√	√	√	√	0064, 0011
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	IMMO [Immobilizer]				√		
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2015	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	ENGINE [Leaded All]		√	√			0013, 0015, 0073, 0116, 0120, 0158
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	ESP [Electronic Stability Program (Mobis)]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	ESP [Electronic Stability Program (Bosch)]	√	√	√	√	√	0064, 0011
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2014	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0015, 0013, 0120, 0116, 0158
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	ESP [Electronic Stability Program (Mobis)]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	ESP [Electronic Stability Program (Bosch)]	√	√	√	√	√	0064, 0011
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	IMMO [Immobilizer]				√		
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042

Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2014	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	0116, 0015, 0073, 0013, 0120, 0158
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	ESP [Electronic Stability Program (Mobis)]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	ESP [Electronic Stability Program (Bosch)]	√	√	√	√	√	0064, 0011
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	IMMO [Immobilizer]				√		
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2014	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	ENGINE [Leaded All]		√	√			0013, 0015, 0073, 0116, 0120, 0158
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	ESP [Electronic Stability Program (Mobis)]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	ESP [Electronic Stability Program (Bosch)]	√	√	√	√	√	0064, 0011
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2013	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0015, 0013, 0120, 0116, 0158
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	ESP [Electronic Stability Program (Mobis)]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	ESP [Electronic Stability Program (Bosch)]	√	√	√	√	√	0064, 0011

Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	IMMO [Immobilizer]				√		
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2013	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	0116, 0015, 0073, 0013, 0120, 0158
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	ESP [Electronic Stability Program (Mobis)]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	ESP [Electronic Stability Program (Bosch)]	√	√	√	√	√	0064, 0011
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	IMMO [Immobilizer]				√		
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2013	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√	√	0116, 0015, 0073, 0013, 0120, 0158
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	ESP [Electronic Stability Program (Mobis)]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	ESP [Electronic Stability Program (Bosch)]	√	√	√	√	√	0064, 0011
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	

Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2012	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0015, 0013, 0120, 0116, 0158
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	ESP [Electronic Stability Program (Mobis)]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	ESP [Electronic Stability Program (Bosch)]	√	√	√	√	√	0064, 0011
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	IMMO [Immobilizer]				√		
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2012	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	0116, 0015, 0073, 0013, 0120, 0158
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	ESP [Electronic Stability Program (Mobis)]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	ESP [Electronic Stability Program (Bosch)]	√	√	√	√	√	0064, 0011
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	IMMO [Immobilizer]				√		
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2012	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0011
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			

Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√	√	0090
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2011	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0116, 0120, 0158
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0011
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	IMMO [Immobilizer]				√		
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2011	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0011
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	AHLS [Auto Headlamp Leveling]	√	√	√	√		0090
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	IMMO [Immobilizer]				√		
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	SONATA/i45(YF)	2011	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TERRACAN(HP)	2006	D 2.5 TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	TERRACAN(HP)	2006	D 2.5 TCI	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2006	D 2.5 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	TERRACAN(HP)	2006	D 2.5 TCI	AIRBAG [AIRBAG]	√	√	√			

Europe/General	TERRACAN(HP)	2006	D 2.5 TCI	4WD [TOD]		√	√			
Europe/General	TERRACAN(HP)	2006	D 2.5 TCI	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TERRACAN(HP)	2006	D 2.9 TCI	ENGINE [Engine Control]	√	√	√	√	√	0079, 0033, 0060
Europe/General	TERRACAN(HP)	2006	D 2.9 TCI	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2006	D 2.9 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	TERRACAN(HP)	2006	D 2.9 TCI	AIRBAG [AIRBAG]	√	√	√			
Europe/General	TERRACAN(HP)	2006	D 2.9 TCI	4WD [TOD]		√	√			
Europe/General	TERRACAN(HP)	2006	D 2.9 TCI	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	TERRACAN(HP)	2006	G 3.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2006	G 3.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2006	G 3.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2006	G 3.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2006	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2006	G 3.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	TERRACAN(HP)	2006	G 3.5 DOHC	AIRBAG [AIRBAG]	√	√	√			
Europe/General	TERRACAN(HP)	2006	G 3.5 DOHC	4WD [TOD]		√	√			
Europe/General	TERRACAN(HP)	2006	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TERRACAN(HP)	2005	D 2.5 TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	TERRACAN(HP)	2005	D 2.5 TCI	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2005	D 2.5 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	TERRACAN(HP)	2005	D 2.5 TCI	AIRBAG [AIRBAG]	√	√	√			
Europe/General	TERRACAN(HP)	2005	D 2.5 TCI	4WD [TOD]		√	√			
Europe/General	TERRACAN(HP)	2005	D 2.5 TCI	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TERRACAN(HP)	2005	D 2.9 TCI	ENGINE [Engine Control]	√	√	√	√	√	0079, 0033, 0060
Europe/General	TERRACAN(HP)	2005	D 2.9 TCI	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2005	D 2.9 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	TERRACAN(HP)	2005	D 2.9 TCI	4WD [TOD]		√	√			
Europe/General	TERRACAN(HP)	2005	D 2.9 TCI	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	TERRACAN(HP)	2005	G 3.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2005	G 3.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2005	G 3.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2005	G 3.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2005	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2005	G 3.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	TERRACAN(HP)	2005	G 3.5 DOHC	AIRBAG [AIRBAG]	√	√	√			
Europe/General	TERRACAN(HP)	2005	G 3.5 DOHC	4WD [TOD]		√	√			
Europe/General	TERRACAN(HP)	2005	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TERRACAN(HP)	2004	D 2.5 TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	TERRACAN(HP)	2004	D 2.5 TCI	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2004	D 2.5 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	TERRACAN(HP)	2004	D 2.5 TCI	AIRBAG [AIRBAG]	√	√	√			
Europe/General	TERRACAN(HP)	2004	D 2.5 TCI	4WD [TOD]		√	√			
Europe/General	TERRACAN(HP)	2004	D 2.5 TCI	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TERRACAN(HP)	2004	D 2.9 TCI	ENGINE [Engine Control]	√	√	√	√	√	0079, 0033, 0060
Europe/General	TERRACAN(HP)	2004	D 2.9 TCI	AT [Automatic Transaxle]	√	√	√	√	√	

Europe/General	TERRACAN(HP)	2004	D 2.9 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	TERRACAN(HP)	2004	D 2.9 TCI	AIRBAG [AIRBAG]	√	√	√			
Europe/General	TERRACAN(HP)	2004	D 2.9 TCI	4WD [TOD]		√	√			
Europe/General	TERRACAN(HP)	2004	D 2.9 TCI	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	TERRACAN(HP)	2004	G 3.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2004	G 3.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2004	G 3.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2004	G 3.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2004	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2004	G 3.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	TERRACAN(HP)	2004	G 3.5 DOHC	AIRBAG [AIRBAG]	√	√	√			
Europe/General	TERRACAN(HP)	2004	G 3.5 DOHC	4WD [TOD]		√	√			
Europe/General	TERRACAN(HP)	2004	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TERRACAN(HP)	2003	D 2.5 TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	TERRACAN(HP)	2003	D 2.5 TCI	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2003	D 2.5 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	TERRACAN(HP)	2003	D 2.5 TCI	AIRBAG [AIRBAG]	√	√	√			
Europe/General	TERRACAN(HP)	2003	D 2.5 TCI	4WD [TOD]		√	√			
Europe/General	TERRACAN(HP)	2003	D 2.5 TCI	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TERRACAN(HP)	2003	D 2.9 TCI	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2003	D 2.9 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	TERRACAN(HP)	2003	D 2.9 TCI	AIRBAG [AIRBAG]	√	√	√			
Europe/General	TERRACAN(HP)	2003	D 2.9 TCI	4WD [TOD]		√	√			
Europe/General	TERRACAN(HP)	2003	D 2.9 TCI	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	TERRACAN(HP)	2003	G 3.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2003	G 3.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2003	G 3.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2003	G 3.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2003	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2003	G 3.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	TERRACAN(HP)	2003	G 3.5 DOHC	AIRBAG [AIRBAG]	√	√	√			
Europe/General	TERRACAN(HP)	2003	G 3.5 DOHC	4WD [TOD]		√	√			
Europe/General	TERRACAN(HP)	2003	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TERRACAN(HP)	2002	D 2.5 TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	TERRACAN(HP)	2002	D 2.5 TCI	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2002	D 2.5 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	TERRACAN(HP)	2002	D 2.5 TCI	AIRBAG [AIRBAG]	√	√	√			
Europe/General	TERRACAN(HP)	2002	D 2.5 TCI	4WD [TOD]		√	√			
Europe/General	TERRACAN(HP)	2002	D 2.5 TCI	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TERRACAN(HP)	2002	D 2.9 TCI	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2002	D 2.9 TCI	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2002	D 2.9 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	TERRACAN(HP)	2002	D 2.9 TCI	AIRBAG [AIRBAG]	√	√	√			
Europe/General	TERRACAN(HP)	2002	D 2.9 TCI	4WD [TOD]		√	√			
Europe/General	TERRACAN(HP)	2002	D 2.9 TCI	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147

Europe/General	TERRACAN(HP)	2002	G 3.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2002	G 3.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2002	G 3.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2002	G 3.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2002	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2002	G 3.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	TERRACAN(HP)	2002	G 3.5 DOHC	AIRBAG [AIRBAG]	√	√	√			
Europe/General	TERRACAN(HP)	2002	G 3.5 DOHC	4WD [TOD]		√	√			
Europe/General	TERRACAN(HP)	2002	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TERRACAN(HP)	2001	D 2.5 TCI	ENGINE [Engine Control]		√	√	√	√	
Europe/General	TERRACAN(HP)	2001	D 2.5 TCI	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2001	D 2.5 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	TERRACAN(HP)	2001	D 2.5 TCI	AIRBAG [AIRBAG]	√	√	√			
Europe/General	TERRACAN(HP)	2001	D 2.5 TCI	4WD [TOD]		√	√			
Europe/General	TERRACAN(HP)	2001	D 2.9 TCI	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2001	D 2.9 TCI	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2001	D 2.9 TCI	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	TERRACAN(HP)	2001	D 2.9 TCI	AIRBAG [AIRBAG]	√	√	√			
Europe/General	TERRACAN(HP)	2001	D 2.9 TCI	4WD [TOD]		√	√			
Europe/General	TERRACAN(HP)	2001	D 2.9 TCI	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	TERRACAN(HP)	2001	G 3.5 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2001	G 3.5 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2001	G 3.5 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2001	G 3.5 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2001	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TERRACAN(HP)	2001	G 3.5 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
Europe/General	TERRACAN(HP)	2001	G 3.5 DOHC	AIRBAG [AIRBAG]	√	√	√			
Europe/General	TERRACAN(HP)	2001	G 3.5 DOHC	4WD [TOD]		√	√			
Europe/General	TERRACAN(HP)	2001	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TRAJET XG(FO)	2007	D 2.0 TCI-D	ENGINE [VGT]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2007	D 2.0 TCI-D	ENGINE [WGT]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2007	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2007	D 2.0 TCI-D	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	TRAJET XG(FO)	2007	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	2007	D 2.0 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	TRAJET XG(FO)	2007	D 2.0 TCI-D	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	TRAJET XG(FO)	2007	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	TRAJET XG(FO)	2007	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	TRAJET XG(FO)	2007	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	TRAJET XG(FO)	2007	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2007	G 2.0 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	TRAJET XG(FO)	2007	G 2.0 DOHC	AIRBAG	√	√	√			
Europe/General	TRAJET XG(FO)	2007	G 2.0 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	TRAJET XG(FO)	2007	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0120
Europe/General	TRAJET XG(FO)	2007	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0120

Europe/General	TRAJET XG(FO)	2007	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0120
Europe/General	TRAJET XG(FO)	2007	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2007	G 2.7 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	TRAJET XG(FO)	2007	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	2007	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TRAJET XG(FO)	2006	D 2.0 TCI-D	ENGINE [VGT]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2006	D 2.0 TCI-D	ENGINE [WGT]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2006	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2006	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	2006	D 2.0 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	TRAJET XG(FO)	2006	D 2.0 TCI-D	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	TRAJET XG(FO)	2006	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	TRAJET XG(FO)	2006	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	TRAJET XG(FO)	2006	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	TRAJET XG(FO)	2006	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2006	G 2.0 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	TRAJET XG(FO)	2006	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	2006	G 2.0 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	TRAJET XG(FO)	2006	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0120
Europe/General	TRAJET XG(FO)	2006	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0120
Europe/General	TRAJET XG(FO)	2006	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0120
Europe/General	TRAJET XG(FO)	2006	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2006	G 2.7 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	TRAJET XG(FO)	2006	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	2006	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TRAJET XG(FO)	2005	D 2.0 TCI-D	ENGINE [VGT]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2005	D 2.0 TCI-D	ENGINE [WGT]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2005	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2005	D 2.0 TCI-D	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	TRAJET XG(FO)	2005	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	2005	D 2.0 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	TRAJET XG(FO)	2005	D 2.0 TCI-D	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	TRAJET XG(FO)	2005	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	TRAJET XG(FO)	2005	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	TRAJET XG(FO)	2005	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	TRAJET XG(FO)	2005	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2005	G 2.0 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	TRAJET XG(FO)	2005	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	2005	G 2.0 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	TRAJET XG(FO)	2005	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0120
Europe/General	TRAJET XG(FO)	2005	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0120
Europe/General	TRAJET XG(FO)	2005	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0120
Europe/General	TRAJET XG(FO)	2005	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2005	G 2.7 DOHC	ABS [Anti - Lock Brake]	√	√	√	√	√	0064
Europe/General	TRAJET XG(FO)	2005	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			

Europe/General	TRAJET XG(FO)	2005	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TRAJET XG(FO)	2004	D 2.0 TCI-D	ENGINE [VGT]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2004	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2004	D 2.0 TCI-D	ABS [Anti - Lock Brake]		√	√	√	√	
Europe/General	TRAJET XG(FO)	2004	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	2004	D 2.0 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	TRAJET XG(FO)	2004	D 2.0 TCI-D	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Melco)	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Melco)	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Melco)	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Melco)	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Melco)	ABS [Anti - Lock Brake]		√	√	√	√	
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Melco)	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Melco)	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Siemen s)	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Siemen s)	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Siemen s)	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Siemen s)	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Siemen s)	ABS [Anti - Lock Brake]		√	√	√	√	
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Siemen s)	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	2004	G 2.0 DOHC(Siemen s)	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	TRAJET XG(FO)	2004	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0120
Europe/General	TRAJET XG(FO)	2004	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0120
Europe/General	TRAJET XG(FO)	2004	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2004	G 2.7 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	
Europe/General	TRAJET XG(FO)	2004	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	2004	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TRAJET XG(FO)	2003	D 2.0 TCI-D	ENGINE [VGT]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2003	D 2.0 TCI-D	ENGINE [WGT]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2003	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2003	D 2.0 TCI-D	ABS [Anti - Lock Brake]		√	√	√	√	
Europe/General	TRAJET XG(FO)	2003	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	2003	D 2.0 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147

Europe/General	TRAJET XG(FO)	2003	D 2.0 TCI-D	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	TRAJET XG(FO)	2003	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2003	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2003	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2003	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2003	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	
Europe/General	TRAJET XG(FO)	2003	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	2003	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TRAJET XG(FO)	2003	G 2.7 DOHC	ENGINE [Unleaded (Zr O2S) GEN]	√	√	√	√	√	0015, 0116, 0120
Europe/General	TRAJET XG(FO)	2003	G 2.7 DOHC	ENGINE [Unleaded (Zr O2S) EOBD]	√	√	√	√	√	0015, 0116, 0120
Europe/General	TRAJET XG(FO)	2003	G 2.7 DOHC	ENGINE [Unleaded (Ti O2S) EOBD]	√	√	√	√	√	0015, 0055, 0117, 0120
Europe/General	TRAJET XG(FO)	2003	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	TRAJET XG(FO)	2003	G 2.7 DOHC	ENGINE [Unleaded (Ti O2S) GEN]	√	√	√	√	√	0015, 0120
Europe/General	TRAJET XG(FO)	2003	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2003	G 2.7 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	
Europe/General	TRAJET XG(FO)	2003	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	2003	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TRAJET XG(FO)	2002	D 2.0 TCI-D	ENGINE [WGT]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2002	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2002	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2002	D 2.0 TCI-D	ABS [Anti - Lock Brake]		√	√	√	√	
Europe/General	TRAJET XG(FO)	2002	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	2002	D 2.0 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	TRAJET XG(FO)	2002	D 2.0 TCI-D	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	TRAJET XG(FO)	2002	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2002	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2002	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2002	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2002	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	2002	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TRAJET XG(FO)	2002	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0055, 0117, 0120
Europe/General	TRAJET XG(FO)	2002	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	TRAJET XG(FO)	2002	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	TRAJET XG(FO)	2002	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2002	G 2.7 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	
Europe/General	TRAJET XG(FO)	2002	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	2002	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TRAJET XG(FO)	2001	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2001	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2001	D 2.0 TCI-D	ABS [Anti - Lock Brake]		√	√	√	√	
Europe/General	TRAJET XG(FO)	2001	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	2001	D 2.0 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	TRAJET XG(FO)	2001	D 2.0 TCI-D	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	TRAJET XG(FO)	2001	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2001	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	

Europe/General	TRAJET XG(FO)	2001	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2001	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2001	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	
Europe/General	TRAJET XG(FO)	2001	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	2001	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TRAJET XG(FO)	2001	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0055, 0117, 0120
Europe/General	TRAJET XG(FO)	2001	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	TRAJET XG(FO)	2001	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	TRAJET XG(FO)	2001	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2001	G 2.7 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	
Europe/General	TRAJET XG(FO)	2001	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	2001	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TRAJET XG(FO)	2000	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2000	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2000	D 2.0 TCI-D	ABS [Anti - Lock Brake]		√	√	√	√	
Europe/General	TRAJET XG(FO)	2000	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	2000	D 2.0 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	TRAJET XG(FO)	2000	D 2.0 TCI-D	BHEATER [Fuel Fired Heater]		√	√	√	√	
Europe/General	TRAJET XG(FO)	2000	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2000	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2000	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2000	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2000	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	2000	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TRAJET XG(FO)	2000	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0055, 0117, 0120
Europe/General	TRAJET XG(FO)	2000	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	TRAJET XG(FO)	2000	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	TRAJET XG(FO)	2000	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	2000	G 2.7 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	
Europe/General	TRAJET XG(FO)	2000	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	2000	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TRAJET XG(FO)	1999	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	1999	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	1999	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	1999	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	1999	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	
Europe/General	TRAJET XG(FO)	1999	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	1999	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
Europe/General	TRAJET XG(FO)	1999	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0055, 0117, 0120
Europe/General	TRAJET XG(FO)	1999	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120
Europe/General	TRAJET XG(FO)	1999	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	TRAJET XG(FO)	1999	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TRAJET XG(FO)	1999	G 2.7 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	
Europe/General	TRAJET XG(FO)	1999	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TRAJET XG(FO)	1999	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102

Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	ENGINE [Engine Control]	√	√	√	√	√	0003, 0004, 0116
Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	ABSESP [ABS / ESP (MGH40)]	√	√	√	√	√	
Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	ABSESP [ABS / ESP (MGH25)]	√	√	√	√	√	0064
Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	4WD [4WD Control]		√	√	√		
Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	BCM [Body Control Module]	√			√	√	
Europe/General	TUCSON FFV(JM FFV)	2013	F 2.0 E-FFV	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	ENGINE [Engine Control]	√	√	√	√	√	0003, 0004, 0116
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	ABSESP [ABS / ESP (MGH40)]	√	√	√	√	√	
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	ABSESP [ABS / ESP (MGH25)]	√	√	√	√	√	0064
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	4WD [4WD Control]		√	√	√		
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	BCM [Body Control Module]	√			√	√	
Europe/General	TUCSON FFV(JM FFV)	2012	F 2.0 E-FFV	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	ABSESP [ABS / ESP (MGH - 40)]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	ABSESP [ABS / ESP (MGH - 25)]	√	√	√	√	√	0064
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	4WD [4WD Control]		√	√	√		
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	IMMO [Immobilizer]				√		0147, 0112, 0138, 0091, 0102, 0086, 0147, 0091
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	ETACS [ETACS]	√			√	√	
Europe/General	TUCSON(JM)	2010	D 2.0 TCI-D	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0120, 0116, 0158
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0120, 0015, 0120, 0158
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0116, 0120, 0158, 0055
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	ABSESP [ABS / ESP (MGH - 40)]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	ABSESP [ABS / ESP (MGH - 25)]	√	√	√	√	√	0064
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	4WD [4WD Control]		√	√	√		
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	ETACS [ETACS]	√			√	√	
Europe/General	TUCSON(JM)	2010	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		√	√	√	√	0015, 0055, 0116, 0117, 0120
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0120
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0120
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0120
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	ABSESP [ABS / ESP (MGH - 40)]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	ABSESP [ABS / ESP (MGH - 25)]	√	√	√	√	√	0064
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	4WD [4WD Control]		√	√	√		
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	IMMO [Immobilizer]			√	√		0091, 0102, 0112, 0147
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	ETACS [ETACS]	√			√	√	
Europe/General	TUCSON(JM)	2010	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	ABSESP [ABS / ESP (MGH - 40)]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	ABSESP [ABS / ESP (MGH - 25)]	√	√	√	√	√	0064
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	4WD [4WD Control]		√	√	√		
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	IMMO [Immobilizer]				√		0147, 0112, 0138, 0091, 0102, 0086, 0147, 0091
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	ETACS [ETACS]	√			√	√	
Europe/General	TUCSON(JM)	2009	D 2.0 TCI-D	CODE [Transmitter Code Saving]				√		0026

Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0015, 0073, 0015, 0073, 0120, 0158
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0120, 0158
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0116, 0120, 0158, 0055
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	ABSESP [ABS / ESP (MGH - 40)]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	ABSESP [ABS / ESP (MGH - 25)]	√	√	√	√	√	0064
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	4WD [4WD Control]			√	√		
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	ETACS [ETACS]	√			√	√	
Europe/General	TUCSON(JM)	2009	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		√	√	√	√	0015, 0055, 0116, 0117, 0120
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0120
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0120
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0120
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	ABSESP [ABS / ESP (MGH - 40)]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	ABSESP [ABS / ESP (MGH - 25)]	√	√	√	√	√	0064
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	4WD [4WD Control]			√	√		
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	IMMO [Immobilizer]			√	√		0091, 0102, 0112, 0147
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	ETACS [ETACS]	√			√	√	
Europe/General	TUCSON(JM)	2009	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(JM)	2008	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2008	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(JM)	2008	D 2.0 TCI-D	ABSESP [ABS / ESP (MGH - 40)]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2008	D 2.0 TCI-D	ABSESP [ABS / ESP (MGH - 25)]	√	√	√	√	√	0064
Europe/General	TUCSON(JM)	2008	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TUCSON(JM)	2008	D 2.0 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2008	D 2.0 TCI-D	4WD [4WD Control]			√	√		
Europe/General	TUCSON(JM)	2008	D 2.0 TCI-D	IMMO [Immobilizer]				√		0147, 0112, 0138, 0091, 0102, 0086, 0147, 0091
Europe/General	TUCSON(JM)	2008	D 2.0 TCI-D	ETACS [ETACS]	√			√	√	
Europe/General	TUCSON(JM)	2008	D 2.0 TCI-D	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0116, 0015, 0073, 0015, 0073, 0120, 0158
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0120, 0158
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0120, 0158
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	ABSESP [ABS / ESP (MGH - 40)]	√	√	√	√	√	

Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	ABSESP [ABS / ESP (MGH - 25)]	√	√	√	√	√	0064
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	4WD [4WD Control]		√	√	√		
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	ETACS [ETACS]	√			√	√	
Europe/General	TUCSON(JM)	2008	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		√	√	√	√	0015, 0055, 0116, 0117, 0120
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0120
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0120
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0120
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	ABSESP [ABS / ESP (MGH - 40)]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	ABSESP [ABS / ESP (MGH - 25)]	√	√	√	√	√	0064
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	4WD [4WD Control]		√	√	√		
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0091, 0102, 0112, 0147
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	ETACS [ETACS]	√			√	√	
Europe/General	TUCSON(JM)	2008	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(JM)	2007	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2007	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(JM)	2007	D 2.0 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	TUCSON(JM)	2007	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TUCSON(JM)	2007	D 2.0 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2007	D 2.0 TCI-D	4WD [4WD Control]		√	√	√		
Europe/General	TUCSON(JM)	2007	D 2.0 TCI-D	IMMO [Immobilizer]				√		0147, 0112, 0138, 0091, 0102, 0086, 0147, 0091
Europe/General	TUCSON(JM)	2007	D 2.0 TCI-D	ETACS [ETACS]	√			√	√	
Europe/General	TUCSON(JM)	2007	D 2.0 TCI-D	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0073, 0015, 0073, 0120
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120, 0015, 0120
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120, 0015, 0120
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	4WD [4WD Control]		√	√	√		
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	ETACS [ETACS]	√			√	√	
Europe/General	TUCSON(JM)	2007	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		√	√	√	√	0015, 0055, 0116, 0117, 0120
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0120
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0120
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0120

Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	4WD [4WD Control]		√	√	√		
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0091, 0102, 0112, 0147
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	ETACS [ETACS]	√			√	√	
Europe/General	TUCSON(JM)	2007	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(JM)	2006	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2006	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(JM)	2006	D 2.0 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	TUCSON(JM)	2006	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TUCSON(JM)	2006	D 2.0 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2006	D 2.0 TCI-D	4WD [4WD Control]		√	√			
Europe/General	TUCSON(JM)	2006	D 2.0 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	TUCSON(JM)	2006	D 2.0 TCI-D	ETACS [ETACS]	√			√	√	
Europe/General	TUCSON(JM)	2006	D 2.0 TCI-D	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0116, 0117, 0120
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	4WD [4WD Control]		√	√			
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	ETACS [ETACS]	√			√	√	
Europe/General	TUCSON(JM)	2006	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(JM)	2006	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		√	√	√	√	0015, 0055, 0116, 0117, 0120
Europe/General	TUCSON(JM)	2006	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0120
Europe/General	TUCSON(JM)	2006	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0120
Europe/General	TUCSON(JM)	2006	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2006	G 2.7 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	TUCSON(JM)	2006	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TUCSON(JM)	2006	G 2.7 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2006	G 2.7 DOHC	4WD [4WD Control]		√	√			
Europe/General	TUCSON(JM)	2006	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0091, 0102, 0112, 0147
Europe/General	TUCSON(JM)	2006	G 2.7 DOHC	ETACS [ETACS]	√			√	√	
Europe/General	TUCSON(JM)	2006	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(JM)	2005	D 2.0 TCI-D	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2005	D 2.0 TCI-D	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2005	D 2.0 TCI-D	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	TUCSON(JM)	2005	D 2.0 TCI-D	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TUCSON(JM)	2005	D 2.0 TCI-D	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	TUCSON(JM)	2005	D 2.0 TCI-D	4WD [4WD Control]		√	√			
Europe/General	TUCSON(JM)	2005	D 2.0 TCI-D	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
Europe/General	TUCSON(JM)	2005	D 2.0 TCI-D	ETACS [ETACS]	√			√	√	
Europe/General	TUCSON(JM)	2005	D 2.0 TCI-D	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	ENGINE [Unleaded OBD - II]	√	√	√	√	√	0015, 0055, 0116, 0117, 0120
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0120
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0120
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	4WD [4WD Control]		√	√			
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0102, 0091
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	ETACS [ETACS]	√			√	√	
Europe/General	TUCSON(JM)	2005	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(JM)	2005	G 2.7 DOHC	ENGINE [Unleaded OBD - II]		√	√	√	√	0015, 0055, 0116, 0117, 0120
Europe/General	TUCSON(JM)	2005	G 2.7 DOHC	ENGINE [Leaded All]	√	√	√	√	√	0015, 0073, 0116, 0120
Europe/General	TUCSON(JM)	2005	G 2.7 DOHC	ENGINE [Unleaded GEN]	√	√	√	√	√	0015, 0116, 0120
Europe/General	TUCSON(JM)	2005	G 2.7 DOHC	ENGINE [Unleaded EOBD]	√	√	√	√	√	0015, 0116, 0120
Europe/General	TUCSON(JM)	2005	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2005	G 2.7 DOHC	ABSESP [ABS / ESP]	√	√	√	√	√	0064
Europe/General	TUCSON(JM)	2005	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
Europe/General	TUCSON(JM)	2005	G 2.7 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(JM)	2005	G 2.7 DOHC	4WD [4WD Control]		√	√			
Europe/General	TUCSON(JM)	2005	G 2.7 DOHC	ETACS [ETACS]	√			√	√	
Europe/General	TUCSON(JM)	2005	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(LM)-BRAZIL	2018	F 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON(LM)-BRAZIL	2018	F 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0007, 0122, 0122
Europe/General	TUCSON(LM)-BRAZIL	2018	F 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	TUCSON(LM)-BRAZIL	2018	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(LM)-BRAZIL	2018	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(LM)-BRAZIL	2018	F 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(LM)-BRAZIL	2018	F 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(LM)-BRAZIL	2018	F 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(LM)-BRAZIL	2018	F 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON(LM)-BRAZIL	2018	F 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	

Europe/General	TUCSON(LM)-BRAZIL	2018	F 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	TUCSON(LM)-BRAZIL	2018	F 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(LM)-BRAZIL	2018	F 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON(LM)-BRAZIL	2018	F 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(LM)-BRAZIL	2018	F 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(LM)-BRAZIL	2017	F 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON(LM)-BRAZIL	2017	F 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0007, 0122, 0122
Europe/General	TUCSON(LM)-BRAZIL	2017	F 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	TUCSON(LM)-BRAZIL	2017	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(LM)-BRAZIL	2017	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(LM)-BRAZIL	2017	F 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(LM)-BRAZIL	2017	F 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(LM)-BRAZIL	2017	F 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON(LM)-BRAZIL	2017	F 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON(LM)-BRAZIL	2017	F 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	TUCSON(LM)-BRAZIL	2017	F 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(LM)-BRAZIL	2017	F 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON(LM)-BRAZIL	2017	F 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(LM)-BRAZIL	2017	F 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(High Power)	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(High Power)	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(High Power)	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(High Power)	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(High Power)	AIRBAG [Airbag (Event #2)]	√	√	√			

Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(High Power)	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(High Power)	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(High Power)	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(High Power)	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(High Power)	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(High Power)	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(High Power)	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(High Power)	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(High Power)	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(High Power)	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(High Power)	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(High Power)	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(High Power)	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(High Power)	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(High Power)	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(High Power)	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(High Power)	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(Low Power)	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(Low Power)	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(Low Power)	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(Low Power)	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(Low Power)	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(Low Power)	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(Low Power)	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(Low Power)	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(Low Power)	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(Low Power)	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(Low Power)	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(Low Power)	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(Low Power)	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(Low Power)	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(Low Power)	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(Low Power)	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(Low Power)	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(Low Power)	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(Low Power)	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(Low Power)	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(Low Power)	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2018	D 1.7 TCI-U2(Low Power)	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2018	D 2.0 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0116, 0035, 0013, 0061, 0035, 0158
Europe/General	TUCSON(TL)	2018	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2018	D 2.0 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2018	D 2.0 TCI-R	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2018	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2018	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2018	D 2.0 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2018	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2018	D 2.0 TCI-R	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2018	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2018	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2018	D 2.0 TCI-R	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2018	D 2.0 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2018	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2018	D 2.0 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2018	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129

Europe/General	TUCSON(TL)	2018	D 2.0 TCI-R	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2018	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2018	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2018	D 2.0 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2018	D 2.0 TCI-R	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2018	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	AT [Automatic Transaxle (2WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	AT [Automatic Transaxle (4WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2018	F 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2018	G 1.6 T-GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	TUCSON(TL)	2018	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	TUCSON(TL)	2018	G 1.6 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2018	G 1.6 T-GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2018	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2018	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2018	G 1.6 T-GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2018	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2018	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2018	G 1.6 T-GDI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2018	G 1.6 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2018	G 1.6 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2018	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		

Europe/General	TUCSON(TL)	2018	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2018	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2018	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2018	G 1.6 T-GDI	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2018	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2018	G 1.6 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2018	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2018	G 1.6 T-GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2018	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2018	G 2.0 GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	TUCSON(TL)	2018	G 2.0 GDI	AT [Automatic Transaxle (2WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2018	G 2.0 GDI	AT [Automatic Transaxle (4WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2018	G 2.0 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2018	G 2.0 GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2018	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2018	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2018	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2018	G 2.0 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2018	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2018	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2018	G 2.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2018	G 2.0 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2018	G 2.0 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2018	G 2.0 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2018	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2018	G 2.0 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2018	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2018	G 2.0 GDI	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2018	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2018	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2018	G 2.0 GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2018	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2018	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON(TL)	2018	G 2.0 MPI	AT [Automatic Transaxle (2WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2018	G 2.0 MPI	AT [Automatic Transaxle (4WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2018	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2018	G 2.0 MPI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2018	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2018	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2018	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2018	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2018	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2018	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			

Europe/General	TUCSON(TL)	2018	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2018	G 2.0 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2018	G 2.0 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2018	G 2.0 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2018	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2018	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2018	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2018	G 2.0 MPI	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2018	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2018	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2018	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2018	G 2.0 MPI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2018	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(High Power)	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(High Power)	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(High Power)	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(High Power)	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(High Power)	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(High Power)	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(High Power)	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(High Power)	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(High Power)	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(High Power)	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(High Power)	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(High Power)	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(High Power)	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(High Power)	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(High Power)	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(High Power)	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(High Power)	AMP [Amplifier]						0006

Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(High Power)	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(High Power)	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(High Power)	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(High Power)	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(High Power)	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(Low Power)	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(Low Power)	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(Low Power)	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(Low Power)	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(Low Power)	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(Low Power)	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(Low Power)	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(Low Power)	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(Low Power)	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(Low Power)	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(Low Power)	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(Low Power)	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(Low Power)	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(Low Power)	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(Low Power)	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(Low Power)	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(Low Power)	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(Low Power)	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(Low Power)	SJB [Smart Junction Block]	√	√	√	√	√	0128

Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(Low Power)	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(Low Power)	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2017	D 1.7 TCI-U2(Low Power)	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2017	D 2.0 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0116, 0035, 0013, 0061, 0035, 0158
Europe/General	TUCSON(TL)	2017	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2017	D 2.0 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2017	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2017	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2017	D 2.0 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2017	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2017	D 2.0 TCI-R	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2017	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2017	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2017	D 2.0 TCI-R	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2017	D 2.0 TCI-R	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2017	D 2.0 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2017	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2017	D 2.0 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2017	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2017	D 2.0 TCI-R	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2017	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2017	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2017	D 2.0 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2017	D 2.0 TCI-R	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2017	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2017	F 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON(TL)	2017	F 2.0 MPI	AT [Automatic Transaxle (2WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2017	F 2.0 MPI	AT [Automatic Transaxle (4WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2017	F 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2017	F 2.0 MPI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2017	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2017	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2017	F 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2017	F 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2017	F 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2017	F 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2017	F 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2017	F 2.0 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2017	F 2.0 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2017	F 2.0 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2017	F 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067

Europe/General	TUCSON(TL)	2017	F 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2017	F 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2017	F 2.0 MPI	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2017	F 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2017	F 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2017	F 2.0 MPI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2017	F 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2017	G 1.6 T-GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	TUCSON(TL)	2017	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	TUCSON(TL)	2017	G 1.6 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2017	G 1.6 T-GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2017	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2017	G 1.6 T-GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2017	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2017	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2017	G 1.6 T-GDI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2017	G 1.6 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2017	G 1.6 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2017	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2017	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2017	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2017	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2017	G 1.6 T-GDI	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2017	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2017	G 1.6 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2017	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2017	G 1.6 T-GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2017	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2017	G 2.0 GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	TUCSON(TL)	2017	G 2.0 GDI	AT [Automatic Transaxle (2WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2017	G 2.0 GDI	AT [Automatic Transaxle (4WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2017	G 2.0 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2017	G 2.0 GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2017	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2017	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2017	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2017	G 2.0 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2017	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2017	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2017	G 2.0 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2017	G 2.0 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016

Europe/General	TUCSON(TL)	2017	G 2.0 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2017	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2017	G 2.0 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2017	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2017	G 2.0 GDI	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2017	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2017	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2017	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2017	G 2.0 GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2017	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	AT [Automatic Transaxle (2WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	AT [Automatic Transaxle (4WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2017	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(High Power)	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(High Power)	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(High Power)	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(High Power)	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(High Power)	AIRBAG [Airbag (Event #1)]	√	√	√			

Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(High Power)	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(High Power)	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(High Power)	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(High Power)	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(High Power)	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(High Power)	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(High Power)	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(High Power)	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(High Power)	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(High Power)	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(High Power)	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(High Power)	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(High Power)	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(High Power)	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(High Power)	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(High Power)	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(Low Power)	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(Low Power)	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(Low Power)	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(Low Power)	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(Low Power)	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(Low Power)	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(Low Power)	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(Low Power)	4WD [4WD Control]	√	√	√	√	√	0023, 0024

Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(Low Power)	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(Low Power)	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(Low Power)	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(Low Power)	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(Low Power)	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(Low Power)	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(Low Power)	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(Low Power)	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(Low Power)	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(Low Power)	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(Low Power)	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(Low Power)	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(Low Power)	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2016	D 1.7 TCI-U2(Low Power)	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2016	D 2.0 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0116, 0035, 0013, 0061, 0035, 0158
Europe/General	TUCSON(TL)	2016	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2016	D 2.0 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2016	D 2.0 TCI-R	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2016	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2016	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2016	D 2.0 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2016	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2016	D 2.0 TCI-R	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2016	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2016	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2016	D 2.0 TCI-R	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2016	D 2.0 TCI-R	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2016	D 2.0 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2016	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2016	D 2.0 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2016	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2016	D 2.0 TCI-R	AMP [Amplifier]						0006

Europe/General	TUCSON(TL)	2016	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2016	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2016	D 2.0 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2016	D 2.0 TCI-R	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2016	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2016	F 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON(TL)	2016	F 2.0 MPI	AT [Automatic Transaxle (2WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2016	F 2.0 MPI	AT [Automatic Transaxle (4WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2016	F 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2016	F 2.0 MPI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2016	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2016	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2016	F 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2016	F 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2016	F 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2016	F 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2016	F 2.0 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2016	F 2.0 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2016	F 2.0 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2016	F 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2016	F 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2016	F 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2016	F 2.0 MPI	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2016	F 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2016	F 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2016	F 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2016	F 2.0 MPI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2016	F 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2016	G 1.6 T-GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	TUCSON(TL)	2016	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	TUCSON(TL)	2016	G 1.6 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2016	G 1.6 T-GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2016	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2016	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2016	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2016	G 1.6 T-GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2016	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2016	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2016	G 1.6 T-GDI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2016	G 1.6 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2016	G 1.6 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2016	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2016	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067

Europe/General	TUCSON(TL)	2016	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2016	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2016	G 1.6 T-GDI	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2016	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2016	G 1.6 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2016	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2016	G 1.6 T-GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2016	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2016	G 2.0 GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	TUCSON(TL)	2016	G 2.0 GDI	AT [Automatic Transaxle (4WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2016	G 2.0 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2016	G 2.0 GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2016	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2016	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2016	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2016	G 2.0 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2016	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2016	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2016	G 2.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2016	G 2.0 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2016	G 2.0 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2016	G 2.0 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2016	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2016	G 2.0 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2016	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2016	G 2.0 GDI	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2016	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2016	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2016	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2016	G 2.0 GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2016	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2016	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON(TL)	2016	G 2.0 MPI	AT [Automatic Transaxle (2WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2016	G 2.0 MPI	AT [Automatic Transaxle (4WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2016	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2016	G 2.0 MPI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2016	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2016	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2016	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2016	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2016	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2016	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2016	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√		

Europe/General	TUCSON(TL)	2016	G 2.0 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2016	G 2.0 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2016	G 2.0 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2016	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2016	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2016	G 2.0 MPI	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2016	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2016	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2016	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2016	G 2.0 MPI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2016	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(High Power)	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(High Power)	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(High Power)	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(High Power)	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(High Power)	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(High Power)	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(High Power)	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(High Power)	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(High Power)	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(High Power)	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(High Power)	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(High Power)	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(High Power)	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(High Power)	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(High Power)	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(High Power)	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(High Power)	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(High Power)	BCM [Body Control Module]	√	√	√	√	√	

Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(High Power)	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(High Power)	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(High Power)	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(High Power)	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(Low Power)	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(Low Power)	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(Low Power)	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(Low Power)	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(Low Power)	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(Low Power)	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(Low Power)	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(Low Power)	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(Low Power)	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(Low Power)	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(Low Power)	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(Low Power)	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(Low Power)	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(Low Power)	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(Low Power)	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(Low Power)	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(Low Power)	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(Low Power)	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(Low Power)	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(Low Power)	CLU [Cluster Module]	√	√	√	√	√	

Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(Low Power)	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2015	D 1.7 TCI-U2(Low Power)	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2015	D 2.0 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0116, 0035, 0013, 0061, 0035, 0158
Europe/General	TUCSON(TL)	2015	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2015	D 2.0 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2015	D 2.0 TCI-R	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2015	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2015	D 2.0 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2015	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2015	D 2.0 TCI-R	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2015	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2015	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	D 2.0 TCI-R	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2015	D 2.0 TCI-R	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2015	D 2.0 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2015	D 2.0 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2015	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2015	D 2.0 TCI-R	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2015	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2015	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2015	D 2.0 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2015	D 2.0 TCI-R	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2015	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2015	F 2.0 MPI	AT [Automatic Transaxle (2WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2015	F 2.0 MPI	AT [Automatic Transaxle (4WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2015	F 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2015	F 2.0 MPI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2015	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2015	F 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2015	F 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2015	F 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2015	F 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2015	F 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	F 2.0 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2015	F 2.0 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2015	F 2.0 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	F 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2015	F 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112

Europe/General	TUCSON(TL)	2015	F 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2015	F 2.0 MPI	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2015	F 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2015	F 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2015	F 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2015	F 2.0 MPI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2015	F 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2015	G 1.6 T-GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	TUCSON(TL)	2015	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	G 1.6 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2015	G 1.6 T-GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2015	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2015	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2015	G 1.6 T-GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2015	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2015	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2015	G 1.6 T-GDI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	G 1.6 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2015	G 1.6 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2015	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2015	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2015	G 1.6 T-GDI	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2015	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2015	G 1.6 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2015	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2015	G 1.6 T-GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2015	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2015	G 2.0 GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	TUCSON(TL)	2015	G 2.0 GDI	AT [Automatic Transaxle (2WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2015	G 2.0 GDI	AT [Automatic Transaxle (4WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2015	G 2.0 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2015	G 2.0 GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2015	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2015	G 2.0 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2015	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2015	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2015	G 2.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	G 2.0 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2015	G 2.0 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016

Europe/General	TUCSON(TL)	2015	G 2.0 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2015	G 2.0 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2015	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2015	G 2.0 GDI	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2015	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2015	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2015	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2015	G 2.0 GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2015	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TL)	2015	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON(TL)	2015	G 2.0 MPI	AT [Automatic Transaxle (2WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2015	G 2.0 MPI	AT [Automatic Transaxle (4WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TL)	2015	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TL)	2015	G 2.0 MPI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TL)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TL)	2015	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TL)	2015	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TL)	2015	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TL)	2015	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	G 2.0 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2015	G 2.0 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TL)	2015	G 2.0 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TL)	2015	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TL)	2015	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TL)	2015	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TL)	2015	G 2.0 MPI	AMP [Amplifier]						0006
Europe/General	TUCSON(TL)	2015	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2015	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TL)	2015	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TL)	2015	G 2.0 MPI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TL)	2015	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	EPS [R - MDPS (LHD - Western Europe)]	√	√	√	√		

Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	EPS [C - MDPS (Eastern Europe, General)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	EPS [R - MDPS (RHD - Western Europe)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2018	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0116, 0035, 0013, 0061, 0035, 0158
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	EPS [R - MDPS (LHD - Western Europe)]	√	√	√	√		
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	EPS [C - MDPS (Eastern Europe, General)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	EPS [R - MDPS (RHD - Western Europe)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128

Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2018	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	EPS [C - MDPS (Eastern Europe, General)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	EPS [R - MDPS (RHD - Western Europe)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2018	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	EPS [R - MDPS (LHD - Western Europe)]	√	√	√	√		
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	EPS [C - MDPS (Eastern Europe, General)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	EPS [R - MDPS (RHD - Western Europe)]	√	√	√	√		0094

Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2018	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	AT [Automatic Transaxle (2WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	AT [Automatic Transaxle (4WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	EPS [R - MDPS (LHD - Western Europe)]	√	√	√	√		
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	EPS [C - MDPS (Eastern Europe, General)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	EPS [R - MDPS (RHD - Western Europe)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2018	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026

Europe/General	TUCSON(TLe)	2018	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0123, 0158
Europe/General	TUCSON(TLe)	2018	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	TUCSON(TLe)	2018	G 2.4 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLe)	2018	G 2.4 GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2018	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLe)	2018	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLe)	2018	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLe)	2018	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2018	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2018	G 2.4 GDI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2018	G 2.4 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2018	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2018	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2018	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2018	G 2.4 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2018	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLe)	2018	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLe)	2018	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2018	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2018	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLe)	2018	G 2.4 GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2018	G 2.4 GDI	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2018	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	EPS [R - MDPS (LHD - Western Europe)]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	EPS [C - MDPS (Eastern Europe, General)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	EPS [R - MDPS (RHD - Western Europe)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016

Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2017	D 1.7 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0116, 0035, 0013, 0061, 0035, 0158
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	EPS [R - MDPS (LHD - Western Europe)]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	EPS [C - MDPS (Eastern Europe, General)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	EPS [R - MDPS (RHD - Western Europe)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2017	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			

Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	EPS [R - MDPS (LHD - Western Europe)]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	EPS [C - MDPS (Eastern Europe, General)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	EPS [R - MDPS (RHD - Western Europe)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2017	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	EPS [R - MDPS (LHD - Western Europe)]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	EPS [C - MDPS (Eastern Europe, General)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	EPS [R - MDPS (RHD - Western Europe)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129

Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2017	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	AT [Automatic Transaxle (2WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	AT [Automatic Transaxle (4WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	EPS [R - MDPS (LHD - Western Europe)]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	EPS [C - MDPS (Eastern Europe, General)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	EPS [R - MDPS (RHD - Western Europe)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2017	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLe)	2017	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0123, 0158
Europe/General	TUCSON(TLe)	2017	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	TUCSON(TLe)	2017	G 2.4 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLe)	2017	G 2.4 GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLe)	2017	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2017	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLe)	2017	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094

Europe/General	TUCSON(TLe)	2017	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2017	G 2.4 GDI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	G 2.4 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2017	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2017	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2017	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2017	G 2.4 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2017	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLe)	2017	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLe)	2017	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2017	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2017	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLe)	2017	G 2.4 GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2017	G 2.4 GDI	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2017	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	EPS [R - MDPS (LHD - Western Europe)]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	EPS [C - MDPS (Eastern Europe, General)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	EPS [R - MDPS (RHD - Western Europe)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2016	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0116, 0035, 0013, 0061, 0035, 0158

Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	EPS [R - MDPS (LHD - Western Europe)]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	EPS [C - MDPS (Eastern Europe, General)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	EPS [R - MDPS (RHD - Western Europe)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2016	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	EPS [R - MDPS (LHD - Western Europe)]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	EPS [C - MDPS (Eastern Europe, General)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	EPS [R - MDPS (RHD - Western Europe)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016

Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2016	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	EPS [R - MDPS (LHD - Western Europe)]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	EPS [C - MDPS (Eastern Europe, General)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	EPS [R - MDPS (RHD - Western Europe)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2016	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	AT [Automatic Transaxle (2WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	AT [Automatic Transaxle (4WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064

Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	EPS [R - MDPS (LHD - Western Europe)]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	EPS [C - MDPS (Eastern Europe, General)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	EPS [R - MDPS (RHD - Western Europe)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2016	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLe)	2016	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0123, 0158
Europe/General	TUCSON(TLe)	2016	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	TUCSON(TLe)	2016	G 2.4 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLe)	2016	G 2.4 GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLe)	2016	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2016	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLe)	2016	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2016	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2016	G 2.4 GDI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	G 2.4 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2016	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2016	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2016	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2016	G 2.4 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2016	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLe)	2016	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129

Europe/General	TUCSON(TLe)	2016	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2016	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2016	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLe)	2016	G 2.4 GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2016	G 2.4 GDI	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2016	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0013, 0035, 0061, 0116, 0158
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	EPS [R - MDPS (LHD - Western Europe)]	√	√	√	√		
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	EPS [C - MDPS (Eastern Europe, General)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	EPS [R - MDPS (RHD - Western Europe)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2015	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0116, 0035, 0013, 0061, 0035, 0158
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024

Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	EPS [R - MDPS (LHD - Western Europe)]	√	√	√	√		
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	EPS [C - MDPS (Eastern Europe, General)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	EPS [R - MDPS (RHD - Western Europe)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2015	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	EPS [R - MDPS (LHD - Western Europe)]	√	√	√	√		
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	EPS [C - MDPS (Eastern Europe, General)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	EPS [R - MDPS (RHD - Western Europe)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	

Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2015	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	EPS [R - MDPS (LHD - Western Europe)]	√	√	√	√		
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	EPS [C - MDPS (Eastern Europe, General)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	EPS [R - MDPS (RHD - Western Europe)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2015	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	AT [Automatic Transaxle (2WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	AT [Automatic Transaxle (4WD)]	√	√	√	√	√	0122
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	EPS [R - MDPS (LHD - Western Europe)]	√	√	√	√		

Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	EPS [C - MDPS (Eastern Europe, General)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	EPS [R - MDPS (RHD - Western Europe)]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2015	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLe)	2015	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0116, 0120, 0123, 0158
Europe/General	TUCSON(TLe)	2015	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0122
Europe/General	TUCSON(TLe)	2015	G 2.4 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLe)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLe)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLe)	2015	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2015	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLe)	2015	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TLe)	2015	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	TUCSON(TLe)	2015	G 2.4 GDI	SPAS [Smart Parking Assist System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2015	G 2.4 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
Europe/General	TUCSON(TLe)	2015	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2015	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
Europe/General	TUCSON(TLe)	2015	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2015	G 2.4 GDI	AHS [Active Hood System]	√	√	√		√	
Europe/General	TUCSON(TLe)	2015	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLe)	2015	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLe)	2015	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2015	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLe)	2015	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLe)	2015	G 2.4 GDI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLe)	2015	G 2.4 GDI	ECALL [e - Call]	√	√	√			
Europe/General	TUCSON(TLe)	2015	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLI)	2018	D 2.0 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0116, 0035, 0013, 0061, 0035, 0158
Europe/General	TUCSON(TLI)	2018	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122

Europe/General	TUCSON(TLI)	2018	D 2.0 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLI)	2018	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLI)	2018	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLI)	2018	D 2.0 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLI)	2018	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLI)	2018	D 2.0 TCI-R	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TLI)	2018	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TLI)	2018	D 2.0 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLI)	2018	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLI)	2018	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLI)	2018	D 2.0 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLI)	2018	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLI)	2018	D 2.0 TCI-R	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLI)	2018	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLI)	2018	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON(TLI)	2018	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(TLI)	2018	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLI)	2018	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLI)	2018	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLI)	2018	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TLI)	2018	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TLI)	2018	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLI)	2018	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLI)	2018	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLI)	2018	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLI)	2018	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLI)	2018	G 2.0 MPI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLI)	2018	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON(TLI)	2017	D 2.0 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0116, 0035, 0013, 0061, 0035, 0158
Europe/General	TUCSON(TLI)	2017	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(TLI)	2017	D 2.0 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLI)	2017	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLI)	2017	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLI)	2017	D 2.0 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLI)	2017	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON(TLI)	2017	D 2.0 TCI-R	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TLI)	2017	D 2.0 TCI-R	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TLI)	2017	D 2.0 TCI-R	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLI)	2017	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLI)	2017	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLI)	2017	D 2.0 TCI-R	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	TUCSON(TLI)	2017	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLI)	2017	D 2.0 TCI-R	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLI)	2017	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026

Europe/General	TUCSON(TLI)	2017	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON(TLI)	2017	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON(TLI)	2017	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0014, 0019, 0064
Europe/General	TUCSON(TLI)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON(TLI)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON(TLI)	2017	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON(TLI)	2017	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON(TLI)	2017	G 2.0 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
Europe/General	TUCSON(TLI)	2017	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	TUCSON(TLI)	2017	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON(TLI)	2017	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON(TLI)	2017	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
Europe/General	TUCSON(TLI)	2017	G 2.0 MPI	PTG [Power Tail Gate]	√	√	√	√		0113
Europe/General	TUCSON(TLI)	2017	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2016	D 2.0 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0035, 0061, 0089
Europe/General	TUCSON/ix35(LM)	2016	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2016	D 2.0 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2016	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2016	D 2.0 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON/ix35(LM)	2016	D 2.0 TCI-R	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON/ix35(LM)	2016	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2016	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	D 2.0 TCI-R	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2016	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON/ix35(LM)	2016	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2016	F 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2016	F 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2016	F 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2016	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2016	F 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	F 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON/ix35(LM)	2016	F 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON/ix35(LM)	2016	F 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2016	F 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	F 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2016	F 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON/ix35(LM)	2016	F 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	F 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	F 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158

Europe/General	TUCSON/ix35(LM)	2016	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 GDI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 GDI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	

Europe/General	TUCSON/ix35(LM)	2016	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 MPI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2016	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0035, 0061, 0089
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	F 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			

Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			

Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2015	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	ENGINE [Engine Control]	√	√	√	√	√	0035, 0061, 0089
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	F 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	

Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-NU	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-NU	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-NU	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-NU	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-NU	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-NU	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-NU	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-NU	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-NU	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-NU	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-NU	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-NU	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-NU	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-NU	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-Theta2	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-Theta2	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-Theta2	ENGINE [Leaded All]	√	√	√	√	√	0116, 0015, 0073, 0013, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-Theta2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-Theta2	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-Theta2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-Theta2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-Theta2	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-Theta2	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-Theta2	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-Theta2	EPS [Power Steering]	√	√	√	√		
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-Theta2	TPMS [Tire Pressure Monitoring]	√	√	√		√	

Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-Theta2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-Theta2	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-Theta2	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-Theta2	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-Theta2	SMKCODE [Smart Key Code Saving]				√		
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-Theta2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.0 MPI-Theta2	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0116, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2014	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093

Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	SMKCODE [Smart Key Code Saving]				√		
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	0061, 0089
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	0061, 0089
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	EPS [Power Steering]	√	√	√	√		
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	SMKCODE [Smart Key Code Saving]				√		
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	EPS [Power Steering]	√	√	√	√		
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129

Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	F 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	EPS [Power Steering]	√	√	√	√		
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√	√	0116, 0015, 0073, 0013, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	EPS [Power Steering]	√	√	√	√		
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158

Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	0116, 0015, 0073, 0013, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	EPS [Power Steering]	√	√	√	√		
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2013	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	EPS [Power Steering]	√	√	√	√		
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	SMKCODE [Smart Key Code Saving]				√		
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	0061, 0089
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	0061, 0089
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	EPS [Power Steering]	√	√	√	√		

Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	SMKCODE [Smart Key Code Saving]				√		
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	EPS [Power Steering]	√	√	√	√		
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	F 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	EPS [Power Steering]	√	√	√	√		
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158

Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√	√	0116, 0015, 0073, 0013, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	EPS [Power Steering]	√	√	√	√		
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	0116, 0015, 0073, 0013, 0120, 0158
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	EPS [Power Steering]	√	√	√	√		
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2012	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	

Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	EPS [Power Steering]	√	√	√	√		
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	SMKCODE [Smart Key Code Saving]				√		
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	D 1.7 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	0061, 0089
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	0061, 0089
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	EPS [Power Steering]	√	√	√	√		
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	SMKCODE [Smart Key Code Saving]				√		
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	EPS [Power Steering]	√	√	√	√		
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			

Europe/General	TUCSON/ix35(LM)	2011	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	EPS [Power Steering]	√	√	√	√		
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	EPS [Power Steering]	√	√	√	√		
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	SPAS [Smart Parking Assist System]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2011	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	ENGINE [Engine Control (CPF+)]	√	√	√	√	√	0061, 0089
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	ENGINE [Engine Control (CPF -)]	√	√	√	√	√	0061, 0089
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	AIRBAG [Airbag (Event #2)]	√	√	√			

Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	EPS [Power Steering]	√	√	√	√		
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	SMKCODE [Smart Key Code Saving]				√		
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2010	D 2.0 TCI-R	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	EPS [Power Steering]	√	√	√	√		
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2010	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	ENGINE [Leaded All]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	ENGINE [Unleaded GEN]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	ENGINE [Unleaded EOBD]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	ESP [Electronic Stability Program]	√	√	√	√	√	0064, 0093
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	AIRCON [Air Conditioner (EURO)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	AIRCON [Air Conditioner (GEN)]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	EPS [Power Steering]	√	√	√	√		
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	IMMO [Immobilizer]				√		
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	SMKCODE [Smart Key Code Saving]				√		
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129

Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
Europe/General	TUCSON/ix35(LM)	2010	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VELOSTER(FS)	2018	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VELOSTER(FS)	2018	G 1.6 GDI	AT [Dual Clutch Transmission]	√	√	√	√	√	0028
Europe/General	VELOSTER(FS)	2018	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VELOSTER(FS)	2018	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	VELOSTER(FS)	2018	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VELOSTER(FS)	2018	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VELOSTER(FS)	2018	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2018	G 1.6 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	VELOSTER(FS)	2018	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	VELOSTER(FS)	2018	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	VELOSTER(FS)	2018	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VELOSTER(FS)	2018	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2018	G 1.6 GDI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2018	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VELOSTER(FS)	2018	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	VELOSTER(FS)	2018	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VELOSTER(FS)	2018	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VELOSTER(FS)	2018	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	VELOSTER(FS)	2018	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VELOSTER(FS)	2018	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VELOSTER(FS)	2018	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2018	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	VELOSTER(FS)	2018	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	VELOSTER(FS)	2018	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	VELOSTER(FS)	2018	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VELOSTER(FS)	2018	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2018	G 1.6 MPI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2018	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VELOSTER(FS)	2018	G 1.6 T-GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	VELOSTER(FS)	2018	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	VELOSTER(FS)	2018	G 1.6 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VELOSTER(FS)	2018	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VELOSTER(FS)	2018	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VELOSTER(FS)	2018	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2018	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	VELOSTER(FS)	2018	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	VELOSTER(FS)	2018	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	VELOSTER(FS)	2018	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VELOSTER(FS)	2018	G 1.6 T-GDI	SERVICE [Service Reminder]	√					
Europe/General	VELOSTER(FS)	2018	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	

Europe/General	VELOSTER(FS)	2018	G 1.6 T-GDI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2018	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VELOSTER(FS)	2017	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VELOSTER(FS)	2017	G 1.6 GDI	AT [Dual Clutch Transmission]	√	√	√	√	√	0028
Europe/General	VELOSTER(FS)	2017	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VELOSTER(FS)	2017	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	VELOSTER(FS)	2017	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VELOSTER(FS)	2017	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VELOSTER(FS)	2017	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2017	G 1.6 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	VELOSTER(FS)	2017	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	VELOSTER(FS)	2017	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	VELOSTER(FS)	2017	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VELOSTER(FS)	2017	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2017	G 1.6 GDI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2017	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VELOSTER(FS)	2017	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	VELOSTER(FS)	2017	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VELOSTER(FS)	2017	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VELOSTER(FS)	2017	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	VELOSTER(FS)	2017	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VELOSTER(FS)	2017	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VELOSTER(FS)	2017	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2017	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	VELOSTER(FS)	2017	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	VELOSTER(FS)	2017	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	VELOSTER(FS)	2017	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VELOSTER(FS)	2017	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2017	G 1.6 MPI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2017	G 1.6 T-GDI	ENGINE [Engine Control]			√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VELOSTER(FS)	2017	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	VELOSTER(FS)	2017	G 1.6 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VELOSTER(FS)	2017	G 1.6 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	VELOSTER(FS)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VELOSTER(FS)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VELOSTER(FS)	2017	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2017	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	VELOSTER(FS)	2017	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	VELOSTER(FS)	2017	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	VELOSTER(FS)	2017	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VELOSTER(FS)	2017	G 1.6 T-GDI	SERVICE [Service Reminder]	√					
Europe/General	VELOSTER(FS)	2017	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2017	G 1.6 T-GDI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2017	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026

Europe/General	VELOSTER(FS)	2016	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VELOSTER(FS)	2016	G 1.6 GDI	AT [Dual Clutch Transmission]	√	√	√	√	√	0028
Europe/General	VELOSTER(FS)	2016	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VELOSTER(FS)	2016	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	VELOSTER(FS)	2016	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VELOSTER(FS)	2016	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VELOSTER(FS)	2016	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2016	G 1.6 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	VELOSTER(FS)	2016	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	VELOSTER(FS)	2016	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	VELOSTER(FS)	2016	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VELOSTER(FS)	2016	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2016	G 1.6 GDI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2016	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VELOSTER(FS)	2016	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	VELOSTER(FS)	2016	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VELOSTER(FS)	2016	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VELOSTER(FS)	2016	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	VELOSTER(FS)	2016	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VELOSTER(FS)	2016	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VELOSTER(FS)	2016	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2016	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	VELOSTER(FS)	2016	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	VELOSTER(FS)	2016	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VELOSTER(FS)	2016	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2016	G 1.6 MPI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2016	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VELOSTER(FS)	2016	G 1.6 T-GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	VELOSTER(FS)	2016	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	VELOSTER(FS)	2016	G 1.6 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VELOSTER(FS)	2016	G 1.6 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	VELOSTER(FS)	2016	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VELOSTER(FS)	2016	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VELOSTER(FS)	2016	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2016	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	VELOSTER(FS)	2016	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	VELOSTER(FS)	2016	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	VELOSTER(FS)	2016	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VELOSTER(FS)	2016	G 1.6 T-GDI	SERVICE [Service Reminder]	√					
Europe/General	VELOSTER(FS)	2016	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2016	G 1.6 T-GDI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2016	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	AT [Dual Clutch Transmission]	√	√	√	√	√	0028

Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2015	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2015	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	SERVICE [Service Reminder]	√					
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2015	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	AT [Dual Clutch Transmission]	√	√	√	√	√	0028
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093

Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2014	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2014	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2014	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	AT [Dual Clutch Transmission]	√	√	√	√	√	0028
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		

Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2013	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2013	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	ENGINE [Engine Control]		√	√			0013, 0040, 0072, 0116, 0158
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2013	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	AT [Dual Clutch Transmission]	√	√	√	√	√	0028
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2012	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026

Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2012	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	AT [Dual Clutch Transmission]	√	√	√	√	√	0028
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2011	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064, 0093
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	IPM [Instrument Panel Module]	√	√	√	√	√	
Europe/General	VELOSTER(FS)	2011	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2017	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	VERNA(RBI)	2017	D 1.4 TCI-U2	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093

Europe/General	VERNA(RBI)	2017	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2017	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2017	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2017	D 1.4 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2017	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2017	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2017	D 1.4 TCI-U2	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2017	D 1.4 TCI-U2	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2017	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2017	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2017	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VERNA(RBI)	2017	D 1.6 TCI-U2	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2017	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2017	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2017	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2017	D 1.6 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2017	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2017	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2017	D 1.6 TCI-U2	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2017	D 1.6 TCI-U2	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2017	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2017	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	VERNA(RBI)	2017	G 1.4 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VERNA(RBI)	2017	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VERNA(RBI)	2017	G 1.4 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2017	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2017	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2017	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2017	G 1.4 MPI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2017	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2017	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2017	G 1.4 MPI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2017	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2017	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	VERNA(RBI)	2017	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VERNA(RBI)	2017	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VERNA(RBI)	2017	G 1.6 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2017	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2017	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2017	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2017	G 1.6 MPI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2017	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2017	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129

Europe/General	VERNA(RBI)	2017	G 1.6 MPI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2017	G 1.6 MPI	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2017	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2016	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	VERNA(RBI)	2016	D 1.4 TCI-U2	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2016	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2016	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2016	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2016	D 1.4 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2016	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2016	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2016	D 1.4 TCI-U2	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2016	D 1.4 TCI-U2	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2016	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2016	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2016	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VERNA(RBI)	2016	D 1.6 TCI-U2	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2016	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2016	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2016	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2016	D 1.6 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2016	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2016	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2016	D 1.6 TCI-U2	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2016	D 1.6 TCI-U2	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2016	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2016	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	VERNA(RBI)	2016	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VERNA(RBI)	2016	G 1.4 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2016	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2016	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2016	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2016	G 1.4 MPI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2016	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2016	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2016	G 1.4 MPI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2016	G 1.4 MPI	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2016	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2016	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	VERNA(RBI)	2016	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VERNA(RBI)	2016	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VERNA(RBI)	2016	G 1.6 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2016	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			

Europe/General	VERNA(RBI)	2016	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2016	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2016	G 1.6 MPI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2016	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2016	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2016	G 1.6 MPI	BCM [Body Control Module (SMK+)]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2016	G 1.6 MPI	BCM [Body Control Module (SMK -)]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2016	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2015	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	VERNA(RBI)	2015	D 1.4 TCI-U2	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2015	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2015	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2015	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2015	D 1.4 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2015	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2015	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2015	D 1.4 TCI-U2	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	VERNA(RBI)	2015	D 1.4 TCI-U2	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	VERNA(RBI)	2015	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2015	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2015	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VERNA(RBI)	2015	D 1.6 TCI-U2	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2015	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2015	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2015	D 1.6 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2015	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2015	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2015	D 1.6 TCI-U2	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	VERNA(RBI)	2015	D 1.6 TCI-U2	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	VERNA(RBI)	2015	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2015	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	VERNA(RBI)	2015	G 1.4 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VERNA(RBI)	2015	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VERNA(RBI)	2015	G 1.4 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2015	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2015	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2015	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2015	G 1.4 MPI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2015	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2015	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2015	G 1.4 MPI	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	VERNA(RBI)	2015	G 1.4 MPI	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	VERNA(RBI)	2015	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026

Europe/General	VERNA(RBI)	2015	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	VERNA(RBI)	2015	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VERNA(RBI)	2015	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VERNA(RBI)	2015	G 1.6 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2015	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2015	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2015	G 1.6 MPI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2015	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2015	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2015	G 1.6 MPI	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	VERNA(RBI)	2015	G 1.6 MPI	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	VERNA(RBI)	2015	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2014	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	VERNA(RBI)	2014	D 1.4 TCI-U2	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2014	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2014	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2014	D 1.4 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2014	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2014	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2014	D 1.4 TCI-U2	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	VERNA(RBI)	2014	D 1.4 TCI-U2	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	VERNA(RBI)	2014	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	VERNA(RBI)	2014	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	EPS [Motor driven Power Steering]	√	√	√	√	√	

Europe/General	VERNA(RBI)	2014	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	VERNA(RBI)	2014	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	VERNA(RBI)	2014	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2013	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	VERNA(RBI)	2013	D 1.4 TCI-U2	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2013	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2013	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2013	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2013	D 1.4 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2013	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2013	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2013	D 1.4 TCI-U2	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	VERNA(RBI)	2013	D 1.4 TCI-U2	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	VERNA(RBI)	2013	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	VERNA(RBI)	2013	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122

Europe/General	VERNA(RBI)	2013	G 1.4 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	VERNA(RBI)	2013	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	VERNA(RBI)	2013	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2012	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	VERNA(RBI)	2012	D 1.4 TCI-U2	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2012	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2012	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2012	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2012	D 1.4 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2012	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2012	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2012	D 1.4 TCI-U2	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	VERNA(RBI)	2012	D 1.4 TCI-U2	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	VERNA(RBI)	2012	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	BCM [Body Control Module (SMK -)]	√			√	√	

Europe/General	VERNA(RBI)	2012	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	VERNA(RBI)	2012	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	VERNA(RBI)	2012	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2011	D 1.4 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	0060
Europe/General	VERNA(RBI)	2011	D 1.4 TCI-U2	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2011	D 1.4 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2011	D 1.4 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2011	D 1.4 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2011	D 1.4 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2011	D 1.4 TCI-U2	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2011	D 1.4 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2011	D 1.4 TCI-U2	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	VERNA(RBI)	2011	D 1.4 TCI-U2	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	VERNA(RBI)	2011	D 1.4 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2011	D 1.6 TCI-U2	ENGINE [Engine Control]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2011	D 1.6 TCI-U2	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VERNA(RBI)	2011	D 1.6 TCI-U2	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2011	D 1.6 TCI-U2	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2011	D 1.6 TCI-U2	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2011	D 1.6 TCI-U2	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2011	D 1.6 TCI-U2	IMMO [Immobilizer]				√		

Europe/General	VERNA(RBI)	2011	D 1.6 TCI-U2	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2011	D 1.6 TCI-U2	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	VERNA(RBI)	2011	D 1.6 TCI-U2	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	VERNA(RBI)	2011	D 1.6 TCI-U2	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2011	G 1.4 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	VERNA(RBI)	2011	G 1.4 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VERNA(RBI)	2011	G 1.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VERNA(RBI)	2011	G 1.4 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2011	G 1.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2011	G 1.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2011	G 1.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2011	G 1.4 MPI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2011	G 1.4 MPI	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2011	G 1.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2011	G 1.4 MPI	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	VERNA(RBI)	2011	G 1.4 MPI	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	VERNA(RBI)	2011	G 1.4 MPI	CODE [Transmitter Code Saving]				√		0026
Europe/General	VERNA(RBI)	2011	G 1.6 MPI	ENGINE [Leaded All]	√	√	√	√		0013, 0040, 0072, 0073, 0116, 0158
Europe/General	VERNA(RBI)	2011	G 1.6 MPI	ENGINE [Unleaded All]	√	√	√	√		0013, 0040, 0072, 0116, 0158
Europe/General	VERNA(RBI)	2011	G 1.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0122
Europe/General	VERNA(RBI)	2011	G 1.6 MPI	ABS [Anti - Lock Brake]	√	√	√	√	√	0064, 0093
Europe/General	VERNA(RBI)	2011	G 1.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
Europe/General	VERNA(RBI)	2011	G 1.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
Europe/General	VERNA(RBI)	2011	G 1.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2011	G 1.6 MPI	EPS [Motor driven Power Steering]	√	√	√	√	√	
Europe/General	VERNA(RBI)	2011	G 1.6 MPI	IMMO [Immobilizer]				√		
Europe/General	VERNA(RBI)	2011	G 1.6 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0042, 0043, 0058, 0129
Europe/General	VERNA(RBI)	2011	G 1.6 MPI	BCM [Body Control Module (SMK+)]	√			√	√	
Europe/General	VERNA(RBI)	2011	G 1.6 MPI	BCM [Body Control Module (SMK -)]	√			√	√	
Europe/General	VERNA(RBI)	2011	G 1.6 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ACCENT(LC)	2005	G 1.5 SOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0055
U S	ACCENT(LC)	2005	G 1.5 SOHC	AT [Automatic Transaxle]		√	√	√	√	
U S	ACCENT(LC)	2005	G 1.5 SOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ACCENT(LC)	2005	G 1.5 SOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
U S	ACCENT(LC)	2005	G 1.6 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0055
U S	ACCENT(LC)	2005	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
U S	ACCENT(LC)	2005	G 1.6 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ACCENT(LC)	2005	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	ACCENT(LC)	2005	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
U S	ACCENT(LC)	2004	G 1.5 SOHC	ENGINE [Engine Control]	√	√	√	√	√	0055
U S	ACCENT(LC)	2004	G 1.5 SOHC	AT [Automatic Transaxle]		√	√	√	√	
U S	ACCENT(LC)	2004	G 1.5 SOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ACCENT(LC)	2004	G 1.5 SOHC	AIRBAG [Airbag Control]	√	√	√			

U S	ACCENT(LC)	2004	G 1.5 SOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
U S	ACCENT(LC)	2004	G 1.6 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055
U S	ACCENT(LC)	2004	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
U S	ACCENT(LC)	2004	G 1.6 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ACCENT(LC)	2004	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	ACCENT(LC)	2004	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
U S	ACCENT(LC)	2003	G 1.5 SOHC	ENGINE [Engine Control]	√	√	√	√		0055
U S	ACCENT(LC)	2003	G 1.5 SOHC	AT [Automatic Transaxle]		√	√	√	√	
U S	ACCENT(LC)	2003	G 1.5 SOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ACCENT(LC)	2003	G 1.5 SOHC	AIRBAG [Airbag Control]	√	√	√			
U S	ACCENT(LC)	2003	G 1.5 SOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
U S	ACCENT(LC)	2003	G 1.6 DOHC	ENGINE [Engine Control]	√	√	√	√		0055
U S	ACCENT(LC)	2003	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
U S	ACCENT(LC)	2003	G 1.6 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ACCENT(LC)	2003	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	ACCENT(LC)	2003	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
U S	ACCENT(LC)	2002	G 1.5 SOHC	ENGINE [Engine Control]	√	√	√	√		0055
U S	ACCENT(LC)	2002	G 1.5 SOHC	AT [Automatic Transaxle]		√	√	√	√	
U S	ACCENT(LC)	2002	G 1.5 SOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ACCENT(LC)	2002	G 1.5 SOHC	AIRBAG [Airbag Control]	√	√	√			
U S	ACCENT(LC)	2002	G 1.5 SOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
U S	ACCENT(LC)	2002	G 1.6 DOHC	ENGINE [Engine Control]	√	√	√	√		0055
U S	ACCENT(LC)	2002	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
U S	ACCENT(LC)	2002	G 1.6 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ACCENT(LC)	2002	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	ACCENT(LC)	2002	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
U S	ACCENT(LC)	2001	G 1.5 SOHC	ENGINE [Engine Control]	√	√	√	√		0055
U S	ACCENT(LC)	2001	G 1.5 SOHC	AT [Automatic Transaxle]		√	√	√	√	
U S	ACCENT(LC)	2001	G 1.5 SOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ACCENT(LC)	2001	G 1.5 SOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
U S	ACCENT(LC)	2001	G 1.6 DOHC	ENGINE [Engine Control]	√	√	√	√		0055
U S	ACCENT(LC)	2001	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
U S	ACCENT(LC)	2001	G 1.6 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ACCENT(LC)	2001	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	ACCENT(LC)	2001	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
U S	ACCENT(LC)	2000	G 1.5 SOHC	ENGINE [Engine Control]	√	√	√	√		0055
U S	ACCENT(LC)	2000	G 1.5 SOHC	AT [Automatic Transaxle]		√	√	√	√	
U S	ACCENT(LC)	2000	G 1.5 SOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ACCENT(LC)	2000	G 1.5 SOHC	AIRBAG [Airbag Control]	√	√	√			
U S	ACCENT(LC)	2000	G 1.5 SOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
U S	ACCENT(LC)	2000	G 1.6 DOHC	ENGINE [Engine Control]	√	√	√	√		0055
U S	ACCENT(LC)	2000	G 1.6 DOHC	AT [Automatic Transaxle]		√	√	√	√	
U S	ACCENT(LC)	2000	G 1.6 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ACCENT(LC)	2000	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	ACCENT(LC)	2000	G 1.6 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147

U S	ACCENT(MC)	2011	G 1.6 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0158, 0055
U S	ACCENT(MC)	2011	G 1.6 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ACCENT(MC)	2011	G 1.6 DOHC	ABS [Anti - Lock Brake System]	√	√	√	√	√	0064
U S	ACCENT(MC)	2011	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
U S	ACCENT(MC)	2011	G 1.6 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ACCENT(MC)	2011	G 1.6 DOHC	EPS [Electronic Power Steering]	√	√	√	√		
U S	ACCENT(MC)	2011	G 1.6 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	ACCENT(MC)	2011	G 1.6 DOHC	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
U S	ACCENT(MC)	2010	G 1.6 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0158, 0055
U S	ACCENT(MC)	2010	G 1.6 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ACCENT(MC)	2010	G 1.6 DOHC	ABS [Anti - Lock Brake System]	√	√	√	√	√	0064
U S	ACCENT(MC)	2010	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
U S	ACCENT(MC)	2010	G 1.6 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ACCENT(MC)	2010	G 1.6 DOHC	EPS [Electronic Power Steering]	√	√	√	√		
U S	ACCENT(MC)	2010	G 1.6 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	ACCENT(MC)	2010	G 1.6 DOHC	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
U S	ACCENT(MC)	2009	G 1.6 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0158, 0055
U S	ACCENT(MC)	2009	G 1.6 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ACCENT(MC)	2009	G 1.6 DOHC	ABS [ABS (MGH - 25)]	√	√	√	√	√	0064
U S	ACCENT(MC)	2009	G 1.6 DOHC	ABS [ABS (MGH - 40)]	√	√	√	√	√	
U S	ACCENT(MC)	2009	G 1.6 DOHC	ABS [ABS (MGH - 60)]	√	√	√	√	√	0064
U S	ACCENT(MC)	2009	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
U S	ACCENT(MC)	2009	G 1.6 DOHC	EPS [Electronic Power Steering]	√	√	√	√		
U S	ACCENT(MC)	2009	G 1.6 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	ACCENT(MC)	2009	G 1.6 DOHC	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
U S	ACCENT(MC)	2008	G 1.6 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0158, 0055
U S	ACCENT(MC)	2008	G 1.6 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ACCENT(MC)	2008	G 1.6 DOHC	ABS [ABS (MGH - 25)]	√	√	√	√	√	0064
U S	ACCENT(MC)	2008	G 1.6 DOHC	ABS [ABS (MGH - 40)]	√	√	√	√	√	
U S	ACCENT(MC)	2008	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
U S	ACCENT(MC)	2008	G 1.6 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ACCENT(MC)	2008	G 1.6 DOHC	EPS [Electronic Power Steering]	√	√	√	√		
U S	ACCENT(MC)	2008	G 1.6 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	ACCENT(MC)	2008	G 1.6 DOHC	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
U S	ACCENT(MC)	2007	G 1.6 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0158, 0055
U S	ACCENT(MC)	2007	G 1.6 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ACCENT(MC)	2007	G 1.6 DOHC	ABS [Anti - Lock Brake System]	√	√	√	√	√	0064
U S	ACCENT(MC)	2007	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
U S	ACCENT(MC)	2007	G 1.6 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ACCENT(MC)	2007	G 1.6 DOHC	EPS [Electronic Power Steering]	√	√	√	√		
U S	ACCENT(MC)	2007	G 1.6 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	

U S	ACCENT(MC)	2007	G 1.6 DOHC	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
U S	ACCENT(MC)	2006	G 1.6 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0158, 0055
U S	ACCENT(MC)	2006	G 1.6 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ACCENT(MC)	2006	G 1.6 DOHC	ABS [Anti - Lock Brake System]	√	√	√	√	√	0064
U S	ACCENT(MC)	2006	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
U S	ACCENT(MC)	2006	G 1.6 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ACCENT(MC)	2006	G 1.6 DOHC	EPS [Electronic Power Steering]	√	√	√	√		
U S	ACCENT(MC)	2006	G 1.6 DOHC	IMMO [Immobilizer]				√		
U S	ACCENT(RB)	2017	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	ACCENT(RB)	2017	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ACCENT(RB)	2017	G 1.6 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	ACCENT(RB)	2017	G 1.6 GDI	ODS [PODS - F]	√	√	√			
U S	ACCENT(RB)	2017	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ACCENT(RB)	2017	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ACCENT(RB)	2017	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ACCENT(RB)	2017	G 1.6 GDI	EPS [Power Steering]	√	√	√	√	√	
U S	ACCENT(RB)	2017	G 1.6 GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
U S	ACCENT(RB)	2017	G 1.6 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ACCENT(RB)	2017	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	ACCENT(RB)	2017	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
U S	ACCENT(RB)	2016	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	ACCENT(RB)	2016	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ACCENT(RB)	2016	G 1.6 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	ACCENT(RB)	2016	G 1.6 GDI	ODS [PODS - F]	√	√	√			
U S	ACCENT(RB)	2016	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ACCENT(RB)	2016	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ACCENT(RB)	2016	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ACCENT(RB)	2016	G 1.6 GDI	EPS [Power Steering]	√	√	√	√	√	
U S	ACCENT(RB)	2016	G 1.6 GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
U S	ACCENT(RB)	2016	G 1.6 GDI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
U S	ACCENT(RB)	2016	G 1.6 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ACCENT(RB)	2016	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	ACCENT(RB)	2016	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
U S	ACCENT(RB)	2015	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	ACCENT(RB)	2015	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ACCENT(RB)	2015	G 1.6 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	ACCENT(RB)	2015	G 1.6 GDI	ODS [PODS - F]	√	√	√			
U S	ACCENT(RB)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ACCENT(RB)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ACCENT(RB)	2015	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ACCENT(RB)	2015	G 1.6 GDI	EPS [Power Steering]	√	√	√	√	√	
U S	ACCENT(RB)	2015	G 1.6 GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	

U S	ACCENT(RB)	2015	G 1.6 GDI	TPMS [Tire Pressure Monitoring (High)]	√	√	√	√	√	
U S	ACCENT(RB)	2015	G 1.6 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ACCENT(RB)	2015	G 1.6 GDI	BCM [Body Control Module]	√			√	√	
U S	ACCENT(RB)	2015	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
U S	ACCENT(RB)	2014	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	ACCENT(RB)	2014	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ACCENT(RB)	2014	G 1.6 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	ACCENT(RB)	2014	G 1.6 GDI	ODS [PODS - F]	√	√	√			
U S	ACCENT(RB)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ACCENT(RB)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ACCENT(RB)	2014	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ACCENT(RB)	2014	G 1.6 GDI	EPS [Power Steering]	√	√	√	√	√	
U S	ACCENT(RB)	2014	G 1.6 GDI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
U S	ACCENT(RB)	2014	G 1.6 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ACCENT(RB)	2014	G 1.6 GDI	BCM [Body Control Module]	√			√	√	
U S	ACCENT(RB)	2014	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
U S	ACCENT(RB)	2013	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	ACCENT(RB)	2013	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ACCENT(RB)	2013	G 1.6 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	ACCENT(RB)	2013	G 1.6 GDI	ODS [PODS - F]	√	√	√			
U S	ACCENT(RB)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ACCENT(RB)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ACCENT(RB)	2013	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ACCENT(RB)	2013	G 1.6 GDI	EPS [Power Steering]	√	√	√	√	√	
U S	ACCENT(RB)	2013	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ACCENT(RB)	2013	G 1.6 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ACCENT(RB)	2013	G 1.6 GDI	BCM [Body Control Module]	√	√		√	√	
U S	ACCENT(RB)	2013	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
U S	ACCENT(RB)	2012	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	ACCENT(RB)	2012	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ACCENT(RB)	2012	G 1.6 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	ACCENT(RB)	2012	G 1.6 GDI	ODS [PODS - F]	√	√	√			
U S	ACCENT(RB)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ACCENT(RB)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ACCENT(RB)	2012	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ACCENT(RB)	2012	G 1.6 GDI	EPS [Power Steering]	√	√	√	√	√	
U S	ACCENT(RB)	2012	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ACCENT(RB)	2012	G 1.6 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ACCENT(RB)	2012	G 1.6 GDI	BCM [Body Control Module]	√			√	√	
U S	ACCENT(RB)	2012	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
U S	ACCENT(X3)	1999	G 1.5 SOHC/DOHC	ENGINE [Engine Control]		√	√	√		

U S	ACCENT(X3)	1999	G 1.5 SOHC/DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ACCENT(X3)	1999	G 1.5 SOHC/DOHC	AIRBAG [Airbag Control]		√	√	√		
U S	ACCENT(X3)	1999	G 1.5 SOHC/DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	ACCENT(X3)	1998	G 1.5 SOHC/DOHC	ENGINE [Engine Control]		√	√	√		
U S	ACCENT(X3)	1998	G 1.5 SOHC/DOHC	AIRBAG [Airbag Control]		√	√	√		
U S	ACCENT(X3)	1998	G 1.5 SOHC/DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	ACCENT(X3)	1997	G 1.5 SOHC/DOHC	ENGINE [Engine Control]		√	√	√		
U S	ACCENT(X3)	1997	G 1.5 SOHC/DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ACCENT(X3)	1997	G 1.5 SOHC/DOHC	AIRBAG [Airbag Control]		√	√	√		
U S	ACCENT(X3)	1997	G 1.5 SOHC/DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	ACCENT(X3)	1996	G 1.5 SOHC/DOHC	ENGINE [Engine Control]		√	√	√		
U S	ACCENT(X3)	1996	G 1.5 SOHC/DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ACCENT(X3)	1996	G 1.5 SOHC/DOHC	AIRBAG [Airbag Control]		√	√	√		
U S	ACCENT(X3)	1996	G 1.5 SOHC/DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	ACCENT(X3)	1995	G 1.5 SOHC/DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ACCENT(X3)	1995	G 1.5 SOHC/DOHC	AIRBAG [Airbag Control]		√	√	√		
U S	ACCENT(X3)	1995	G 1.5 SOHC/DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	AZERA(HG)	2017	G 3.3 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
U S	AZERA(HG)	2017	G 3.3 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	AZERA(HG)	2017	G 3.3 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0014, 0037, 0062, 0103, 0104
U S	AZERA(HG)	2017	G 3.3 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	AZERA(HG)	2017	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	AZERA(HG)	2017	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	AZERA(HG)	2017	G 3.3 GDI	ODS [PODS - F]	√	√	√			
U S	AZERA(HG)	2017	G 3.3 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	AZERA(HG)	2017	G 3.3 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	AZERA(HG)	2017	G 3.3 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	AZERA(HG)	2017	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	AZERA(HG)	2017	G 3.3 GDI	MCS [Multi - View Camera System]	√	√	√	√	√	
U S	AZERA(HG)	2017	G 3.3 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
U S	AZERA(HG)	2017	G 3.3 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084

U S	AZERA(HG)	2017	G 3.3 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	AZERA(HG)	2017	G 3.3 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	AZERA(HG)	2017	G 3.3 GDI	AMP [Amplifier]						0006
U S	AZERA(HG)	2017	G 3.3 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	AZERA(HG)	2017	G 3.3 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	AZERA(HG)	2017	G 3.3 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	AZERA(HG)	2017	G 3.3 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	AZERA(HG)	2017	G 3.3 GDI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
U S	AZERA(HG)	2017	G 3.3 GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	AZERA(HG)	2017	G 3.3 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	AZERA(HG)	2017	G 3.3 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
U S	AZERA(HG)	2017	G 3.3 GDI	TMU [Telematics Unit]	√	√	√			
U S	AZERA(HG)	2017	G 3.3 GDI	CODE [Transmitter Code Saving]				√		0026
U S	AZERA(HG)	2016	G 3.3 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
U S	AZERA(HG)	2016	G 3.3 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	AZERA(HG)	2016	G 3.3 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0014, 0037, 0062, 0103, 0104
U S	AZERA(HG)	2016	G 3.3 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	AZERA(HG)	2016	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	AZERA(HG)	2016	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	AZERA(HG)	2016	G 3.3 GDI	ODS [PODS - F]	√	√	√			
U S	AZERA(HG)	2016	G 3.3 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	AZERA(HG)	2016	G 3.3 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	AZERA(HG)	2016	G 3.3 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	AZERA(HG)	2016	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	AZERA(HG)	2016	G 3.3 GDI	MCS [Multi - View Camera System]	√	√	√	√	√	
U S	AZERA(HG)	2016	G 3.3 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
U S	AZERA(HG)	2016	G 3.3 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
U S	AZERA(HG)	2016	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	AZERA(HG)	2016	G 3.3 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	AZERA(HG)	2016	G 3.3 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	AZERA(HG)	2016	G 3.3 GDI	AMP [Amplifier]						0006
U S	AZERA(HG)	2016	G 3.3 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	AZERA(HG)	2016	G 3.3 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	AZERA(HG)	2016	G 3.3 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	AZERA(HG)	2016	G 3.3 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	AZERA(HG)	2016	G 3.3 GDI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
U S	AZERA(HG)	2016	G 3.3 GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	AZERA(HG)	2016	G 3.3 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	AZERA(HG)	2016	G 3.3 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
U S	AZERA(HG)	2016	G 3.3 GDI	CODE [Transmitter Code Saving]				√		0026
U S	AZERA(HG)	2015	G 3.3 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
U S	AZERA(HG)	2015	G 3.3 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	AZERA(HG)	2015	G 3.3 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0014, 0037, 0062, 0103, 0104
U S	AZERA(HG)	2015	G 3.3 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	AZERA(HG)	2015	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			

U S	AZERA(HG)	2015	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	AZERA(HG)	2015	G 3.3 GDI	ODS [PODS - F]	√	√	√			
U S	AZERA(HG)	2015	G 3.3 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	AZERA(HG)	2015	G 3.3 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	AZERA(HG)	2015	G 3.3 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	AZERA(HG)	2015	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	AZERA(HG)	2015	G 3.3 GDI	MCS [Multi - View Camera System]	√	√	√	√	√	
U S	AZERA(HG)	2015	G 3.3 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
U S	AZERA(HG)	2015	G 3.3 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
U S	AZERA(HG)	2015	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	AZERA(HG)	2015	G 3.3 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	AZERA(HG)	2015	G 3.3 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	AZERA(HG)	2015	G 3.3 GDI	AMP [Amplifier]						0006
U S	AZERA(HG)	2015	G 3.3 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	AZERA(HG)	2015	G 3.3 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	AZERA(HG)	2015	G 3.3 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	AZERA(HG)	2015	G 3.3 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	AZERA(HG)	2015	G 3.3 GDI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
U S	AZERA(HG)	2015	G 3.3 GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	AZERA(HG)	2015	G 3.3 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	AZERA(HG)	2015	G 3.3 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
U S	AZERA(HG)	2015	G 3.3 GDI	TMU [Telematics Unit]	√	√	√			
U S	AZERA(HG)	2015	G 3.3 GDI	CODE [Transmitter Code Saving]				√		0026
U S	AZERA(HG)	2014	G 3.3 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
U S	AZERA(HG)	2014	G 3.3 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	AZERA(HG)	2014	G 3.3 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0014, 0037, 0062, 0103, 0104
U S	AZERA(HG)	2014	G 3.3 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	AZERA(HG)	2014	G 3.3 GDI	ODS [PODS - F]	√	√	√			
U S	AZERA(HG)	2014	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	AZERA(HG)	2014	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	AZERA(HG)	2014	G 3.3 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	AZERA(HG)	2014	G 3.3 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	AZERA(HG)	2014	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	AZERA(HG)	2014	G 3.3 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	AZERA(HG)	2014	G 3.3 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	AZERA(HG)	2014	G 3.3 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	AZERA(HG)	2014	G 3.3 GDI	CLU [Cluster Module]	√	√	√			
U S	AZERA(HG)	2014	G 3.3 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	AZERA(HG)	2014	G 3.3 GDI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
U S	AZERA(HG)	2014	G 3.3 GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	AZERA(HG)	2014	G 3.3 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	AZERA(HG)	2014	G 3.3 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
U S	AZERA(HG)	2014	G 3.3 GDI	TMU [Telematics Unit]	√	√	√			
U S	AZERA(HG)	2014	G 3.3 GDI	CODE [Transmitter Code Saving]				√		0026
U S	AZERA(HG)	2013	G 3.3 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158

U S	AZERA(HG)	2013	G 3.3 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	AZERA(HG)	2013	G 3.3 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0014, 0037, 0062, 0103, 0104
U S	AZERA(HG)	2013	G 3.3 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	AZERA(HG)	2013	G 3.3 GDI	ODS [PODS - F]	√	√	√			
U S	AZERA(HG)	2013	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	AZERA(HG)	2013	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	AZERA(HG)	2013	G 3.3 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	AZERA(HG)	2013	G 3.3 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	AZERA(HG)	2013	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	AZERA(HG)	2013	G 3.3 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	AZERA(HG)	2013	G 3.3 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	AZERA(HG)	2013	G 3.3 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	AZERA(HG)	2013	G 3.3 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	AZERA(HG)	2013	G 3.3 GDI	CLU [Cluster Module]	√	√	√			
U S	AZERA(HG)	2013	G 3.3 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	AZERA(HG)	2013	G 3.3 GDI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
U S	AZERA(HG)	2013	G 3.3 GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	AZERA(HG)	2013	G 3.3 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	AZERA(HG)	2013	G 3.3 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
U S	AZERA(HG)	2013	G 3.3 GDI	TMU [Telematics Unit]	√	√	√			
U S	AZERA(HG)	2013	G 3.3 GDI	CODE [Transmitter Code Saving]				√		0026
U S	AZERA(HG)	2012	G 3.3 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
U S	AZERA(HG)	2012	G 3.3 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	AZERA(HG)	2012	G 3.3 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0014, 0037, 0062, 0103, 0104
U S	AZERA(HG)	2012	G 3.3 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	AZERA(HG)	2012	G 3.3 GDI	ODS [PODS - F]	√	√	√			
U S	AZERA(HG)	2012	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	AZERA(HG)	2012	G 3.3 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	AZERA(HG)	2012	G 3.3 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	AZERA(HG)	2012	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	AZERA(HG)	2012	G 3.3 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	AZERA(HG)	2012	G 3.3 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	AZERA(HG)	2012	G 3.3 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	AZERA(HG)	2012	G 3.3 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	AZERA(HG)	2012	G 3.3 GDI	CLU [Cluster Module]	√	√	√			
U S	AZERA(HG)	2012	G 3.3 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	AZERA(HG)	2012	G 3.3 GDI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
U S	AZERA(HG)	2012	G 3.3 GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	AZERA(HG)	2012	G 3.3 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	AZERA(HG)	2012	G 3.3 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
U S	AZERA(HG)	2012	G 3.3 GDI	TMU [Telematics Unit]	√	√	√			
U S	AZERA(HG)	2012	G 3.3 GDI	CODE [Transmitter Code Saving]				√		0026
U S	AZERA(TG)	2011	G 3.3 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0155, 0158
U S	AZERA(TG)	2011	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	AZERA(TG)	2011	G 3.3 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064

U S	AZERA(TG)	2011	G 3.3 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	AZERA(TG)	2011	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	AZERA(TG)	2011	G 3.3 DOHC	EPS [Electronic Power Steering]		√	√	√		
U S	AZERA(TG)	2011	G 3.3 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	AZERA(TG)	2011	G 3.3 DOHC	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090
U S	AZERA(TG)	2011	G 3.3 DOHC	IMMO [Immobilizer]				√		0147, 0112, 0138, 0091, 0102, 0086, 0147, 0091
U S	AZERA(TG)	2011	G 3.3 DOHC	BCM [Body Control Module]	√	√	√		√	
U S	AZERA(TG)	2011	G 3.3 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2011	G 3.3 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2011	G 3.3 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
U S	AZERA(TG)	2011	G 3.3 DOHC	OPTION [User Option]				√		
U S	AZERA(TG)	2011	G 3.3 DOHC	TILT [Tilt & Telescope]	√	√	√	√	√	
U S	AZERA(TG)	2011	G 3.3 DOHC	CODE [Transmitter Code Saving]				√		
U S	AZERA(TG)	2011	G 3.8 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0155, 0158
U S	AZERA(TG)	2011	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	AZERA(TG)	2011	G 3.8 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	AZERA(TG)	2011	G 3.8 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	AZERA(TG)	2011	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	AZERA(TG)	2011	G 3.8 DOHC	EPS [Electronic Power Steering]		√	√	√		
U S	AZERA(TG)	2011	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	AZERA(TG)	2011	G 3.8 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	AZERA(TG)	2011	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
U S	AZERA(TG)	2011	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2011	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2011	G 3.8 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
U S	AZERA(TG)	2011	G 3.8 DOHC	OPTION [User Option]				√		
U S	AZERA(TG)	2011	G 3.8 DOHC	TILT [Tilt & Telescope]	√	√	√	√	√	
U S	AZERA(TG)	2011	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		
U S	AZERA(TG)	2010	G 3.3 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0100, 0116, 0158, 0055, 0055, 0155
U S	AZERA(TG)	2010	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	AZERA(TG)	2010	G 3.3 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	AZERA(TG)	2010	G 3.3 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	AZERA(TG)	2010	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	AZERA(TG)	2010	G 3.3 DOHC	EPS [Electronic Power Steering]		√	√	√		
U S	AZERA(TG)	2010	G 3.3 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	AZERA(TG)	2010	G 3.3 DOHC	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090
U S	AZERA(TG)	2010	G 3.3 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	AZERA(TG)	2010	G 3.3 DOHC	BCM [Body Control Module]	√	√	√		√	
U S	AZERA(TG)	2010	G 3.3 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2010	G 3.3 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2010	G 3.3 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
U S	AZERA(TG)	2010	G 3.3 DOHC	OPTION [User Option]				√		

U S	AZERA(TG)	2010	G 3.3 DOHC	TILT [Tilt & Telescope]	√	√	√	√	√	
U S	AZERA(TG)	2010	G 3.3 DOHC	CODE [Transmitter Code Saving]				√		
U S	AZERA(TG)	2010	G 3.8 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0155, 0158
U S	AZERA(TG)	2010	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	AZERA(TG)	2010	G 3.8 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	AZERA(TG)	2010	G 3.8 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	AZERA(TG)	2010	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	AZERA(TG)	2010	G 3.8 DOHC	EPS [Electronic Power Steering]		√	√	√		
U S	AZERA(TG)	2010	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	AZERA(TG)	2010	G 3.8 DOHC	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090
U S	AZERA(TG)	2010	G 3.8 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	AZERA(TG)	2010	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
U S	AZERA(TG)	2010	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2010	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2010	G 3.8 DOHC	OPTION [User Option]				√		
U S	AZERA(TG)	2010	G 3.8 DOHC	TILT [Tilt & Telescope]	√	√	√	√	√	
U S	AZERA(TG)	2010	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		
U S	AZERA(TG)	2009	G 3.3 DOHC	ENGINE [Engine Control]	√	√	√	√	√	
U S	AZERA(TG)	2009	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	AZERA(TG)	2009	G 3.3 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	AZERA(TG)	2009	G 3.3 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	AZERA(TG)	2009	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	AZERA(TG)	2009	G 3.3 DOHC	EPS [Electronic Power Steering]		√	√	√		
U S	AZERA(TG)	2009	G 3.3 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	AZERA(TG)	2009	G 3.3 DOHC	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090
U S	AZERA(TG)	2009	G 3.3 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	AZERA(TG)	2009	G 3.3 DOHC	BCM [Body Control Module]	√	√	√		√	
U S	AZERA(TG)	2009	G 3.3 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2009	G 3.3 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2009	G 3.3 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
U S	AZERA(TG)	2009	G 3.3 DOHC	TILT [Tilt & Telescope]	√	√	√	√	√	
U S	AZERA(TG)	2009	G 3.3 DOHC	OPTION [User Option]				√		
U S	AZERA(TG)	2009	G 3.3 DOHC	CODE [Transmitter Code Saving (January 05 / 2009~)]				√		
U S	AZERA(TG)	2009	G 3.3 DOHC	CODE [Transmitter Code Saving (~January 04 / 2009)]				√		
U S	AZERA(TG)	2009	G 3.8 DOHC	ENGINE [Engine Control]	√	√	√	√	√	
U S	AZERA(TG)	2009	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	AZERA(TG)	2009	G 3.8 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	AZERA(TG)	2009	G 3.8 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	AZERA(TG)	2009	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	AZERA(TG)	2009	G 3.8 DOHC	EPS [Electronic Power Steering]		√	√	√		

U S	AZERA(TG)	2009	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	AZERA(TG)	2009	G 3.8 DOHC	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090
U S	AZERA(TG)	2009	G 3.8 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	AZERA(TG)	2009	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
U S	AZERA(TG)	2009	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2009	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2009	G 3.8 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
U S	AZERA(TG)	2009	G 3.8 DOHC	TILT [Tilt & Telescope]	√	√	√	√	√	
U S	AZERA(TG)	2009	G 3.8 DOHC	OPTION [User Option]				√		
U S	AZERA(TG)	2009	G 3.8 DOHC	CODE [Transmitter Code Saving (~January 04 / 2009)]				√		
U S	AZERA(TG)	2008	G 3.3 DOHC	ENGINE [Engine Control]	√	√	√	√	√	
U S	AZERA(TG)	2008	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	AZERA(TG)	2008	G 3.3 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	AZERA(TG)	2008	G 3.3 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	AZERA(TG)	2008	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	AZERA(TG)	2008	G 3.3 DOHC	EPS [Electronic Power Steering]		√	√	√		
U S	AZERA(TG)	2008	G 3.3 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	AZERA(TG)	2008	G 3.3 DOHC	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090
U S	AZERA(TG)	2008	G 3.3 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	AZERA(TG)	2008	G 3.3 DOHC	BCM [Body Control Module]	√	√	√		√	
U S	AZERA(TG)	2008	G 3.3 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2008	G 3.3 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2008	G 3.3 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
U S	AZERA(TG)	2008	G 3.3 DOHC	OPTION [User Option]				√		
U S	AZERA(TG)	2008	G 3.3 DOHC	TILT [Tilt & Telescope]	√	√	√	√	√	
U S	AZERA(TG)	2008	G 3.3 DOHC	CODE [Transmitter Code Saving]				√		
U S	AZERA(TG)	2008	G 3.8 DOHC	ENGINE [Engine Control]	√	√	√	√	√	
U S	AZERA(TG)	2008	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	AZERA(TG)	2008	G 3.8 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	AZERA(TG)	2008	G 3.8 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	AZERA(TG)	2008	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	AZERA(TG)	2008	G 3.8 DOHC	EPS [Electronic Power Steering]		√	√	√		
U S	AZERA(TG)	2008	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	AZERA(TG)	2008	G 3.8 DOHC	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090
U S	AZERA(TG)	2008	G 3.8 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	AZERA(TG)	2008	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
U S	AZERA(TG)	2008	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2008	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2008	G 3.8 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
U S	AZERA(TG)	2008	G 3.8 DOHC	OPTION [User Option]				√		
U S	AZERA(TG)	2008	G 3.8 DOHC	TILT [Tilt & Telescope]	√	√	√	√	√	

U S	AZERA(TG)	2008	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		
U S	AZERA(TG)	2007	G 3.3 DOHC	ENGINE [Engine Control]	√	√	√	√	√	
U S	AZERA(TG)	2007	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	AZERA(TG)	2007	G 3.3 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	AZERA(TG)	2007	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	AZERA(TG)	2007	G 3.3 DOHC	EPS [Electronic Power Steering]		√	√	√		
U S	AZERA(TG)	2007	G 3.3 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	AZERA(TG)	2007	G 3.3 DOHC	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090
U S	AZERA(TG)	2007	G 3.3 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	AZERA(TG)	2007	G 3.3 DOHC	BCM [Body Control Module]	√	√	√		√	
U S	AZERA(TG)	2007	G 3.3 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2007	G 3.3 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2007	G 3.3 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
U S	AZERA(TG)	2007	G 3.3 DOHC	OPTION [User Option]				√		
U S	AZERA(TG)	2007	G 3.3 DOHC	TILT [Tilt & Telescope]	√	√	√	√	√	
U S	AZERA(TG)	2007	G 3.3 DOHC	CODE [Transmitter Code Saving]				√		
U S	AZERA(TG)	2007	G 3.8 DOHC	ENGINE [Engine Control]	√	√	√	√	√	
U S	AZERA(TG)	2007	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	AZERA(TG)	2007	G 3.8 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	AZERA(TG)	2007	G 3.8 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	AZERA(TG)	2007	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	AZERA(TG)	2007	G 3.8 DOHC	EPS [Electronic Power Steering]		√	√	√		
U S	AZERA(TG)	2007	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	AZERA(TG)	2007	G 3.8 DOHC	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090
U S	AZERA(TG)	2007	G 3.8 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	AZERA(TG)	2007	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
U S	AZERA(TG)	2007	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2007	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2007	G 3.8 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
U S	AZERA(TG)	2007	G 3.8 DOHC	OPTION [User Option]				√		
U S	AZERA(TG)	2007	G 3.8 DOHC	TILT [Tilt & Telescope]	√	√	√	√	√	
U S	AZERA(TG)	2007	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		
U S	AZERA(TG)	2006	G 3.3 DOHC	ENGINE [Engine Control]	√	√	√	√	√	
U S	AZERA(TG)	2006	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	AZERA(TG)	2006	G 3.3 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	AZERA(TG)	2006	G 3.3 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	AZERA(TG)	2006	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	AZERA(TG)	2006	G 3.3 DOHC	EPS [Electronic Power Steering]		√	√	√		
U S	AZERA(TG)	2006	G 3.3 DOHC	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090
U S	AZERA(TG)	2006	G 3.3 DOHC	IMMO [Immobilizer]				√		
U S	AZERA(TG)	2006	G 3.3 DOHC	OPTION [User Option]				√		
U S	AZERA(TG)	2006	G 3.3 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	

U S	AZERA(TG)	2006	G 3.3 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2006	G 3.3 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2006	G 3.3 DOHC	BCM [Body Control Module]	√	√	√		√	
U S	AZERA(TG)	2006	G 3.3 DOHC	CODE [Transmitter Code Saving]				√		
U S	AZERA(TG)	2006	G 3.8 DOHC	ENGINE [Engine Control]	√	√	√	√	√	
U S	AZERA(TG)	2006	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	AZERA(TG)	2006	G 3.8 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	AZERA(TG)	2006	G 3.8 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	AZERA(TG)	2006	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	AZERA(TG)	2006	G 3.8 DOHC	EPS [Electronic Power Steering]		√	√	√		
U S	AZERA(TG)	2006	G 3.8 DOHC	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090
U S	AZERA(TG)	2006	G 3.8 DOHC	IMMO [Immobilizer]				√		
U S	AZERA(TG)	2006	G 3.8 DOHC	OPTION [User Option]				√		
U S	AZERA(TG)	2006	G 3.8 DOHC	TILT [Tilt & Telescope]	√	√	√	√	√	
U S	AZERA(TG)	2006	G 3.8 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
U S	AZERA(TG)	2006	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2006	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
U S	AZERA(TG)	2006	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
U S	AZERA(TG)	2006	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		
U S	ELANTRA COUPE(JK)	2015	G 1.8 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0120, 0158
U S	ELANTRA COUPE(JK)	2015	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA COUPE(JK)	2015	G 1.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	ELANTRA COUPE(JK)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA COUPE(JK)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA COUPE(JK)	2015	G 1.8 MPI	ODS [Occupant Detection Sensor]	√	√	√	√		0156
U S	ELANTRA COUPE(JK)	2015	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA COUPE(JK)	2015	G 1.8 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA COUPE(JK)	2015	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA COUPE(JK)	2015	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	ELANTRA COUPE(JK)	2015	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA COUPE(JK)	2015	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA COUPE(JK)	2015	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	

U S	ELANTRA COUPE(JK)	2015	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA COUPE(JK)	2015	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA COUPE(JK)	2015	G 2.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	ELANTRA COUPE(JK)	2015	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA COUPE(JK)	2015	G 2.0 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	ELANTRA COUPE(JK)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA COUPE(JK)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA COUPE(JK)	2015	G 2.0 GDI	ODS [Occupant Detection Sensor]	√	√	√	√		0156
U S	ELANTRA COUPE(JK)	2015	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA COUPE(JK)	2015	G 2.0 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA COUPE(JK)	2015	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA COUPE(JK)	2015	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	ELANTRA COUPE(JK)	2015	G 2.0 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA COUPE(JK)	2015	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA COUPE(JK)	2015	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA COUPE(JK)	2015	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA COUPE(JK)	2015	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA COUPE(JK)	2014	G 1.8 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0120, 0158
U S	ELANTRA COUPE(JK)	2014	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA COUPE(JK)	2014	G 1.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	ELANTRA COUPE(JK)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA COUPE(JK)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA COUPE(JK)	2014	G 1.8 MPI	ODS [Occupant Detection Sensor]	√	√	√	√		0156
U S	ELANTRA COUPE(JK)	2014	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	

U S	ELANTRA COUPE(JK)	2014	G 1.8 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA COUPE(JK)	2014	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA COUPE(JK)	2014	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	ELANTRA COUPE(JK)	2014	G 1.8 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA COUPE(JK)	2014	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA COUPE(JK)	2014	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA COUPE(JK)	2014	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA COUPE(JK)	2014	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA COUPE(JK)	2014	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA COUPE(JK)	2014	G 2.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	ELANTRA COUPE(JK)	2014	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA COUPE(JK)	2014	G 2.0 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	ELANTRA COUPE(JK)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA COUPE(JK)	2014	G 2.0 GDI	ODS [Occupant Detection Sensor]	√	√	√	√		0156
U S	ELANTRA COUPE(JK)	2014	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA COUPE(JK)	2014	G 2.0 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA COUPE(JK)	2014	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA COUPE(JK)	2014	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	ELANTRA COUPE(JK)	2014	G 2.0 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA COUPE(JK)	2014	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA COUPE(JK)	2014	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA COUPE(JK)	2014	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA COUPE(JK)	2014	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA COUPE(JK)	2014	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026

U S	ELANTRA COUPE(JK)	2013	G 1.8 MPI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0120, 0158
U S	ELANTRA COUPE(JK)	2013	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA COUPE(JK)	2013	G 1.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	ELANTRA COUPE(JK)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA COUPE(JK)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA COUPE(JK)	2013	G 1.8 MPI	ODS [Occupant Detection Sensor]	√	√	√	√		0156
U S	ELANTRA COUPE(JK)	2013	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA COUPE(JK)	2013	G 1.8 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA COUPE(JK)	2013	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA COUPE(JK)	2013	G 1.8 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA COUPE(JK)	2013	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA COUPE(JK)	2013	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA COUPE(JK)	2013	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA COUPE(JK)	2013	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA COUPE(JK)	2013	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA GT(GD)	2017	G 1.8 MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158, 0055
U S	ELANTRA GT(GD)	2017	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA GT(GD)	2017	G 1.8 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
U S	ELANTRA GT(GD)	2017	G 1.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	ELANTRA GT(GD)	2017	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA GT(GD)	2017	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA GT(GD)	2017	G 1.8 MPI	ODS [Weight Classification System]	√	√	√	√		0156
U S	ELANTRA GT(GD)	2017	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2017	G 1.8 MPI	EPS [Motor driven Power Steering]	√	√	√	√		
U S	ELANTRA GT(GD)	2017	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA GT(GD)	2017	G 1.8 MPI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
U S	ELANTRA GT(GD)	2017	G 1.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	ELANTRA GT(GD)	2017	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA GT(GD)	2017	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2017	G 1.8 MPI	SERVICE [Service Reminder]	√					
U S	ELANTRA GT(GD)	2017	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			

U S	ELANTRA GT(GD)	2017	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2017	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2017	G 1.8 MPI	TMU [Telematics Unit]	√	√	√			
U S	ELANTRA GT(GD)	2017	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA GT(GD)	2017	G 2.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	ELANTRA GT(GD)	2017	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA GT(GD)	2017	G 2.0 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	ELANTRA GT(GD)	2017	G 2.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
U S	ELANTRA GT(GD)	2017	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA GT(GD)	2017	G 2.0 GDI	ODS [Weight Classification System]	√	√	√	√		0156
U S	ELANTRA GT(GD)	2017	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2017	G 2.0 GDI	EPS [Motor driven Power Steering]	√	√	√	√		
U S	ELANTRA GT(GD)	2017	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA GT(GD)	2017	G 2.0 GDI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
U S	ELANTRA GT(GD)	2017	G 2.0 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	ELANTRA GT(GD)	2017	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA GT(GD)	2017	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2017	G 2.0 GDI	SERVICE [Service Reminder]	√					
U S	ELANTRA GT(GD)	2017	G 2.0 GDI	CLU_VC [Cluster Variant Coding]	√	√	√			
U S	ELANTRA GT(GD)	2017	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2017	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2017	G 2.0 GDI	TMU [Telematics Unit]	√	√	√			
U S	ELANTRA GT(GD)	2017	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA GT(GD)	2016	G 1.8 MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158, 0055
U S	ELANTRA GT(GD)	2016	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA GT(GD)	2016	G 1.8 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
U S	ELANTRA GT(GD)	2016	G 1.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	ELANTRA GT(GD)	2016	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA GT(GD)	2016	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA GT(GD)	2016	G 1.8 MPI	ODS [Weight Classification System]	√	√	√	√		0156
U S	ELANTRA GT(GD)	2016	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2016	G 1.8 MPI	EPS [Motor driven Power Steering]	√	√	√	√		
U S	ELANTRA GT(GD)	2016	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA GT(GD)	2016	G 1.8 MPI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
U S	ELANTRA GT(GD)	2016	G 1.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	ELANTRA GT(GD)	2016	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA GT(GD)	2016	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2016	G 1.8 MPI	SERVICE [Service Reminder]	√					
U S	ELANTRA GT(GD)	2016	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
U S	ELANTRA GT(GD)	2016	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2016	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2016	G 1.8 MPI	TMU [Telematics Unit]	√	√	√			

U S	ELANTRA GT(GD)	2016	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA GT(GD)	2016	G 2.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	ELANTRA GT(GD)	2016	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA GT(GD)	2016	G 2.0 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	ELANTRA GT(GD)	2016	G 2.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
U S	ELANTRA GT(GD)	2016	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA GT(GD)	2016	G 2.0 GDI	ODS [Weight Classification System]	√	√	√	√		0156
U S	ELANTRA GT(GD)	2016	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2016	G 2.0 GDI	EPS [Motor driven Power Steering]	√	√	√	√		
U S	ELANTRA GT(GD)	2016	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA GT(GD)	2016	G 2.0 GDI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
U S	ELANTRA GT(GD)	2016	G 2.0 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	ELANTRA GT(GD)	2016	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA GT(GD)	2016	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2016	G 2.0 GDI	SERVICE [Service Reminder]	√					
U S	ELANTRA GT(GD)	2016	G 2.0 GDI	CLU_VC [Cluster Variant Coding]	√	√	√			
U S	ELANTRA GT(GD)	2016	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2016	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2016	G 2.0 GDI	TMU [Telematics Unit]	√	√	√			
U S	ELANTRA GT(GD)	2016	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA GT(GD)	2015	G 1.8 MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158, 0055
U S	ELANTRA GT(GD)	2015	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA GT(GD)	2015	G 1.8 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
U S	ELANTRA GT(GD)	2015	G 1.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	ELANTRA GT(GD)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA GT(GD)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA GT(GD)	2015	G 1.8 MPI	ODS [Weight Classification System]	√	√	√	√		0156
U S	ELANTRA GT(GD)	2015	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2015	G 1.8 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA GT(GD)	2015	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA GT(GD)	2015	G 1.8 MPI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
U S	ELANTRA GT(GD)	2015	G 1.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	ELANTRA GT(GD)	2015	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA GT(GD)	2015	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2015	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
U S	ELANTRA GT(GD)	2015	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2015	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2015	G 1.8 MPI	TMU [Telematics Unit]	√	√	√			
U S	ELANTRA GT(GD)	2015	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA GT(GD)	2015	G 2.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	ELANTRA GT(GD)	2015	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121

U S	ELANTRA GT(GD)	2015	G 2.0 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	ELANTRA GT(GD)	2015	G 2.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
U S	ELANTRA GT(GD)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA GT(GD)	2015	G 2.0 GDI	ODS [Weight Classification System]	√	√	√	√		0156
U S	ELANTRA GT(GD)	2015	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2015	G 2.0 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA GT(GD)	2015	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA GT(GD)	2015	G 2.0 GDI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
U S	ELANTRA GT(GD)	2015	G 2.0 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	ELANTRA GT(GD)	2015	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA GT(GD)	2015	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2015	G 2.0 GDI	CLU_VC [Cluster Variant Coding]	√	√	√			
U S	ELANTRA GT(GD)	2015	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2015	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2015	G 2.0 GDI	TMU [Telematics Unit]	√	√	√			
U S	ELANTRA GT(GD)	2015	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA GT(GD)	2014	G 1.8 MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158, 0055
U S	ELANTRA GT(GD)	2014	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA GT(GD)	2014	G 1.8 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
U S	ELANTRA GT(GD)	2014	G 1.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	ELANTRA GT(GD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA GT(GD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA GT(GD)	2014	G 1.8 MPI	ODS [Weight Classification System]	√	√	√	√		0156
U S	ELANTRA GT(GD)	2014	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2014	G 1.8 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA GT(GD)	2014	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA GT(GD)	2014	G 1.8 MPI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
U S	ELANTRA GT(GD)	2014	G 1.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	ELANTRA GT(GD)	2014	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA GT(GD)	2014	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2014	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
U S	ELANTRA GT(GD)	2014	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2014	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2014	G 1.8 MPI	TMU [Telematics Unit]	√	√	√			
U S	ELANTRA GT(GD)	2014	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA GT(GD)	2014	G 2.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	ELANTRA GT(GD)	2014	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA GT(GD)	2014	G 2.0 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	ELANTRA GT(GD)	2014	G 2.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
U S	ELANTRA GT(GD)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA GT(GD)	2014	G 2.0 GDI	ODS [Weight Classification System]	√	√	√	√		0156
U S	ELANTRA GT(GD)	2014	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	

U S	ELANTRA GT(GD)	2014	G 2.0 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA GT(GD)	2014	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA GT(GD)	2014	G 2.0 GDI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
U S	ELANTRA GT(GD)	2014	G 2.0 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	ELANTRA GT(GD)	2014	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA GT(GD)	2014	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2014	G 2.0 GDI	CLU_VC [Cluster Variant Coding]	√	√	√			
U S	ELANTRA GT(GD)	2014	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2014	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2014	G 2.0 GDI	TMU [Telematics Unit]	√	√	√			
U S	ELANTRA GT(GD)	2014	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA GT(GD)	2013	G 1.8 MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158, 0055
U S	ELANTRA GT(GD)	2013	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA GT(GD)	2013	G 1.8 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	0019, 0037, 0062
U S	ELANTRA GT(GD)	2013	G 1.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	ELANTRA GT(GD)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA GT(GD)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA GT(GD)	2013	G 1.8 MPI	ODS [Weight Classification System]	√	√	√	√		0156
U S	ELANTRA GT(GD)	2013	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2013	G 1.8 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA GT(GD)	2013	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA GT(GD)	2013	G 1.8 MPI	AHLS [Adaptive Headlamp Lighting System]	√	√	√	√		0090
U S	ELANTRA GT(GD)	2013	G 1.8 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	ELANTRA GT(GD)	2013	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA GT(GD)	2013	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2013	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
U S	ELANTRA GT(GD)	2013	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2013	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA GT(GD)	2013	G 1.8 MPI	TMU [Telematics Unit]	√	√	√			
U S	ELANTRA GT(GD)	2013	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA TOURING(FD)	2012	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0158, 0055
U S	ELANTRA TOURING(FD)	2012	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA TOURING(FD)	2012	G 2.0 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	ELANTRA TOURING(FD)	2012	G 2.0 MPI	AIRBAG [Airbag Control Unit]	√	√	√			0109
U S	ELANTRA TOURING(FD)	2012	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA TOURING(FD)	2012	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	ELANTRA TOURING(FD)	2012	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	

U S	ELANTRA TOURING(FD)	2012	G 2.0 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA TOURING(FD)	2012	G 2.0 MPI	BCM [Body Control Module]	√			√	√	
U S	ELANTRA TOURING(FD)	2012	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA TOURING(FD)	2011	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0158, 0055
U S	ELANTRA TOURING(FD)	2011	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA TOURING(FD)	2011	G 2.0 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	ELANTRA TOURING(FD)	2011	G 2.0 MPI	ODS [Weight Classification]	√	√	√	√		0156
U S	ELANTRA TOURING(FD)	2011	G 2.0 MPI	AIRBAG [Airbag Control Unit]	√	√	√			0109
U S	ELANTRA TOURING(FD)	2011	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA TOURING(FD)	2011	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	ELANTRA TOURING(FD)	2011	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	ELANTRA TOURING(FD)	2011	G 2.0 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA TOURING(FD)	2011	G 2.0 MPI	BCM [Body Control Module]	√			√	√	
U S	ELANTRA TOURING(FD)	2011	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA TOURING(FD)	2010	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0158, 0055
U S	ELANTRA TOURING(FD)	2010	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA TOURING(FD)	2010	G 2.0 MPI	ODS [Weight Classification]	√	√	√	√		0156
U S	ELANTRA TOURING(FD)	2010	G 2.0 MPI	AIRBAG [Airbag Control Unit]	√	√	√			0109
U S	ELANTRA TOURING(FD)	2010	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA TOURING(FD)	2010	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	ELANTRA TOURING(FD)	2010	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	ELANTRA TOURING(FD)	2010	G 2.0 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA TOURING(FD)	2010	G 2.0 MPI	BCM [Body Control Module]	√			√	√	
U S	ELANTRA TOURING(FD)	2010	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026

U S	ELANTRA TOURING(FD)	2009	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0158, 0055
U S	ELANTRA TOURING(FD)	2009	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA TOURING(FD)	2009	G 2.0 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	
U S	ELANTRA TOURING(FD)	2009	G 2.0 MPI	ODS [Weight Classification]	√	√	√	√		0156
U S	ELANTRA TOURING(FD)	2009	G 2.0 MPI	AIRBAG [Airbag Control Unit]	√	√	√			0109
U S	ELANTRA TOURING(FD)	2009	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA TOURING(FD)	2009	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	ELANTRA TOURING(FD)	2009	G 2.0 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	ELANTRA TOURING(FD)	2009	G 2.0 MPI	IMMO [Immobilizer]					√	0086, 0091, 0102, 0112, 0138
U S	ELANTRA TOURING(FD)	2009	G 2.0 MPI	BCM [Body Control Module]	√				√	√
U S	ELANTRA TOURING(FD)	2009	G 2.0 MPI	CODE [Transmitter Code Saving]					√	0026
U S	ELANTRA(AD)	2017	G 1.6 T-GDI	ENGINE [Engine Control]	√	√	√	√		0015, 0055, 0072, 0116, 0158
U S	ELANTRA(AD)	2017	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		0022, 0025
U S	ELANTRA(AD)	2017	G 1.6 T-GDI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
U S	ELANTRA(AD)	2017	G 1.6 T-GDI	OCS [Occupant Classification System]	√	√	√	√		
U S	ELANTRA(AD)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA(AD)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA(AD)	2017	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA(AD)	2017	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	ELANTRA(AD)	2017	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	ELANTRA(AD)	2017	G 1.6 T-GDI	PGS [Parking Guide System]	√	√	√	√		
U S	ELANTRA(AD)	2017	G 1.6 T-GDI	MFC [Multi Function Camera]	√	√	√	√		
U S	ELANTRA(AD)	2017	G 1.6 T-GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
U S	ELANTRA(AD)	2017	G 1.6 T-GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
U S	ELANTRA(AD)	2017	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	ELANTRA(AD)	2017	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA(AD)	2017	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA(AD)	2017	G 1.6 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	ELANTRA(AD)	2017	G 1.6 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	ELANTRA(AD)	2017	G 1.6 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	ELANTRA(AD)	2017	G 1.6 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	ELANTRA(AD)	2017	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA(AD)	2017	G 1.6 T-GDI	CODE [Transmitter Code Saving]					√	0026
U S	ELANTRA(AD)	2017	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0051, 0055, 0116, 0120, 0158
U S	ELANTRA(AD)	2017	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0121

U S	ELANTRA(AD)	2017	G 2.0 MPI	ABSESP [ABS / ESP]	√	√	√	√	√	0064
U S	ELANTRA(AD)	2017	G 2.0 MPI	SCCAEB [SCC / AEB]	√	√	√	√		
U S	ELANTRA(AD)	2017	G 2.0 MPI	OCS [Occupant Classification System]	√	√	√	√		
U S	ELANTRA(AD)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA(AD)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA(AD)	2017	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA(AD)	2017	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	ELANTRA(AD)	2017	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	ELANTRA(AD)	2017	G 2.0 MPI	PGS [Parking Guide System]	√	√	√	√		
U S	ELANTRA(AD)	2017	G 2.0 MPI	MFC [Multi Function Camera]	√	√	√	√		
U S	ELANTRA(AD)	2017	G 2.0 MPI	BSD [Blind Spot Detection]	√	√	√	√	√	
U S	ELANTRA(AD)	2017	G 2.0 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
U S	ELANTRA(AD)	2017	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	ELANTRA(AD)	2017	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA(AD)	2017	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA(AD)	2017	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	ELANTRA(AD)	2017	G 2.0 MPI	DDM [Driver Door Module]	√	√	√	√	√	
U S	ELANTRA(AD)	2017	G 2.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	ELANTRA(AD)	2017	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA(AD)	2017	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA(ADA)	2017	G 1.4 T-GDI	ENGINE [Engine Control]	√	√	√	√		0015, 0055, 0072, 0116, 0158
U S	ELANTRA(ADA)	2017	G 1.4 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		0022, 0025
U S	ELANTRA(ADA)	2017	G 1.4 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	ELANTRA(ADA)	2017	G 1.4 T-GDI	SCCAEB [SCC / AEB]	√	√	√	√		
U S	ELANTRA(ADA)	2017	G 1.4 T-GDI	OCS [Occupant Classification System]	√	√	√	√		
U S	ELANTRA(ADA)	2017	G 1.4 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA(ADA)	2017	G 1.4 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA(ADA)	2017	G 1.4 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA(ADA)	2017	G 1.4 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	ELANTRA(ADA)	2017	G 1.4 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	ELANTRA(ADA)	2017	G 1.4 T-GDI	PGS [Parking Guide System]	√	√	√	√		
U S	ELANTRA(ADA)	2017	G 1.4 T-GDI	MFC [Multi Function Camera]	√	√	√	√		
U S	ELANTRA(ADA)	2017	G 1.4 T-GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
U S	ELANTRA(ADA)	2017	G 1.4 T-GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
U S	ELANTRA(ADA)	2017	G 1.4 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	ELANTRA(ADA)	2017	G 1.4 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA(ADA)	2017	G 1.4 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA(ADA)	2017	G 1.4 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	ELANTRA(ADA)	2017	G 1.4 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	ELANTRA(ADA)	2017	G 1.4 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	ELANTRA(ADA)	2017	G 1.4 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	ELANTRA(ADA)	2017	G 1.4 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA(ADA)	2017	G 1.4 T-GDI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA(ADA)	2017	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0051, 0055, 0116, 0120, 0158

U S	ELANTRA(ADA)	2017	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√		0007, 0121
U S	ELANTRA(ADA)	2017	G 2.0 MPI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	ELANTRA(ADA)	2017	G 2.0 MPI	SCCAEB [SCC / AEB]	√	√	√	√		
U S	ELANTRA(ADA)	2017	G 2.0 MPI	OCS [Occupant Classification System]	√	√	√	√		
U S	ELANTRA(ADA)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA(ADA)	2017	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA(ADA)	2017	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA(ADA)	2017	G 2.0 MPI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	ELANTRA(ADA)	2017	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	ELANTRA(ADA)	2017	G 2.0 MPI	PGS [Parking Guide System]	√	√	√	√		
U S	ELANTRA(ADA)	2017	G 2.0 MPI	MFC [Multi Function Camera]	√	√	√	√		
U S	ELANTRA(ADA)	2017	G 2.0 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
U S	ELANTRA(ADA)	2017	G 2.0 MPI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	ELANTRA(ADA)	2017	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA(ADA)	2017	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA(ADA)	2017	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	ELANTRA(ADA)	2017	G 2.0 MPI	DDM [Driver Door Module]	√	√	√	√	√	
U S	ELANTRA(ADA)	2017	G 2.0 MPI	ADM [Assist Door Module]	√	√	√	√	√	
U S	ELANTRA(ADA)	2017	G 2.0 MPI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	ELANTRA(ADA)	2017	G 2.0 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA(ADA)	2017	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA(HD)	2010	G 2.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055, 0116, 0120, 0158
U S	ELANTRA(HD)	2010	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA(HD)	2010	G 2.0 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	ELANTRA(HD)	2010	G 2.0 DOHC	ODS [Weight Classification]	√	√	√	√		0156
U S	ELANTRA(HD)	2010	G 2.0 DOHC	AIRBAG [Airbag Control Unit]	√	√	√			0109
U S	ELANTRA(HD)	2010	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA(HD)	2010	G 2.0 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0094
U S	ELANTRA(HD)	2010	G 2.0 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	ELANTRA(HD)	2010	G 2.0 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA(HD)	2010	G 2.0 DOHC	BCM [Body Control Module]	√			√	√	
U S	ELANTRA(HD)	2010	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA(HD)	2009	G 2.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055, 0116, 0120, 0158
U S	ELANTRA(HD)	2009	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA(HD)	2009	G 2.0 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	ELANTRA(HD)	2009	G 2.0 DOHC	ODS [Weight Classification]	√	√	√	√		0156
U S	ELANTRA(HD)	2009	G 2.0 DOHC	AIRBAG [Airbag Control Unit]	√	√	√			0109
U S	ELANTRA(HD)	2009	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA(HD)	2009	G 2.0 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0094
U S	ELANTRA(HD)	2009	G 2.0 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	ELANTRA(HD)	2009	G 2.0 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA(HD)	2009	G 2.0 DOHC	BCM [Body Control Module]	√			√	√	
U S	ELANTRA(HD)	2009	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA(HD)	2008	G 2.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055, 0116, 0120, 0158
U S	ELANTRA(HD)	2008	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121

U S	ELANTRA(HD)	2008	G 2.0 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	ELANTRA(HD)	2008	G 2.0 DOHC	ODS [Weight Classification]	√	√	√	√		0156
U S	ELANTRA(HD)	2008	G 2.0 DOHC	AIRBAG [Airbag Control Unit]	√	√	√			0109
U S	ELANTRA(HD)	2008	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA(HD)	2008	G 2.0 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0094
U S	ELANTRA(HD)	2008	G 2.0 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA(HD)	2008	G 2.0 DOHC	BCM [Body Control Module]	√			√	√	
U S	ELANTRA(HD)	2008	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA(HD)	2007	G 2.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055, 0116, 0120, 0158
U S	ELANTRA(HD)	2007	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA(HD)	2007	G 2.0 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	ELANTRA(HD)	2007	G 2.0 DOHC	ODS [Weight Classification]	√	√	√	√		0156
U S	ELANTRA(HD)	2007	G 2.0 DOHC	AIRBAG [Airbag Control Unit]	√	√	√			0109
U S	ELANTRA(HD)	2007	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA(HD)	2007	G 2.0 DOHC	EPS [Electronic Power Steering]	√	√	√	√		0094
U S	ELANTRA(HD)	2007	G 2.0 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	ELANTRA(HD)	2007	G 2.0 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA(HD)	2007	G 2.0 DOHC	BCM [Body Control Module]	√			√	√	
U S	ELANTRA(HD)	2007	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA(J1)	1995	G 1.6 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	ELANTRA(J1)	1995	G 1.6 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ELANTRA(J1)	1995	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
U S	ELANTRA(J1)	1995	G 1.8 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	ELANTRA(J1)	1995	G 1.8 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ELANTRA(J1)	1995	G 1.8 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
U S	ELANTRA(J1)	1994	G 1.6 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	ELANTRA(J1)	1994	G 1.6 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ELANTRA(J1)	1994	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
U S	ELANTRA(J1)	1994	G 1.8 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	ELANTRA(J1)	1994	G 1.8 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ELANTRA(J1)	1994	G 1.8 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
U S	ELANTRA(J1)	1993	G 1.6 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	ELANTRA(J1)	1993	G 1.6 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ELANTRA(J1)	1993	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
U S	ELANTRA(J1)	1993	G 1.8 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	ELANTRA(J1)	1993	G 1.8 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ELANTRA(J1)	1993	G 1.8 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
U S	ELANTRA(J1)	1992	G 1.6 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	ELANTRA(J1)	1992	G 1.6 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ELANTRA(J1)	1992	G 1.6 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
U S	ELANTRA(MD)	2016	G 1.8 MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158, 0055
U S	ELANTRA(MD)	2016	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA(MD)	2016	G 1.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	ELANTRA(MD)	2016	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			

U S	ELANTRA(MD)	2016	G 1.8 MPI	ODS [Occupant Detection Sensor]	√	√	√	√		0156
U S	ELANTRA(MD)	2016	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA(MD)	2016	G 1.8 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA(MD)	2016	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA(MD)	2016	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	ELANTRA(MD)	2016	G 1.8 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA(MD)	2016	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA(MD)	2016	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
U S	ELANTRA(MD)	2016	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA(MD)	2016	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA(MD)	2016	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA(MD)	2016	G 1.8 MPI	TMU [Telematics Unit]	√	√	√			
U S	ELANTRA(MD)	2016	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA(MD)	2016	G 2.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	ELANTRA(MD)	2016	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA(MD)	2016	G 2.0 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	ELANTRA(MD)	2016	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA(MD)	2016	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA(MD)	2016	G 2.0 GDI	ODS [Occupant Detection Sensor]	√	√	√	√		0156
U S	ELANTRA(MD)	2016	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA(MD)	2016	G 2.0 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA(MD)	2016	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA(MD)	2016	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	ELANTRA(MD)	2016	G 2.0 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA(MD)	2016	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA(MD)	2016	G 2.0 GDI	CLU_VC [Cluster Variant Coding]	√	√	√			
U S	ELANTRA(MD)	2016	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA(MD)	2016	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA(MD)	2016	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA(MD)	2016	G 2.0 GDI	TMU [Telematics Unit]	√	√	√			
U S	ELANTRA(MD)	2016	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA(MD)	2015	G 1.8 MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158, 0055
U S	ELANTRA(MD)	2015	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA(MD)	2015	G 1.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	ELANTRA(MD)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA(MD)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA(MD)	2015	G 1.8 MPI	ODS [Occupant Detection Sensor]	√	√	√	√		0156
U S	ELANTRA(MD)	2015	G 1.8 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA(MD)	2015	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA(MD)	2015	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	ELANTRA(MD)	2015	G 1.8 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA(MD)	2015	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA(MD)	2015	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			

U S	ELANTRA(MD)	2015	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA(MD)	2015	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA(MD)	2015	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA(MD)	2015	G 1.8 MPI	TMU [Telematics Unit]	√	√	√			
U S	ELANTRA(MD)	2015	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA(MD)	2015	G 2.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	ELANTRA(MD)	2015	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA(MD)	2015	G 2.0 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	ELANTRA(MD)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA(MD)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA(MD)	2015	G 2.0 GDI	ODS [Occupant Detection Sensor]	√	√	√	√		0156
U S	ELANTRA(MD)	2015	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA(MD)	2015	G 2.0 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA(MD)	2015	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA(MD)	2015	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	ELANTRA(MD)	2015	G 2.0 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA(MD)	2015	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA(MD)	2015	G 2.0 GDI	CLU_VC [Cluster Variant Coding]	√	√	√			
U S	ELANTRA(MD)	2015	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA(MD)	2015	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA(MD)	2015	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA(MD)	2015	G 2.0 GDI	TMU [Telematics Unit]	√	√	√			
U S	ELANTRA(MD)	2015	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA(MD)	2014	G 1.8 MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158, 0055
U S	ELANTRA(MD)	2014	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA(MD)	2014	G 1.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	ELANTRA(MD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA(MD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA(MD)	2014	G 1.8 MPI	ODS [Occupant Detection Sensor]	√	√	√	√		0156
U S	ELANTRA(MD)	2014	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA(MD)	2014	G 1.8 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA(MD)	2014	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA(MD)	2014	G 1.8 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA(MD)	2014	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA(MD)	2014	G 1.8 MPI	CLU_VC [Cluster Variant Coding]	√	√	√			
U S	ELANTRA(MD)	2014	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA(MD)	2014	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA(MD)	2014	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA(MD)	2014	G 1.8 MPI	TMU [Telematics Unit]	√	√	√			
U S	ELANTRA(MD)	2014	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA(MD)	2014	G 2.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	ELANTRA(MD)	2014	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121

U S	ELANTRA(MD)	2014	G 2.0 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	ELANTRA(MD)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA(MD)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA(MD)	2014	G 2.0 GDI	ODS [Occupant Detection Sensor]	√	√	√	√		0156
U S	ELANTRA(MD)	2014	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA(MD)	2014	G 2.0 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA(MD)	2014	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA(MD)	2014	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	ELANTRA(MD)	2014	G 2.0 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA(MD)	2014	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA(MD)	2014	G 2.0 GDI	CLU_VC [Cluster Variant Coding]	√	√	√			
U S	ELANTRA(MD)	2014	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA(MD)	2014	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA(MD)	2014	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA(MD)	2014	G 2.0 GDI	TMU [Telematics Unit]	√	√	√			
U S	ELANTRA(MD)	2014	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA(MD)	2013	G 1.8 MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158, 0055
U S	ELANTRA(MD)	2013	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA(MD)	2013	G 1.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	ELANTRA(MD)	2013	G 1.8 MPI	ODS [Occupant Detection Sensor]	√	√	√	√		0156
U S	ELANTRA(MD)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA(MD)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA(MD)	2013	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA(MD)	2013	G 1.8 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA(MD)	2013	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA(MD)	2013	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	ELANTRA(MD)	2013	G 1.8 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA(MD)	2013	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA(MD)	2013	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA(MD)	2013	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA(MD)	2013	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA(MD)	2012	G 1.8 MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158, 0055
U S	ELANTRA(MD)	2012	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA(MD)	2012	G 1.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	ELANTRA(MD)	2012	G 1.8 MPI	ODS [Occupant Detection Sensor]	√	√	√	√		0156
U S	ELANTRA(MD)	2012	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA(MD)	2012	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA(MD)	2012	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA(MD)	2012	G 1.8 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA(MD)	2012	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA(MD)	2012	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	ELANTRA(MD)	2012	G 1.8 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA(MD)	2012	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129

U S	ELANTRA(MD)	2012	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA(MD)	2012	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA(MD)	2012	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA(MD)	2012	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA(MD)	2011	G 1.8 MPI	ENGINE [Engine Control]	√	√	√	√		
U S	ELANTRA(MD)	2011	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA(MD)	2011	G 1.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	ELANTRA(MD)	2011	G 1.8 MPI	ODS [Occupant Detection Sensor]	√	√	√	√		0156
U S	ELANTRA(MD)	2011	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA(MD)	2011	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA(MD)	2011	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA(MD)	2011	G 1.8 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA(MD)	2011	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA(MD)	2011	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	ELANTRA(MD)	2011	G 1.8 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA(MD)	2011	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA(MD)	2011	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA(MD)	2011	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA(MD)	2011	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA(MD)	2011	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA(RD)	2000	G 2.0 DOHC	ENGINE [Engine Control]		√	√	√		
U S	ELANTRA(RD)	2000	G 2.0 DOHC	AT [Automatic Transaxle]		√	√	√	√	
U S	ELANTRA(RD)	2000	G 2.0 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	ELANTRA(RD)	2000	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
U S	ELANTRA(RD)	2000	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	ELANTRA(RD)	1999	G 2.0 DOHC	ENGINE [Engine Control]		√	√	√		
U S	ELANTRA(RD)	1999	G 2.0 DOHC	AT [Automatic Transaxle (June1 / 1999~)]		√	√	√	√	
U S	ELANTRA(RD)	1999	G 2.0 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	ELANTRA(RD)	1999	G 2.0 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ELANTRA(RD)	1999	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
U S	ELANTRA(RD)	1999	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	ELANTRA(RD)	1998	G 1.8 DOHC	ENGINE [Engine Control]		√	√	√		
U S	ELANTRA(RD)	1998	G 1.8 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	ELANTRA(RD)	1998	G 1.8 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ELANTRA(RD)	1998	G 1.8 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
U S	ELANTRA(RD)	1998	G 1.8 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	ELANTRA(RD)	1997	G 1.8 DOHC	ENGINE [Engine Control]		√	√	√		
U S	ELANTRA(RD)	1997	G 1.8 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	ELANTRA(RD)	1997	G 1.8 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ELANTRA(RD)	1997	G 1.8 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
U S	ELANTRA(RD)	1997	G 1.8 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	ELANTRA(RD)	1996	G 1.8 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	ELANTRA(RD)	1996	G 1.8 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ELANTRA(RD)	1996	G 1.8 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
U S	ELANTRA(RD)	1996	G 1.8 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102

U S	ELANTRA(UD)	2016	G 1.8 MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158, 0055
U S	ELANTRA(UD)	2016	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA(UD)	2016	G 1.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	ELANTRA(UD)	2016	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA(UD)	2016	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA(UD)	2016	G 1.8 MPI	ODS [Occupant Detection Sensor]	√	√	√	√		0156
U S	ELANTRA(UD)	2016	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA(UD)	2016	G 1.8 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA(UD)	2016	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA(UD)	2016	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	ELANTRA(UD)	2016	G 1.8 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA(UD)	2016	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA(UD)	2016	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA(UD)	2016	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA(UD)	2016	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA(UD)	2016	G 1.8 MPI	TMU [Telematics Unit]	√	√	√			
U S	ELANTRA(UD)	2015	G 1.8 MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158, 0055
U S	ELANTRA(UD)	2015	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA(UD)	2015	G 1.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	ELANTRA(UD)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA(UD)	2015	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA(UD)	2015	G 1.8 MPI	ODS [Occupant Detection Sensor]	√	√	√	√		0156
U S	ELANTRA(UD)	2015	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA(UD)	2015	G 1.8 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA(UD)	2015	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA(UD)	2015	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	ELANTRA(UD)	2015	G 1.8 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA(UD)	2015	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA(UD)	2015	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA(UD)	2015	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA(UD)	2015	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA(UD)	2015	G 1.8 MPI	TMU [Telematics Unit]	√	√	√			
U S	ELANTRA(UD)	2015	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA(UD)	2014	G 1.8 MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158, 0055
U S	ELANTRA(UD)	2014	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA(UD)	2014	G 1.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	ELANTRA(UD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA(UD)	2014	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA(UD)	2014	G 1.8 MPI	ODS [Occupant Detection Sensor]	√	√	√	√		0156
U S	ELANTRA(UD)	2014	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA(UD)	2014	G 1.8 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA(UD)	2014	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	

U S	ELANTRA(UD)	2014	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	ELANTRA(UD)	2014	G 1.8 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA(UD)	2014	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA(UD)	2014	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA(UD)	2014	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA(UD)	2014	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA(UD)	2014	G 1.8 MPI	TMU [Telematics Unit]	√	√	√			
U S	ELANTRA(UD)	2014	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA(UD)	2013	G 1.8 MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158, 0055
U S	ELANTRA(UD)	2013	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA(UD)	2013	G 1.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	ELANTRA(UD)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA(UD)	2013	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA(UD)	2013	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA(UD)	2013	G 1.8 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA(UD)	2013	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA(UD)	2013	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	ELANTRA(UD)	2013	G 1.8 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA(UD)	2013	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA(UD)	2013	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA(UD)	2013	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA(UD)	2013	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA(UD)	2013	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA(UD)	2012	G 1.8 MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158, 0055
U S	ELANTRA(UD)	2012	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA(UD)	2012	G 1.8 MPI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	ELANTRA(UD)	2012	G 1.8 MPI	ODS [Occupant Detection Sensor]	√	√	√	√		0156
U S	ELANTRA(UD)	2012	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA(UD)	2012	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA(UD)	2012	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA(UD)	2012	G 1.8 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA(UD)	2012	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA(UD)	2012	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	ELANTRA(UD)	2012	G 1.8 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ELANTRA(UD)	2012	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA(UD)	2012	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA(UD)	2012	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA(UD)	2012	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA(UD)	2012	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA(UD)	2011	G 1.8 MPI	ENGINE [Engine Control]	√	√	√	√		
U S	ELANTRA(UD)	2011	G 1.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ELANTRA(UD)	2011	G 1.8 MPI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	ELANTRA(UD)	2011	G 1.8 MPI	ODS [Occupant Detection Sensor]	√	√	√	√		0156

U S	ELANTRA(UD)	2011	G 1.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	ELANTRA(UD)	2011	G 1.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	ELANTRA(UD)	2011	G 1.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	ELANTRA(UD)	2011	G 1.8 MPI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	ELANTRA(UD)	2011	G 1.8 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	ELANTRA(UD)	2011	G 1.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	ELANTRA(UD)	2011	G 1.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	ELANTRA(UD)	2011	G 1.8 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	ELANTRA(UD)	2011	G 1.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	ELANTRA(UD)	2011	G 1.8 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	ELANTRA(UD)	2011	G 1.8 MPI	CODE [Transmitter Code Saving]				√		0026
U S	ELANTRA(XD)	2006	G 2.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0117, 0120
U S	ELANTRA(XD)	2006	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	ELANTRA(XD)	2006	G 2.0 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	ELANTRA(XD)	2006	G 2.0 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ELANTRA(XD)	2006	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√	√		0111
U S	ELANTRA(XD)	2006	G 2.0 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
U S	ELANTRA(XD)	2005	G 2.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0117, 0120
U S	ELANTRA(XD)	2005	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	ELANTRA(XD)	2005	G 2.0 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	ELANTRA(XD)	2005	G 2.0 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ELANTRA(XD)	2005	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√	√		0111
U S	ELANTRA(XD)	2005	G 2.0 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
U S	ELANTRA(XD)	2004	G 2.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0117, 0120
U S	ELANTRA(XD)	2004	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	ELANTRA(XD)	2004	G 2.0 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	ELANTRA(XD)	2004	G 2.0 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ELANTRA(XD)	2004	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√	√		0111
U S	ELANTRA(XD)	2004	G 2.0 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
U S	ELANTRA(XD)	2003	G 2.0 DOHC	ENGINE [Engine Control (SULEV)]	√	√	√	√	√	0015, 0055, 0117, 0120
U S	ELANTRA(XD)	2003	G 2.0 DOHC	ENGINE [Engine Control (Non SULEV)]	√	√	√	√	√	0015, 0055, 0117, 0120
U S	ELANTRA(XD)	2003	G 2.0 DOHC	AT [Automatic Transaxle (SULEV)]	√	√	√	√	√	
U S	ELANTRA(XD)	2003	G 2.0 DOHC	AT [Automatic Transaxle (Non SULEV)]		√	√	√	√	
U S	ELANTRA(XD)	2003	G 2.0 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	ELANTRA(XD)	2003	G 2.0 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ELANTRA(XD)	2003	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
U S	ELANTRA(XD)	2003	G 2.0 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
U S	ELANTRA(XD)	2002	G 2.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0117, 0120
U S	ELANTRA(XD)	2002	G 2.0 DOHC	AT [Automatic Transaxle]		√	√	√	√	
U S	ELANTRA(XD)	2002	G 2.0 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	ELANTRA(XD)	2002	G 2.0 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ELANTRA(XD)	2002	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
U S	ELANTRA(XD)	2002	G 2.0 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
U S	ELANTRA(XD)	2001	G 2.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0117, 0120
U S	ELANTRA(XD)	2001	G 2.0 DOHC	AT [Automatic Transaxle]		√	√	√	√	

U S	ELANTRA(XD)	2001	G 2.0 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	ELANTRA(XD)	2001	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√	√		
U S	ELANTRA(XD)	2001	G 2.0 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
U S	ENTOURAGE(EP)	2010	G 3.8 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0158, 0055, 0055
U S	ENTOURAGE(EP)	2010	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ENTOURAGE(EP)	2010	G 3.8 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	ENTOURAGE(EP)	2010	G 3.8 DOHC	AIRBAG [Airbag Control Unit]	√	√	√			0109
U S	ENTOURAGE(EP)	2010	G 3.8 DOHC	ODS [Weight Classification System]	√	√	√	√		0156
U S	ENTOURAGE(EP)	2010	G 3.8 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
U S	ENTOURAGE(EP)	2010	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	ENTOURAGE(EP)	2010	G 3.8 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ENTOURAGE(EP)	2010	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2010	G 3.8 DOHC	IPM [Instrument Panel Module]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2010	G 3.8 DOHC	RAM [Rear Area Module]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2010	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2010	G 3.8 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2010	G 3.8 DOHC	FAM [Front Area Module]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2010	G 3.8 DOHC	PSD - L [Power Sliding Door - Left]	√	√	√	√		
U S	ENTOURAGE(EP)	2010	G 3.8 DOHC	PSD - R [Power Sliding Door - Right]	√	√	√	√		
U S	ENTOURAGE(EP)	2010	G 3.8 DOHC	PTG [Power Tailgate]	√	√	√	√		
U S	ENTOURAGE(EP)	2010	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	ENTOURAGE(EP)	2009	G 3.8 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0158, 0055, 0055
U S	ENTOURAGE(EP)	2009	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ENTOURAGE(EP)	2009	G 3.8 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	ENTOURAGE(EP)	2009	G 3.8 DOHC	AIRBAG [Airbag Control Unit]	√	√	√			0109
U S	ENTOURAGE(EP)	2009	G 3.8 DOHC	ODS [Weight Classification System]	√	√	√	√		0156
U S	ENTOURAGE(EP)	2009	G 3.8 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
U S	ENTOURAGE(EP)	2009	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	ENTOURAGE(EP)	2009	G 3.8 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ENTOURAGE(EP)	2009	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2009	G 3.8 DOHC	IPM [Instrument Panel Module]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2009	G 3.8 DOHC	RAM [Rear Area Module]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2009	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2009	G 3.8 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2009	G 3.8 DOHC	FAM [Front Area Module]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2009	G 3.8 DOHC	PSD - L [Power Sliding Door - Left]	√	√	√	√		
U S	ENTOURAGE(EP)	2009	G 3.8 DOHC	PSD - R [Power Sliding Door - Right]	√	√	√	√		
U S	ENTOURAGE(EP)	2009	G 3.8 DOHC	PTG [Power Tailgate]	√	√	√	√		
U S	ENTOURAGE(EP)	2009	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	ENTOURAGE(EP)	2008	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ENTOURAGE(EP)	2008	G 3.8 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	ENTOURAGE(EP)	2008	G 3.8 DOHC	AIRBAG [Airbag Control Unit]	√	√	√			0109
U S	ENTOURAGE(EP)	2008	G 3.8 DOHC	ODS [Weight Classification System]	√	√	√	√		0156
U S	ENTOURAGE(EP)	2008	G 3.8 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
U S	ENTOURAGE(EP)	2008	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	

U S	ENTOURAGE(EP)	2008	G 3.8 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ENTOURAGE(EP)	2008	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2008	G 3.8 DOHC	IPM [Instrument Panel Module]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2008	G 3.8 DOHC	RAM [Rear Area Module]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2008	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2008	G 3.8 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2008	G 3.8 DOHC	FAM [Front Area Module]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2008	G 3.8 DOHC	PSD - L [Power Sliding Door - Left]	√	√	√	√		
U S	ENTOURAGE(EP)	2008	G 3.8 DOHC	PSD - R [Power Sliding Door - Right]	√	√	√	√		
U S	ENTOURAGE(EP)	2008	G 3.8 DOHC	PTG [Power Tailgate]	√	√	√	√		
U S	ENTOURAGE(EP)	2008	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	ENTOURAGE(EP)	2007	G 3.8 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0158, 0055, 0055
U S	ENTOURAGE(EP)	2007	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	ENTOURAGE(EP)	2007	G 3.8 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	ENTOURAGE(EP)	2007	G 3.8 DOHC	AIRBAG [Airbag Control Unit]	√	√	√			0109
U S	ENTOURAGE(EP)	2007	G 3.8 DOHC	ODS [Weight Classification System]	√	√	√	√		0156
U S	ENTOURAGE(EP)	2007	G 3.8 DOHC	AIRCON [Air Conditioner]		√	√	√	√	
U S	ENTOURAGE(EP)	2007	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	ENTOURAGE(EP)	2007	G 3.8 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	ENTOURAGE(EP)	2007	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2007	G 3.8 DOHC	IPM [Instrument Panel Module]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2007	G 3.8 DOHC	RAM [Rear Area Module]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2007	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2007	G 3.8 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2007	G 3.8 DOHC	FAM [Front Area Module]	√	√	√	√	√	
U S	ENTOURAGE(EP)	2007	G 3.8 DOHC	PSD - L [Power Sliding Door - Left]	√	√	√	√		
U S	ENTOURAGE(EP)	2007	G 3.8 DOHC	PSD - R [Power Sliding Door - Right]	√	√	√	√		
U S	ENTOURAGE(EP)	2007	G 3.8 DOHC	PTG [Power Tailgate]	√	√	√	√		
U S	ENTOURAGE(EP)	2007	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	EQUUS(VI)	2016	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	EQUUS(VI)	2016	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	EQUUS(VI)	2016	G 5.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	EQUUS(VI)	2016	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	EQUUS(VI)	2016	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			0107
U S	EQUUS(VI)	2016	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	EQUUS(VI)	2016	G 5.0 GDI	EPS [Electronic Hydraulic Power Steering System]	√	√	√	√	√	
U S	EQUUS(VI)	2016	G 5.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
U S	EQUUS(VI)	2016	G 5.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	EQUUS(VI)	2016	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	EQUUS(VI)	2016	G 5.0 GDI	MCS [Multi - View Camera System]	√	√	√	√	√	
U S	EQUUS(VI)	2016	G 5.0 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
U S	EQUUS(VI)	2016	G 5.0 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
U S	EQUUS(VI)	2016	G 5.0 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021

U S	EQUUS(VI)	2016	G 5.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	EQUUS(VI)	2016	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
U S	EQUUS(VI)	2016	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
U S	EQUUS(VI)	2016	G 5.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
U S	EQUUS(VI)	2016	G 5.0 GDI	FAM [Front Area Module]	√	√	√	√	√	
U S	EQUUS(VI)	2016	G 5.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	EQUUS(VI)	2016	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	EQUUS(VI)	2016	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	EQUUS(VI)	2016	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	
U S	EQUUS(VI)	2016	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	
U S	EQUUS(VI)	2016	G 5.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	EQUUS(VI)	2016	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	EQUUS(VI)	2016	G 5.0 GDI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
U S	EQUUS(VI)	2016	G 5.0 GDI	APSM [Assist Power Seat Module]	√	√	√	√	√	
U S	EQUUS(VI)	2016	G 5.0 GDI	CLU [Cluster Module]	√			√	√	
U S	EQUUS(VI)	2016	G 5.0 GDI	HUD [Head Up Display]	√	√	√	√		
U S	EQUUS(VI)	2016	G 5.0 GDI	ECW [Electric Control Wiper]	√	√	√	√		
U S	EQUUS(VI)	2016	G 5.0 GDI	DIS [Multimedia]	√			√		
U S	EQUUS(VI)	2016	G 5.0 GDI	TMU [Telematics Unit]	√	√	√			
U S	EQUUS(VI)	2015	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	EQUUS(VI)	2015	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	EQUUS(VI)	2015	G 5.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	EQUUS(VI)	2015	G 5.0 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	EQUUS(VI)	2015	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	EQUUS(VI)	2015	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			0107
U S	EQUUS(VI)	2015	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	EQUUS(VI)	2015	G 5.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
U S	EQUUS(VI)	2015	G 5.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	EQUUS(VI)	2015	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	EQUUS(VI)	2015	G 5.0 GDI	MCS [Multi - View Camera System]	√	√	√	√	√	
U S	EQUUS(VI)	2015	G 5.0 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
U S	EQUUS(VI)	2015	G 5.0 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
U S	EQUUS(VI)	2015	G 5.0 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
U S	EQUUS(VI)	2015	G 5.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	EQUUS(VI)	2015	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
U S	EQUUS(VI)	2015	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
U S	EQUUS(VI)	2015	G 5.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
U S	EQUUS(VI)	2015	G 5.0 GDI	FAM [Front Area Module]	√	√	√	√	√	
U S	EQUUS(VI)	2015	G 5.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	EQUUS(VI)	2015	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	EQUUS(VI)	2015	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	EQUUS(VI)	2015	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	
U S	EQUUS(VI)	2015	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	
U S	EQUUS(VI)	2015	G 5.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	

U S	EQUUS(VI)	2015	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	EQUUS(VI)	2015	G 5.0 GDI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
U S	EQUUS(VI)	2015	G 5.0 GDI	APSM [Assist Power Seat Module]	√	√	√	√	√	
U S	EQUUS(VI)	2015	G 5.0 GDI	CLU [Cluster Module]	√			√	√	
U S	EQUUS(VI)	2015	G 5.0 GDI	HUD [Head Up Display]	√	√	√	√		
U S	EQUUS(VI)	2015	G 5.0 GDI	ECW [Electric Control Wiper]	√	√	√	√		
U S	EQUUS(VI)	2015	G 5.0 GDI	DIS [Multimedia]	√			√		
U S	EQUUS(VI)	2015	G 5.0 GDI	TMU [Telematics Unit]	√	√	√			
U S	EQUUS(VI)	2014	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	EQUUS(VI)	2014	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	EQUUS(VI)	2014	G 5.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	EQUUS(VI)	2014	G 5.0 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	EQUUS(VI)	2014	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	EQUUS(VI)	2014	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			0107
U S	EQUUS(VI)	2014	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	EQUUS(VI)	2014	G 5.0 GDI	EPS [Electronic Hydraulic Power Steering System]	√	√	√	√	√	
U S	EQUUS(VI)	2014	G 5.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
U S	EQUUS(VI)	2014	G 5.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	EQUUS(VI)	2014	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	EQUUS(VI)	2014	G 5.0 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
U S	EQUUS(VI)	2014	G 5.0 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
U S	EQUUS(VI)	2014	G 5.0 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
U S	EQUUS(VI)	2014	G 5.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	EQUUS(VI)	2014	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
U S	EQUUS(VI)	2014	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
U S	EQUUS(VI)	2014	G 5.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
U S	EQUUS(VI)	2014	G 5.0 GDI	FAM [Front Area Module]	√	√	√	√	√	
U S	EQUUS(VI)	2014	G 5.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	EQUUS(VI)	2014	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	EQUUS(VI)	2014	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	EQUUS(VI)	2014	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	
U S	EQUUS(VI)	2014	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	
U S	EQUUS(VI)	2014	G 5.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	EQUUS(VI)	2014	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	EQUUS(VI)	2014	G 5.0 GDI	SWRC [Steering Wheel Remote Control]	√	√	√	√		
U S	EQUUS(VI)	2014	G 5.0 GDI	APSM [Assist Power Seat Module]	√	√	√	√	√	
U S	EQUUS(VI)	2014	G 5.0 GDI	CLU [Cluster Module]	√			√	√	
U S	EQUUS(VI)	2014	G 5.0 GDI	HUD [Head Up Display]	√	√	√	√		
U S	EQUUS(VI)	2014	G 5.0 GDI	ECW [Electric Control Wiper]	√	√	√	√		
U S	EQUUS(VI)	2014	G 5.0 GDI	DIS [Multimedia]	√			√		
U S	EQUUS(VI)	2014	G 5.0 GDI	TMU [Telematics Unit]	√	√	√			
U S	EQUUS(VI)	2013	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158

U S	EQUUS(VI)	2013	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	EQUUS(VI)	2013	G 5.0 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0082, 0087, 0108
U S	EQUUS(VI)	2013	G 5.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	EQUUS(VI)	2013	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			0107, 0109
U S	EQUUS(VI)	2013	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			0107, 0109
U S	EQUUS(VI)	2013	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	EQUUS(VI)	2013	G 5.0 GDI	EPS [Electronic Hydraulic Power Steering System]	√	√	√	√	√	
U S	EQUUS(VI)	2013	G 5.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
U S	EQUUS(VI)	2013	G 5.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	EQUUS(VI)	2013	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	EQUUS(VI)	2013	G 5.0 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
U S	EQUUS(VI)	2013	G 5.0 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
U S	EQUUS(VI)	2013	G 5.0 GDI	SMKCODE [Smart Key Code Saving]				√		
U S	EQUUS(VI)	2013	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
U S	EQUUS(VI)	2013	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
U S	EQUUS(VI)	2013	G 5.0 GDI	IPM [Instrument Panel Module]	√	√	√	√	√	0058, 0071, 0106
U S	EQUUS(VI)	2013	G 5.0 GDI	FAM [Front Area Module]	√	√	√	√	√	
U S	EQUUS(VI)	2013	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	EQUUS(VI)	2013	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	EQUUS(VI)	2013	G 5.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	EQUUS(VI)	2013	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	EQUUS(VI)	2013	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0068
U S	EQUUS(VI)	2013	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	
U S	EQUUS(VI)	2013	G 5.0 GDI	FBWS [Front Back Warning System]	√	√	√	√		
U S	EQUUS(VI)	2013	G 5.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
U S	EQUUS(VI)	2013	G 5.0 GDI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	EQUUS(VI)	2013	G 5.0 GDI	ECW [Electric Control Wiper]	√	√	√	√		
U S	EQUUS(VI)	2013	G 5.0 GDI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
U S	EQUUS(VI)	2013	G 5.0 GDI	VRS [Voice Recognition System]	√	√	√			0034
U S	EQUUS(VI)	2013	G 5.0 GDI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
U S	EQUUS(VI)	2012	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	EQUUS(VI)	2012	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	EQUUS(VI)	2012	G 5.0 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0082, 0087, 0108
U S	EQUUS(VI)	2012	G 5.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	EQUUS(VI)	2012	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			0107, 0109
U S	EQUUS(VI)	2012	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			0107, 0109
U S	EQUUS(VI)	2012	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	EQUUS(VI)	2012	G 5.0 GDI	EPS [Electronic Hydraulic Power Steering System]	√	√	√	√	√	
U S	EQUUS(VI)	2012	G 5.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
U S	EQUUS(VI)	2012	G 5.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	EQUUS(VI)	2012	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	EQUUS(VI)	2012	G 5.0 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085

U S	EQUUS(VI)	2012	G 5.0 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
U S	EQUUS(VI)	2012	G 5.0 GDI	SMKCODE [Smart Key Code Saving]				√		
U S	EQUUS(VI)	2012	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
U S	EQUUS(VI)	2012	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
U S	EQUUS(VI)	2012	G 5.0 GDI	OPTION [User Option]				√		
U S	EQUUS(VI)	2012	G 5.0 GDI	IPM [Instrument Panel Module]	√	√	√	√	√	0058, 0071, 0106
U S	EQUUS(VI)	2012	G 5.0 GDI	FAM [Front Area Module]	√	√	√	√	√	
U S	EQUUS(VI)	2012	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	EQUUS(VI)	2012	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	EQUUS(VI)	2012	G 5.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	EQUUS(VI)	2012	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0068
U S	EQUUS(VI)	2012	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	
U S	EQUUS(VI)	2012	G 5.0 GDI	FBWS [Front Back Warning System]	√	√	√	√		
U S	EQUUS(VI)	2012	G 5.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
U S	EQUUS(VI)	2012	G 5.0 GDI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	EQUUS(VI)	2012	G 5.0 GDI	ECW [Electric Control Wiper]	√	√	√	√		
U S	EQUUS(VI)	2012	G 5.0 GDI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
U S	EQUUS(VI)	2012	G 5.0 GDI	VRS [Voice Recognition System]	√	√	√			0034
U S	EQUUS(VI)	2012	G 5.0 GDI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
U S	EQUUS(VI)	2011	G 4.6 MPI	ENGINE [Engine Control]	√	√	√	√	√	0055, 0116, 0120, 0158
U S	EQUUS(VI)	2011	G 4.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0020, 0121
U S	EQUUS(VI)	2011	G 4.6 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0082, 0087, 0108
U S	EQUUS(VI)	2011	G 4.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	EQUUS(VI)	2011	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0107, 0109
U S	EQUUS(VI)	2011	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107, 0109
U S	EQUUS(VI)	2011	G 4.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	EQUUS(VI)	2011	G 4.6 MPI	EPS [Electronic Hydraulic Power Steering System]	√	√	√	√	√	
U S	EQUUS(VI)	2011	G 4.6 MPI	ECS [Electronic Control Suspension]	√	√	√	√		
U S	EQUUS(VI)	2011	G 4.6 MPI	SCC [Smart Cruise Control]	√	√	√	√		
U S	EQUUS(VI)	2011	G 4.6 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	EQUUS(VI)	2011	G 4.6 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
U S	EQUUS(VI)	2011	G 4.6 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
U S	EQUUS(VI)	2011	G 4.6 MPI	SMKCODE [Smart Key Code Saving]				√		
U S	EQUUS(VI)	2011	G 4.6 MPI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
U S	EQUUS(VI)	2011	G 4.6 MPI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
U S	EQUUS(VI)	2011	G 4.6 MPI	OPTION [User Option]				√		
U S	EQUUS(VI)	2011	G 4.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	EQUUS(VI)	2011	G 4.6 MPI	IPM [Instrument Panel Module]	√	√	√	√	√	0058, 0071, 0106
U S	EQUUS(VI)	2011	G 4.6 MPI	FAM [Front Area Module]	√	√	√	√	√	
U S	EQUUS(VI)	2011	G 4.6 MPI	ADM [Assist Door Module]	√	√	√	√	√	
U S	EQUUS(VI)	2011	G 4.6 MPI	DDM [Driver Door Module]	√	√	√	√	√	
U S	EQUUS(VI)	2011	G 4.6 MPI	MFSW [Multi Function Switch]	√	√	√	√		
U S	EQUUS(VI)	2011	G 4.6 MPI	PSM [Power Seat Module]	√	√	√	√	√	0068

U S	EQUUS(VI)	2011	G 4.6 MPI	SCM [Steering Column Module]	√	√	√	√	√	
U S	EQUUS(VI)	2011	G 4.6 MPI	FBWS [Front Back Warning System]	√	√	√	√		
U S	EQUUS(VI)	2011	G 4.6 MPI	PTM [Power Trunk Module]	√	√	√	√		
U S	EQUUS(VI)	2011	G 4.6 MPI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	EQUUS(VI)	2011	G 4.6 MPI	ECW [Electric Control Wiper]	√	√	√	√		
U S	EQUUS(VI)	2011	G 4.6 MPI	VRS [Voice Recognition System]	√	√	√			0034
U S	EQUUS(VI)	2011	G 4.6 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
U S	G80(DH)	2017	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
U S	G80(DH)	2017	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	G80(DH)	2017	G 3.8 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0081, 0093
U S	G80(DH)	2017	G 3.8 GDI	EPB [Electronic Parking Brake]	√	√	√	√	√	
U S	G80(DH)	2017	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	G80(DH)	2017	G 3.8 GDI	OCS [Occupant Classification Sensor]	√	√	√	√		
U S	G80(DH)	2017	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	G80(DH)	2017	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	G80(DH)	2017	G 3.8 GDI	4WD [4WD Control]	√	√	√	√		
U S	G80(DH)	2017	G 3.8 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	G80(DH)	2017	G 3.8 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
U S	G80(DH)	2017	G 3.8 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	G80(DH)	2017	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	G80(DH)	2017	G 3.8 GDI	PGS [Parking Guide System]	√	√	√	√	√	
U S	G80(DH)	2017	G 3.8 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
U S	G80(DH)	2017	G 3.8 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
U S	G80(DH)	2017	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
U S	G80(DH)	2017	G 3.8 GDI	AAF [Active Air Flap]	√	√	√	√	√	
U S	G80(DH)	2017	G 3.8 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	G80(DH)	2017	G 3.8 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
U S	G80(DH)	2017	G 3.8 GDI	AVN [Audio Video Navigation (with DIS)]	√			√		0124
U S	G80(DH)	2017	G 3.8 GDI	AVN [Audio Video Navigation (Non DIS)]	√			√		
U S	G80(DH)	2017	G 3.8 GDI	AMP [Amplifier]						0006
U S	G80(DH)	2017	G 3.8 GDI	HSWS [Haptic Steering Warning System]	√	√	√			
U S	G80(DH)	2017	G 3.8 GDI	DSS [Driver Seat Switch]	√	√	√	√		
U S	G80(DH)	2017	G 3.8 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	G80(DH)	2017	G 3.8 GDI	HUD [Head Up Display]	√	√	√	√		
U S	G80(DH)	2017	G 3.8 GDI	PTM [Power Trunk Module]	√	√	√	√		
U S	G80(DH)	2017	G 3.8 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	G80(DH)	2017	G 3.8 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	G80(DH)	2017	G 3.8 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	G80(DH)	2017	G 3.8 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	G80(DH)	2017	G 3.8 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
U S	G80(DH)	2017	G 3.8 GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	G80(DH)	2017	G 3.8 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
U S	G80(DH)	2017	G 3.8 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	

U S	G80(DH)	2017	G 3.8 GDI	CGW [Central Gateway]	√	√	√			0052
U S	G80(DH)	2017	G 3.8 GDI	I - BOX [I - BOX]	√	√	√			
U S	G80(DH)	2017	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	G80(DH)	2017	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	G80(DH)	2017	G 5.0 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0081, 0093
U S	G80(DH)	2017	G 5.0 GDI	EPB [Electronic Parking Brake]	√	√	√	√	√	
U S	G80(DH)	2017	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	G80(DH)	2017	G 5.0 GDI	OCS [Occupant Classification Sensor]	√	√	√	√		
U S	G80(DH)	2017	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	G80(DH)	2017	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	G80(DH)	2017	G 5.0 GDI	4WD [4WD Control]	√	√	√	√		
U S	G80(DH)	2017	G 5.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	G80(DH)	2017	G 5.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
U S	G80(DH)	2017	G 5.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	G80(DH)	2017	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	G80(DH)	2017	G 5.0 GDI	PGS [Parking Guide System]	√	√	√	√	√	
U S	G80(DH)	2017	G 5.0 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
U S	G80(DH)	2017	G 5.0 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
U S	G80(DH)	2017	G 5.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
U S	G80(DH)	2017	G 5.0 GDI	AAF [Active Air Flap]	√	√	√	√	√	
U S	G80(DH)	2017	G 5.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	G80(DH)	2017	G 5.0 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
U S	G80(DH)	2017	G 5.0 GDI	AVN [Audio Video Navigation (with DIS)]	√			√		0124
U S	G80(DH)	2017	G 5.0 GDI	AVN [Audio Video Navigation (Non DIS)]	√			√		
U S	G80(DH)	2017	G 5.0 GDI	AMP [Amplifier]						0006
U S	G80(DH)	2017	G 5.0 GDI	HSWS [Haptic Steering Warning System]	√	√	√			
U S	G80(DH)	2017	G 5.0 GDI	DSS [Driver Seat Switch]	√	√	√	√		
U S	G80(DH)	2017	G 5.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	G80(DH)	2017	G 5.0 GDI	HUD [Head Up Display]	√	√	√	√		
U S	G80(DH)	2017	G 5.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
U S	G80(DH)	2017	G 5.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	G80(DH)	2017	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	G80(DH)	2017	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	G80(DH)	2017	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	G80(DH)	2017	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
U S	G80(DH)	2017	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	G80(DH)	2017	G 5.0 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
U S	G80(DH)	2017	G 5.0 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
U S	G80(DH)	2017	G 5.0 GDI	CGW [Central Gateway]	√	√	√			0052
U S	G80(DH)	2017	G 5.0 GDI	I - BOX [I - BOX]	√	√	√			
U S	G90(HI)	2017	G 3.3 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0051, 0055, 0116, 0120, 0158
U S	G90(HI)	2017	G 3.3 T-GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0121

U S	G90(HI)	2017	G 3.3 T-GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	G90(HI)	2017	G 3.3 T-GDI	SCCAEB [SCC / AEB]	√	√	√	√		
U S	G90(HI)	2017	G 3.3 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	G90(HI)	2017	G 3.3 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	G90(HI)	2017	G 3.3 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	G90(HI)	2017	G 3.3 T-GDI	OCS [Occupant Classification System]	√	√	√	√		
U S	G90(HI)	2017	G 3.3 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	G90(HI)	2017	G 3.3 T-GDI	4WD [4WD Control]	√	√	√	√	√	
U S	G90(HI)	2017	G 3.3 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	G90(HI)	2017	G 3.3 T-GDI	ECS [Electronic Control Suspension]	√	√	√	√		
U S	G90(HI)	2017	G 3.3 T-GDI	PGS [Parking Guide System]	√	√	√	√		
U S	G90(HI)	2017	G 3.3 T-GDI	MCS [Multi - View Camera System]	√	√	√	√	√	0008
U S	G90(HI)	2017	G 3.3 T-GDI	BSD [Blind Spot Detection]	√	√	√	√		
U S	G90(HI)	2017	G 3.3 T-GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
U S	G90(HI)	2017	G 3.3 T-GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
U S	G90(HI)	2017	G 3.3 T-GDI	AAF [Active Air Flap]	√	√	√	√	√	
U S	G90(HI)	2017	G 3.3 T-GDI	ESHIFTER [E - Shifter]	√	√	√	√	√	
U S	G90(HI)	2017	G 3.3 T-GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
U S	G90(HI)	2017	G 3.3 T-GDI	AMP [Amplifier]						0006
U S	G90(HI)	2017	G 3.3 T-GDI	AVN [Audio Video Navigation]	√	√	√	√		
U S	G90(HI)	2017	G 3.3 T-GDI	PSM - RL [Power Seat Module - Rear Left]	√	√	√	√	√	0133, 0134
U S	G90(HI)	2017	G 3.3 T-GDI	PSM - RR [Power Seat Module - Rear Right]	√	√	√	√	√	0133, 0134
U S	G90(HI)	2017	G 3.3 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	G90(HI)	2017	G 3.3 T-GDI	HUD [Head Up Display]	√	√	√	√		
U S	G90(HI)	2017	G 3.3 T-GDI	PTM [Power Trunk Module]	√	√	√	√		
U S	G90(HI)	2017	G 3.3 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133, 0134
U S	G90(HI)	2017	G 3.3 T-GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
U S	G90(HI)	2017	G 3.3 T-GDI	APSM [Assist Power Seat Module]	√	√	√	√	√	0133, 0134
U S	G90(HI)	2017	G 3.3 T-GDI	IBU - BCM [Intergrated Body Control Unit - BCM]	√	√	√	√	√	
U S	G90(HI)	2017	G 3.3 T-GDI	IBU - SMK [Intergrated Body Control Unit - SMK]	√	√	√	√	√	0027, 0058, 0129
U S	G90(HI)	2017	G 3.3 T-GDI	IBU - TPMS [Intergrated Body Control Unit - TPMS]	√	√	√			
U S	G90(HI)	2017	G 3.3 T-GDI	RWPC [Rear Wireless Power Charger]	√	√	√	√	√	
U S	G90(HI)	2017	G 3.3 T-GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
U S	G90(HI)	2017	G 3.3 T-GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	G90(HI)	2017	G 3.3 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	G90(HI)	2017	G 3.3 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	0076
U S	G90(HI)	2017	G 3.3 T-GDI	ARS [Rear Armrest Switch]	√	√	√	√	√	0133
U S	G90(HI)	2017	G 3.3 T-GDI	CGW [Central Gateway]	√	√	√	√		0052

U S	G90(HI)	2017	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0051, 0055, 0116, 0158
U S	G90(HI)	2017	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0121
U S	G90(HI)	2017	G 5.0 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	G90(HI)	2017	G 5.0 GDI	SCCAEB [SCC / AEB]	√	√	√	√		
U S	G90(HI)	2017	G 5.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	G90(HI)	2017	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	G90(HI)	2017	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	G90(HI)	2017	G 5.0 GDI	OCS [Occupant Classification System]	√	√	√	√		
U S	G90(HI)	2017	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	G90(HI)	2017	G 5.0 GDI	4WD [4WD Control]	√	√	√	√	√	
U S	G90(HI)	2017	G 5.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	G90(HI)	2017	G 5.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√		
U S	G90(HI)	2017	G 5.0 GDI	PGS [Parking Guide System]	√	√	√	√		
U S	G90(HI)	2017	G 5.0 GDI	MCS [Multi - View Camera System]	√	√	√	√	√	0008
U S	G90(HI)	2017	G 5.0 GDI	BSD [Blind Spot Detection]	√	√	√	√		
U S	G90(HI)	2017	G 5.0 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
U S	G90(HI)	2017	G 5.0 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
U S	G90(HI)	2017	G 5.0 GDI	AAF [Active Air Flap]	√	√	√	√	√	
U S	G90(HI)	2017	G 5.0 GDI	ESHIFTER [E - Shifter]	√	√	√	√	√	
U S	G90(HI)	2017	G 5.0 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
U S	G90(HI)	2017	G 5.0 GDI	AMP [Amplifier]						0006
U S	G90(HI)	2017	G 5.0 GDI	AVN [Audio Video Navigation]	√	√	√	√		
U S	G90(HI)	2017	G 5.0 GDI	PSM - RL [Power Seat Module - Rear Left]	√	√	√	√	√	0133, 0134
U S	G90(HI)	2017	G 5.0 GDI	PSM - RR [Power Seat Module - Rear Right]	√	√	√	√	√	0133, 0134
U S	G90(HI)	2017	G 5.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	G90(HI)	2017	G 5.0 GDI	HUD [Head Up Display]	√	√	√	√		
U S	G90(HI)	2017	G 5.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
U S	G90(HI)	2017	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133, 0134
U S	G90(HI)	2017	G 5.0 GDI	WPC [Wireless Power Charger]	√	√	√	√	√	
U S	G90(HI)	2017	G 5.0 GDI	APSM [Assist Power Seat Module]	√	√	√	√	√	0133, 0134
U S	G90(HI)	2017	G 5.0 GDI	IBU - BCM [Intergrated Body Control Unit - BCM]	√	√	√	√	√	
U S	G90(HI)	2017	G 5.0 GDI	IBU - TPMS [Intergrated Body Control Unit - TPMS]	√	√	√			
U S	G90(HI)	2017	G 5.0 GDI	RWPC [Rear Wireless Power Charger]	√	√	√	√	√	
U S	G90(HI)	2017	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	G90(HI)	2017	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
U S	G90(HI)	2017	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	G90(HI)	2017	G 5.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	G90(HI)	2017	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	0076
U S	G90(HI)	2017	G 5.0 GDI	ARS [Rear Armrest Switch]	√	√	√	√	√	0133

U S	G90(HI)	2017	G 5.0 GDI	CGW [Central Gateway]	√	√	√	√		0052
U S	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0013, 0120, 0116, 0158, 0055
U S	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	SMKCODE [Smart Key Code Saving]				√		
U S	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	CLU [Cluster Module]	√			√	√	
U S	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2016	G 2.0 T-MPI	CODE [Transmitter Code Saving]				√		0026
U S	GENESIS COUPE(BK)	2016	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
U S	GENESIS COUPE(BK)	2016	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	GENESIS COUPE(BK)	2016	G 3.8 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	GENESIS COUPE(BK)	2016	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2016	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2016	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2016	G 3.8 GDI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS COUPE(BK)	2016	G 3.8 GDI	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090, 0135

U S	GENESIS COUPE(BK)	2016	G 3.8 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS COUPE(BK)	2016	G 3.8 GDI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2016	G 3.8 GDI	SMKCODE [Smart Key Code Saving]				√		
U S	GENESIS COUPE(BK)	2016	G 3.8 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	GENESIS COUPE(BK)	2016	G 3.8 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2016	G 3.8 GDI	CLU [Cluster Module]	√			√	√	
U S	GENESIS COUPE(BK)	2016	G 3.8 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2016	G 3.8 GDI	TMU [Telematics Unit]	√	√	√			
U S	GENESIS COUPE(BK)	2016	G 3.8 GDI	CODE [Transmitter Code Saving]				√		0026
U S	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158, 0055
U S	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	SMKCODE [Smart Key Code Saving]				√		
U S	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	CLU [Cluster Module]	√			√	√	
U S	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	TMU [Telematics Unit]	√	√	√			

U S	GENESIS COUPE(BK)	2015	G 2.0 T-MPI	CODE [Transmitter Code Saving]				√		0026
U S	GENESIS COUPE(BK)	2015	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
U S	GENESIS COUPE(BK)	2015	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	GENESIS COUPE(BK)	2015	G 3.8 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	GENESIS COUPE(BK)	2015	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2015	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2015	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2015	G 3.8 GDI	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS COUPE(BK)	2015	G 3.8 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS COUPE(BK)	2015	G 3.8 GDI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2015	G 3.8 GDI	SMKCODE [Smart Key Code Saving]				√		
U S	GENESIS COUPE(BK)	2015	G 3.8 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	GENESIS COUPE(BK)	2015	G 3.8 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2015	G 3.8 GDI	CLU [Cluster Module]	√			√	√	
U S	GENESIS COUPE(BK)	2015	G 3.8 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2015	G 3.8 GDI	TMU [Telematics Unit]	√	√	√			
U S	GENESIS COUPE(BK)	2015	G 3.8 GDI	CODE [Transmitter Code Saving]				√		0026
U S	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158, 0055
U S	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	

U S	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	CLU [Cluster Module]	√			√	√	
U S	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	TMU [Telematics Unit]	√	√	√			
U S	GENESIS COUPE(BK)	2014	G 2.0 T-MPI	CODE [Transmitter Code Saving]				√		0026
U S	GENESIS COUPE(BK)	2014	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
U S	GENESIS COUPE(BK)	2014	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	GENESIS COUPE(BK)	2014	G 3.8 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	GENESIS COUPE(BK)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2014	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2014	G 3.8 GDI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS COUPE(BK)	2014	G 3.8 GDI	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS COUPE(BK)	2014	G 3.8 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS COUPE(BK)	2014	G 3.8 GDI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2014	G 3.8 GDI	SMKCODE [Smart Key Code Saving]				√		
U S	GENESIS COUPE(BK)	2014	G 3.8 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	GENESIS COUPE(BK)	2014	G 3.8 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2014	G 3.8 GDI	CLU [Cluster Module]	√			√	√	
U S	GENESIS COUPE(BK)	2014	G 3.8 GDI	TMU [Telematics Unit]	√	√	√			

U S	GENESIS COUPE(BK)	2014	G 3.8 GDI	CODE [Transmitter Code Saving]				√		0026
U S	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0013, 0120, 0158, 0055
U S	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	SMKCODE [Smart Key Code Saving]				√		
U S	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	CLU [Cluster Module]	√			√	√	
U S	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	TMU [Telematics Unit]	√	√	√			
U S	GENESIS COUPE(BK)	2013	G 2.0 T-MPI	CODE [Transmitter Code Saving]				√		0026
U S	GENESIS COUPE(BK)	2013	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
U S	GENESIS COUPE(BK)	2013	G 3.8 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	GENESIS COUPE(BK)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2013	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2013	G 3.8 GDI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	

U S	GENESIS COUPE(BK)	2013	G 3.8 GDI	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS COUPE(BK)	2013	G 3.8 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS COUPE(BK)	2013	G 3.8 GDI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2013	G 3.8 GDI	SMKCODE [Smart Key Code Saving]				√		
U S	GENESIS COUPE(BK)	2013	G 3.8 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	GENESIS COUPE(BK)	2013	G 3.8 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2013	G 3.8 GDI	CLU [Cluster Module]	√			√	√	
U S	GENESIS COUPE(BK)	2013	G 3.8 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2013	G 3.8 GDI	TMU [Telematics Unit]	√	√	√			
U S	GENESIS COUPE(BK)	2013	G 3.8 GDI	CODE [Transmitter Code Saving]				√		0026
U S	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0120, 0158, 0055, 0105
U S	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121, 0143
U S	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
U S	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	SMKCODE [Smart Key Code Saving]				√		
U S	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	BCM [Body Control Module]	√			√	√	
U S	GENESIS COUPE(BK)	2012	G 2.0 T-MPI	CODE [Transmitter Code Saving]				√		0026
U S	GENESIS COUPE(BK)	2012	G 3.8 MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0158, 0055

U S	GENESIS COUPE(BK)	2012	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0020, 0121
U S	GENESIS COUPE(BK)	2012	G 3.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	GENESIS COUPE(BK)	2012	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2012	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2012	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2012	G 3.8 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS COUPE(BK)	2012	G 3.8 MPI	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS COUPE(BK)	2012	G 3.8 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS COUPE(BK)	2012	G 3.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
U S	GENESIS COUPE(BK)	2012	G 3.8 MPI	SMKCODE [Smart Key Code Saving]				√		
U S	GENESIS COUPE(BK)	2012	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	GENESIS COUPE(BK)	2012	G 3.8 MPI	CODE [Transmitter Code Saving]				√		0026
U S	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0120, 0158, 0055, 0105
U S	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121, 0143
U S	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
U S	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	SMKCODE [Smart Key Code Saving]				√		
U S	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042

U S	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	BCM [Body Control Module]	√			√	√	
U S	GENESIS COUPE(BK)	2011	G 2.0 T-MPI	CODE [Transmitter Code Saving]				√		0026
U S	GENESIS COUPE(BK)	2011	G 3.8 MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0158, 0055
U S	GENESIS COUPE(BK)	2011	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0020, 0121
U S	GENESIS COUPE(BK)	2011	G 3.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	GENESIS COUPE(BK)	2011	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2011	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2011	G 3.8 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS COUPE(BK)	2011	G 3.8 MPI	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS COUPE(BK)	2011	G 3.8 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS COUPE(BK)	2011	G 3.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
U S	GENESIS COUPE(BK)	2011	G 3.8 MPI	SMKCODE [Smart Key Code Saving]				√		
U S	GENESIS COUPE(BK)	2011	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	GENESIS COUPE(BK)	2011	G 3.8 MPI	BCM [Body Control Module]	√			√	√	
U S	GENESIS COUPE(BK)	2011	G 3.8 MPI	CODE [Transmitter Code Saving]				√		0026
U S	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0120, 0158, 0055, 0105
U S	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121, 0143
U S	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	ESC [Electronic Stability Control]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138

U S	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
U S	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	SMKCODE [Smart Key Code Saving]				√		
U S	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	GENESIS COUPE(BK)	2010	G 2.0 T-MPI	CODE [Transmitter Code Saving]				√		0026
U S	GENESIS COUPE(BK)	2010	G 3.8 MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0158, 0055
U S	GENESIS COUPE(BK)	2010	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0020, 0121
U S	GENESIS COUPE(BK)	2010	G 3.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0107, 0109
U S	GENESIS COUPE(BK)	2010	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS COUPE(BK)	2010	G 3.8 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS COUPE(BK)	2010	G 3.8 MPI	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS COUPE(BK)	2010	G 3.8 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS COUPE(BK)	2010	G 3.8 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0043, 0058, 0106, 0129
U S	GENESIS COUPE(BK)	2010	G 3.8 MPI	SMKCODE [Smart Key Code Saving]				√		
U S	GENESIS COUPE(BK)	2010	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	GENESIS COUPE(BK)	2010	G 3.8 MPI	BCM [Body Control Module]	√			√	√	
U S	GENESIS COUPE(BK)	2010	G 3.8 MPI	CODE [Transmitter Code Saving]				√		0026
U S	GENESIS(BH)	2014	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158
U S	GENESIS(BH)	2014	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	GENESIS(BH)	2014	G 3.8 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0082, 0087, 0108
U S	GENESIS(BH)	2014	G 3.8 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			0109, 0107
U S	GENESIS(BH)	2014	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	GENESIS(BH)	2014	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 3.8 GDI	EPS [Electric Hydraulic Power Steering]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 3.8 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	GENESIS(BH)	2014	G 3.8 GDI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS(BH)	2014	G 3.8 GDI	AHLS [AHLS]	√	√	√	√		0090, 0135
U S	GENESIS(BH)	2014	G 3.8 GDI	AFLS [AFLS (HID)]	√	√	√	√	√	0021

U S	GENESIS(BH)	2014	G 3.8 GDI	AFLS [AFLS (LED)]	√	√	√	√	√	0005, 0021
U S	GENESIS(BH)	2014	G 3.8 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS(BH)	2014	G 3.8 GDI	SMK [Smart Key Code Saving]	√	√	√	√	√	0027, 0058, 0129
U S	GENESIS(BH)	2014	G 3.8 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
U S	GENESIS(BH)	2014	G 3.8 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
U S	GENESIS(BH)	2014	G 3.8 GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	GENESIS(BH)	2014	G 3.8 GDI	IPM [Inter Panel Module (with SMK)]	√	√	√		√	0043, 0058, 0071, 0106
U S	GENESIS(BH)	2014	G 3.8 GDI	FAM [Front Area Module]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 3.8 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 3.8 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 3.8 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 3.8 GDI	PSM [Power Seat Module]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 3.8 GDI	FBWS [Front Back Warning System]	√	√	√	√		
U S	GENESIS(BH)	2014	G 3.8 GDI	ECW [Electric Control Wiper]	√	√	√	√		
U S	GENESIS(BH)	2014	G 3.8 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	GENESIS(BH)	2014	G 3.8 GDI	OPTION [User Option]				√		
U S	GENESIS(BH)	2014	G 3.8 GDI	SCM [Steering Column Module]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 3.8 GDI	IPM [Inter Panel Module (Non SMK)]	√	√	√		√	
U S	GENESIS(BH)	2014	G 3.8 GDI	DIS [Multimedia]	√	√		√		
U S	GENESIS(BH)	2014	G 3.8 GDI	TMU [Telematics Unit]	√	√	√			
U S	GENESIS(BH)	2014	G 3.8 GDI	CODE [Transmitter Code Saving]				√		
U S	GENESIS(BH)	2014	G 4.6 MPI	ENGINE [Engine Control]	√	√	√	√	√	0055, 0116, 0120, 0158
U S	GENESIS(BH)	2014	G 4.6 MPI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	GENESIS(BH)	2014	G 4.6 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0082, 0087, 0108
U S	GENESIS(BH)	2014	G 4.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0109, 0107
U S	GENESIS(BH)	2014	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	GENESIS(BH)	2014	G 4.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 4.6 MPI	EPS [Electric Hydraulic Power Steering]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 4.6 MPI	SCC [Smart Cruise Control]	√	√	√	√		
U S	GENESIS(BH)	2014	G 4.6 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS(BH)	2014	G 4.6 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
U S	GENESIS(BH)	2014	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS(BH)	2014	G 4.6 MPI	AFLS [AFLS (HID)]	√	√	√	√	√	0021
U S	GENESIS(BH)	2014	G 4.6 MPI	AFLS [AFLS (LED)]	√	√	√	√	√	0005, 0021
U S	GENESIS(BH)	2014	G 4.6 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS(BH)	2014	G 4.6 MPI	SMK [Smart Key Code Saving]	√	√	√	√	√	0027, 0058, 0129
U S	GENESIS(BH)	2014	G 4.6 MPI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
U S	GENESIS(BH)	2014	G 4.6 MPI	MFSW [Multi Function Switch]	√	√	√	√		
U S	GENESIS(BH)	2014	G 4.6 MPI	IPM [Inter Panel Module (with SMK)]	√	√	√		√	0043, 0058, 0071, 0106
U S	GENESIS(BH)	2014	G 4.6 MPI	FAM [Front Area Module]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 4.6 MPI	DDM [Driver Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 4.6 MPI	ADM [Assist Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 4.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 4.6 MPI	PSM [Power Seat Module]	√	√	√	√	√	

U S	GENESIS(BH)	2014	G 4.6 MPI	FBWS [Front Back Warning System]	√	√	√	√		
U S	GENESIS(BH)	2014	G 4.6 MPI	ECW [Electric Control Wiper]	√	√	√	√		
U S	GENESIS(BH)	2014	G 4.6 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	GENESIS(BH)	2014	G 4.6 MPI	OPTION [User Option]				√		
U S	GENESIS(BH)	2014	G 4.6 MPI	SCM [Steering Column Module]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 4.6 MPI	IPM [Inter Panel Module (Non SMK)]	√	√	√		√	
U S	GENESIS(BH)	2014	G 4.6 MPI	DIS [Multimedia]	√	√		√		
U S	GENESIS(BH)	2014	G 4.6 MPI	TMU [Telematics Unit]	√	√	√			
U S	GENESIS(BH)	2014	G 4.6 MPI	CODE [Transmitter Code Saving]				√		
U S	GENESIS(BH)	2014	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	GENESIS(BH)	2014	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	GENESIS(BH)	2014	G 5.0 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0082, 0087, 0108
U S	GENESIS(BH)	2014	G 5.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			0109, 0107
U S	GENESIS(BH)	2014	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	GENESIS(BH)	2014	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 5.0 GDI	EPS [Electric Hydraulic Power Steering]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 5.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	GENESIS(BH)	2014	G 5.0 GDI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS(BH)	2014	G 5.0 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
U S	GENESIS(BH)	2014	G 5.0 GDI	AHLS [AHLS]	√	√	√	√		0090, 0135
U S	GENESIS(BH)	2014	G 5.0 GDI	AFLS [AFLS (HID)]	√	√	√	√	√	0021
U S	GENESIS(BH)	2014	G 5.0 GDI	AFLS [AFLS (LED)]	√	√	√	√	√	0005, 0021
U S	GENESIS(BH)	2014	G 5.0 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS(BH)	2014	G 5.0 GDI	SMK [Smart Key Code Saving]	√	√	√	√	√	0027, 0058, 0129
U S	GENESIS(BH)	2014	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
U S	GENESIS(BH)	2014	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
U S	GENESIS(BH)	2014	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	GENESIS(BH)	2014	G 5.0 GDI	IPM [Inter Panel Module (with SMK)]	√	√	√		√	0043, 0058, 0071, 0106
U S	GENESIS(BH)	2014	G 5.0 GDI	FAM [Front Area Module]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 5.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 5.0 GDI	FBWS [Front Back Warning System]	√	√	√	√		
U S	GENESIS(BH)	2014	G 5.0 GDI	ECW [Electric Control Wiper]	√	√	√	√		
U S	GENESIS(BH)	2014	G 5.0 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	GENESIS(BH)	2014	G 5.0 GDI	OPTION [User Option]				√		
U S	GENESIS(BH)	2014	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	
U S	GENESIS(BH)	2014	G 5.0 GDI	IPM [Inter Panel Module (Non SMK)]	√	√	√		√	
U S	GENESIS(BH)	2014	G 5.0 GDI	DIS [Multimedia]	√	√		√		
U S	GENESIS(BH)	2014	G 5.0 GDI	TMU [Telematics Unit]	√	√	√			
U S	GENESIS(BH)	2014	G 5.0 GDI	CODE [Transmitter Code Saving]				√		
U S	GENESIS(BH)	2013	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158
U S	GENESIS(BH)	2013	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0121

U S	GENESIS(BH)	2013	G 3.8 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0082, 0087, 0108
U S	GENESIS(BH)	2013	G 3.8 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			0109, 0107
U S	GENESIS(BH)	2013	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	GENESIS(BH)	2013	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 3.8 GDI	EPS [Electric Hydraulic Power Steering]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 3.8 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	GENESIS(BH)	2013	G 3.8 GDI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS(BH)	2013	G 3.8 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
U S	GENESIS(BH)	2013	G 3.8 GDI	AHLS [AHLS]	√	√	√	√		0090, 0135
U S	GENESIS(BH)	2013	G 3.8 GDI	AFLS [AFLS (HID)]	√	√	√	√	√	0021
U S	GENESIS(BH)	2013	G 3.8 GDI	AFLS [AFLS (LED)]	√	√	√	√	√	0005, 0021
U S	GENESIS(BH)	2013	G 3.8 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS(BH)	2013	G 3.8 GDI	SMK [Smart Key Code Saving]	√	√	√	√	√	0027, 0058, 0129
U S	GENESIS(BH)	2013	G 3.8 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
U S	GENESIS(BH)	2013	G 3.8 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
U S	GENESIS(BH)	2013	G 3.8 GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	GENESIS(BH)	2013	G 3.8 GDI	IPM [Inter Panel Module (With SMK)]	√	√	√		√	0043, 0058, 0071, 0106
U S	GENESIS(BH)	2013	G 3.8 GDI	FAM [Front Area Module]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 3.8 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 3.8 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 3.8 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 3.8 GDI	PSM [Power Seat Module]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 3.8 GDI	FBWS [Front Back Warning System]	√	√	√	√		
U S	GENESIS(BH)	2013	G 3.8 GDI	ECW [Electric Control Wiper]	√	√	√	√		
U S	GENESIS(BH)	2013	G 3.8 GDI	OPTION [User Option]				√		
U S	GENESIS(BH)	2013	G 3.8 GDI	SCM [Steering Column Module]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 3.8 GDI	IPM [Inter Panel Module (Non SMK)]	√	√	√		√	
U S	GENESIS(BH)	2013	G 3.8 GDI	DIS [Multimedia]	√	√		√		
U S	GENESIS(BH)	2013	G 3.8 GDI	TMU [Telematics Unit]	√	√	√			
U S	GENESIS(BH)	2013	G 3.8 GDI	CODE [Transmitter Code Saving]				√		
U S	GENESIS(BH)	2013	G 4.6 MPI	ENGINE [Engine Control]	√	√	√	√	√	0055, 0116, 0120, 0158
U S	GENESIS(BH)	2013	G 4.6 MPI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	GENESIS(BH)	2013	G 4.6 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0082, 0087, 0108
U S	GENESIS(BH)	2013	G 4.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0109, 0107
U S	GENESIS(BH)	2013	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	GENESIS(BH)	2013	G 4.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 4.6 MPI	EPS [Electric Hydraulic Power Steering]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 4.6 MPI	SCC [Smart Cruise Control]	√	√	√	√		
U S	GENESIS(BH)	2013	G 4.6 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS(BH)	2013	G 4.6 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
U S	GENESIS(BH)	2013	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS(BH)	2013	G 4.6 MPI	AFLS [AFLS (HID)]	√	√	√	√	√	0021
U S	GENESIS(BH)	2013	G 4.6 MPI	AFLS [AFLS (LED)]	√	√	√	√	√	0005, 0021

U S	GENESIS(BH)	2013	G 4.6 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS(BH)	2013	G 4.6 MPI	SMK [Smart Key Code Saving]	√	√	√	√	√	0027, 0058, 0129
U S	GENESIS(BH)	2013	G 4.6 MPI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
U S	GENESIS(BH)	2013	G 4.6 MPI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
U S	GENESIS(BH)	2013	G 4.6 MPI	MFSW [Multi Function Switch]	√	√	√	√		
U S	GENESIS(BH)	2013	G 4.6 MPI	IPM [Inter Panel Module (With SMK)]	√	√	√		√	0043, 0058, 0071, 0106
U S	GENESIS(BH)	2013	G 4.6 MPI	FAM [Front Area Module]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 4.6 MPI	DDM [Driver Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 4.6 MPI	ADM [Assist Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 4.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 4.6 MPI	PSM [Power Seat Module]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 4.6 MPI	FBWS [Front Back Warning System]	√	√	√	√		
U S	GENESIS(BH)	2013	G 4.6 MPI	ECW [Electric Control Wiper]	√	√	√	√		
U S	GENESIS(BH)	2013	G 4.6 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	GENESIS(BH)	2013	G 4.6 MPI	OPTION [User Option]				√		
U S	GENESIS(BH)	2013	G 4.6 MPI	SCM [Steering Column Module]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 4.6 MPI	IPM [Inter Panel Module (Non SMK)]	√	√	√		√	
U S	GENESIS(BH)	2013	G 4.6 MPI	DIS [Multimedia]	√	√		√		
U S	GENESIS(BH)	2013	G 4.6 MPI	TMU [Telematics Unit]	√	√	√			
U S	GENESIS(BH)	2013	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	GENESIS(BH)	2013	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	GENESIS(BH)	2013	G 5.0 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0082, 0087, 0108
U S	GENESIS(BH)	2013	G 5.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			0109, 0107
U S	GENESIS(BH)	2013	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	GENESIS(BH)	2013	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 5.0 GDI	EPS [Electric Hydraulic Power Steering]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 5.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	GENESIS(BH)	2013	G 5.0 GDI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS(BH)	2013	G 5.0 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
U S	GENESIS(BH)	2013	G 5.0 GDI	AHLS [AHLS]	√	√	√	√		0090, 0135
U S	GENESIS(BH)	2013	G 5.0 GDI	AFLS [AFLS (HID)]	√	√	√	√	√	0021
U S	GENESIS(BH)	2013	G 5.0 GDI	AFLS [AFLS (LED)]	√	√	√	√	√	0005, 0021
U S	GENESIS(BH)	2013	G 5.0 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS(BH)	2013	G 5.0 GDI	SMK [Smart Key Code Saving]	√	√	√	√	√	0027, 0058, 0129
U S	GENESIS(BH)	2013	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
U S	GENESIS(BH)	2013	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
U S	GENESIS(BH)	2013	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	GENESIS(BH)	2013	G 5.0 GDI	IPM [Inter Panel Module (With SMK)]	√	√	√		√	0043, 0058, 0071, 0106
U S	GENESIS(BH)	2013	G 5.0 GDI	FAM [Front Area Module]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 5.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	

U S	GENESIS(BH)	2013	G 5.0 GDI	FBWS [Front Back Warning System]	√	√	√	√		
U S	GENESIS(BH)	2013	G 5.0 GDI	ECW [Electric Control Wiper]	√	√	√	√		
U S	GENESIS(BH)	2013	G 5.0 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	GENESIS(BH)	2013	G 5.0 GDI	OPTION [User Option]				√		
U S	GENESIS(BH)	2013	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	
U S	GENESIS(BH)	2013	G 5.0 GDI	IPM [Inter Panel Module (Non SMK)]	√	√	√		√	
U S	GENESIS(BH)	2013	G 5.0 GDI	DIS [Multimedia]	√	√		√		
U S	GENESIS(BH)	2013	G 5.0 GDI	TMU [Telematics Unit]	√	√	√			
U S	GENESIS(BH)	2013	G 5.0 GDI	CODE [Transmitter Code Saving]				√		
U S	GENESIS(BH)	2012	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158
U S	GENESIS(BH)	2012	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	GENESIS(BH)	2012	G 3.8 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0082, 0087, 0108
U S	GENESIS(BH)	2012	G 3.8 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	GENESIS(BH)	2012	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 3.8 GDI	EPS [Electric Hydraulic Power Steering]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 3.8 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	GENESIS(BH)	2012	G 3.8 GDI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS(BH)	2012	G 3.8 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
U S	GENESIS(BH)	2012	G 3.8 GDI	AFLS [AFLS (LED)]	√	√	√	√	√	0005, 0021
U S	GENESIS(BH)	2012	G 3.8 GDI	AFLS [AFLS (HID)]	√	√	√	√	√	0021
U S	GENESIS(BH)	2012	G 3.8 GDI	AHLS [AHLS]	√	√	√	√		0090, 0135
U S	GENESIS(BH)	2012	G 3.8 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS(BH)	2012	G 3.8 GDI	SMK [Smart Key Code Saving]				√		
U S	GENESIS(BH)	2012	G 3.8 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
U S	GENESIS(BH)	2012	G 3.8 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
U S	GENESIS(BH)	2012	G 3.8 GDI	FBWS [Front Back Warning System]	√	√	√	√		
U S	GENESIS(BH)	2012	G 3.8 GDI	IPM [Inter Panel Module (With SMK)]	√	√	√		√	0043, 0058, 0071, 0106
U S	GENESIS(BH)	2012	G 3.8 GDI	FAM [Front Area Module]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 3.8 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 3.8 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 3.8 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 3.8 GDI	PSM [Power Seat Module]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 3.8 GDI	ECW [Electric Control Wiper]	√	√	√	√		
U S	GENESIS(BH)	2012	G 3.8 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	GENESIS(BH)	2012	G 3.8 GDI	OPTION [User Option]				√		
U S	GENESIS(BH)	2012	G 3.8 GDI	IPM [Inter Panel Module (Non SMK)]	√	√	√		√	
U S	GENESIS(BH)	2012	G 3.8 GDI	SCM [Steering Column Module]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 3.8 GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	GENESIS(BH)	2012	G 3.8 GDI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
U S	GENESIS(BH)	2012	G 3.8 GDI	VRS [Voice Recognition System]	√	√	√			0034
U S	GENESIS(BH)	2012	G 3.8 GDI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
U S	GENESIS(BH)	2012	G 3.8 GDI	CODE [Transmitter Code Saving]				√		
U S	GENESIS(BH)	2012	G 4.6 MPI	ENGINE [Engine Control]	√	√	√	√	√	0055, 0116, 0120, 0158

U S	GENESIS(BH)	2012	G 4.6 MPI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	GENESIS(BH)	2012	G 4.6 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0082, 0087, 0108
U S	GENESIS(BH)	2012	G 4.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0109, 0107
U S	GENESIS(BH)	2012	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	GENESIS(BH)	2012	G 4.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 4.6 MPI	EPS [Electric Hydraulic Power Steering]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 4.6 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS(BH)	2012	G 4.6 MPI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
U S	GENESIS(BH)	2012	G 4.6 MPI	AFLS [AFLS (LED)]	√	√	√	√	√	0005, 0021
U S	GENESIS(BH)	2012	G 4.6 MPI	AFLS [AFLS (HID)]	√	√	√	√	√	0021
U S	GENESIS(BH)	2012	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS(BH)	2012	G 4.6 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS(BH)	2012	G 4.6 MPI	SMK [Smart Key Code Saving]				√		
U S	GENESIS(BH)	2012	G 4.6 MPI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
U S	GENESIS(BH)	2012	G 4.6 MPI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
U S	GENESIS(BH)	2012	G 4.6 MPI	FBWS [Front Back Warning System]	√	√	√	√		
U S	GENESIS(BH)	2012	G 4.6 MPI	IPM [Inter Panel Module (With SMK)]	√	√	√		√	0043, 0058, 0071, 0106
U S	GENESIS(BH)	2012	G 4.6 MPI	FAM [Front Area Module]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 4.6 MPI	DDM [Driver Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 4.6 MPI	ADM [Assist Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 4.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 4.6 MPI	PSM [Power Seat Module]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 4.6 MPI	ECW [Electric Control Wiper]	√	√	√	√		
U S	GENESIS(BH)	2012	G 4.6 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	GENESIS(BH)	2012	G 4.6 MPI	OPTION [User Option]				√		
U S	GENESIS(BH)	2012	G 4.6 MPI	IPM [Inter Panel Module (Non SMK)]	√	√	√		√	
U S	GENESIS(BH)	2012	G 4.6 MPI	SCM [Steering Column Module]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 4.6 MPI	MFSW [Multi Function Switch]	√	√	√	√		
U S	GENESIS(BH)	2012	G 4.6 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
U S	GENESIS(BH)	2012	G 4.6 MPI	VRS [Voice Recognition System]	√	√	√			0034
U S	GENESIS(BH)	2012	G 4.6 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
U S	GENESIS(BH)	2012	G 4.6 MPI	CODE [Transmitter Code Saving]				√		
U S	GENESIS(BH)	2012	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	GENESIS(BH)	2012	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	GENESIS(BH)	2012	G 5.0 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0082, 0087, 0108
U S	GENESIS(BH)	2012	G 5.0 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			0109, 0107
U S	GENESIS(BH)	2012	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	GENESIS(BH)	2012	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 5.0 GDI	EPS [Electric Hydraulic Power Steering]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 5.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	GENESIS(BH)	2012	G 5.0 GDI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	

U S	GENESIS(BH)	2012	G 5.0 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084, 0085
U S	GENESIS(BH)	2012	G 5.0 GDI	AFLS [AFLS (LED)]	√	√	√	√	√	0005, 0021
U S	GENESIS(BH)	2012	G 5.0 GDI	AHLS [AHLS]	√	√	√	√		0090, 0135
U S	GENESIS(BH)	2012	G 5.0 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS(BH)	2012	G 5.0 GDI	SMK [Smart Key Code Saving]				√		
U S	GENESIS(BH)	2012	G 5.0 GDI	PSB - R [Pre - safe Seat Belt - Right]	√	√	√			
U S	GENESIS(BH)	2012	G 5.0 GDI	PSB - L [Pre - safe Seat Belt - Left]	√	√	√			
U S	GENESIS(BH)	2012	G 5.0 GDI	FBWS [Front Back Warning System]	√	√	√	√		
U S	GENESIS(BH)	2012	G 5.0 GDI	IPM [Inter Panel Module (With SMK)]	√	√	√		√	0043, 0058, 0071, 0106
U S	GENESIS(BH)	2012	G 5.0 GDI	FAM [Front Area Module]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 5.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 5.0 GDI	ECW [Electric Control Wiper]	√	√	√	√		
U S	GENESIS(BH)	2012	G 5.0 GDI	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	GENESIS(BH)	2012	G 5.0 GDI	OPTION [User Option]				√		
U S	GENESIS(BH)	2012	G 5.0 GDI	IPM [Inter Panel Module (Non SMK)]	√	√	√		√	
U S	GENESIS(BH)	2012	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	
U S	GENESIS(BH)	2012	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	GENESIS(BH)	2012	G 5.0 GDI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
U S	GENESIS(BH)	2012	G 5.0 GDI	VRS [Voice Recognition System]	√	√	√			0034
U S	GENESIS(BH)	2012	G 5.0 GDI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
U S	GENESIS(BH)	2012	G 5.0 GDI	CODE [Transmitter Code Saving]				√		
U S	GENESIS(BH)	2011	G 3.3 MPI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158
U S	GENESIS(BH)	2011	G 3.3 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	GENESIS(BH)	2011	G 3.3 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0082, 0087, 0108
U S	GENESIS(BH)	2011	G 3.3 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	GENESIS(BH)	2011	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0109, 0107
U S	GENESIS(BH)	2011	G 3.3 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 3.3 MPI	EPS [Electric Hydraulic Power Steering]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 3.3 MPI	SCC [Smart Cruise Control]	√	√	√	√		
U S	GENESIS(BH)	2011	G 3.3 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS(BH)	2011	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS(BH)	2011	G 3.3 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
U S	GENESIS(BH)	2011	G 3.3 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS(BH)	2011	G 3.3 MPI	SMK [Smart Key Code Saving]				√		
U S	GENESIS(BH)	2011	G 3.3 MPI	MFSW [Multi Function Switch]	√	√	√	√		
U S	GENESIS(BH)	2011	G 3.3 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 3.3 MPI	DDM [Driver Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 3.3 MPI	PSM [Power Seat Module]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 3.3 MPI	IPM [Inter Panel Module (With SMK)]	√	√	√		√	0043, 0058, 0071, 0106
U S	GENESIS(BH)	2011	G 3.3 MPI	FAM [Front Area Module]	√	√	√	√	√	

U S	GENESIS(BH)	2011	G 3.3 MPI	FBWS [Front Back Warning System]	√	√	√	√		
U S	GENESIS(BH)	2011	G 3.3 MPI	ECW [Electric Control Wiper]	√	√	√	√		
U S	GENESIS(BH)	2011	G 3.3 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	GENESIS(BH)	2011	G 3.3 MPI	OPTION [User Option]				√		
U S	GENESIS(BH)	2011	G 3.3 MPI	SCM [Steering Column Module]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 3.3 MPI	IPM [Inter Panel Module (Non SMK)]	√	√	√		√	
U S	GENESIS(BH)	2011	G 3.3 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
U S	GENESIS(BH)	2011	G 3.3 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
U S	GENESIS(BH)	2011	G 3.3 MPI	VRS [Voice Recognition System]	√	√	√			0034
U S	GENESIS(BH)	2011	G 3.3 MPI	CODE [Transmitter Code Saving]				√		
U S	GENESIS(BH)	2011	G 3.8 MPI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158
U S	GENESIS(BH)	2011	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	GENESIS(BH)	2011	G 3.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0082, 0087, 0108
U S	GENESIS(BH)	2011	G 3.8 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	GENESIS(BH)	2011	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0109, 0107
U S	GENESIS(BH)	2011	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 3.8 MPI	EPS [Electric Hydraulic Power Steering]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 3.8 MPI	SCC [Smart Cruise Control]	√	√	√	√		
U S	GENESIS(BH)	2011	G 3.8 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS(BH)	2011	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS(BH)	2011	G 3.8 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
U S	GENESIS(BH)	2011	G 3.8 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS(BH)	2011	G 3.8 MPI	SMK [Smart Key Code Saving]				√		
U S	GENESIS(BH)	2011	G 3.8 MPI	MFSW [Multi Function Switch]	√	√	√	√		
U S	GENESIS(BH)	2011	G 3.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 3.8 MPI	ADM [Assist Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 3.8 MPI	DDM [Driver Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 3.8 MPI	PSM [Power Seat Module]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 3.8 MPI	IPM [Inter Panel Module (With SMK)]	√	√	√		√	0043, 0058, 0071, 0106
U S	GENESIS(BH)	2011	G 3.8 MPI	FAM [Front Area Module]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 3.8 MPI	FBWS [Front Back Warning System]	√	√	√	√		
U S	GENESIS(BH)	2011	G 3.8 MPI	ECW [Electric Control Wiper]	√	√	√	√		
U S	GENESIS(BH)	2011	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	GENESIS(BH)	2011	G 3.8 MPI	SCM [Steering Column Module]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 3.8 MPI	IPM [Inter Panel Module (Non SMK)]	√	√	√		√	
U S	GENESIS(BH)	2011	G 3.8 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
U S	GENESIS(BH)	2011	G 3.8 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
U S	GENESIS(BH)	2011	G 3.8 MPI	VRS [Voice Recognition System]	√	√	√			0034
U S	GENESIS(BH)	2011	G 3.8 MPI	CODE [Transmitter Code Saving]				√		
U S	GENESIS(BH)	2011	G 4.6 MPI	ENGINE [Engine Control]	√	√	√	√	√	0055, 0116, 0120, 0158
U S	GENESIS(BH)	2011	G 4.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0020, 0121
U S	GENESIS(BH)	2011	G 4.6 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0082, 0087, 0108

U S	GENESIS(BH)	2011	G 4.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	GENESIS(BH)	2011	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0109, 0107
U S	GENESIS(BH)	2011	G 4.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 4.6 MPI	EPS [Electric Hydraulic Power Steering]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 4.6 MPI	SCC [Smart Cruise Control]	√	√	√	√		
U S	GENESIS(BH)	2011	G 4.6 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS(BH)	2011	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS(BH)	2011	G 4.6 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
U S	GENESIS(BH)	2011	G 4.6 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS(BH)	2011	G 4.6 MPI	SMK [Smart Key Code Saving]				√		
U S	GENESIS(BH)	2011	G 4.6 MPI	MFSW [Multi Function Switch]	√	√	√	√		
U S	GENESIS(BH)	2011	G 4.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 4.6 MPI	ADM [Assist Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 4.6 MPI	DDM [Driver Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 4.6 MPI	PSM [Power Seat Module]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 4.6 MPI	IPM [Inter Panel Module (With SMK)]	√	√	√		√	0043, 0058, 0071, 0106
U S	GENESIS(BH)	2011	G 4.6 MPI	FAM [Front Area Module]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 4.6 MPI	FBWS [Front Back Warning System]	√	√	√	√		
U S	GENESIS(BH)	2011	G 4.6 MPI	ECW [Electric Control Wiper]	√	√	√	√		
U S	GENESIS(BH)	2011	G 4.6 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	GENESIS(BH)	2011	G 4.6 MPI	OPTION [User Option]				√		
U S	GENESIS(BH)	2011	G 4.6 MPI	SCM [Steering Column Module]	√	√	√	√	√	
U S	GENESIS(BH)	2011	G 4.6 MPI	IPM [Inter Panel Module (Non SMK)]	√	√	√		√	
U S	GENESIS(BH)	2011	G 4.6 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
U S	GENESIS(BH)	2011	G 4.6 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
U S	GENESIS(BH)	2011	G 4.6 MPI	VRS [Voice Recognition System]	√	√	√			0034
U S	GENESIS(BH)	2011	G 4.6 MPI	CODE [Transmitter Code Saving]				√		
U S	GENESIS(BH)	2010	G 3.3 MPI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158
U S	GENESIS(BH)	2010	G 3.3 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0082, 0087, 0108
U S	GENESIS(BH)	2010	G 3.3 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 3.3 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	GENESIS(BH)	2010	G 3.3 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0109, 0107
U S	GENESIS(BH)	2010	G 3.3 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 3.3 MPI	EPS [Electric Hydraulic Power Steering]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 3.3 MPI	SCC [Smart Cruise Control]	√	√	√	√		
U S	GENESIS(BH)	2010	G 3.3 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS(BH)	2010	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS(BH)	2010	G 3.3 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
U S	GENESIS(BH)	2010	G 3.3 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS(BH)	2010	G 3.3 MPI	SMK [Smart Key Code Saving]				√		
U S	GENESIS(BH)	2010	G 3.3 MPI	MFSW [Multi Function Switch]	√	√	√	√		
U S	GENESIS(BH)	2010	G 3.3 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 3.3 MPI	ADM [Assist Door Module]	√	√	√	√	√	

U S	GENESIS(BH)	2010	G 3.3 MPI	DDM [Driver Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 3.3 MPI	PSM [Power Seat Module]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 3.3 MPI	IPM [Inter Panel Module (With SMK)]	√	√	√		√	0043, 0058, 0071, 0106
U S	GENESIS(BH)	2010	G 3.3 MPI	FAM [Front Area Module]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 3.3 MPI	FBWS [Front Back Warning System]	√	√	√	√		
U S	GENESIS(BH)	2010	G 3.3 MPI	ECW [Electric Control Wiper]	√	√	√	√		
U S	GENESIS(BH)	2010	G 3.3 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	GENESIS(BH)	2010	G 3.3 MPI	OPTION [User Option]				√		
U S	GENESIS(BH)	2010	G 3.3 MPI	SCM [Steering Column Module]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 3.3 MPI	IPM [Inter Panel Module (Non SMK)]	√	√	√		√	
U S	GENESIS(BH)	2010	G 3.3 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
U S	GENESIS(BH)	2010	G 3.3 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
U S	GENESIS(BH)	2010	G 3.3 MPI	VRS [Voice Recognition System]	√	√	√			0034
U S	GENESIS(BH)	2010	G 3.3 MPI	CODE [Transmitter Code Saving]				√		
U S	GENESIS(BH)	2010	G 3.8 MPI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158
U S	GENESIS(BH)	2010	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	GENESIS(BH)	2010	G 3.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0082, 0087, 0108
U S	GENESIS(BH)	2010	G 3.8 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	GENESIS(BH)	2010	G 3.8 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0109, 0107
U S	GENESIS(BH)	2010	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 3.8 MPI	EPS [Electric Hydraulic Power Steering]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 3.8 MPI	SCC [Smart Cruise Control]	√	√	√	√		
U S	GENESIS(BH)	2010	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS(BH)	2010	G 3.8 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
U S	GENESIS(BH)	2010	G 3.8 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS(BH)	2010	G 3.8 MPI	SMK [Smart Key Code Saving]				√		
U S	GENESIS(BH)	2010	G 3.8 MPI	MFSW [Multi Function Switch]	√	√	√	√		
U S	GENESIS(BH)	2010	G 3.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 3.8 MPI	ADM [Assist Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 3.8 MPI	DDM [Driver Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 3.8 MPI	PSM [Power Seat Module]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 3.8 MPI	IPM [Inter Panel Module (With SMK)]	√	√	√		√	0043, 0058, 0071, 0106
U S	GENESIS(BH)	2010	G 3.8 MPI	FAM [Front Area Module]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 3.8 MPI	FBWS [Front Back Warning System]	√	√	√	√		
U S	GENESIS(BH)	2010	G 3.8 MPI	ECW [Electric Control Wiper]	√	√	√	√		
U S	GENESIS(BH)	2010	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	GENESIS(BH)	2010	G 3.8 MPI	OPTION [User Option]				√		
U S	GENESIS(BH)	2010	G 3.8 MPI	SCM [Steering Column Module]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 3.8 MPI	IPM [Inter Panel Module (Non SMK)]	√	√	√		√	
U S	GENESIS(BH)	2010	G 3.8 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
U S	GENESIS(BH)	2010	G 3.8 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
U S	GENESIS(BH)	2010	G 3.8 MPI	VRS [Voice Recognition System]	√	√	√			0034

U S	GENESIS(BH)	2010	G 3.8 MPI	CODE [Transmitter Code Saving]				√		
U S	GENESIS(BH)	2010	G 4.6 MPI	ENGINE [Engine Control]	√	√	√	√	√	0055, 0116, 0120, 0158
U S	GENESIS(BH)	2010	G 4.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0020, 0121
U S	GENESIS(BH)	2010	G 4.6 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0082, 0087, 0108
U S	GENESIS(BH)	2010	G 4.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 4.6 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	GENESIS(BH)	2010	G 4.6 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0109, 0107
U S	GENESIS(BH)	2010	G 4.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 4.6 MPI	EPS [Electric Hydraulic Power Steering]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 4.6 MPI	SCC [Smart Cruise Control]	√	√	√	√		
U S	GENESIS(BH)	2010	G 4.6 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS(BH)	2010	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS(BH)	2010	G 4.6 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
U S	GENESIS(BH)	2010	G 4.6 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS(BH)	2010	G 4.6 MPI	SMK [Smart Key Code Saving]				√		
U S	GENESIS(BH)	2010	G 4.6 MPI	MFSW [Multi Function Switch]	√	√	√	√		
U S	GENESIS(BH)	2010	G 4.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 4.6 MPI	ADM [Assist Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 4.6 MPI	PSM [Power Seat Module]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 4.6 MPI	IPM [Inter Panel Module (With SMK)]	√	√	√		√	0043, 0058, 0071, 0106
U S	GENESIS(BH)	2010	G 4.6 MPI	FAM [Front Area Module]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 4.6 MPI	FBWS [Front Back Warning System]	√	√	√	√		
U S	GENESIS(BH)	2010	G 4.6 MPI	ECW [Electric Control Wiper]	√	√	√	√		
U S	GENESIS(BH)	2010	G 4.6 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	GENESIS(BH)	2010	G 4.6 MPI	OPTION [User Option]				√		
U S	GENESIS(BH)	2010	G 4.6 MPI	SCM [Steering Column Module]	√	√	√	√	√	
U S	GENESIS(BH)	2010	G 4.6 MPI	IPM [Inter Panel Module (Non SMK)]	√	√	√		√	
U S	GENESIS(BH)	2010	G 4.6 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
U S	GENESIS(BH)	2010	G 4.6 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
U S	GENESIS(BH)	2010	G 4.6 MPI	VRS [Voice Recognition System]	√	√	√			0034
U S	GENESIS(BH)	2010	G 4.6 MPI	CODE [Transmitter Code Saving]				√		
U S	GENESIS(BH)	2009	G 3.3 MPI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158
U S	GENESIS(BH)	2009	G 3.3 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	GENESIS(BH)	2009	G 3.3 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0082, 0087, 0108
U S	GENESIS(BH)	2009	G 3.3 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 3.3 MPI	AIRBAG [Airbag Control]	√	√	√			
U S	GENESIS(BH)	2009	G 3.3 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 3.3 MPI	EPS [Electric Hydraulic Power Steering]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 3.3 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS(BH)	2009	G 3.3 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS(BH)	2009	G 3.3 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
U S	GENESIS(BH)	2009	G 3.3 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS(BH)	2009	G 3.3 MPI	SMK [Smart Key Code Saving]				√		
U S	GENESIS(BH)	2009	G 3.3 MPI	IPM [Inter Panel Module (With SMK)]	√	√	√		√	0043, 0058, 0071, 0106

U S	GENESIS(BH)	2009	G 3.3 MPI	FAM [Front Area Module]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 3.3 MPI	PSM [Power Seat Module]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 3.3 MPI	DDM [Driver Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 3.3 MPI	ADM [Assist Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 3.3 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 3.3 MPI	MFSW [Multi Function Switch]	√	√	√	√		
U S	GENESIS(BH)	2009	G 3.3 MPI	FBWS [Front Back Warning System]	√	√	√	√		
U S	GENESIS(BH)	2009	G 3.3 MPI	ECW [Electric Control Wiper]	√	√	√	√		
U S	GENESIS(BH)	2009	G 3.3 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	GENESIS(BH)	2009	G 3.3 MPI	OPTION [User Option]				√		
U S	GENESIS(BH)	2009	G 3.3 MPI	SCM [Steering Column Module]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 3.3 MPI	IPM [Inter Panel Module (Non SMK)]	√	√	√		√	
U S	GENESIS(BH)	2009	G 3.3 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
U S	GENESIS(BH)	2009	G 3.3 MPI	VRS [Voice Recognition System]	√	√	√			0034
U S	GENESIS(BH)	2009	G 3.3 MPI	CODE [Transmitter Code Saving]				√		
U S	GENESIS(BH)	2009	G 3.8 MPI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0158
U S	GENESIS(BH)	2009	G 3.8 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	GENESIS(BH)	2009	G 3.8 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0082, 0087, 0108
U S	GENESIS(BH)	2009	G 3.8 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 3.8 MPI	AIRBAG [Airbag Control]	√	√	√			
U S	GENESIS(BH)	2009	G 3.8 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 3.8 MPI	EPS [Electric Hydraulic Power Steering]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 3.8 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS(BH)	2009	G 3.8 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS(BH)	2009	G 3.8 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
U S	GENESIS(BH)	2009	G 3.8 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS(BH)	2009	G 3.8 MPI	SMK [Smart Key Code Saving]				√		
U S	GENESIS(BH)	2009	G 3.8 MPI	IPM [Inter Panel Module (with DIS)]	√	√	√		√	0043, 0058, 0071, 0106
U S	GENESIS(BH)	2009	G 3.8 MPI	FAM [Front Area Module]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 3.8 MPI	PSM [Power Seat Module]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 3.8 MPI	DDM [Driver Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 3.8 MPI	ADM [Assist Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 3.8 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 3.8 MPI	MFSW [Multi Function Switch]	√	√	√	√		
U S	GENESIS(BH)	2009	G 3.8 MPI	FBWS [Front Back Warning System]	√	√	√	√		
U S	GENESIS(BH)	2009	G 3.8 MPI	ECW [Electric Control Wiper]	√	√	√	√		
U S	GENESIS(BH)	2009	G 3.8 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	GENESIS(BH)	2009	G 3.8 MPI	OPTION [User Option]				√		
U S	GENESIS(BH)	2009	G 3.8 MPI	SCM [Steering Column Module]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 3.8 MPI	IPM [Inter Panel Module (Non DIS)]	√	√	√		√	
U S	GENESIS(BH)	2009	G 3.8 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
U S	GENESIS(BH)	2009	G 3.8 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
U S	GENESIS(BH)	2009	G 3.8 MPI	VRS [Voice Recognition System]	√	√	√			0034
U S	GENESIS(BH)	2009	G 3.8 MPI	CODE [Transmitter Code Saving]				√		

U S	GENESIS(BH)	2009	G 4.6 MPI	ENGINE [Engine Control]	√	√	√	√	√	0055, 0116, 0120, 0158
U S	GENESIS(BH)	2009	G 4.6 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0020, 0121
U S	GENESIS(BH)	2009	G 4.6 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0082, 0087, 0108
U S	GENESIS(BH)	2009	G 4.6 MPI	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 4.6 MPI	AIRBAG [Airbag Control]	√	√	√			
U S	GENESIS(BH)	2009	G 4.6 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 4.6 MPI	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	GENESIS(BH)	2009	G 4.6 MPI	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090, 0135
U S	GENESIS(BH)	2009	G 4.6 MPI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
U S	GENESIS(BH)	2009	G 4.6 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	GENESIS(BH)	2009	G 4.6 MPI	SMK [Smart Key Code Saving]				√		
U S	GENESIS(BH)	2009	G 4.6 MPI	IPM [Inter Panel Module (With SMK)]	√	√	√		√	0043, 0058, 0071, 0106
U S	GENESIS(BH)	2009	G 4.6 MPI	FAM [Front Area Module]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 4.6 MPI	PSM [Power Seat Module]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 4.6 MPI	DDM [Driver Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 4.6 MPI	ADM [Assist Door Module]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 4.6 MPI	CLU [Cluster Module]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 4.6 MPI	MFSW [Multi Function Switch]	√	√	√	√		
U S	GENESIS(BH)	2009	G 4.6 MPI	FBWS [Front Back Warning System]	√	√	√	√		
U S	GENESIS(BH)	2009	G 4.6 MPI	ECW [Electric Control Wiper]	√	√	√	√		
U S	GENESIS(BH)	2009	G 4.6 MPI	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	GENESIS(BH)	2009	G 4.6 MPI	OPTION [User Option]				√		
U S	GENESIS(BH)	2009	G 4.6 MPI	SCM [Steering Column Module]	√	√	√	√	√	
U S	GENESIS(BH)	2009	G 4.6 MPI	IPM [Inter Panel Module (Non SMK)]	√	√	√		√	
U S	GENESIS(BH)	2009	G 4.6 MPI	HEADUNIT [Head Unit]	√	√	√	√	√	0034, 0063, 0119, 0124, 0152, 0157, 0159
U S	GENESIS(BH)	2009	G 4.6 MPI	TUNER_AMP [Tuner / Amplifier]	√	√	√			0034
U S	GENESIS(BH)	2009	G 4.6 MPI	VRS [Voice Recognition System]	√	√	√			0034
U S	GENESIS(BH)	2009	G 4.6 MPI	CODE [Transmitter Code Saving]				√		
U S	GENESIS(DH)	2016	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
U S	GENESIS(DH)	2016	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	GENESIS(DH)	2016	G 3.8 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0081, 0093
U S	GENESIS(DH)	2016	G 3.8 GDI	EPB [Electronic Parking Brake]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	GENESIS(DH)	2016	G 3.8 GDI	OCS [Occupant Classification Sensor]	√	√	√	√		
U S	GENESIS(DH)	2016	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	GENESIS(DH)	2016	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 3.8 GDI	4WD [4WD Control]	√	√	√	√		
U S	GENESIS(DH)	2016	G 3.8 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	GENESIS(DH)	2016	G 3.8 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 3.8 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	GENESIS(DH)	2016	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	GENESIS(DH)	2016	G 3.8 GDI	PGS [Parking Guide System]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 3.8 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 3.8 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		

U S	GENESIS(DH)	2016	G 3.8 GDI	AAF [Active Air Flap]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 3.8 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	GENESIS(DH)	2016	G 3.8 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 3.8 GDI	AVN [Audio Video Navigation (with DIS)]	√			√		0124
U S	GENESIS(DH)	2016	G 3.8 GDI	AVN [Audio Video Navigation (Non DIS)]	√			√		
U S	GENESIS(DH)	2016	G 3.8 GDI	AMP [Amplifier]						0006
U S	GENESIS(DH)	2016	G 3.8 GDI	HSWS [Haptic Steering Warning System]	√	√	√			
U S	GENESIS(DH)	2016	G 3.8 GDI	DSS [Driver Seat Switch]	√	√	√	√		
U S	GENESIS(DH)	2016	G 3.8 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	GENESIS(DH)	2016	G 3.8 GDI	HUD [Head Up Display]	√	√	√	√		
U S	GENESIS(DH)	2016	G 3.8 GDI	PTM [Power Trunk Module]	√	√	√	√		
U S	GENESIS(DH)	2016	G 3.8 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 3.8 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 3.8 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 3.8 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	GENESIS(DH)	2016	G 3.8 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
U S	GENESIS(DH)	2016	G 3.8 GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	GENESIS(DH)	2016	G 3.8 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
U S	GENESIS(DH)	2016	G 3.8 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 3.8 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 3.8 GDI	CGW [Central Gateway]	√	√	√			0052
U S	GENESIS(DH)	2016	G 3.8 GDI	I - BOX [I - BOX]	√	√	√			
U S	GENESIS(DH)	2016	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	GENESIS(DH)	2016	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	GENESIS(DH)	2016	G 5.0 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0081, 0093
U S	GENESIS(DH)	2016	G 5.0 GDI	EPB [Electronic Parking Brake]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	GENESIS(DH)	2016	G 5.0 GDI	OCS [Occupant Classification Sensor]	√	√	√	√		
U S	GENESIS(DH)	2016	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	GENESIS(DH)	2016	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 5.0 GDI	4WD [4WD Control]	√	√	√	√		
U S	GENESIS(DH)	2016	G 5.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	GENESIS(DH)	2016	G 5.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 5.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	GENESIS(DH)	2016	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	GENESIS(DH)	2016	G 5.0 GDI	PGS [Parking Guide System]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 5.0 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 5.0 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
U S	GENESIS(DH)	2016	G 5.0 GDI	AAF [Active Air Flap]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 5.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	GENESIS(DH)	2016	G 5.0 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 5.0 GDI	AVN [Audio Video Navigation (with DIS)]	√			√		0124

U S	GENESIS(DH)	2016	G 5.0 GDI	AVN [Audio Video Navigation (Non DIS)]	√			√		
U S	GENESIS(DH)	2016	G 5.0 GDI	AMP [Amplifier]						0006
U S	GENESIS(DH)	2016	G 5.0 GDI	HSWS [Haptic Steering Warning System]	√	√	√			
U S	GENESIS(DH)	2016	G 5.0 GDI	DSS [Driver Seat Switch]	√	√	√	√		
U S	GENESIS(DH)	2016	G 5.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	GENESIS(DH)	2016	G 5.0 GDI	HUD [Head Up Display]	√	√	√	√		
U S	GENESIS(DH)	2016	G 5.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
U S	GENESIS(DH)	2016	G 5.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	GENESIS(DH)	2016	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
U S	GENESIS(DH)	2016	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	GENESIS(DH)	2016	G 5.0 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
U S	GENESIS(DH)	2016	G 5.0 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 5.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	GENESIS(DH)	2016	G 5.0 GDI	CGW [Central Gateway]	√	√	√			0052
U S	GENESIS(DH)	2016	G 5.0 GDI	I - BOX [I - BOX]	√	√	√			
U S	GENESIS(DH)	2015	G 3.8 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
U S	GENESIS(DH)	2015	G 3.8 GDI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	GENESIS(DH)	2015	G 3.8 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0081, 0093
U S	GENESIS(DH)	2015	G 3.8 GDI	EPB [Electronic Parking Brake]	√	√	√	√	√	
U S	GENESIS(DH)	2015	G 3.8 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	GENESIS(DH)	2015	G 3.8 GDI	OCS [Occupant Classification Sensor]	√	√	√	√		
U S	GENESIS(DH)	2015	G 3.8 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	GENESIS(DH)	2015	G 3.8 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS(DH)	2015	G 3.8 GDI	4WD [4WD Control]	√	√	√	√		
U S	GENESIS(DH)	2015	G 3.8 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	GENESIS(DH)	2015	G 3.8 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
U S	GENESIS(DH)	2015	G 3.8 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	GENESIS(DH)	2015	G 3.8 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	GENESIS(DH)	2015	G 3.8 GDI	PGS [Parking Guide System]	√	√	√	√	√	
U S	GENESIS(DH)	2015	G 3.8 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
U S	GENESIS(DH)	2015	G 3.8 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
U S	GENESIS(DH)	2015	G 3.8 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
U S	GENESIS(DH)	2015	G 3.8 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	GENESIS(DH)	2015	G 3.8 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
U S	GENESIS(DH)	2015	G 3.8 GDI	AVN [Audio Video Navigation (with DIS)]	√			√		0124
U S	GENESIS(DH)	2015	G 3.8 GDI	AVN [Audio Video Navigation (Non DIS)]	√			√		
U S	GENESIS(DH)	2015	G 3.8 GDI	AMP [Amplifier]						0006
U S	GENESIS(DH)	2015	G 3.8 GDI	HSWS [Haptic Steering Warning System]	√	√	√			
U S	GENESIS(DH)	2015	G 3.8 GDI	DSS [Driver Seat Switch]	√	√	√	√		
U S	GENESIS(DH)	2015	G 3.8 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128

U S	GENESIS(DH)	2015	G 3.8 GDI	HUD [Head Up Display]	√	√	√	√		
U S	GENESIS(DH)	2015	G 3.8 GDI	PTM [Power Trunk Module]	√	√	√	√		
U S	GENESIS(DH)	2015	G 3.8 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	GENESIS(DH)	2015	G 3.8 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	GENESIS(DH)	2015	G 3.8 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	GENESIS(DH)	2015	G 3.8 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	GENESIS(DH)	2015	G 3.8 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
U S	GENESIS(DH)	2015	G 3.8 GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	GENESIS(DH)	2015	G 3.8 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
U S	GENESIS(DH)	2015	G 3.8 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
U S	GENESIS(DH)	2015	G 3.8 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	GENESIS(DH)	2015	G 3.8 GDI	CGW [Central Gateway]	√	√	√			0052
U S	GENESIS(DH)	2015	G 3.8 GDI	I - BOX [I - BOX]	√	√	√			
U S	GENESIS(DH)	2015	G 5.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	GENESIS(DH)	2015	G 5.0 GDI	AT [Automatic Transaxle]	√	√	√	√		0121
U S	GENESIS(DH)	2015	G 5.0 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0081, 0093
U S	GENESIS(DH)	2015	G 5.0 GDI	EPB [Electronic Parking Brake]	√	√	√	√	√	
U S	GENESIS(DH)	2015	G 5.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	GENESIS(DH)	2015	G 5.0 GDI	OCS [Occupant Classification Sensor]	√	√	√	√		
U S	GENESIS(DH)	2015	G 5.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	GENESIS(DH)	2015	G 5.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	GENESIS(DH)	2015	G 5.0 GDI	4WD [4WD Control]	√	√	√	√		
U S	GENESIS(DH)	2015	G 5.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	GENESIS(DH)	2015	G 5.0 GDI	ECS [Electronic Control Suspension]	√	√	√	√	√	
U S	GENESIS(DH)	2015	G 5.0 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	GENESIS(DH)	2015	G 5.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	GENESIS(DH)	2015	G 5.0 GDI	PGS [Parking Guide System]	√	√	√	√	√	
U S	GENESIS(DH)	2015	G 5.0 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
U S	GENESIS(DH)	2015	G 5.0 GDI	LKAS [Lane Keeping Assist System]	√	√	√	√		
U S	GENESIS(DH)	2015	G 5.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
U S	GENESIS(DH)	2015	G 5.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	GENESIS(DH)	2015	G 5.0 GDI	PSB [Pre - safe Seat Belt]	√	√	√	√	√	
U S	GENESIS(DH)	2015	G 5.0 GDI	AVN [Audio Video Navigation (with DIS)]	√			√		0124
U S	GENESIS(DH)	2015	G 5.0 GDI	AVN [Audio Video Navigation (Non DIS)]	√			√		
U S	GENESIS(DH)	2015	G 5.0 GDI	AMP [Amplifier]						0006
U S	GENESIS(DH)	2015	G 5.0 GDI	HSWS [Haptic Steering Warning System]	√	√	√			
U S	GENESIS(DH)	2015	G 5.0 GDI	DSS [Driver Seat Switch]	√	√	√	√		
U S	GENESIS(DH)	2015	G 5.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	GENESIS(DH)	2015	G 5.0 GDI	HUD [Head Up Display]	√	√	√	√		
U S	GENESIS(DH)	2015	G 5.0 GDI	PTM [Power Trunk Module]	√	√	√	√		
U S	GENESIS(DH)	2015	G 5.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	GENESIS(DH)	2015	G 5.0 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	GENESIS(DH)	2015	G 5.0 GDI	ADM [Assist Door Module]	√	√	√	√	√	

U S	GENESIS(DH)	2015	G 5.0 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	GENESIS(DH)	2015	G 5.0 GDI	SCM [Steering Column Module]	√	√	√	√	√	0142
U S	GENESIS(DH)	2015	G 5.0 GDI	MFSW [Multi Function Switch]	√	√	√	√		
U S	GENESIS(DH)	2015	G 5.0 GDI	SWRC [Steering Wheel Remote Control]	√	√	√			
U S	GENESIS(DH)	2015	G 5.0 GDI	SLB [Seat Lumbar Bolster]	√	√	√	√	√	
U S	GENESIS(DH)	2015	G 5.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	GENESIS(DH)	2015	G 5.0 GDI	CGW [Central Gateway]	√	√	√			0052
U S	GENESIS(DH)	2015	G 5.0 GDI	I - BOX [I - BOX]	√	√	√			
U S	IONIQ electric(AE EV)	2017	88KW	MCU [EV Motor Control System]	√	√	√	√	√	0038, 0046, 0075
U S	IONIQ electric(AE EV)	2017	88KW	BMS [EV Battery System]	√	√	√	√	√	0130
U S	IONIQ electric(AE EV)	2017	88KW	VCULDC [VCULDC]	√	√	√	√	√	0083, 0116
U S	IONIQ electric(AE EV)	2017	88KW	EPB [Electric Parking Brake]	√	√	√	√	√	0014, 0019
U S	IONIQ electric(AE EV)	2017	88KW	ESPAHB [ESP / AHB]	√	√	√	√	√	0059, 0069
U S	IONIQ electric(AE EV)	2017	88KW	SCCAEB [SCC / AEB]	√	√	√	√		
U S	IONIQ electric(AE EV)	2017	88KW	OCS [Occupant Classification System]	√	√	√	√		
U S	IONIQ electric(AE EV)	2017	88KW	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	IONIQ electric(AE EV)	2017	88KW	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	IONIQ electric(AE EV)	2017	88KW	OBC [On Board Charger]	√	√	√	√		
U S	IONIQ electric(AE EV)	2017	88KW	CCM [Charging Control Module]	√	√	√	√		
U S	IONIQ electric(AE EV)	2017	88KW	EPS [Motor Driven Power Steering]	√	√	√	√		
U S	IONIQ electric(AE EV)	2017	88KW	PGS [Parking Guide System]	√	√	√	√		
U S	IONIQ electric(AE EV)	2017	88KW	MFC [Multi Function Camera]	√	√	√	√		
U S	IONIQ electric(AE EV)	2017	88KW	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016, 0017
U S	IONIQ electric(AE EV)	2017	88KW	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016, 0017
U S	IONIQ electric(AE EV)	2017	88KW	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
U S	IONIQ electric(AE EV)	2017	88KW	AAF [Active Air Flap]	√	√	√	√	√	
U S	IONIQ electric(AE EV)	2017	88KW	ESHIFTER_BS [E - Shifter]	√	√	√	√	√	
U S	IONIQ electric(AE EV)	2017	88KW	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129

U S	IONIQ electric(AE EV)	2017	88KW	AMP [Amplifier]						0006
U S	IONIQ electric(AE EV)	2017	88KW	ADM [Assist Door Module]	√	√	√	√	√	
U S	IONIQ electric(AE EV)	2017	88KW	CLU [Cluster Module]	√	√	√	√	√	
U S	IONIQ electric(AE EV)	2017	88KW	DDM [Driver Door Module]	√	√	√	√	√	
U S	IONIQ electric(AE EV)	2017	88KW	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	IONIQ electric(AE EV)	2017	88KW	IBU - TPMS [IBU - TPMS]	√	√	√			
U S	IONIQ electric(AE EV)	2017	88KW	WPC [Wireless Power Charger]	√	√	√	√	√	
U S	IONIQ electric(AE EV)	2017	88KW	IBU - BCM [IBU - BCM]	√	√	√	√	√	
U S	IONIQ electric(AE EV)	2017	88KW	IGPM [Intergrated Gateway Power Module]	√	√	√	√	√	0052
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0051, 0055, 0116, 0120, 0158
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	MCU [HEV Motor Control System]	√	√	√	√		0046, 0065, 0101
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	HCULDC [HCU / Low DC - DC Converter]	√	√	√	√	√	0047, 0049, 0050, 0077, 0083, 0118, 0140
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	BMS [HEV Battery System]	√	√	√	√	√	0002, 0130
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	AT [Dual Clutch Transmission]	√	√	√	√		
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	SCCAEB [SCC / AEB]	√	√	√	√		
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	ESCAHB [ESC / AHB]	√	√	√	√	√	0059, 0069
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	OCS [Occupant Classification System]	√	√	√	√		
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	EPS [Motor Driven Power Steering]	√	√	√	√		
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	PGS [Parking Guide System]	√	√	√	√		
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	MFC [Multi Function Camera]	√	√	√	√		
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016, 0017

U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016, 0017
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	AAF - R [Active Air Flap - Right]	√				√	
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	AAF - L [Active Air Flap - Left]	√	√	√	√	√	
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	AMP [Amplifier]						0006
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	IBU - TPMS [Intergrated Body Control Unit - TPMS]	√	√	√			
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	IBU - BCM [Intergrated Body Control Unit - BCM]	√	√	√	√	√	
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	CLU [Cluster Module]	√	√	√	√	√	
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	ADM [Assist Door Module]	√	√	√	√	√	
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	WPC [Wireless Power Charger]	√	√	√	√	√	
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	DDM [Driver Door Module]	√	√	√	√	√	
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	IGPM [Intergrated Gateway Power Control Module]	√	√	√	√	√	0052
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	VESS [Virtual Engine Sound System]	√	√	√		√	
U S	IONIQ hybrid(AE HEV)	2017	G 1.6 GDI HEV	CODE [Transmitter Code Saving]				√		0026
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0013, 0123, 0051, 0120, 0158, 0055
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0007, 0121, 0121
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	ODS [PODS - F]	√	√	√	√		

U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	MCS [Multi - View Camera System]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	AMP [Amplifier]						0006
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	PTG [Power Tail Gate]	√	√	√	√		0113
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	TMU [Telematics Unit]	√	√	√			
U S	SANTAFE SPORT(DMA)	2017	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0007, 0121, 0121
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037

U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	ODS [PODS - F]	√	√	√	√		
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	MCS [Multi - View Camera System]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	AMP [Amplifier]						0006
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	PTG [Power Tail Gate]	√	√	√	√		0113

U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	TMU [Telematics Unit]	√	√	√			
U S	SANTAFE SPORT(DMA)	2017	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0120, 0158
U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	ODS [PODS - F]	√	√	√			
U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	PTG [Power Tail Gate]	√	√	√	√		0113

U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	TMU [Telematics Unit]	√	√	√			
U S	SANTAFE SPORT(DMA)	2016	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0120, 0158
U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	ODS [PODS - F]	√	√	√			
U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	PTG [Power Tail Gate]	√	√	√	√		0113

U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	TMU [Telematics Unit]	√	√	√			
U S	SANTAFE SPORT(DMA)	2016	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0120, 0158
U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	ODS [PODS - F]	√	√	√			
U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	

U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	PTG [Power Tail Gate]	√	√	√	√		0113
U S	SANTAFE SPORT(DMA)	2015	G 2.0 T-GDI	TMU [Telematics Unit]	√	√	√			
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0120, 0158
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	ODS [PODS - F]	√	√	√			
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	

U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	PTG [Power Tail Gate]	√	√	√	√		0113
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	TMU [Telematics Unit]	√	√	√			
U S	SANTAFE SPORT(DMA)	2015	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0120, 0158
U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	ODS [PODS - F]	√	√	√			
U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	

U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	TMU [Telematics Unit]	√	√	√			
U S	SANTAFE SPORT(DMA)	2014	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0120, 0158
U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	ODS [PODS - F]	√	√	√			
U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	

U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	TMU [Telematics Unit]	√	√	√			
U S	SANTAFE SPORT(DMA)	2014	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
U S	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0120, 0158
U S	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
U S	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	ODS [PODS - F]	√	√	√			
U S	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
U S	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	

U S	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	TMU [Telematics Unit]	√	√	√			
U S	SANTAFE SPORT(DMA)	2013	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
U S	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0120, 0158
U S	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
U S	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	ODS [PODS - F]	√	√	√			
U S	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
U S	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	TMU [Telematics Unit]	√	√	√			

U S	SANTAFE SPORT(DMA)	2013	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
U S	SANTAFE(CM)	2012	G 2.4 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0100, 0105, 0116, 0120, 0158
U S	SANTAFE(CM)	2012	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE(CM)	2012	G 2.4 DOHC	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SANTAFE(CM)	2012	G 2.4 DOHC	AIRBAG [Airbag (Event #1)]	√	√	√			0107
U S	SANTAFE(CM)	2012	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE(CM)	2012	G 2.4 DOHC	4WD [4WD Control]		√	√	√		
U S	SANTAFE(CM)	2012	G 2.4 DOHC	EPS [Power Steering]		√	√	√		
U S	SANTAFE(CM)	2012	G 2.4 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	SANTAFE(CM)	2012	G 2.4 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SANTAFE(CM)	2012	G 2.4 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0144, 0129, 0043, 0058, 0058, 0106
U S	SANTAFE(CM)	2012	G 2.4 DOHC	SMKCODE [Smart Key Code Saving]				√		
U S	SANTAFE(CM)	2012	G 2.4 DOHC	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	SANTAFE(CM)	2012	G 2.4 DOHC	BCM [Body Control Module]	√			√	√	
U S	SANTAFE(CM)	2012	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	SANTAFE(CM)	2012	G 3.5 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0155, 0158
U S	SANTAFE(CM)	2012	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE(CM)	2012	G 3.5 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SANTAFE(CM)	2012	G 3.5 DOHC	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SANTAFE(CM)	2012	G 3.5 DOHC	AIRBAG [Airbag (Event #1)]	√	√	√			0107
U S	SANTAFE(CM)	2012	G 3.5 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE(CM)	2012	G 3.5 DOHC	4WD [4WD Control]		√	√	√		
U S	SANTAFE(CM)	2012	G 3.5 DOHC	EPS [Power Steering]		√	√	√		
U S	SANTAFE(CM)	2012	G 3.5 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	SANTAFE(CM)	2012	G 3.5 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SANTAFE(CM)	2012	G 3.5 DOHC	SMK [Smart Key Unit]	√	√	√	√	√	0144, 0129, 0043, 0058, 0058, 0106
U S	SANTAFE(CM)	2012	G 3.5 DOHC	SMKCODE [Smart Key Code Saving]				√		
U S	SANTAFE(CM)	2012	G 3.5 DOHC	PDM [Power Distribution Module]	√	√	√	√	√	0042
U S	SANTAFE(CM)	2012	G 3.5 DOHC	BCM [Body Control Module]	√			√	√	
U S	SANTAFE(CM)	2012	G 3.5 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	SANTAFE(CM)	2011	G 2.4 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0100, 0105, 0116, 0120, 0158
U S	SANTAFE(CM)	2011	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE(CM)	2011	G 2.4 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SANTAFE(CM)	2011	G 2.4 DOHC	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SANTAFE(CM)	2011	G 2.4 DOHC	AIRBAG [Airbag (Event #1)]	√	√	√			0107
U S	SANTAFE(CM)	2011	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE(CM)	2011	G 2.4 DOHC	4WD [4WD Control]		√	√	√		
U S	SANTAFE(CM)	2011	G 2.4 DOHC	EPS [Power Steering]		√	√	√		
U S	SANTAFE(CM)	2011	G 2.4 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	SANTAFE(CM)	2011	G 2.4 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SANTAFE(CM)	2011	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026

U S	SANTAFE(CM)	2011	G 3.5 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0155, 0158
U S	SANTAFE(CM)	2011	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE(CM)	2011	G 3.5 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SANTAFE(CM)	2011	G 3.5 DOHC	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SANTAFE(CM)	2011	G 3.5 DOHC	AIRBAG [Airbag (Event #1)]	√	√	√			0107
U S	SANTAFE(CM)	2011	G 3.5 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE(CM)	2011	G 3.5 DOHC	4WD [4WD Control]		√	√	√		
U S	SANTAFE(CM)	2011	G 3.5 DOHC	EPS [Power Steering]		√	√	√		
U S	SANTAFE(CM)	2011	G 3.5 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	SANTAFE(CM)	2011	G 3.5 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SANTAFE(CM)	2011	G 3.5 DOHC	BCM [Body Control Module]	√			√	√	
U S	SANTAFE(CM)	2011	G 3.5 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	SANTAFE(CM)	2010	G 2.4 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0100, 0105, 0116, 0120, 0158
U S	SANTAFE(CM)	2010	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE(CM)	2010	G 2.4 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SANTAFE(CM)	2010	G 2.4 DOHC	AIRBAG [Event #2]	√	√	√			
U S	SANTAFE(CM)	2010	G 2.4 DOHC	AIRBAG [Event #1]	√	√	√			0107
U S	SANTAFE(CM)	2010	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE(CM)	2010	G 2.4 DOHC	4WD [4WD Control]		√	√	√		
U S	SANTAFE(CM)	2010	G 2.4 DOHC	EPS [Power Steering]		√	√	√		
U S	SANTAFE(CM)	2010	G 2.4 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	SANTAFE(CM)	2010	G 2.4 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SANTAFE(CM)	2010	G 2.4 DOHC	BCM [Body Control Module]	√			√	√	
U S	SANTAFE(CM)	2010	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	SANTAFE(CM)	2010	G 3.5 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0155, 0158
U S	SANTAFE(CM)	2010	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE(CM)	2010	G 3.5 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SANTAFE(CM)	2010	G 3.5 DOHC	AIRBAG [Event #2]	√	√	√			
U S	SANTAFE(CM)	2010	G 3.5 DOHC	AIRBAG [Event #1]	√	√	√			0107
U S	SANTAFE(CM)	2010	G 3.5 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE(CM)	2010	G 3.5 DOHC	4WD [4WD Control]		√	√	√		
U S	SANTAFE(CM)	2010	G 3.5 DOHC	EPS [Power Steering]		√	√	√		
U S	SANTAFE(CM)	2010	G 3.5 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	SANTAFE(CM)	2010	G 3.5 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SANTAFE(CM)	2010	G 3.5 DOHC	BCM [Body Control Module]	√			√	√	
U S	SANTAFE(CM)	2010	G 3.5 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	SANTAFE(CM)	2009	G 2.7 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0100, 0158, 0055, 0055
U S	SANTAFE(CM)	2009	G 2.7 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SANTAFE(CM)	2009	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	SANTAFE(CM)	2009	G 2.7 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE(CM)	2009	G 2.7 DOHC	4WD [4WD Control]		√	√	√		
U S	SANTAFE(CM)	2009	G 2.7 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	SANTAFE(CM)	2009	G 2.7 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138

U S	SANTAFE(CM)	2009	G 2.7 DOHC	BCM [Body Control Module]	√			√	√	
U S	SANTAFE(CM)	2009	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	SANTAFE(CM)	2009	G 3.3 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0100, 0158, 0055, 0055
U S	SANTAFE(CM)	2009	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE(CM)	2009	G 3.3 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SANTAFE(CM)	2009	G 3.3 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	SANTAFE(CM)	2009	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE(CM)	2009	G 3.3 DOHC	4WD [4WD Control]		√	√	√		
U S	SANTAFE(CM)	2009	G 3.3 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	SANTAFE(CM)	2009	G 3.3 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SANTAFE(CM)	2009	G 3.3 DOHC	BCM [Body Control Module]	√			√	√	
U S	SANTAFE(CM)	2009	G 3.3 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	SANTAFE(CM)	2008	G 2.7 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0100, 0158, 0055, 0055
U S	SANTAFE(CM)	2008	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE(CM)	2008	G 2.7 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SANTAFE(CM)	2008	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	SANTAFE(CM)	2008	G 2.7 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE(CM)	2008	G 2.7 DOHC	4WD [4WD Control]		√	√	√		
U S	SANTAFE(CM)	2008	G 2.7 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	SANTAFE(CM)	2008	G 2.7 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SANTAFE(CM)	2008	G 2.7 DOHC	BCM [Body Control Module]	√			√	√	
U S	SANTAFE(CM)	2008	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	SANTAFE(CM)	2008	G 3.3 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0100, 0158, 0055, 0055
U S	SANTAFE(CM)	2008	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE(CM)	2008	G 3.3 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SANTAFE(CM)	2008	G 3.3 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	SANTAFE(CM)	2008	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE(CM)	2008	G 3.3 DOHC	4WD [4WD Control]		√	√	√		
U S	SANTAFE(CM)	2008	G 3.3 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	SANTAFE(CM)	2008	G 3.3 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SANTAFE(CM)	2008	G 3.3 DOHC	BCM [Body Control Module]	√			√	√	
U S	SANTAFE(CM)	2007	G 2.7 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0100, 0158, 0055, 0055
U S	SANTAFE(CM)	2007	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE(CM)	2007	G 2.7 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SANTAFE(CM)	2007	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	SANTAFE(CM)	2007	G 2.7 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE(CM)	2007	G 2.7 DOHC	4WD [4WD Control]		√	√	√		
U S	SANTAFE(CM)	2007	G 2.7 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	SANTAFE(CM)	2007	G 2.7 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SANTAFE(CM)	2007	G 2.7 DOHC	BCM [Body Control Module]	√			√	√	
U S	SANTAFE(CM)	2007	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026

U S	SANTAFE(CM)	2007	G 3.3 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0100, 0158, 0055, 0055
U S	SANTAFE(CM)	2007	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE(CM)	2007	G 3.3 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SANTAFE(CM)	2007	G 3.3 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	SANTAFE(CM)	2007	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE(CM)	2007	G 3.3 DOHC	4WD [4WD Control]		√	√	√		
U S	SANTAFE(CM)	2007	G 3.3 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	SANTAFE(CM)	2007	G 3.3 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SANTAFE(CM)	2007	G 3.3 DOHC	BCM [Body Control Module]	√			√	√	
U S	SANTAFE(CM)	2007	G 3.3 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	SANTAFE(NC)	2017	G 3.3 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
U S	SANTAFE(NC)	2017	G 3.3 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE(NC)	2017	G 3.3 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
U S	SANTAFE(NC)	2017	G 3.3 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	SANTAFE(NC)	2017	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SANTAFE(NC)	2017	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SANTAFE(NC)	2017	G 3.3 GDI	ODS [PODS - F]	√	√	√			
U S	SANTAFE(NC)	2017	G 3.3 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE(NC)	2017	G 3.3 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
U S	SANTAFE(NC)	2017	G 3.3 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	SANTAFE(NC)	2017	G 3.3 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	SANTAFE(NC)	2017	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SANTAFE(NC)	2017	G 3.3 GDI	MCS [Multi - View Camera System]	√	√	√	√	√	
U S	SANTAFE(NC)	2017	G 3.3 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0084
U S	SANTAFE(NC)	2017	G 3.3 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SANTAFE(NC)	2017	G 3.3 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SANTAFE(NC)	2017	G 3.3 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	0021
U S	SANTAFE(NC)	2017	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
U S	SANTAFE(NC)	2017	G 3.3 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SANTAFE(NC)	2017	G 3.3 GDI	AMP [Amplifier]						0006
U S	SANTAFE(NC)	2017	G 3.3 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	SANTAFE(NC)	2017	G 3.3 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SANTAFE(NC)	2017	G 3.3 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SANTAFE(NC)	2017	G 3.3 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	SANTAFE(NC)	2017	G 3.3 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	SANTAFE(NC)	2017	G 3.3 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SANTAFE(NC)	2017	G 3.3 GDI	PTG [Power Tail Gate]	√	√	√	√		0113
U S	SANTAFE(NC)	2017	G 3.3 GDI	TMU [Telematics Unit]	√	√	√			
U S	SANTAFE(NC)	2017	G 3.3 GDI	CODE [Transmitter Code Saving]				√		0026
U S	SANTAFE(NC)	2016	G 3.3 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
U S	SANTAFE(NC)	2016	G 3.3 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE(NC)	2016	G 3.3 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	
U S	SANTAFE(NC)	2016	G 3.3 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
U S	SANTAFE(NC)	2016	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			

U S	SANTAFE(NC)	2016	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SANTAFE(NC)	2016	G 3.3 GDI	ODS [PODS - F]	√	√	√			
U S	SANTAFE(NC)	2016	G 3.3 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE(NC)	2016	G 3.3 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
U S	SANTAFE(NC)	2016	G 3.3 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	SANTAFE(NC)	2016	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SANTAFE(NC)	2016	G 3.3 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SANTAFE(NC)	2016	G 3.3 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SANTAFE(NC)	2016	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
U S	SANTAFE(NC)	2016	G 3.3 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	SANTAFE(NC)	2016	G 3.3 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SANTAFE(NC)	2016	G 3.3 GDI	PSM [Power Seat Module]	√	√	√	√	√	
U S	SANTAFE(NC)	2016	G 3.3 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SANTAFE(NC)	2016	G 3.3 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SANTAFE(NC)	2016	G 3.3 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SANTAFE(NC)	2016	G 3.3 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	SANTAFE(NC)	2016	G 3.3 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	SANTAFE(NC)	2016	G 3.3 GDI	PTG [Power Tail Gate]	√	√	√	√		
U S	SANTAFE(NC)	2016	G 3.3 GDI	TMU [Telematics Unit]	√	√	√			
U S	SANTAFE(NC)	2016	G 3.3 GDI	CODE [Transmitter Code Saving]				√		0026
U S	SANTAFE(NC)	2015	G 3.3 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
U S	SANTAFE(NC)	2015	G 3.3 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE(NC)	2015	G 3.3 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	
U S	SANTAFE(NC)	2015	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SANTAFE(NC)	2015	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SANTAFE(NC)	2015	G 3.3 GDI	ODS [PODS - F]	√	√	√			
U S	SANTAFE(NC)	2015	G 3.3 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE(NC)	2015	G 3.3 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
U S	SANTAFE(NC)	2015	G 3.3 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	SANTAFE(NC)	2015	G 3.3 GDI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
U S	SANTAFE(NC)	2015	G 3.3 GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
U S	SANTAFE(NC)	2015	G 3.3 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SANTAFE(NC)	2015	G 3.3 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SANTAFE(NC)	2015	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
U S	SANTAFE(NC)	2015	G 3.3 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	SANTAFE(NC)	2015	G 3.3 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SANTAFE(NC)	2015	G 3.3 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SANTAFE(NC)	2015	G 3.3 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SANTAFE(NC)	2015	G 3.3 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	SANTAFE(NC)	2015	G 3.3 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SANTAFE(NC)	2015	G 3.3 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	SANTAFE(NC)	2015	G 3.3 GDI	PSM [Power Seat Module]	√	√	√	√	√	
U S	SANTAFE(NC)	2015	G 3.3 GDI	PTG [Power Tail Gate]	√	√	√	√		
U S	SANTAFE(NC)	2015	G 3.3 GDI	TMU [Telematics Unit]	√	√	√			
U S	SANTAFE(NC)	2015	G 3.3 GDI	CODE [Transmitter Code Saving]				√		0026

U S	SANTAFE(NC)	2014	G 3.3 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
U S	SANTAFE(NC)	2014	G 3.3 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE(NC)	2014	G 3.3 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	
U S	SANTAFE(NC)	2014	G 3.3 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
U S	SANTAFE(NC)	2014	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SANTAFE(NC)	2014	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SANTAFE(NC)	2014	G 3.3 GDI	ODS [PODS - F]	√	√	√			
U S	SANTAFE(NC)	2014	G 3.3 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE(NC)	2014	G 3.3 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
U S	SANTAFE(NC)	2014	G 3.3 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	SANTAFE(NC)	2014	G 3.3 GDI	TPMS [Tire Pressure Monitoring (High)]	√	√	√		√	
U S	SANTAFE(NC)	2014	G 3.3 GDI	TPMS [Tire Pressure Monitoring (Low)]	√	√	√		√	
U S	SANTAFE(NC)	2014	G 3.3 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SANTAFE(NC)	2014	G 3.3 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SANTAFE(NC)	2014	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
U S	SANTAFE(NC)	2014	G 3.3 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	SANTAFE(NC)	2014	G 3.3 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SANTAFE(NC)	2014	G 3.3 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SANTAFE(NC)	2014	G 3.3 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	SANTAFE(NC)	2014	G 3.3 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SANTAFE(NC)	2014	G 3.3 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	SANTAFE(NC)	2014	G 3.3 GDI	PSM [Power Seat Module]	√	√	√	√	√	
U S	SANTAFE(NC)	2014	G 3.3 GDI	PTG [Power Tail Gate]	√	√	√	√		
U S	SANTAFE(NC)	2014	G 3.3 GDI	TMU [Telematics Unit]	√	√	√			
U S	SANTAFE(NC)	2014	G 3.3 GDI	CODE [Transmitter Code Saving]				√		0026
U S	SANTAFE(NC)	2013	G 3.3 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0158
U S	SANTAFE(NC)	2013	G 3.3 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SANTAFE(NC)	2013	G 3.3 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	
U S	SANTAFE(NC)	2013	G 3.3 GDI	EPB [Electric Parking Brake]	√	√	√	√	√	0037
U S	SANTAFE(NC)	2013	G 3.3 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SANTAFE(NC)	2013	G 3.3 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SANTAFE(NC)	2013	G 3.3 GDI	ODS [PODS - F]	√	√	√			
U S	SANTAFE(NC)	2013	G 3.3 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SANTAFE(NC)	2013	G 3.3 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
U S	SANTAFE(NC)	2013	G 3.3 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	SANTAFE(NC)	2013	G 3.3 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SANTAFE(NC)	2013	G 3.3 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SANTAFE(NC)	2013	G 3.3 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SANTAFE(NC)	2013	G 3.3 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	
U S	SANTAFE(NC)	2013	G 3.3 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	SANTAFE(NC)	2013	G 3.3 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SANTAFE(NC)	2013	G 3.3 GDI	PSM [Power Seat Module]	√	√	√	√	√	
U S	SANTAFE(NC)	2013	G 3.3 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SANTAFE(NC)	2013	G 3.3 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SANTAFE(NC)	2013	G 3.3 GDI	BCM [Body Control Module]	√	√	√	√	√	

U S	SANTAFE(NC)	2013	G 3.3 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	SANTAFE(NC)	2013	G 3.3 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	SANTAFE(NC)	2013	G 3.3 GDI	PTG [Power Tail Gate]	√	√	√	√		
U S	SANTAFE(NC)	2013	G 3.3 GDI	TMU [Telematics Unit]	√	√	√			
U S	SANTAFE(NC)	2013	G 3.3 GDI	CODE [Transmitter Code Saving]				√		0026
U S	SANTAFE(SM)	2006	G 2.4 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055, 0116
U S	SANTAFE(SM)	2006	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SANTAFE(SM)	2006	G 2.4 DOHC	TCS [Traction Control System]	√	√	√	√	√	0064
U S	SANTAFE(SM)	2006	G 2.4 DOHC	ABS [2WD]	√	√	√	√	√	0064
U S	SANTAFE(SM)	2006	G 2.4 DOHC	ABS [4WD]	√	√	√	√	√	0064
U S	SANTAFE(SM)	2006	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			0111
U S	SANTAFE(SM)	2006	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	SANTAFE(SM)	2006	G 2.7 DOHC	ENGINE [Engine Control]		√	√	√	√	0015, 0055, 0116, 0117, 0120
U S	SANTAFE(SM)	2006	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SANTAFE(SM)	2006	G 2.7 DOHC	TCS [Traction Control System]	√	√	√	√	√	0064
U S	SANTAFE(SM)	2006	G 2.7 DOHC	ABS [2WD]	√	√	√	√	√	0064
U S	SANTAFE(SM)	2006	G 2.7 DOHC	ABS [4WD]	√	√	√	√	√	0064
U S	SANTAFE(SM)	2006	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			0111
U S	SANTAFE(SM)	2006	G 2.7 DOHC	4WD [4WD Control]		√	√			
U S	SANTAFE(SM)	2006	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	SANTAFE(SM)	2006	G 3.5 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055, 0116
U S	SANTAFE(SM)	2006	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SANTAFE(SM)	2006	G 3.5 DOHC	TCS [Traction Control System]	√	√	√	√	√	0064
U S	SANTAFE(SM)	2006	G 3.5 DOHC	ABS [2WD]	√	√	√	√	√	0064
U S	SANTAFE(SM)	2006	G 3.5 DOHC	ABS [4WD]	√	√	√	√	√	0064
U S	SANTAFE(SM)	2006	G 3.5 DOHC	AIRBAG [Airbag Control]	√	√	√			0111
U S	SANTAFE(SM)	2006	G 3.5 DOHC	4WD [4WD Control]		√	√			
U S	SANTAFE(SM)	2006	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	SANTAFE(SM)	2005	G 2.4 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055, 0116
U S	SANTAFE(SM)	2005	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SANTAFE(SM)	2005	G 2.4 DOHC	TCS [Traction Control System]	√	√	√	√	√	0064
U S	SANTAFE(SM)	2005	G 2.4 DOHC	ABS [2WD]	√	√	√	√	√	0064
U S	SANTAFE(SM)	2005	G 2.4 DOHC	ABS [4WD]	√	√	√	√	√	0064
U S	SANTAFE(SM)	2005	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			0111
U S	SANTAFE(SM)	2005	G 2.4 DOHC	4WD [4WD Control]		√	√			
U S	SANTAFE(SM)	2005	G 2.7 DOHC	ENGINE [Engine Control]		√	√	√	√	0015, 0055, 0116, 0117, 0120
U S	SANTAFE(SM)	2005	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SANTAFE(SM)	2005	G 2.7 DOHC	TCS [Traction Control System]	√	√	√	√	√	0064
U S	SANTAFE(SM)	2005	G 2.7 DOHC	ABS [2WD]	√	√	√	√	√	0064
U S	SANTAFE(SM)	2005	G 2.7 DOHC	ABS [4WD]	√	√	√	√	√	0064
U S	SANTAFE(SM)	2005	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			0111
U S	SANTAFE(SM)	2005	G 2.7 DOHC	4WD [4WD Control]		√	√			
U S	SANTAFE(SM)	2005	G 3.5 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055, 0116
U S	SANTAFE(SM)	2005	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SANTAFE(SM)	2005	G 3.5 DOHC	TCS [Traction Control System]	√	√	√	√	√	0064

U S	SANTAFE(SM)	2005	G 3.5 DOHC	ABS [2WD]	√	√	√	√	√	0064
U S	SANTAFE(SM)	2005	G 3.5 DOHC	ABS [4WD]	√	√	√	√	√	0064
U S	SANTAFE(SM)	2005	G 3.5 DOHC	AIRBAG [Airbag Control]	√	√	√			0111
U S	SANTAFE(SM)	2005	G 3.5 DOHC	4WD [4WD Control]		√	√			
U S	SANTAFE(SM)	2004	G 2.4 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055
U S	SANTAFE(SM)	2004	G 2.4 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SANTAFE(SM)	2004	G 2.4 DOHC	ABS [2WD]		√	√	√	√	
U S	SANTAFE(SM)	2004	G 2.4 DOHC	ABS [4WD]		√	√	√	√	
U S	SANTAFE(SM)	2004	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	SANTAFE(SM)	2004	G 2.4 DOHC	4WD [4WD Control]		√	√			
U S	SANTAFE(SM)	2004	G 2.7 DOHC	ENGINE [Engine Control]		√	√	√	√	0015, 0055, 0117, 0120
U S	SANTAFE(SM)	2004	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SANTAFE(SM)	2004	G 2.7 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SANTAFE(SM)	2004	G 2.7 DOHC	ABS [2WD]		√	√	√	√	
U S	SANTAFE(SM)	2004	G 2.7 DOHC	ABS [4WD]		√	√	√	√	
U S	SANTAFE(SM)	2004	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	SANTAFE(SM)	2004	G 2.7 DOHC	4WD [4WD Control]		√	√			
U S	SANTAFE(SM)	2004	G 3.5 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055
U S	SANTAFE(SM)	2004	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SANTAFE(SM)	2004	G 3.5 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SANTAFE(SM)	2004	G 3.5 DOHC	ABS [2WD]		√	√	√	√	
U S	SANTAFE(SM)	2004	G 3.5 DOHC	ABS [4WD]		√	√	√	√	
U S	SANTAFE(SM)	2004	G 3.5 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	SANTAFE(SM)	2004	G 3.5 DOHC	4WD [4WD Control]		√	√			
U S	SANTAFE(SM)	2003	G 2.4 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055
U S	SANTAFE(SM)	2003	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SANTAFE(SM)	2003	G 2.4 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SANTAFE(SM)	2003	G 2.4 DOHC	ABS [2WD]		√	√	√	√	
U S	SANTAFE(SM)	2003	G 2.4 DOHC	ABS [4WD]		√	√	√	√	
U S	SANTAFE(SM)	2003	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	SANTAFE(SM)	2003	G 2.4 DOHC	4WD [4WD Control]		√	√			
U S	SANTAFE(SM)	2003	G 2.7 DOHC	ENGINE [Engine Control]		√	√	√	√	0015, 0055, 0117, 0120
U S	SANTAFE(SM)	2003	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SANTAFE(SM)	2003	G 2.7 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SANTAFE(SM)	2003	G 2.7 DOHC	ABS [2WD]		√	√	√	√	
U S	SANTAFE(SM)	2003	G 2.7 DOHC	ABS [4WD]		√	√	√	√	
U S	SANTAFE(SM)	2003	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	SANTAFE(SM)	2003	G 2.7 DOHC	4WD [4WD Control]		√	√			
U S	SANTAFE(SM)	2003	G 3.5 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055
U S	SANTAFE(SM)	2003	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SANTAFE(SM)	2003	G 3.5 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SANTAFE(SM)	2003	G 3.5 DOHC	ABS [2WD]		√	√	√	√	
U S	SANTAFE(SM)	2003	G 3.5 DOHC	ABS [4WD]		√	√	√	√	
U S	SANTAFE(SM)	2003	G 3.5 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	SANTAFE(SM)	2002	G 2.4 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055

U S	SANTAFE(SM)	2002	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SANTAFE(SM)	2002	G 2.4 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SANTAFE(SM)	2002	G 2.4 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	
U S	SANTAFE(SM)	2002	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	SANTAFE(SM)	2002	G 2.4 DOHC	4WD [4WD Control]		√	√			
U S	SANTAFE(SM)	2002	G 2.7 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0117, 0120
U S	SANTAFE(SM)	2002	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SANTAFE(SM)	2002	G 2.7 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SANTAFE(SM)	2002	G 2.7 DOHC	ABS [2WD]		√	√	√	√	
U S	SANTAFE(SM)	2002	G 2.7 DOHC	ABS [4WD]		√	√	√	√	
U S	SANTAFE(SM)	2002	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	SANTAFE(SM)	2002	G 2.7 DOHC	4WD [4WD Control]		√	√			
U S	SANTAFE(SM)	2001	G 2.4 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055
U S	SANTAFE(SM)	2001	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SANTAFE(SM)	2001	G 2.4 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SANTAFE(SM)	2001	G 2.4 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	
U S	SANTAFE(SM)	2001	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	SANTAFE(SM)	2001	G 2.4 DOHC	4WD [4WD Control]		√	√			
U S	SANTAFE(SM)	2001	G 2.7 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0117, 0120
U S	SANTAFE(SM)	2001	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SANTAFE(SM)	2001	G 2.7 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SANTAFE(SM)	2001	G 2.7 DOHC	ABS [Anti - Lock Brake (2WD)]		√	√	√	√	
U S	SANTAFE(SM)	2001	G 2.7 DOHC	ABS [Anti - Lock Brake (4WD)]		√	√	√	√	
U S	SANTAFE(SM)	2001	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	SANTAFE(SM)	2001	G 2.7 DOHC	4WD [4WD Control]		√	√			
U S	SCOUPE(L1)	1996	G 1.5 SOHC	ENGINE [Engine Control (Turbo)]		√	√	√	√	
U S	SCOUPE(L1)	1996	G 1.5 SOHC	ENGINE [Engine Control (California)]		√	√	√	√	
U S	SCOUPE(L1)	1996	G 1.5 SOHC	ENGINE [Engine Control (Federal)]		√	√	√	√	
U S	SCOUPE(L1)	1995	G 1.5 SOHC	ENGINE [Engine Control (Turbo)]		√	√	√	√	
U S	SCOUPE(L1)	1995	G 1.5 SOHC	ENGINE [Engine Control (California)]		√	√	√	√	
U S	SCOUPE(L1)	1995	G 1.5 SOHC	ENGINE [Engine Control (Federal)]		√	√	√	√	
U S	SCOUPE(L1)	1994	G 1.5 SOHC	ENGINE [Engine Control (Turbo)]		√	√	√	√	
U S	SCOUPE(L1)	1994	G 1.5 SOHC	ENGINE [Engine Control (California)]		√	√	√	√	
U S	SCOUPE(L1)	1994	G 1.5 SOHC	ENGINE [Engine Control (Federal)]		√	√	√	√	
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0051, 0055, 0116, 0120, 0158
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	MCU [HEV Motor Control System]	√	√	√	√		0046, 0101
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	BMS [HEV Battery System]	√	√	√	√	√	0130
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	AT [Automatic Transaxle]	√	√	√	√		0036, 0121
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	ESCAHB [ESC / AHB]	√	√	√	√	√	0059, 0064, 0069
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	EPB [Electric Parking Brake]	√	√	√	√	√	

U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	ODS [Weight Classification System]	√	√	√	√		
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	SCC [Smart Cruise Control]	√	√	√	√		
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	LDWS [Lane Departure Warning System]	√	√	√	√		0131, 0132
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	AAF [Active Air Flap]	√	√	√	√	√	
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	AMP [Amplifier]						0006
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	CLU [Cluster Module]	√	√	√	√	√	
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	ADM [Assist Door Module]	√	√	√	√	√	
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	CGW [Central Gateway]	√	√	√			0052
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	TMU [Telematics Unit]	√	√	√			
U S	SONATA HEV(LF HEV)	2017	G 2.0 HEV	VESS [Virtual Engine Sound System]	√	√	√		√	
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0051, 0055, 0116, 0120, 0158
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	MCU [HEV Motor Control System]	√	√	√	√		0046, 0101
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	HCULDC [HCU / LDC]	√	√	√	√	√	0030, 0049, 0050, 0083

U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	BMS [HEV Battery System]	√	√	√	√	√	0130
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	AT [Automatic Transaxle]	√	√	√	√		0036, 0121
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	ESCAHB [ESC / AHB]	√	√	√	√	√	0059, 0064, 0069
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	ODS [Weight Classification System]	√	√	√	√		
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	SCC [Smart Cruise Control]	√	√	√	√		
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	LDWS [Lane Departure Warning System]	√	√	√	√		0131, 0132
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	AAF [Active Air Flap]	√	√	√	√	√	
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	AMP [Amplifier]						0006
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	CLU [Cluster Module]	√	√	√	√	√	
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	ADM [Assist Door Module]	√	√	√	√	√	
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	DDM [Driver Door Module]	√	√	√	√	√	
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	CGW [Central Gateway]	√	√	√			0052
U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	TMU [Telematics Unit]	√	√	√			

U S	SONATA HEV(LF HEV)	2016	G 2.0 HEV	VESS [Virtual Engine Sound System]	√	√	√		√	
U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0054, 0013, 0120, 0158
U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	MCU [HEV Motor System]	√	√	√	√	√	0046, 0101
U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	HCU [HEV Control System]	√	√	√	√		0030, 0049, 0050, 0083
U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	BMS [HEV Battery System]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	LDC [Low DC / DC Converter]	√	√	√	√		
U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	AT [Automatic Transaxle]	√	√	√	√	√	0036, 0121
U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	ODS [Weight Classification System]	√	√	√	√		0156
U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	EPS [Power Steering]	√	√	√	√		0094
U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	AAF [Active Air Flap]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	SMKCODE [Smart Key Code Saving]				√		
U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	PDM [Power Distribution Module]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	CLU [Cluster Module]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	SJB [Smart Junction Block]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	TMU [Telematics Unit]	√	√	√			

U S	SONATA HYBRID(YF HEV)	2015	G 2.4 HEV	CODE [Transmitter Code Saving]				√		0026
U S	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0054, 0013, 0120, 0158
U S	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	MCU [HEV Motor System]	√	√	√	√	√	0046, 0101
U S	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	HCU [HEV Control System]	√	√	√	√		0030, 0049, 0050, 0083
U S	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	LDC [Low DC / DC Converter]	√	√	√	√		
U S	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	AT [Automatic Transaxle]	√	√	√	√	√	0036, 0121
U S	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	AHB [Active Hydraulic Booster]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	ODS [Weight Classification System]	√	√	√	√		0156
U S	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	EPS [Power Steering]	√	√	√	√		0094
U S	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	AAF [Active Air Flap]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	SMKCODE [Smart Key Code Saving]				√		
U S	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	PDM [Power Distribution Module]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	CLU [Cluster Module]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	SJB [Smart Junction Block]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2014	G 2.4 HEV	TMU [Telematics Unit]	√	√	√			

U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0054, 0013, 0120, 0158
U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	MCU [HEV Motor System]	√	√	√	√	√	0046, 0101
U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	HCU [HEV Control System]	√	√	√	√		0030, 0049, 0050, 0083
U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	BMS [HEV Battery System]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	LDC [Low DC / DC Converter]	√	√	√	√		
U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	AT [Automatic Transaxle]	√	√	√	√	√	0036, 0121
U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	AHB [Active Hydraulic Booster]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	ODS [Weight Classification System]	√	√	√	√		0156
U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	EPS [Power Steering]	√	√	√	√		0094
U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	AAF [Active Air Flap]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	SMKCODE [Smart Key Code Saving]				√		
U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	PDM [Power Distribution Module]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	SJB [Smart Junction Block]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	TMU [Telematics Unit]	√	√	√			
U S	SONATA HYBRID(YF HEV)	2013	G 2.4 HEV	CODE [Transmitter Code Saving]				√		0026

U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	ENGINE [Engine Control]	√	√	√	√		0116, 0015, 0054, 0013, 0120, 0158
U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	MCU [HEV Motor System]	√	√	√	√	√	0046, 0101
U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	HCU [HEV Control System]	√	√	√	√		0030, 0049, 0050, 0083
U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	BMS [HEV Battery System]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	LDC [Low DC / DC Converter]	√	√	√	√		
U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	AT [Automatic Transaxle]	√	√	√	√	√	0036, 0121
U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	AHB [Active Hydraulic Booster]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	ODS [Weight Classification System]	√	√	√	√		0156
U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	EPS [Power Steering]	√	√	√	√		0094, 0096, 0094
U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	AAF [Active Air Flap]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	SMKCODE [Smart Key Code Saving]				√		
U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	PDM [Power Distribution Module]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	CLU [Cluster Module]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	SJB [Smart Junction Block]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	TMU [Telematics Unit]	√	√	√			
U S	SONATA HYBRID(YF HEV)	2012	G 2.4 HEV	CODE [Transmitter Code Saving]				√		0026

U S	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	ENGINE [Engine Control]	√	√	√	√		
U S	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	MCU [HEV Motor System]	√	√	√	√	√	0046, 0101
U S	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	HCU [HEV Control System]	√	√	√	√		0030, 0049, 0050, 0083
U S	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	BMS [HEV Battery System]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	LDC [Low DC / DC Converter]	√	√	√	√		
U S	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	AT [Automatic Transaxle]	√	√	√	√	√	0036, 0121
U S	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	AHB [Active Hydraulic Booster]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	ODS [Weight Classification System]	√	√	√	√		0156
U S	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	AHLS [Auto Headlamp Leveling System]	√	√	√	√		0090
U S	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	AAF [Active Air Flap]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	PDM [Power Distribution Module]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	SMKCODE [Smart Key Code Saving]				√		
U S	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	SJB [Smart Junction Block]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	CLU [Cluster Module]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA HYBRID(YF HEV)	2011	G 2.4 HEV	CODE [Transmitter Code Saving]				√		0026
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0051, 0055, 0116, 0120, 0158

U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	MCU [HEV Motor Control System]	√	√	√	√		0046, 0101
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	HCULDC [HCU / LDC]	√	√	√	√	√	0030, 0049, 0050, 0083
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	BMS [HEV Battery System]	√	√	√	√	√	0130
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	AT [Automatic Transaxle]	√	√	√	√		0036, 0121
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	ESCAHB [ESP / AHB]	√	√	√	√	√	0059, 0064, 0069
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	ODS [Weight Classification System]	√	√	√	√		
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	OBC [On Board Charger]	√	√	√	√		
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	SCC [Smart Cruise Control]	√	√	√	√		
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	TPMS [Tire Pressure Monitoring System]	√	√	√			
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	LDWS [Lane Departure Warning System]	√	√	√	√		0131, 0132
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	AAF [Active Air Flap]	√	√	√	√	√	
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	AMP [Amplifier]						0006
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	ADM [Assist Door Module]	√	√	√	√	√	
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	DDM [Driver Door Module]	√	√	√	√	√	
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	BCM [Body Control Module]	√	√	√	√	√	

U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	CLU [Cluster Module]	√	√	√	√	√	
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	CGW [Central Gateway]	√	√	√			0052
U S	SONATA PHEV(LF PHEV)	2017	G 2.0 PHEV	TMU [Telematics Unit]	√	√	√			
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	ENGINE [Engine Control]	√	√	√	√	√	0013, 0015, 0051, 0055, 0116, 0120, 0158
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	MCU [HEV Motor Control System]	√	√	√	√		0046, 0101
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	HCULDC [HCU / LDC]	√	√	√	√	√	0030, 0049, 0050, 0083
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	BMS [HEV Battery System]	√	√	√	√	√	0130
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	AT [Automatic Transaxle]	√	√	√	√		0036, 0121
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	ESCAHB [ESP / AHB]	√	√	√	√	√	0059, 0064, 0069
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	EPB [Electric Parking Brake]	√	√	√	√	√	
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	ODS [Weight Classification System]	√	√	√	√		
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	OBC [On Board Charger]	√	√	√	√		
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	SCC [Smart Cruise Control]	√	√	√	√		
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	TPMS [Tire Pressure Monitoring System]	√	√	√			
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	LDWS [Lane Departure Warning System]	√	√	√	√		0131, 0132
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	AAF [Active Air Flap]	√	√	√	√	√	

U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	AMP [Amplifier]						0006
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	ADM [Assist Door Module]	√	√	√	√	√	
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	DDM [Driver Door Module]	√	√	√	√	√	
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	CLU [Cluster Module]	√	√	√	√	√	
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	CGW [Central Gateway]	√	√	√			0052
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	TMU [Telematics Unit]	√	√	√			
U S	SONATA PHEV(LF PHEV)	2016	G 2.0 PHEV	VESS [Virtual Engine Sound System]	√	√	√		√	
U S	SONATA(EF)	2005	G 2.4 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055, 0116
U S	SONATA(EF)	2005	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SONATA(EF)	2005	G 2.4 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(EF)	2005	G 2.4 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(EF)	2005	G 2.4 DOHC	AIRBAG [Airbag Control]		√	√			
U S	SONATA(EF)	2005	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	SONATA(EF)	2005	G 2.7 DOHC	ENGINE [Engine Control]		√	√	√	√	0015, 0055, 0116, 0117, 0120
U S	SONATA(EF)	2005	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SONATA(EF)	2005	G 2.7 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(EF)	2005	G 2.7 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(EF)	2005	G 2.7 DOHC	AIRBAG [Airbag Control]		√	√			
U S	SONATA(EF)	2005	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	SONATA(EF)	2004	G 2.4 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055
U S	SONATA(EF)	2004	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SONATA(EF)	2004	G 2.4 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(EF)	2004	G 2.4 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(EF)	2004	G 2.4 DOHC	AIRBAG [Airbag Control]		√	√			
U S	SONATA(EF)	2004	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	SONATA(EF)	2004	G 2.7 DOHC	ENGINE [Engine Control]		√	√	√	√	0015, 0055, 0117, 0120
U S	SONATA(EF)	2004	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SONATA(EF)	2004	G 2.7 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(EF)	2004	G 2.7 DOHC	AIRBAG [Airbag Control]		√	√			
U S	SONATA(EF)	2004	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	SONATA(EF)	2003	G 2.4 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055
U S	SONATA(EF)	2003	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SONATA(EF)	2003	G 2.4 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(EF)	2003	G 2.4 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064

U S	SONATA(EF)	2003	G 2.4 DOHC	AIRBAG [Airbag Control]		√	√			
U S	SONATA(EF)	2003	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	SONATA(EF)	2003	G 2.7 DOHC	ENGINE [Engine Control]		√	√	√	√	0015, 0055, 0117, 0120
U S	SONATA(EF)	2003	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SONATA(EF)	2003	G 2.7 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(EF)	2003	G 2.7 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(EF)	2003	G 2.7 DOHC	AIRBAG [Airbag Control]		√	√			
U S	SONATA(EF)	2003	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	SONATA(EF)	2002	G 2.4 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055
U S	SONATA(EF)	2002	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SONATA(EF)	2002	G 2.4 DOHC	ABS [February15 / 2002~ (Bosch)]		√	√	√	√	0064
U S	SONATA(EF)	2002	G 2.4 DOHC	ABS [~February15 / 2002 (ITT)]		√	√	√	√	0064
U S	SONATA(EF)	2002	G 2.4 DOHC	AIRBAG [Airbag Control]		√	√			
U S	SONATA(EF)	2002	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	SONATA(EF)	2002	G 2.7 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0117, 0120
U S	SONATA(EF)	2002	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SONATA(EF)	2002	G 2.7 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(EF)	2002	G 2.7 DOHC	ABS [February15 / 2002~ (Bosch)]		√	√	√	√	0064
U S	SONATA(EF)	2002	G 2.7 DOHC	ABS [~February15 / 2002 (ITT)]		√	√	√	√	0064
U S	SONATA(EF)	2002	G 2.7 DOHC	AIRBAG [Airbag Control]		√	√			
U S	SONATA(EF)	2002	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	SONATA(EF)	2001	G 2.4 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055
U S	SONATA(EF)	2001	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SONATA(EF)	2001	G 2.4 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(EF)	2001	G 2.4 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(EF)	2001	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	SONATA(EF)	2001	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	SONATA(EF)	2001	G 2.5 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0117, 0120
U S	SONATA(EF)	2001	G 2.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SONATA(EF)	2001	G 2.5 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(EF)	2001	G 2.5 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(EF)	2001	G 2.5 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	SONATA(EF)	2000	G 2.4 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055
U S	SONATA(EF)	2000	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SONATA(EF)	2000	G 2.4 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(EF)	2000	G 2.4 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(EF)	2000	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	SONATA(EF)	2000	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	SONATA(EF)	2000	G 2.5 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0117, 0120
U S	SONATA(EF)	2000	G 2.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SONATA(EF)	2000	G 2.5 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(EF)	2000	G 2.5 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(EF)	2000	G 2.5 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	SONATA(EF)	2000	G 2.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	SONATA(EF)	1999	G 2.4 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055

U S	SONATA(EF)	1999	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SONATA(EF)	1999	G 2.4 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(EF)	1999	G 2.4 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(EF)	1999	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	SONATA(EF)	1999	G 2.4 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	SONATA(EF)	1999	G 2.5 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0117, 0120
U S	SONATA(EF)	1999	G 2.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SONATA(EF)	1999	G 2.5 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(EF)	1999	G 2.5 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(EF)	1999	G 2.5 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	SONATA(EF)	1999	G 2.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	SONATA(LFA)	2017	G 1.6 T-GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	SONATA(LFA)	2017	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
U S	SONATA(LFA)	2017	G 1.6 T-GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
U S	SONATA(LFA)	2017	G 1.6 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SONATA(LFA)	2017	G 1.6 T-GDI	EPB [Electronic Parking Brake]	√	√	√	√	√	
U S	SONATA(LFA)	2017	G 1.6 T-GDI	OCS [Occupant Classification System]	√	√	√	√		
U S	SONATA(LFA)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA(LFA)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA(LFA)	2017	G 1.6 T-GDI	AIRCON [FATC / MTC]	√	√	√	√	√	
U S	SONATA(LFA)	2017	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	SONATA(LFA)	2017	G 1.6 T-GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	SONATA(LFA)	2017	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	SONATA(LFA)	2017	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
U S	SONATA(LFA)	2017	G 1.6 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SONATA(LFA)	2017	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
U S	SONATA(LFA)	2017	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	SONATA(LFA)	2017	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SONATA(LFA)	2017	G 1.6 T-GDI	AMP [Amplifier]						0006
U S	SONATA(LFA)	2017	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SONATA(LFA)	2017	G 1.6 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	SONATA(LFA)	2017	G 1.6 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	SONATA(LFA)	2017	G 1.6 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	SONATA(LFA)	2017	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA(LFA)	2017	G 1.6 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SONATA(LFA)	2017	G 1.6 T-GDI	TMU [Telematics Unit]	√	√	√			
U S	SONATA(LFA)	2017	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
U S	SONATA(LFA)	2017	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0013, 0123, 0051, 0120, 0158, 0055
U S	SONATA(LFA)	2017	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0121
U S	SONATA(LFA)	2017	G 2.0 T-GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
U S	SONATA(LFA)	2017	G 2.0 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SONATA(LFA)	2017	G 2.0 T-GDI	EPB [Electronic Parking Brake]	√	√	√	√	√	

U S	SONATA(LFA)	2017	G 2.0 T-GDI	OCS [Occupant Classification System]	√	√	√	√		
U S	SONATA(LFA)	2017	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA(LFA)	2017	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA(LFA)	2017	G 2.0 T-GDI	AIRCON [FATC / MTC]	√	√	√	√	√	
U S	SONATA(LFA)	2017	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	SONATA(LFA)	2017	G 2.0 T-GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	SONATA(LFA)	2017	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	SONATA(LFA)	2017	G 2.0 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
U S	SONATA(LFA)	2017	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SONATA(LFA)	2017	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SONATA(LFA)	2017	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
U S	SONATA(LFA)	2017	G 2.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	SONATA(LFA)	2017	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SONATA(LFA)	2017	G 2.0 T-GDI	AMP [Amplifier]						0006
U S	SONATA(LFA)	2017	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SONATA(LFA)	2017	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	SONATA(LFA)	2017	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	SONATA(LFA)	2017	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	SONATA(LFA)	2017	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA(LFA)	2017	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SONATA(LFA)	2017	G 2.0 T-GDI	TMU [Telematics Unit]	√	√	√			
U S	SONATA(LFA)	2017	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0013, 0123, 0051, 0120, 0158, 0055
U S	SONATA(LFA)	2017	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0121
U S	SONATA(LFA)	2017	G 2.4 GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
U S	SONATA(LFA)	2017	G 2.4 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SONATA(LFA)	2017	G 2.4 GDI	EPB [Electronic Parking Brake]	√	√	√	√	√	
U S	SONATA(LFA)	2017	G 2.4 GDI	OCS [Occupant Classification System]	√	√	√	√		
U S	SONATA(LFA)	2017	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA(LFA)	2017	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA(LFA)	2017	G 2.4 GDI	AIRCON [FATC / MTC]	√	√	√	√	√	
U S	SONATA(LFA)	2017	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	SONATA(LFA)	2017	G 2.4 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	SONATA(LFA)	2017	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	SONATA(LFA)	2017	G 2.4 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
U S	SONATA(LFA)	2017	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SONATA(LFA)	2017	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SONATA(LFA)	2017	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
U S	SONATA(LFA)	2017	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	SONATA(LFA)	2017	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SONATA(LFA)	2017	G 2.4 GDI	AMP [Amplifier]						0006
U S	SONATA(LFA)	2017	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SONATA(LFA)	2017	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	SONATA(LFA)	2017	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	

U S	SONATA(LFA)	2017	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	SONATA(LFA)	2017	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA(LFA)	2017	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SONATA(LFA)	2017	G 2.4 GDI	TMU [Telematics Unit]	√	√	√			
U S	SONATA(LFA)	2017	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
U S	SONATA(LFA)	2016	G 1.6 T-GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	SONATA(LFA)	2016	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
U S	SONATA(LFA)	2016	G 1.6 T-GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
U S	SONATA(LFA)	2016	G 1.6 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SONATA(LFA)	2016	G 1.6 T-GDI	EPB [Electronic Parking Brake]	√	√	√	√	√	
U S	SONATA(LFA)	2016	G 1.6 T-GDI	OCS [Occupant Classification System]	√	√	√	√		
U S	SONATA(LFA)	2016	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA(LFA)	2016	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA(LFA)	2016	G 1.6 T-GDI	AIRCON [FATC / MTC]	√	√	√	√	√	
U S	SONATA(LFA)	2016	G 1.6 T-GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	SONATA(LFA)	2016	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	SONATA(LFA)	2016	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
U S	SONATA(LFA)	2016	G 1.6 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SONATA(LFA)	2016	G 1.6 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SONATA(LFA)	2016	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
U S	SONATA(LFA)	2016	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	SONATA(LFA)	2016	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SONATA(LFA)	2016	G 1.6 T-GDI	AMP [Amplifier]						0006
U S	SONATA(LFA)	2016	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SONATA(LFA)	2016	G 1.6 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	SONATA(LFA)	2016	G 1.6 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	SONATA(LFA)	2016	G 1.6 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	SONATA(LFA)	2016	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA(LFA)	2016	G 1.6 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SONATA(LFA)	2016	G 1.6 T-GDI	TMU [Telematics Unit]	√	√	√			
U S	SONATA(LFA)	2016	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
U S	SONATA(LFA)	2016	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0013, 0123, 0051, 0120, 0158, 0055
U S	SONATA(LFA)	2016	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0121
U S	SONATA(LFA)	2016	G 2.0 T-GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
U S	SONATA(LFA)	2016	G 2.0 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SONATA(LFA)	2016	G 2.0 T-GDI	EPB [Electronic Parking Brake]	√	√	√	√	√	
U S	SONATA(LFA)	2016	G 2.0 T-GDI	OCS [Occupant Classification System]	√	√	√	√		
U S	SONATA(LFA)	2016	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA(LFA)	2016	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA(LFA)	2016	G 2.0 T-GDI	AIRCON [FATC / MTC]	√	√	√	√	√	
U S	SONATA(LFA)	2016	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	SONATA(LFA)	2016	G 2.0 T-GDI	SCC [Smart Cruise Control]	√	√	√	√		

U S	SONATA(LFA)	2016	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	SONATA(LFA)	2016	G 2.0 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
U S	SONATA(LFA)	2016	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SONATA(LFA)	2016	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SONATA(LFA)	2016	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
U S	SONATA(LFA)	2016	G 2.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	SONATA(LFA)	2016	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SONATA(LFA)	2016	G 2.0 T-GDI	AMP [Amplifier]						0006
U S	SONATA(LFA)	2016	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SONATA(LFA)	2016	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	SONATA(LFA)	2016	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	SONATA(LFA)	2016	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA(LFA)	2016	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SONATA(LFA)	2016	G 2.0 T-GDI	TMU [Telematics Unit]	√	√	√			
U S	SONATA(LFA)	2016	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
U S	SONATA(LFA)	2016	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0013, 0123, 0051, 0120, 0158, 0055
U S	SONATA(LFA)	2016	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0121
U S	SONATA(LFA)	2016	G 2.4 GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
U S	SONATA(LFA)	2016	G 2.4 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SONATA(LFA)	2016	G 2.4 GDI	EPB [Electronic Parking Brake]	√	√	√	√	√	
U S	SONATA(LFA)	2016	G 2.4 GDI	OCS [Occupant Classification System]	√	√	√	√		
U S	SONATA(LFA)	2016	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA(LFA)	2016	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA(LFA)	2016	G 2.4 GDI	AIRCON [FATC / MTC]	√	√	√	√	√	
U S	SONATA(LFA)	2016	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	SONATA(LFA)	2016	G 2.4 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	SONATA(LFA)	2016	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	SONATA(LFA)	2016	G 2.4 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
U S	SONATA(LFA)	2016	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SONATA(LFA)	2016	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SONATA(LFA)	2016	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
U S	SONATA(LFA)	2016	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	SONATA(LFA)	2016	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SONATA(LFA)	2016	G 2.4 GDI	AMP [Amplifier]						0006
U S	SONATA(LFA)	2016	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SONATA(LFA)	2016	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	SONATA(LFA)	2016	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	SONATA(LFA)	2016	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	SONATA(LFA)	2016	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA(LFA)	2016	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SONATA(LFA)	2016	G 2.4 GDI	TMU [Telematics Unit]	√	√	√			
U S	SONATA(LFA)	2016	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026

U S	SONATA(LFA)	2015	G 1.6 T-GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	SONATA(LFA)	2015	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
U S	SONATA(LFA)	2015	G 1.6 T-GDI	EPB [Electronic Parking Brake]	√	√	√	√	√	
U S	SONATA(LFA)	2015	G 1.6 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SONATA(LFA)	2015	G 1.6 T-GDI	OCS [Occupant Classification System]	√	√	√	√		
U S	SONATA(LFA)	2015	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA(LFA)	2015	G 1.6 T-GDI	AIRCON [FATC / MTC]	√	√	√	√	√	
U S	SONATA(LFA)	2015	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	SONATA(LFA)	2015	G 1.6 T-GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	SONATA(LFA)	2015	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	SONATA(LFA)	2015	G 1.6 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SONATA(LFA)	2015	G 1.6 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SONATA(LFA)	2015	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0131, 0132
U S	SONATA(LFA)	2015	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
U S	SONATA(LFA)	2015	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	SONATA(LFA)	2015	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SONATA(LFA)	2015	G 1.6 T-GDI	AMP [Amplifier]						0006
U S	SONATA(LFA)	2015	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SONATA(LFA)	2015	G 1.6 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SONATA(LFA)	2015	G 1.6 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	SONATA(LFA)	2015	G 1.6 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	SONATA(LFA)	2015	G 1.6 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	SONATA(LFA)	2015	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA(LFA)	2015	G 1.6 T-GDI	TMU [Telematics Unit]	√	√	√			
U S	SONATA(LFA)	2015	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
U S	SONATA(LFA)	2015	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0013, 0123, 0051, 0120, 0158, 0055
U S	SONATA(LFA)	2015	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0121
U S	SONATA(LFA)	2015	G 2.0 T-GDI	EPB [Electronic Parking Brake]	√	√	√	√	√	
U S	SONATA(LFA)	2015	G 2.0 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SONATA(LFA)	2015	G 2.0 T-GDI	OCS [Occupant Classification System]	√	√	√	√		
U S	SONATA(LFA)	2015	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA(LFA)	2015	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA(LFA)	2015	G 2.0 T-GDI	AIRCON [FATC / MTC]	√	√	√	√	√	
U S	SONATA(LFA)	2015	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	SONATA(LFA)	2015	G 2.0 T-GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	SONATA(LFA)	2015	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	SONATA(LFA)	2015	G 2.0 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SONATA(LFA)	2015	G 2.0 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SONATA(LFA)	2015	G 2.0 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0131, 0132
U S	SONATA(LFA)	2015	G 2.0 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
U S	SONATA(LFA)	2015	G 2.0 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	SONATA(LFA)	2015	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SONATA(LFA)	2015	G 2.0 T-GDI	AMP [Amplifier]						0006

U S	SONATA(LFA)	2015	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SONATA(LFA)	2015	G 2.0 T-GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	SONATA(LFA)	2015	G 2.0 T-GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	SONATA(LFA)	2015	G 2.0 T-GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	SONATA(LFA)	2015	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA(LFA)	2015	G 2.0 T-GDI	TMU [Telematics Unit]	√	√	√			
U S	SONATA(LFA)	2015	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
U S	SONATA(LFA)	2015	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0013, 0123, 0051, 0120, 0158, 0055
U S	SONATA(LFA)	2015	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√		0007, 0121
U S	SONATA(LFA)	2015	G 2.4 GDI	EPB [Electronic Parking Brake]	√	√	√	√	√	
U S	SONATA(LFA)	2015	G 2.4 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SONATA(LFA)	2015	G 2.4 GDI	OCS [Occupant Classification System]	√	√	√	√		
U S	SONATA(LFA)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA(LFA)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA(LFA)	2015	G 2.4 GDI	AIRCON [FATC / MTC]	√	√	√	√	√	
U S	SONATA(LFA)	2015	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	SONATA(LFA)	2015	G 2.4 GDI	SCC [Smart Cruise Control]	√	√	√	√		
U S	SONATA(LFA)	2015	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	SONATA(LFA)	2015	G 2.4 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	SONATA(LFA)	2015	G 2.4 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	SONATA(LFA)	2015	G 2.4 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		0131, 0132
U S	SONATA(LFA)	2015	G 2.4 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
U S	SONATA(LFA)	2015	G 2.4 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	SONATA(LFA)	2015	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	SONATA(LFA)	2015	G 2.4 GDI	AMP [Amplifier]						0006
U S	SONATA(LFA)	2015	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SONATA(LFA)	2015	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	SONATA(LFA)	2015	G 2.4 GDI	PSM [Power Seat Module]	√	√	√	√	√	0133
U S	SONATA(LFA)	2015	G 2.4 GDI	ADM [Assist Door Module]	√	√	√	√	√	
U S	SONATA(LFA)	2015	G 2.4 GDI	DDM [Driver Door Module]	√	√	√	√	√	
U S	SONATA(LFA)	2015	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA(LFA)	2015	G 2.4 GDI	TMU [Telematics Unit]	√	√	√			
U S	SONATA(LFA)	2015	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
U S	SONATA(NF)	2010	G 2.4 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0120, 0158, 0055
U S	SONATA(NF)	2010	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SONATA(NF)	2010	G 2.4 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SONATA(NF)	2010	G 2.4 DOHC	ODS [Weight Classification]	√	√	√	√		0156
U S	SONATA(NF)	2010	G 2.4 DOHC	AIRBAG [Airbag Control Unit]	√	√	√			0109
U S	SONATA(NF)	2010	G 2.4 DOHC	EPS [Electronic Power Steering]		√	√	√		
U S	SONATA(NF)	2010	G 2.4 DOHC	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SONATA(NF)	2010	G 2.4 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SONATA(NF)	2010	G 2.4 DOHC	BCM [Body Control Module]	√			√	√	
U S	SONATA(NF)	2010	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	SONATA(NF)	2010	G 3.3 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0100, 0116, 0158

U S	SONATA(NF)	2010	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SONATA(NF)	2010	G 3.3 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SONATA(NF)	2010	G 3.3 DOHC	ODS [Weight Classification]	√	√	√	√		0156
U S	SONATA(NF)	2010	G 3.3 DOHC	AIRBAG [Airbag Control Unit]	√	√	√			0109
U S	SONATA(NF)	2010	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA(NF)	2010	G 3.3 DOHC	EPS [Electronic Power Steering]			√	√		
U S	SONATA(NF)	2010	G 3.3 DOHC	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SONATA(NF)	2010	G 3.3 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SONATA(NF)	2010	G 3.3 DOHC	BCM [Body Control Module]	√			√	√	
U S	SONATA(NF)	2010	G 3.3 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	SONATA(NF)	2009	G 2.4 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0120, 0158, 0055
U S	SONATA(NF)	2009	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SONATA(NF)	2009	G 2.4 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SONATA(NF)	2009	G 2.4 DOHC	ODS [Weight Classification]	√	√	√	√		0156
U S	SONATA(NF)	2009	G 2.4 DOHC	AIRBAG [Airbag Control Unit]	√	√	√			0109
U S	SONATA(NF)	2009	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA(NF)	2009	G 2.4 DOHC	EPS [Electronic Power Steering]			√	√	√	
U S	SONATA(NF)	2009	G 2.4 DOHC	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SONATA(NF)	2009	G 2.4 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SONATA(NF)	2009	G 2.4 DOHC	BCM [Body Control Module]	√			√	√	
U S	SONATA(NF)	2009	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	SONATA(NF)	2009	G 3.3 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0100, 0116, 0158
U S	SONATA(NF)	2009	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SONATA(NF)	2009	G 3.3 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SONATA(NF)	2009	G 3.3 DOHC	ODS [Weight Classification]	√	√	√	√		0156
U S	SONATA(NF)	2009	G 3.3 DOHC	AIRBAG [Airbag Control Unit]	√	√	√			0109
U S	SONATA(NF)	2009	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA(NF)	2009	G 3.3 DOHC	EPS [Electronic Power Steering]			√	√	√	
U S	SONATA(NF)	2009	G 3.3 DOHC	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SONATA(NF)	2009	G 3.3 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SONATA(NF)	2009	G 3.3 DOHC	BCM [Body Control Module]	√			√	√	
U S	SONATA(NF)	2009	G 3.3 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	SONATA(NF)	2008	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SONATA(NF)	2008	G 2.4 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SONATA(NF)	2008	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
U S	SONATA(NF)	2008	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA(NF)	2008	G 2.4 DOHC	EPS [Electronic Power Steering]			√	√	√	
U S	SONATA(NF)	2008	G 2.4 DOHC	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SONATA(NF)	2008	G 2.4 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SONATA(NF)	2008	G 2.4 DOHC	BCM [Body Control Module]	√			√	√	
U S	SONATA(NF)	2008	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	SONATA(NF)	2008	G 3.3 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0100, 0158, 0055, 0055
U S	SONATA(NF)	2008	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SONATA(NF)	2008	G 3.3 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064

U S	SONATA(NF)	2008	G 3.3 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
U S	SONATA(NF)	2008	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA(NF)	2008	G 3.3 DOHC	EPS [Electronic Power Steering]		√	√	√		
U S	SONATA(NF)	2008	G 3.3 DOHC	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SONATA(NF)	2008	G 3.3 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SONATA(NF)	2008	G 3.3 DOHC	BCM [Body Control Module]	√			√	√	
U S	SONATA(NF)	2008	G 3.3 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	SONATA(NF)	2007	G 2.4 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0117, 0015, 0120, 0158, 0055
U S	SONATA(NF)	2007	G 2.4 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SONATA(NF)	2007	G 2.4 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SONATA(NF)	2007	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
U S	SONATA(NF)	2007	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA(NF)	2007	G 2.4 DOHC	EPS [Electronic Power Steering]		√	√	√		
U S	SONATA(NF)	2007	G 2.4 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	SONATA(NF)	2007	G 2.4 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SONATA(NF)	2007	G 2.4 DOHC	BCM [Body Control Module]	√			√	√	
U S	SONATA(NF)	2007	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	SONATA(NF)	2007	G 3.3 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0100, 0116, 0158
U S	SONATA(NF)	2007	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SONATA(NF)	2007	G 3.3 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SONATA(NF)	2007	G 3.3 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
U S	SONATA(NF)	2007	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA(NF)	2007	G 3.3 DOHC	EPS [Electronic Power Steering]		√	√	√		
U S	SONATA(NF)	2007	G 3.3 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	SONATA(NF)	2007	G 3.3 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SONATA(NF)	2007	G 3.3 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	SONATA(NF)	2006	G 2.4 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0117, 0015, 0120, 0158, 0055
U S	SONATA(NF)	2006	G 2.4 DOHC	AT [5 - Speed]	√	√	√	√	√	
U S	SONATA(NF)	2006	G 2.4 DOHC	AT [4 - Speed]	√	√	√	√	√	
U S	SONATA(NF)	2006	G 2.4 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SONATA(NF)	2006	G 2.4 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
U S	SONATA(NF)	2006	G 2.4 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA(NF)	2006	G 2.4 DOHC	EPS [Electronic Power Steering]		√	√	√		
U S	SONATA(NF)	2006	G 2.4 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	SONATA(NF)	2006	G 2.4 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SONATA(NF)	2006	G 2.4 DOHC	BCM [Body Control Module]	√			√	√	
U S	SONATA(NF)	2006	G 2.4 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	SONATA(NF)	2006	G 3.3 DOHC	ENGINE [Engine Control]	√	√	√	√	√	
U S	SONATA(NF)	2006	G 3.3 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	SONATA(NF)	2006	G 3.3 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	SONATA(NF)	2006	G 3.3 DOHC	AIRBAG [Airbag Control]	√	√	√			0109
U S	SONATA(NF)	2006	G 3.3 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA(NF)	2006	G 3.3 DOHC	EPS [Electronic Power Steering]		√	√	√		

U S	SONATA(NF)	2006	G 3.3 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√	√	√	
U S	SONATA(NF)	2006	G 3.3 DOHC	IMMO [Immobilizer]				√		
U S	SONATA(NF)	2006	G 3.3 DOHC	BCM [Body Control Module]	√			√	√	
U S	SONATA(NF)	2006	G 3.3 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	SONATA(Y2)	1994	G 2.0 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(Y2)	1994	G 2.0 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(Y2)	1994	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√	√		
U S	SONATA(Y2)	1994	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		
U S	SONATA(Y2)	1994	G 3.0 SOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(Y2)	1994	G 3.0 SOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(Y2)	1994	G 3.0 SOHC	AIRBAG [Airbag Control]		√	√	√		
U S	SONATA(Y2)	1994	G 3.0 SOHC	IMMO [Immobilizer]		√	√	√		
U S	SONATA(Y2)	1993	G 2.0 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(Y2)	1993	G 2.0 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(Y2)	1993	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√	√		
U S	SONATA(Y2)	1993	G 3.0 SOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(Y2)	1993	G 3.0 SOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(Y2)	1993	G 3.0 SOHC	AIRBAG [Airbag Control]		√	√	√		
U S	SONATA(Y2)	1992	G 2.0 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(Y2)	1992	G 2.0 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(Y2)	1992	G 3.0 SOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(Y2)	1992	G 3.0 SOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(Y2)	1992	G 3.0 SOHC	AIRBAG [Airbag Control]		√	√	√		
U S	SONATA(Y2)	1991	G 2.4 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(Y2)	1991	G 2.4 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(Y2)	1991	G 2.4 DOHC	AIRBAG [Airbag Control]		√	√	√		
U S	SONATA(Y2)	1991	G 3.0 SOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(Y2)	1991	G 3.0 SOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(Y2)	1991	G 3.0 SOHC	AIRBAG [Airbag Control]		√	√	√		
U S	SONATA(Y2)	1990	G 2.4 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(Y2)	1990	G 2.4 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(Y2)	1990	G 2.4 DOHC	AIRBAG [Airbag Control]		√	√	√		
U S	SONATA(Y2)	1990	G 3.0 SOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(Y2)	1990	G 3.0 SOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(Y2)	1990	G 3.0 SOHC	AIRBAG [Airbag Control]		√	√	√		
U S	SONATA(Y2)	1989	G 2.4 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(Y2)	1989	G 2.4 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(Y2)	1989	G 2.4 DOHC	AIRBAG [Airbag Control]		√	√	√		
U S	SONATA(Y2)	1989	G 3.0 SOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(Y2)	1989	G 3.0 SOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(Y2)	1989	G 3.0 SOHC	AIRBAG [Airbag Control]		√	√	√		
U S	SONATA(Y3)	1998	G 2.0 DOHC	ENGINE [Engine Control]		√	√	√	√	
U S	SONATA(Y3)	1998	G 2.0 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(Y3)	1998	G 2.0 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(Y3)	1998	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√	√		

U S	SONATA(Y3)	1998	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		
U S	SONATA(Y3)	1998	G 3.0 SOHC	ENGINE [Engine Control]		√	√	√	√	
U S	SONATA(Y3)	1998	G 3.0 SOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(Y3)	1998	G 3.0 SOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(Y3)	1998	G 3.0 SOHC	AIRBAG [Airbag Control]		√	√	√		
U S	SONATA(Y3)	1998	G 3.0 SOHC	IMMO [Immobilizer]		√	√	√		
U S	SONATA(Y3)	1997	G 2.0 DOHC	ENGINE [Engine Control]		√	√	√	√	
U S	SONATA(Y3)	1997	G 2.0 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(Y3)	1997	G 2.0 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(Y3)	1997	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√	√		
U S	SONATA(Y3)	1997	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		
U S	SONATA(Y3)	1997	G 3.0 SOHC	ENGINE [Engine Control]		√	√	√	√	
U S	SONATA(Y3)	1997	G 3.0 SOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(Y3)	1997	G 3.0 SOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(Y3)	1997	G 3.0 SOHC	IMMO [Immobilizer]		√	√	√		
U S	SONATA(Y3)	1996	G 2.0 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(Y3)	1996	G 2.0 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(Y3)	1996	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√	√		
U S	SONATA(Y3)	1996	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		
U S	SONATA(Y3)	1996	G 3.0 SOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(Y3)	1996	G 3.0 SOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(Y3)	1996	G 3.0 SOHC	AIRBAG [Airbag Control]		√	√	√		
U S	SONATA(Y3)	1996	G 3.0 SOHC	IMMO [Immobilizer]		√	√	√		
U S	SONATA(Y3)	1995	G 2.0 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(Y3)	1995	G 2.0 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(Y3)	1995	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√	√		
U S	SONATA(Y3)	1995	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		
U S	SONATA(Y3)	1995	G 3.0 SOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(Y3)	1995	G 3.0 SOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(Y3)	1995	G 3.0 SOHC	AIRBAG [Airbag Control]		√	√	√		
U S	SONATA(Y3)	1995	G 3.0 SOHC	IMMO [Immobilizer]		√	√	√		
U S	SONATA(Y3)	1994	G 2.0 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(Y3)	1994	G 2.0 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(Y3)	1994	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√	√		
U S	SONATA(Y3)	1994	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		
U S	SONATA(Y3)	1994	G 3.0 SOHC	TCS [Traction Control System]		√	√	√	√	
U S	SONATA(Y3)	1994	G 3.0 SOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	SONATA(Y3)	1994	G 3.0 SOHC	AIRBAG [Airbag Control]		√	√	√		
U S	SONATA(Y3)	1994	G 3.0 SOHC	IMMO [Immobilizer]		√	√	√		
U S	SONATA(YFA)	2014	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0105, 0116, 0120, 0158
U S	SONATA(YFA)	2014	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SONATA(YFA)	2014	G 2.0 T-GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0011
U S	SONATA(YFA)	2014	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA(YFA)	2014	G 2.0 T-GDI	ODS [Weight Classification System]	√	√	√	√		0156

U S	SONATA(YFA)	2014	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA(YFA)	2014	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA(YFA)	2014	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	SONATA(YFA)	2014	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SONATA(YFA)	2014	G 2.0 T-GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
U S	SONATA(YFA)	2014	G 2.0 T-GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SONATA(YFA)	2014	G 2.0 T-GDI	SMKCODE [Smart Key Code Saving]				√		
U S	SONATA(YFA)	2014	G 2.0 T-GDI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	SONATA(YFA)	2014	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	SONATA(YFA)	2014	G 2.0 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SONATA(YFA)	2014	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA(YFA)	2014	G 2.0 T-GDI	TMU [Telematics Unit]	√	√	√			
U S	SONATA(YFA)	2014	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
U S	SONATA(YFA)	2014	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0105, 0116, 0120, 0158
U S	SONATA(YFA)	2014	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SONATA(YFA)	2014	G 2.4 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0011
U S	SONATA(YFA)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA(YFA)	2014	G 2.4 GDI	ODS [Weight Classification System]	√	√	√	√		0156
U S	SONATA(YFA)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA(YFA)	2014	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA(YFA)	2014	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	SONATA(YFA)	2014	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SONATA(YFA)	2014	G 2.4 GDI	BSD [Blind Spot Detection]	√	√	√	√	√	
U S	SONATA(YFA)	2014	G 2.4 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SONATA(YFA)	2014	G 2.4 GDI	SMKCODE [Smart Key Code Saving]				√		
U S	SONATA(YFA)	2014	G 2.4 GDI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	SONATA(YFA)	2014	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	SONATA(YFA)	2014	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	SONATA(YFA)	2014	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SONATA(YFA)	2014	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA(YFA)	2014	G 2.4 GDI	TMU [Telematics Unit]	√	√	√			
U S	SONATA(YFA)	2014	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
U S	SONATA(YFA)	2013	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0105, 0116, 0120, 0158
U S	SONATA(YFA)	2013	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SONATA(YFA)	2013	G 2.0 T-GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0011
U S	SONATA(YFA)	2013	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA(YFA)	2013	G 2.0 T-GDI	ODS [Weight Classification System]	√	√	√	√		0156
U S	SONATA(YFA)	2013	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA(YFA)	2013	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA(YFA)	2013	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	SONATA(YFA)	2013	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SONATA(YFA)	2013	G 2.0 T-GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SONATA(YFA)	2013	G 2.0 T-GDI	SMKCODE [Smart Key Code Saving]				√		

U S	SONATA(YFA)	2013	G 2.0 T-GDI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	SONATA(YFA)	2013	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	SONATA(YFA)	2013	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	SONATA(YFA)	2013	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA(YFA)	2013	G 2.0 T-GDI	TMU [Telematics Unit]	√	√	√			
U S	SONATA(YFA)	2013	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
U S	SONATA(YFA)	2013	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0105, 0116, 0120, 0158
U S	SONATA(YFA)	2013	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SONATA(YFA)	2013	G 2.4 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0011
U S	SONATA(YFA)	2013	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA(YFA)	2013	G 2.4 GDI	ODS [Weight Classification System]	√	√	√	√		0156
U S	SONATA(YFA)	2013	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA(YFA)	2013	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA(YFA)	2013	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	SONATA(YFA)	2013	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SONATA(YFA)	2013	G 2.4 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SONATA(YFA)	2013	G 2.4 GDI	SMKCODE [Smart Key Code Saving]				√		
U S	SONATA(YFA)	2013	G 2.4 GDI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	SONATA(YFA)	2013	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	SONATA(YFA)	2013	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	SONATA(YFA)	2013	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SONATA(YFA)	2013	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA(YFA)	2013	G 2.4 GDI	TMU [Telematics Unit]	√	√	√			
U S	SONATA(YFA)	2013	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
U S	SONATA(YFA)	2012	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0105, 0116, 0120, 0158
U S	SONATA(YFA)	2012	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SONATA(YFA)	2012	G 2.0 T-GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0011
U S	SONATA(YFA)	2012	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA(YFA)	2012	G 2.0 T-GDI	ODS [Weight Classification System]	√	√	√	√		0156
U S	SONATA(YFA)	2012	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA(YFA)	2012	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA(YFA)	2012	G 2.0 T-GDI	EPS [Motor Driven Power Steering (~September23 / 2011)]	√	√	√	√		0094
U S	SONATA(YFA)	2012	G 2.0 T-GDI	EPS [Motor Driven Power Steering (September24 / 2011~)]	√	√	√	√		
U S	SONATA(YFA)	2012	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SONATA(YFA)	2012	G 2.0 T-GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SONATA(YFA)	2012	G 2.0 T-GDI	SMKCODE [Smart Key Code Saving]				√		
U S	SONATA(YFA)	2012	G 2.0 T-GDI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	SONATA(YFA)	2012	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	SONATA(YFA)	2012	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	SONATA(YFA)	2012	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA(YFA)	2012	G 2.0 T-GDI	TMU [Telematics Unit]	√	√	√			
U S	SONATA(YFA)	2012	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026

U S	SONATA(YFA)	2012	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0105, 0116, 0120, 0158
U S	SONATA(YFA)	2012	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SONATA(YFA)	2012	G 2.4 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0011
U S	SONATA(YFA)	2012	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA(YFA)	2012	G 2.4 GDI	ODS [Weight Classification System]	√	√	√	√		0156
U S	SONATA(YFA)	2012	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA(YFA)	2012	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA(YFA)	2012	G 2.4 GDI	EPS [Motor Driven Power Steering (~September23 / 2011)]	√	√	√	√		0094
U S	SONATA(YFA)	2012	G 2.4 GDI	EPS [Motor Driven Power Steering (September24 / 2011~)]	√	√	√	√		
U S	SONATA(YFA)	2012	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SONATA(YFA)	2012	G 2.4 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SONATA(YFA)	2012	G 2.4 GDI	SMKCODE [Smart Key Code Saving]				√		
U S	SONATA(YFA)	2012	G 2.4 GDI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	SONATA(YFA)	2012	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	SONATA(YFA)	2012	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	SONATA(YFA)	2012	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SONATA(YFA)	2012	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA(YFA)	2012	G 2.4 GDI	TMU [Telematics Unit]	√	√	√			
U S	SONATA(YFA)	2012	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
U S	SONATA(YFA)	2011	G 2.0 T-GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0105, 0116, 0120, 0158
U S	SONATA(YFA)	2011	G 2.0 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SONATA(YFA)	2011	G 2.0 T-GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0011
U S	SONATA(YFA)	2011	G 2.0 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA(YFA)	2011	G 2.0 T-GDI	ODS [Weight Classification System]	√	√	√	√		0156
U S	SONATA(YFA)	2011	G 2.0 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	SONATA(YFA)	2011	G 2.0 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA(YFA)	2011	G 2.0 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
U S	SONATA(YFA)	2011	G 2.0 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SONATA(YFA)	2011	G 2.0 T-GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SONATA(YFA)	2011	G 2.0 T-GDI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	SONATA(YFA)	2011	G 2.0 T-GDI	SMKCODE [Smart Key Code Saving]				√		
U S	SONATA(YFA)	2011	G 2.0 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	SONATA(YFA)	2011	G 2.0 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	SONATA(YFA)	2011	G 2.0 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA(YFA)	2011	G 2.0 T-GDI	CODE [Transmitter Code Saving]				√		0026
U S	SONATA(YFA)	2011	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0105, 0116, 0120, 0158
U S	SONATA(YFA)	2011	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	SONATA(YFA)	2011	G 2.4 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0011
U S	SONATA(YFA)	2011	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	SONATA(YFA)	2011	G 2.4 GDI	ODS [Weight Classification System]	√	√	√	√		0156
U S	SONATA(YFA)	2011	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			

U S	SONATA(YFA)	2011	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	SONATA(YFA)	2011	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
U S	SONATA(YFA)	2011	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	SONATA(YFA)	2011	G 2.4 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	SONATA(YFA)	2011	G 2.4 GDI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	SONATA(YFA)	2011	G 2.4 GDI	SMKCODE [Smart Key Code Saving]				√		
U S	SONATA(YFA)	2011	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	SONATA(YFA)	2011	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	SONATA(YFA)	2011	G 2.4 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	SONATA(YFA)	2011	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	SONATA(YFA)	2011	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
U S	TIBURON(GK)	2008	G 2.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055, 0116, 0120, 0158
U S	TIBURON(GK)	2008	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	TIBURON(GK)	2008	G 2.0 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	TIBURON(GK)	2008	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	TIBURON(GK)	2008	G 2.0 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	TIBURON(GK)	2008	G 2.0 DOHC	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090
U S	TIBURON(GK)	2008	G 2.0 DOHC	IMMO [Immobilizer]				√		0147, 0138, 0112, 0086, 0091, 0102, 0091
U S	TIBURON(GK)	2008	G 2.0 DOHC	BCM [Body Control Module]				√	√	
U S	TIBURON(GK)	2008	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	TIBURON(GK)	2008	G 2.7 DOHC	ENGINE [Engine Control]		√	√	√	√	0015, 0055, 0116, 0120
U S	TIBURON(GK)	2008	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	TIBURON(GK)	2008	G 2.7 DOHC	ABSESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	TIBURON(GK)	2008	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	TIBURON(GK)	2008	G 2.7 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	TIBURON(GK)	2008	G 2.7 DOHC	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090
U S	TIBURON(GK)	2008	G 2.7 DOHC	IMMO [Immobilizer]		√		√		0102
U S	TIBURON(GK)	2008	G 2.7 DOHC	BCM [Body Control Module]				√	√	
U S	TIBURON(GK)	2007	G 2.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055, 0116, 0120, 0158
U S	TIBURON(GK)	2007	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	TIBURON(GK)	2007	G 2.0 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	TIBURON(GK)	2007	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	TIBURON(GK)	2007	G 2.0 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	TIBURON(GK)	2007	G 2.0 DOHC	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090
U S	TIBURON(GK)	2007	G 2.0 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	TIBURON(GK)	2007	G 2.0 DOHC	BCM [Body Control Module]				√	√	
U S	TIBURON(GK)	2007	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	TIBURON(GK)	2007	G 2.7 DOHC	ENGINE [Engine Control]		√	√	√	√	0015, 0055, 0116, 0117, 0120
U S	TIBURON(GK)	2007	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	TIBURON(GK)	2007	G 2.7 DOHC	ABSESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	TIBURON(GK)	2007	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	TIBURON(GK)	2007	G 2.7 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	

U S	TIBURON(GK)	2007	G 2.7 DOHC	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090
U S	TIBURON(GK)	2007	G 2.7 DOHC	IMMO [Immobilizer]		√		√		0102
U S	TIBURON(GK)	2007	G 2.7 DOHC	BCM [Body Control Module]				√	√	
U S	TIBURON(GK)	2007	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	TIBURON(GK)	2006	G 2.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0117, 0120
U S	TIBURON(GK)	2006	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	TIBURON(GK)	2006	G 2.0 DOHC	ABSESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	TIBURON(GK)	2006	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	TIBURON(GK)	2006	G 2.0 DOHC	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090
U S	TIBURON(GK)	2006	G 2.0 DOHC	IMMO [Immobilizer]				√		
U S	TIBURON(GK)	2006	G 2.0 DOHC	BCM [Body Control Module]				√	√	
U S	TIBURON(GK)	2006	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	TIBURON(GK)	2006	G 2.7 DOHC	ENGINE [Engine Control]		√	√	√	√	0015, 0055, 0116, 0117, 0120
U S	TIBURON(GK)	2006	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	TIBURON(GK)	2006	G 2.7 DOHC	ABSESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	TIBURON(GK)	2006	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	TIBURON(GK)	2006	G 2.7 DOHC	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090
U S	TIBURON(GK)	2006	G 2.7 DOHC	IMMO [Immobilizer]		√		√		0102
U S	TIBURON(GK)	2006	G 2.7 DOHC	BCM [Body Control Module]				√	√	
U S	TIBURON(GK)	2006	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	TIBURON(GK)	2005	G 2.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0117, 0120
U S	TIBURON(GK)	2005	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	TIBURON(GK)	2005	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	TIBURON(GK)	2005	G 2.0 DOHC	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090
U S	TIBURON(GK)	2005	G 2.0 DOHC	IMMO [Immobilizer]				√		
U S	TIBURON(GK)	2005	G 2.0 DOHC	BCM [Body Control Module]				√	√	
U S	TIBURON(GK)	2005	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	TIBURON(GK)	2005	G 2.7 DOHC	ENGINE [Engine Control]		√	√	√	√	0015, 0055, 0116, 0117, 0120
U S	TIBURON(GK)	2005	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	TIBURON(GK)	2005	G 2.7 DOHC	ABSESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	TIBURON(GK)	2005	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	TIBURON(GK)	2005	G 2.7 DOHC	AHLS [Automatic Headlamp Leveling System]	√	√	√	√		0090
U S	TIBURON(GK)	2005	G 2.7 DOHC	IMMO [Immobilizer]		√		√		0102
U S	TIBURON(GK)	2005	G 2.7 DOHC	BCM [Body Control Module]				√	√	
U S	TIBURON(GK)	2005	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	TIBURON(GK)	2004	G 2.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0120
U S	TIBURON(GK)	2004	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	TIBURON(GK)	2004	G 2.0 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	TIBURON(GK)	2004	G 2.0 DOHC	ABSESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	TIBURON(GK)	2004	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	TIBURON(GK)	2004	G 2.0 DOHC	IMMO [Immobilizer]				√		

U S	TIBURON(GK)	2004	G 2.0 DOHC	BCM [Body Control Module]				√	√	
U S	TIBURON(GK)	2004	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	TIBURON(GK)	2004	G 2.7 DOHC	ENGINE [Engine Control]		√	√	√	√	0015, 0055, 0117, 0120
U S	TIBURON(GK)	2004	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	TIBURON(GK)	2004	G 2.7 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	TIBURON(GK)	2004	G 2.7 DOHC	ABSESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	TIBURON(GK)	2004	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	TIBURON(GK)	2004	G 2.7 DOHC	IMMO [Immobilizer]		√		√		0102
U S	TIBURON(GK)	2004	G 2.7 DOHC	BCM [Body Control Module]				√	√	
U S	TIBURON(GK)	2004	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	TIBURON(GK)	2003	G 2.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0117, 0120
U S	TIBURON(GK)	2003	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	TIBURON(GK)	2003	G 2.0 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	TIBURON(GK)	2003	G 2.0 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	TIBURON(GK)	2003	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	TIBURON(GK)	2003	G 2.0 DOHC	IMMO [Immobilizer]				√		
U S	TIBURON(GK)	2003	G 2.0 DOHC	BCM [Body Control Module]				√	√	
U S	TIBURON(GK)	2003	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	TIBURON(GK)	2003	G 2.7 DOHC	ENGINE [Engine Control (January1 / 2003~)]		√	√	√	√	0015, 0055, 0117, 0120
U S	TIBURON(GK)	2003	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	TIBURON(GK)	2003	G 2.7 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	TIBURON(GK)	2003	G 2.7 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	TIBURON(GK)	2003	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	TIBURON(GK)	2003	G 2.7 DOHC	IMMO [Immobilizer]		√		√		0102
U S	TIBURON(GK)	2003	G 2.7 DOHC	BCM [Body Control Module]				√	√	
U S	TIBURON(GK)	2003	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	TIBURON(RC)	2001	G 2.0 DOHC	ENGINE [Engine Control]		√	√	√		
U S	TIBURON(RC)	2001	G 2.0 DOHC	AT [Automatic Transaxle]		√	√	√	√	
U S	TIBURON(RC)	2001	G 2.0 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	TIBURON(RC)	2001	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	TIBURON(RC)	2001	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	TIBURON(RC)	2000	G 2.0 DOHC	ENGINE [Engine Control]		√	√	√		
U S	TIBURON(RC)	2000	G 2.0 DOHC	AT [Automatic Transaxle]		√	√	√	√	
U S	TIBURON(RC)	2000	G 2.0 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
U S	TIBURON(RC)	2000	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	TIBURON(RC)	2000	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	TIBURON(RC)	1999	G 2.0 DOHC	ENGINE [Engine Control]		√	√	√		
U S	TIBURON(RC)	1999	G 2.0 DOHC	AT [Automatic Transaxle (June1 / 1999~)]		√	√	√	√	
U S	TIBURON(RC)	1999	G 2.0 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	TIBURON(RC)	1999	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√	√		
U S	TIBURON(RC)	1999	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	TIBURON(RC)	1998	G 1.8 DOHC	ENGINE [Engine Control]		√	√	√		
U S	TIBURON(RC)	1998	G 1.8 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
U S	TIBURON(RC)	1998	G 1.8 DOHC	AIRBAG [Airbag Control]		√	√	√		

U S	TIBURON(RC)	1998	G 1.8 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	TIBURON(RC)	1998	G 2.0 DOHC	ENGINE [Engine Control]		√	√	√		
U S	TIBURON(RC)	1998	G 2.0 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	TIBURON(RC)	1998	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√	√		
U S	TIBURON(RC)	1998	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	TIBURON(RC)	1997	G 1.8 DOHC	ENGINE [Engine Control]		√	√	√		
U S	TIBURON(RC)	1997	G 1.8 DOHC	ABS [Anti - Lock Brake]		√	√	√	√	0064
U S	TIBURON(RC)	1997	G 1.8 DOHC	AIRBAG [Airbag Control]		√	√	√		
U S	TIBURON(RC)	1997	G 1.8 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	TIBURON(RC)	1997	G 2.0 DOHC	ENGINE [Engine Control]		√	√	√		
U S	TIBURON(RC)	1997	G 2.0 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	TIBURON(RC)	1997	G 2.0 DOHC	AIRBAG [Airbag Control]		√	√	√		
U S	TIBURON(RC)	1997	G 2.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	TUCSON FCEV(LM FCEV)	2017	100KW	BMS [EV Battery System]	√	√	√	√	√	
U S	TUCSON FCEV(LM FCEV)	2017	100KW	HSCU [Hydrogen Storage System]	√	√	√	√	√	0115
U S	TUCSON FCEV(LM FCEV)	2017	100KW	HDC [High DC / DC Converter]	√	√	√	√		
U S	TUCSON FCEV(LM FCEV)	2017	100KW	LDC [Low DC / DC Converter]	√	√	√	√		
U S	TUCSON FCEV(LM FCEV)	2017	100KW	FPD [Fuel Processing Driver]	√	√	√	√	√	
U S	TUCSON FCEV(LM FCEV)	2017	100KW	FCU [Fuel Cell System]	√	√	√	√	√	0012, 0045, 0057, 0139, 0141
U S	TUCSON FCEV(LM FCEV)	2017	100KW	SVM [Stack Volt Monitor]	√	√	√	√		
U S	TUCSON FCEV(LM FCEV)	2017	100KW	BPCU [Blower Pump Control Unit]	√	√	√	√		
U S	TUCSON FCEV(LM FCEV)	2017	100KW	AHB [Active Hydraulic Booster]	√	√	√	√	√	
U S	TUCSON FCEV(LM FCEV)	2017	100KW	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	TUCSON FCEV(LM FCEV)	2017	100KW	AIRBAG [Airbag (Event #1)]	√	√	√			0107
U S	TUCSON FCEV(LM FCEV)	2017	100KW	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	TUCSON FCEV(LM FCEV)	2017	100KW	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON FCEV(LM FCEV)	2017	100KW	EPS [Electronic Power Steering]	√	√	√	√		
U S	TUCSON FCEV(LM FCEV)	2017	100KW	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	TUCSON FCEV(LM FCEV)	2017	100KW	SMKCODE [Smart Key Code Saving]				√		
U S	TUCSON FCEV(LM FCEV)	2017	100KW	PDM [Power Distribution Module]	√	√	√	√	√	

U S	TUCSON FCEV(LM FCEV)	2017	100KW	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	TUCSON FCEV(LM FCEV)	2017	100KW	SJB [Smart Junction Block]	√	√	√	√	√	
U S	TUCSON FCEV(LM FCEV)	2017	100KW	BCM [Body Control Module]	√	√	√	√	√	
U S	TUCSON FCEV(LM FCEV)	2016	100KW	BMS [EV Battery System]	√	√	√	√	√	
U S	TUCSON FCEV(LM FCEV)	2016	100KW	HSCU [Hydrogen Storage System]	√	√	√	√	√	0115
U S	TUCSON FCEV(LM FCEV)	2016	100KW	HDC [High DC / DC Convertor]	√	√	√	√		
U S	TUCSON FCEV(LM FCEV)	2016	100KW	LDC [Low DC / DC Converter]	√	√	√	√		
U S	TUCSON FCEV(LM FCEV)	2016	100KW	FPD [Fuel Processing Driver]	√	√	√	√	√	
U S	TUCSON FCEV(LM FCEV)	2016	100KW	FCU [Fuel Cell System]	√	√	√	√	√	0012, 0045, 0057, 0139, 0141
U S	TUCSON FCEV(LM FCEV)	2016	100KW	SVM [Stack Volt Monitor]	√	√	√	√		
U S	TUCSON FCEV(LM FCEV)	2016	100KW	BPCU [Blower Pump Control Unit]	√	√	√	√		
U S	TUCSON FCEV(LM FCEV)	2016	100KW	AHB [Active Hydraulic Booster]	√	√	√	√	√	
U S	TUCSON FCEV(LM FCEV)	2016	100KW	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	TUCSON FCEV(LM FCEV)	2016	100KW	AIRBAG [Airbag (Event #1)]	√	√	√			0107
U S	TUCSON FCEV(LM FCEV)	2016	100KW	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	TUCSON FCEV(LM FCEV)	2016	100KW	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON FCEV(LM FCEV)	2016	100KW	EPS [Electronic Power Steering]	√	√	√	√		
U S	TUCSON FCEV(LM FCEV)	2016	100KW	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	TUCSON FCEV(LM FCEV)	2016	100KW	SMKCODE [Smart Key Code Saving]				√		
U S	TUCSON FCEV(LM FCEV)	2016	100KW	PDM [Power Distribution Module]	√	√	√	√	√	
U S	TUCSON FCEV(LM FCEV)	2016	100KW	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	TUCSON FCEV(LM FCEV)	2016	100KW	SJB [Smart Junction Block]	√	√	√	√	√	
U S	TUCSON FCEV(LM FCEV)	2016	100KW	BCM [Body Control Module]	√	√	√	√	√	
U S	TUCSON FCEV(LM FCEV)	2015	100KW	BMS [EV Battery System]	√	√	√	√	√	

U S	TUCSON FCEV(LM FCEV)	2015	100KW	HSCU [Hydrogen Storage System]	√	√	√	√	√	0115
U S	TUCSON FCEV(LM FCEV)	2015	100KW	HDC [High DC / DC Convertor]	√	√	√	√		
U S	TUCSON FCEV(LM FCEV)	2015	100KW	LDC [Low DC / DC Converter]	√	√	√	√		
U S	TUCSON FCEV(LM FCEV)	2015	100KW	FPD [Fuel Processing Driver]	√	√	√	√	√	
U S	TUCSON FCEV(LM FCEV)	2015	100KW	FCU [Fuel Cell System]	√	√	√	√	√	0012, 0045, 0057, 0139, 0141
U S	TUCSON FCEV(LM FCEV)	2015	100KW	SVM [Stack Volt Monitor]	√	√	√	√		
U S	TUCSON FCEV(LM FCEV)	2015	100KW	BPCU [Blower Pump Control Unit]	√	√	√	√		
U S	TUCSON FCEV(LM FCEV)	2015	100KW	AHB [Active Hydraulic Booster]	√	√	√	√	√	
U S	TUCSON FCEV(LM FCEV)	2015	100KW	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	TUCSON FCEV(LM FCEV)	2015	100KW	AIRBAG [Airbag (Event #1)]	√	√	√			0107
U S	TUCSON FCEV(LM FCEV)	2015	100KW	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	TUCSON FCEV(LM FCEV)	2015	100KW	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON FCEV(LM FCEV)	2015	100KW	EPS [Electronic Power Steering]	√	√	√	√		
U S	TUCSON FCEV(LM FCEV)	2015	100KW	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	TUCSON FCEV(LM FCEV)	2015	100KW	SMKCODE [Smart Key Code Saving]				√		
U S	TUCSON FCEV(LM FCEV)	2015	100KW	PDM [Power Distribution Module]	√	√	√	√	√	
U S	TUCSON FCEV(LM FCEV)	2015	100KW	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	TUCSON FCEV(LM FCEV)	2015	100KW	SJB [Smart Junction Block]	√	√	√	√	√	
U S	TUCSON FCEV(LM FCEV)	2015	100KW	BCM [Body Control Module]	√	√	√	√	√	
U S	TUCSON(JM)	2009	G 2.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0158, 0055
U S	TUCSON(JM)	2009	G 2.0 DOHC	ABSESC [ABS / ESC (MGH - 40)]	√	√	√	√	√	
U S	TUCSON(JM)	2009	G 2.0 DOHC	ABSESC [ABS / ESC (MGH - 25)]	√	√	√	√	√	0064
U S	TUCSON(JM)	2009	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	TUCSON(JM)	2009	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(JM)	2009	G 2.0 DOHC	4WD [4WD Control]		√	√	√		
U S	TUCSON(JM)	2009	G 2.0 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	TUCSON(JM)	2009	G 2.0 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	TUCSON(JM)	2009	G 2.0 DOHC	ETACS [ETACS]	√			√	√	
U S	TUCSON(JM)	2009	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026

U S	TUCSON(JM)	2009	G 2.7 DOHC	ENGINE [Engine Control]		√	√	√	√	0015, 0055, 0116, 0120
U S	TUCSON(JM)	2009	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	TUCSON(JM)	2009	G 2.7 DOHC	ABSESC [ABS / ESC (MGH - 40)]	√	√	√	√	√	
U S	TUCSON(JM)	2009	G 2.7 DOHC	ABSESC [ABS / ESC (MGH - 25)]	√	√	√	√	√	0064
U S	TUCSON(JM)	2009	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	TUCSON(JM)	2009	G 2.7 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(JM)	2009	G 2.7 DOHC	4WD [4WD Control]		√	√	√		
U S	TUCSON(JM)	2009	G 2.7 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	TUCSON(JM)	2009	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0091, 0102, 0112, 0147
U S	TUCSON(JM)	2009	G 2.7 DOHC	ETACS [ETACS]	√			√	√	
U S	TUCSON(JM)	2009	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	TUCSON(JM)	2008	G 2.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0120, 0158, 0055
U S	TUCSON(JM)	2008	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	TUCSON(JM)	2008	G 2.0 DOHC	ABSESC [ABS / ESC (MGH - 40)]	√	√	√	√	√	
U S	TUCSON(JM)	2008	G 2.0 DOHC	ABSESC [ABS / ESC (MGH - 25)]	√	√	√	√	√	0064
U S	TUCSON(JM)	2008	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	TUCSON(JM)	2008	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(JM)	2008	G 2.0 DOHC	4WD [4WD Control]		√	√	√		
U S	TUCSON(JM)	2008	G 2.0 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	TUCSON(JM)	2008	G 2.0 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	TUCSON(JM)	2008	G 2.0 DOHC	ETACS [ETACS]	√			√	√	
U S	TUCSON(JM)	2008	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	TUCSON(JM)	2008	G 2.7 DOHC	ENGINE [Engine Control]		√	√	√	√	0015, 0055, 0116, 0120
U S	TUCSON(JM)	2008	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	TUCSON(JM)	2008	G 2.7 DOHC	ABSESC [ABS / ESC (MGH - 40)]	√	√	√	√	√	
U S	TUCSON(JM)	2008	G 2.7 DOHC	ABSESC [ABS / ESC (MGH - 25)]	√	√	√	√	√	0064
U S	TUCSON(JM)	2008	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	TUCSON(JM)	2008	G 2.7 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(JM)	2008	G 2.7 DOHC	4WD [4WD Control]		√	√	√		
U S	TUCSON(JM)	2008	G 2.7 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	TUCSON(JM)	2008	G 2.7 DOHC	ETACS [ETACS]	√			√	√	
U S	TUCSON(JM)	2008	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	TUCSON(JM)	2007	G 2.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	
U S	TUCSON(JM)	2007	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	TUCSON(JM)	2007	G 2.0 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	TUCSON(JM)	2007	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	TUCSON(JM)	2007	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(JM)	2007	G 2.0 DOHC	4WD [4WD Control]		√	√	√		
U S	TUCSON(JM)	2007	G 2.0 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	TUCSON(JM)	2007	G 2.0 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	TUCSON(JM)	2007	G 2.0 DOHC	ETACS [ETACS]	√			√	√	
U S	TUCSON(JM)	2007	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	TUCSON(JM)	2007	G 2.7 DOHC	ENGINE [Engine Control]		√	√	√	√	0015, 0055, 0116, 0117, 0120
U S	TUCSON(JM)	2007	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	TUCSON(JM)	2007	G 2.7 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064

U S	TUCSON(JM)	2007	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	TUCSON(JM)	2007	G 2.7 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(JM)	2007	G 2.7 DOHC	4WD [4WD Control]		√	√	√		
U S	TUCSON(JM)	2007	G 2.7 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	TUCSON(JM)	2007	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0091, 0102, 0112, 0147
U S	TUCSON(JM)	2007	G 2.7 DOHC	ETACS [ETACS]	√			√	√	
U S	TUCSON(JM)	2007	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	TUCSON(JM)	2006	G 2.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0117, 0120
U S	TUCSON(JM)	2006	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	TUCSON(JM)	2006	G 2.0 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	TUCSON(JM)	2006	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	TUCSON(JM)	2006	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(JM)	2006	G 2.0 DOHC	4WD [4WD Control]		√	√			
U S	TUCSON(JM)	2006	G 2.0 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	TUCSON(JM)	2006	G 2.0 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
U S	TUCSON(JM)	2006	G 2.0 DOHC	ETACS [ETACS]	√			√	√	
U S	TUCSON(JM)	2006	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	TUCSON(JM)	2006	G 2.7 DOHC	ENGINE [Engine Control]		√	√	√	√	0015, 0055, 0116, 0117, 0120
U S	TUCSON(JM)	2006	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	TUCSON(JM)	2006	G 2.7 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	TUCSON(JM)	2006	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	TUCSON(JM)	2006	G 2.7 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(JM)	2006	G 2.7 DOHC	4WD [4WD Control]		√	√			
U S	TUCSON(JM)	2006	G 2.7 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	TUCSON(JM)	2006	G 2.7 DOHC	ETACS [ETACS]	√			√	√	
U S	TUCSON(JM)	2006	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	TUCSON(JM)	2005	G 2.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0015, 0055, 0116, 0117, 0120
U S	TUCSON(JM)	2005	G 2.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	TUCSON(JM)	2005	G 2.0 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	TUCSON(JM)	2005	G 2.0 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	TUCSON(JM)	2005	G 2.0 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(JM)	2005	G 2.0 DOHC	4WD [4WD Control]		√	√			
U S	TUCSON(JM)	2005	G 2.0 DOHC	IMMO [Immobilizer]				√		0091, 0102, 0112, 0147
U S	TUCSON(JM)	2005	G 2.0 DOHC	ETACS [ETACS]	√			√	√	
U S	TUCSON(JM)	2005	G 2.0 DOHC	CODE [Transmitter Code Saving]				√		0026
U S	TUCSON(JM)	2005	G 2.7 DOHC	ENGINE [Engine Control]		√	√	√	√	0015, 0055, 0116, 0117, 0120
U S	TUCSON(JM)	2005	G 2.7 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	TUCSON(JM)	2005	G 2.7 DOHC	ABSESC [ABS / ESC]	√	√	√	√	√	0064
U S	TUCSON(JM)	2005	G 2.7 DOHC	AIRBAG [Airbag Control]	√	√	√			0107, 0109
U S	TUCSON(JM)	2005	G 2.7 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(JM)	2005	G 2.7 DOHC	4WD [4WD Control]		√	√			
U S	TUCSON(JM)	2005	G 2.7 DOHC	IMMO [Immobilizer]		√	√	√		0091, 0102, 0112, 0147
U S	TUCSON(JM)	2005	G 2.7 DOHC	ETACS [ETACS]	√			√	√	
U S	TUCSON(JM)	2005	G 2.7 DOHC	CODE [Transmitter Code Saving]				√		0026

U S	TUCSON(LM)	2015	G 2.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	TUCSON(LM)	2015	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	TUCSON(LM)	2015	G 2.0 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	
U S	TUCSON(LM)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	TUCSON(LM)	2015	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			0107
U S	TUCSON(LM)	2015	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(LM)	2015	G 2.0 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
U S	TUCSON(LM)	2015	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	TUCSON(LM)	2015	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	TUCSON(LM)	2015	G 2.0 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	TUCSON(LM)	2015	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	TUCSON(LM)	2015	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	TUCSON(LM)	2015	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	TUCSON(LM)	2015	G 2.0 GDI	TMU [Telematics Unit]	√	√	√			
U S	TUCSON(LM)	2015	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
U S	TUCSON(LM)	2015	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0120, 0158
U S	TUCSON(LM)	2015	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	TUCSON(LM)	2015	G 2.4 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	
U S	TUCSON(LM)	2015	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			0107
U S	TUCSON(LM)	2015	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(LM)	2015	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
U S	TUCSON(LM)	2015	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	TUCSON(LM)	2015	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	TUCSON(LM)	2015	G 2.4 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	TUCSON(LM)	2015	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	TUCSON(LM)	2015	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	TUCSON(LM)	2015	G 2.4 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	TUCSON(LM)	2015	G 2.4 GDI	TMU [Telematics Unit]	√	√	√			
U S	TUCSON(LM)	2015	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
U S	TUCSON(LM)	2014	G 2.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	TUCSON(LM)	2014	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	TUCSON(LM)	2014	G 2.0 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	
U S	TUCSON(LM)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	TUCSON(LM)	2014	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			0107
U S	TUCSON(LM)	2014	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(LM)	2014	G 2.0 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
U S	TUCSON(LM)	2014	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	TUCSON(LM)	2014	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	TUCSON(LM)	2014	G 2.0 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	TUCSON(LM)	2014	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	TUCSON(LM)	2014	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	TUCSON(LM)	2014	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	

U S	TUCSON(LM)	2014	G 2.0 GDI	TMU [Telematics Unit]	√	√	√			
U S	TUCSON(LM)	2014	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
U S	TUCSON(LM)	2014	G 2.4 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0015, 0055, 0116, 0120, 0158
U S	TUCSON(LM)	2014	G 2.4 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	TUCSON(LM)	2014	G 2.4 GDI	ESC [Electronic Stability Control]	√	√	√	√	√	
U S	TUCSON(LM)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	TUCSON(LM)	2014	G 2.4 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			0107
U S	TUCSON(LM)	2014	G 2.4 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(LM)	2014	G 2.4 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
U S	TUCSON(LM)	2014	G 2.4 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		0094
U S	TUCSON(LM)	2014	G 2.4 GDI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	TUCSON(LM)	2014	G 2.4 GDI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	TUCSON(LM)	2014	G 2.4 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	TUCSON(LM)	2014	G 2.4 GDI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	TUCSON(LM)	2014	G 2.4 GDI	TMU [Telematics Unit]	√	√	√			
U S	TUCSON(LM)	2014	G 2.4 GDI	CODE [Transmitter Code Saving]				√		0026
U S	TUCSON(LM)	2013	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0015, 0013, 0120, 0116, 0158, 0055
U S	TUCSON(LM)	2013	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	TUCSON(LM)	2013	G 2.0 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	TUCSON(LM)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	TUCSON(LM)	2013	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0107
U S	TUCSON(LM)	2013	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(LM)	2013	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
U S	TUCSON(LM)	2013	G 2.0 MPI	EPS [Power Steering]	√	√	√	√		
U S	TUCSON(LM)	2013	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	TUCSON(LM)	2013	G 2.0 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	TUCSON(LM)	2013	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	TUCSON(LM)	2013	G 2.0 MPI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	TUCSON(LM)	2013	G 2.0 MPI	SMKCODE [Smart Key Code Saving]				√		
U S	TUCSON(LM)	2013	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	TUCSON(LM)	2013	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	TUCSON(LM)	2013	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
U S	TUCSON(LM)	2013	G 2.4 MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158, 0055
U S	TUCSON(LM)	2013	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	TUCSON(LM)	2013	G 2.4 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	TUCSON(LM)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	TUCSON(LM)	2013	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0107
U S	TUCSON(LM)	2013	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(LM)	2013	G 2.4 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
U S	TUCSON(LM)	2013	G 2.4 MPI	EPS [Power Steering]	√	√	√	√		
U S	TUCSON(LM)	2013	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	TUCSON(LM)	2013	G 2.4 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138

U S	TUCSON(LM)	2013	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	TUCSON(LM)	2013	G 2.4 MPI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	TUCSON(LM)	2013	G 2.4 MPI	SMKCODE [Smart Key Code Saving]				√		
U S	TUCSON(LM)	2013	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	TUCSON(LM)	2013	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	TUCSON(LM)	2013	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
U S	TUCSON(LM)	2012	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158, 0055
U S	TUCSON(LM)	2012	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	TUCSON(LM)	2012	G 2.0 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	TUCSON(LM)	2012	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0107
U S	TUCSON(LM)	2012	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(LM)	2012	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
U S	TUCSON(LM)	2012	G 2.0 MPI	EPS [Power Steering]	√	√	√	√		
U S	TUCSON(LM)	2012	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	TUCSON(LM)	2012	G 2.0 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	TUCSON(LM)	2012	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	TUCSON(LM)	2012	G 2.0 MPI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	TUCSON(LM)	2012	G 2.0 MPI	SMKCODE [Smart Key Code Saving]				√		
U S	TUCSON(LM)	2012	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	TUCSON(LM)	2012	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	TUCSON(LM)	2012	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
U S	TUCSON(LM)	2012	G 2.4 MPI	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0013, 0120, 0158, 0055
U S	TUCSON(LM)	2012	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	TUCSON(LM)	2012	G 2.4 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	TUCSON(LM)	2012	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	TUCSON(LM)	2012	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0107
U S	TUCSON(LM)	2012	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(LM)	2012	G 2.4 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
U S	TUCSON(LM)	2012	G 2.4 MPI	EPS [Power Steering]	√	√	√	√		
U S	TUCSON(LM)	2012	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	TUCSON(LM)	2012	G 2.4 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	TUCSON(LM)	2012	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	TUCSON(LM)	2012	G 2.4 MPI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	TUCSON(LM)	2012	G 2.4 MPI	SMKCODE [Smart Key Code Saving]				√		
U S	TUCSON(LM)	2012	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	TUCSON(LM)	2012	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	TUCSON(LM)	2012	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
U S	TUCSON(LM)	2011	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	
U S	TUCSON(LM)	2011	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	TUCSON(LM)	2011	G 2.0 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	TUCSON(LM)	2011	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0107
U S	TUCSON(LM)	2011	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	TUCSON(LM)	2011	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	

U S	TUCSON(LM)	2011	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
U S	TUCSON(LM)	2011	G 2.0 MPI	EPS [Power Steering]	√	√	√	√		
U S	TUCSON(LM)	2011	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	TUCSON(LM)	2011	G 2.0 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	TUCSON(LM)	2011	G 2.0 MPI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	TUCSON(LM)	2011	G 2.0 MPI	SMKCODE [Smart Key Code Saving]				√		
U S	TUCSON(LM)	2011	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	TUCSON(LM)	2011	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	TUCSON(LM)	2011	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
U S	TUCSON(LM)	2011	G 2.4 MPI	ENGINE [Engine Control]	√	√	√	√	√	
U S	TUCSON(LM)	2011	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	TUCSON(LM)	2011	G 2.4 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	TUCSON(LM)	2011	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0107
U S	TUCSON(LM)	2011	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	TUCSON(LM)	2011	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(LM)	2011	G 2.4 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
U S	TUCSON(LM)	2011	G 2.4 MPI	EPS [Power Steering]	√	√	√	√		
U S	TUCSON(LM)	2011	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	TUCSON(LM)	2011	G 2.4 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	TUCSON(LM)	2011	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	TUCSON(LM)	2011	G 2.4 MPI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	TUCSON(LM)	2011	G 2.4 MPI	SMKCODE [Smart Key Code Saving]				√		
U S	TUCSON(LM)	2011	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	TUCSON(LM)	2011	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	TUCSON(LM)	2011	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
U S	TUCSON(LM)	2010	G 2.0 MPI	ENGINE [Engine Control]	√	√	√	√	√	
U S	TUCSON(LM)	2010	G 2.0 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	TUCSON(LM)	2010	G 2.0 MPI	ESC [Electronic Stability Control]	√	√	√	√	√	0064, 0093
U S	TUCSON(LM)	2010	G 2.0 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0107
U S	TUCSON(LM)	2010	G 2.0 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107
U S	TUCSON(LM)	2010	G 2.0 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(LM)	2010	G 2.0 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
U S	TUCSON(LM)	2010	G 2.0 MPI	EPS [Power Steering]	√	√	√	√		
U S	TUCSON(LM)	2010	G 2.0 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	TUCSON(LM)	2010	G 2.0 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	TUCSON(LM)	2010	G 2.0 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	TUCSON(LM)	2010	G 2.0 MPI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	TUCSON(LM)	2010	G 2.0 MPI	SMKCODE [Smart Key Code Saving]				√		
U S	TUCSON(LM)	2010	G 2.0 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	TUCSON(LM)	2010	G 2.0 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	TUCSON(LM)	2010	G 2.0 MPI	CODE [Transmitter Code Saving]				√		0026
U S	TUCSON(LM)	2010	G 2.4 MPI	ENGINE [Engine Control]	√	√	√	√	√	
U S	TUCSON(LM)	2010	G 2.4 MPI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	TUCSON(LM)	2010	G 2.4 MPI	AIRBAG [Airbag (Event #1)]	√	√	√			0107
U S	TUCSON(LM)	2010	G 2.4 MPI	AIRBAG [Airbag (Event #2)]	√	√	√			0107

U S	TUCSON(LM)	2010	G 2.4 MPI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(LM)	2010	G 2.4 MPI	4WD [4WD Control]	√	√	√	√	√	0023, 0024, 0149, 0010
U S	TUCSON(LM)	2010	G 2.4 MPI	EPS [Power Steering]	√	√	√	√		
U S	TUCSON(LM)	2010	G 2.4 MPI	TPMS [Tire Pressure Monitoring]	√	√	√		√	
U S	TUCSON(LM)	2010	G 2.4 MPI	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	TUCSON(LM)	2010	G 2.4 MPI	SMK [Smart Key Unit]	√	√	√	√	√	0058, 0106, 0129, 0144
U S	TUCSON(LM)	2010	G 2.4 MPI	PDM [Power Distribution Module]	√	√	√	√	√	
U S	TUCSON(LM)	2010	G 2.4 MPI	SMKCODE [Smart Key Code Saving]				√		
U S	TUCSON(LM)	2010	G 2.4 MPI	SJB [Smart Junction Block]	√	√	√	√	√	
U S	TUCSON(LM)	2010	G 2.4 MPI	BCM [Body Control Module]	√	√	√	√	√	
U S	TUCSON(LM)	2010	G 2.4 MPI	CODE [Transmitter Code Saving]				√		0026
U S	TUCSON(TL)	2017	G 1.6 T-GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	TUCSON(TL)	2017	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
U S	TUCSON(TL)	2017	G 1.6 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0014, 0019, 0064
U S	TUCSON(TL)	2017	G 1.6 T-GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
U S	TUCSON(TL)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	TUCSON(TL)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	TUCSON(TL)	2017	G 1.6 T-GDI	OCS [Occupant Classification System]	√	√	√	√		
U S	TUCSON(TL)	2017	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(TL)	2017	G 1.6 T-GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
U S	TUCSON(TL)	2017	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
U S	TUCSON(TL)	2017	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	TUCSON(TL)	2017	G 1.6 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	TUCSON(TL)	2017	G 1.6 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	TUCSON(TL)	2017	G 1.6 T-GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
U S	TUCSON(TL)	2017	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
U S	TUCSON(TL)	2017	G 1.6 T-GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
U S	TUCSON(TL)	2017	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	TUCSON(TL)	2017	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	TUCSON(TL)	2017	G 1.6 T-GDI	AMP [Amplifier]						0006
U S	TUCSON(TL)	2017	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	TUCSON(TL)	2017	G 1.6 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	TUCSON(TL)	2017	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	TUCSON(TL)	2017	G 1.6 T-GDI	PTG [Power Tail Gate]	√	√	√	√		0113
U S	TUCSON(TL)	2017	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
U S	TUCSON(TL)	2017	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	TUCSON(TL)	2017	G 2.0 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0014, 0019, 0064
U S	TUCSON(TL)	2017	G 2.0 GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
U S	TUCSON(TL)	2017	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	TUCSON(TL)	2017	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	TUCSON(TL)	2017	G 2.0 GDI	OCS [Occupant Classification System]	√	√	√	√		
U S	TUCSON(TL)	2017	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	

U S	TUCSON(TL)	2017	G 2.0 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
U S	TUCSON(TL)	2017	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
U S	TUCSON(TL)	2017	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	TUCSON(TL)	2017	G 2.0 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	TUCSON(TL)	2017	G 2.0 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	TUCSON(TL)	2017	G 2.0 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
U S	TUCSON(TL)	2017	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
U S	TUCSON(TL)	2017	G 2.0 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
U S	TUCSON(TL)	2017	G 2.0 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	TUCSON(TL)	2017	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	TUCSON(TL)	2017	G 2.0 GDI	AMP [Amplifier]						0006
U S	TUCSON(TL)	2017	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	TUCSON(TL)	2017	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	TUCSON(TL)	2017	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	TUCSON(TL)	2017	G 2.0 GDI	PTG [Power Tail Gate]	√	√	√	√		0113
U S	TUCSON(TL)	2017	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
U S	TUCSON(TL)	2016	G 1.6 T-GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	TUCSON(TL)	2016	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
U S	TUCSON(TL)	2016	G 1.6 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0014, 0019, 0064
U S	TUCSON(TL)	2016	G 1.6 T-GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
U S	TUCSON(TL)	2016	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	TUCSON(TL)	2016	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	TUCSON(TL)	2016	G 1.6 T-GDI	OCS [Occupant Classification System]	√	√	√	√		
U S	TUCSON(TL)	2016	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(TL)	2016	G 1.6 T-GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
U S	TUCSON(TL)	2016	G 1.6 T-GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
U S	TUCSON(TL)	2016	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	TUCSON(TL)	2016	G 1.6 T-GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	TUCSON(TL)	2016	G 1.6 T-GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	TUCSON(TL)	2016	G 1.6 T-GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
U S	TUCSON(TL)	2016	G 1.6 T-GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
U S	TUCSON(TL)	2016	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	TUCSON(TL)	2016	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	TUCSON(TL)	2016	G 1.6 T-GDI	AMP [Amplifier]						0006
U S	TUCSON(TL)	2016	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	TUCSON(TL)	2016	G 1.6 T-GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	TUCSON(TL)	2016	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	TUCSON(TL)	2016	G 1.6 T-GDI	PTG [Power Tail Gate]	√	√	√	√		0113
U S	TUCSON(TL)	2016	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
U S	TUCSON(TL)	2016	G 2.0 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	TUCSON(TL)	2016	G 2.0 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	TUCSON(TL)	2016	G 2.0 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0014, 0019, 0064

U S	TUCSON(TL)	2016	G 2.0 GDI	AEB [Autonomous Emergency Braking System]	√	√	√	√		
U S	TUCSON(TL)	2016	G 2.0 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	TUCSON(TL)	2016	G 2.0 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	TUCSON(TL)	2016	G 2.0 GDI	OCS [Occupant Classification System]	√	√	√	√		
U S	TUCSON(TL)	2016	G 2.0 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	TUCSON(TL)	2016	G 2.0 GDI	4WD [4WD Control]	√	√	√	√	√	0023, 0024
U S	TUCSON(TL)	2016	G 2.0 GDI	EPS [Motor Driven Power Steering]	√	√	√	√		
U S	TUCSON(TL)	2016	G 2.0 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	TUCSON(TL)	2016	G 2.0 GDI	BSD - R [Blind Spot Detection - Right]	√	√	√	√	√	0016
U S	TUCSON(TL)	2016	G 2.0 GDI	BSD - L [Blind Spot Detection - Left]	√	√	√	√	√	0016
U S	TUCSON(TL)	2016	G 2.0 GDI	LDWS [Lane Departure Warning System]	√	√	√	√		
U S	TUCSON(TL)	2016	G 2.0 GDI	AHLS [Auto Headlamp Leveling System]	√	√	√	√	√	0067
U S	TUCSON(TL)	2016	G 2.0 GDI	AFLS [Adaptive Front Lighting System]	√	√	√	√	√	
U S	TUCSON(TL)	2016	G 2.0 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	TUCSON(TL)	2016	G 2.0 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	TUCSON(TL)	2016	G 2.0 GDI	AMP [Amplifier]						0006
U S	TUCSON(TL)	2016	G 2.0 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	TUCSON(TL)	2016	G 2.0 GDI	SJB [Smart Junction Block]	√	√	√	√	√	0128
U S	TUCSON(TL)	2016	G 2.0 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	TUCSON(TL)	2016	G 2.0 GDI	PTG [Power Tail Gate]	√	√	√	√		0113
U S	TUCSON(TL)	2016	G 2.0 GDI	CODE [Transmitter Code Saving]				√		0026
U S	VELOSTER(FS)	2017	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	VELOSTER(FS)	2017	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	VELOSTER(FS)	2017	G 1.6 GDI	AT [Dual Clutch Transmission]	√	√	√	√	√	0028
U S	VELOSTER(FS)	2017	G 1.6 GDI	ODS [PODS - F]	√	√	√			
U S	VELOSTER(FS)	2017	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	VELOSTER(FS)	2017	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	VELOSTER(FS)	2017	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	VELOSTER(FS)	2017	G 1.6 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	VELOSTER(FS)	2017	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	VELOSTER(FS)	2017	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	VELOSTER(FS)	2017	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	VELOSTER(FS)	2017	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	VELOSTER(FS)	2017	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	VELOSTER(FS)	2017	G 1.6 GDI	TMU [Telematics Unit]	√	√	√			
U S	VELOSTER(FS)	2017	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
U S	VELOSTER(FS)	2017	G 1.6 T-GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	VELOSTER(FS)	2017	G 1.6 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	VELOSTER(FS)	2017	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
U S	VELOSTER(FS)	2017	G 1.6 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	VELOSTER(FS)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	VELOSTER(FS)	2017	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			

U S	VELOSTER(FS)	2017	G 1.6 T-GDI	ODS [PODS - F]	√	√	√			
U S	VELOSTER(FS)	2017	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	VELOSTER(FS)	2017	G 1.6 T-GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	VELOSTER(FS)	2017	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	VELOSTER(FS)	2017	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	VELOSTER(FS)	2017	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	VELOSTER(FS)	2017	G 1.6 T-GDI	SERVICE [Service Reminder]	√					
U S	VELOSTER(FS)	2017	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	VELOSTER(FS)	2017	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	VELOSTER(FS)	2017	G 1.6 T-GDI	TMU [Telematics Unit]	√	√	√			
U S	VELOSTER(FS)	2017	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
U S	VELOSTER(FS)	2016	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	VELOSTER(FS)	2016	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	VELOSTER(FS)	2016	G 1.6 GDI	AT [Dual Clutch Transmission]	√	√	√	√	√	0028
U S	VELOSTER(FS)	2016	G 1.6 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	VELOSTER(FS)	2016	G 1.6 GDI	ODS [PODS - F]	√	√	√			
U S	VELOSTER(FS)	2016	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	VELOSTER(FS)	2016	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	VELOSTER(FS)	2016	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	VELOSTER(FS)	2016	G 1.6 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	VELOSTER(FS)	2016	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	VELOSTER(FS)	2016	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	VELOSTER(FS)	2016	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	VELOSTER(FS)	2016	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	VELOSTER(FS)	2016	G 1.6 GDI	TMU [Telematics Unit]	√	√	√			
U S	VELOSTER(FS)	2016	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
U S	VELOSTER(FS)	2016	G 1.6 T-GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	VELOSTER(FS)	2016	G 1.6 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	VELOSTER(FS)	2016	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
U S	VELOSTER(FS)	2016	G 1.6 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	VELOSTER(FS)	2016	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	VELOSTER(FS)	2016	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	VELOSTER(FS)	2016	G 1.6 T-GDI	ODS [PODS - F]	√	√	√			
U S	VELOSTER(FS)	2016	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	VELOSTER(FS)	2016	G 1.6 T-GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	VELOSTER(FS)	2016	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	VELOSTER(FS)	2016	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	VELOSTER(FS)	2016	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	VELOSTER(FS)	2016	G 1.6 T-GDI	SERVICE [Service Reminder]	√					
U S	VELOSTER(FS)	2016	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	VELOSTER(FS)	2016	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	VELOSTER(FS)	2016	G 1.6 T-GDI	TMU [Telematics Unit]	√	√	√			
U S	VELOSTER(FS)	2016	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026

U S	VELOSTER(FS)	2015	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	VELOSTER(FS)	2015	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	VELOSTER(FS)	2015	G 1.6 GDI	AT [Dual Clutch Transmission]	√	√	√	√	√	0028
U S	VELOSTER(FS)	2015	G 1.6 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	VELOSTER(FS)	2015	G 1.6 GDI	ODS [PODS - F]	√	√	√			
U S	VELOSTER(FS)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	VELOSTER(FS)	2015	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	VELOSTER(FS)	2015	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	VELOSTER(FS)	2015	G 1.6 GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	VELOSTER(FS)	2015	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	VELOSTER(FS)	2015	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	VELOSTER(FS)	2015	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	VELOSTER(FS)	2015	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	VELOSTER(FS)	2015	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	VELOSTER(FS)	2015	G 1.6 GDI	TMU [Telematics Unit]	√	√	√			
U S	VELOSTER(FS)	2015	G 1.6 T-GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	VELOSTER(FS)	2015	G 1.6 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	VELOSTER(FS)	2015	G 1.6 T-GDI	AT [Dual Clutch Transmission]	√	√	√	√		
U S	VELOSTER(FS)	2015	G 1.6 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	VELOSTER(FS)	2015	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	VELOSTER(FS)	2015	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	VELOSTER(FS)	2015	G 1.6 T-GDI	ODS [PODS - F]	√	√	√			
U S	VELOSTER(FS)	2015	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	VELOSTER(FS)	2015	G 1.6 T-GDI	EPS [Motor driven Power Steering]	√	√	√	√		0094
U S	VELOSTER(FS)	2015	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	VELOSTER(FS)	2015	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	VELOSTER(FS)	2015	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	VELOSTER(FS)	2015	G 1.6 T-GDI	SERVICE [Service Reminder]	√					
U S	VELOSTER(FS)	2015	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	VELOSTER(FS)	2015	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	VELOSTER(FS)	2015	G 1.6 T-GDI	TMU [Telematics Unit]	√	√	√			
U S	VELOSTER(FS)	2015	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
U S	VELOSTER(FS)	2014	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	VELOSTER(FS)	2014	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	VELOSTER(FS)	2014	G 1.6 GDI	AT [Dual Clutch Transmission]	√	√	√	√	√	0028
U S	VELOSTER(FS)	2014	G 1.6 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	VELOSTER(FS)	2014	G 1.6 GDI	ODS [PODS - F]	√	√	√			
U S	VELOSTER(FS)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	VELOSTER(FS)	2014	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	VELOSTER(FS)	2014	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	VELOSTER(FS)	2014	G 1.6 GDI	EPS [Motor driven Power Steering]	√	√	√	√		
U S	VELOSTER(FS)	2014	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			

U S	VELOSTER(FS)	2014	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	VELOSTER(FS)	2014	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	VELOSTER(FS)	2014	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	VELOSTER(FS)	2014	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	VELOSTER(FS)	2014	G 1.6 GDI	TMU [Telematics Unit]	√	√	√			
U S	VELOSTER(FS)	2014	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
U S	VELOSTER(FS)	2014	G 1.6 T-GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	VELOSTER(FS)	2014	G 1.6 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	VELOSTER(FS)	2014	G 1.6 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	VELOSTER(FS)	2014	G 1.6 T-GDI	ODS [PODS - F]	√	√	√			
U S	VELOSTER(FS)	2014	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	VELOSTER(FS)	2014	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	VELOSTER(FS)	2014	G 1.6 T-GDI	EPS [Motor driven Power Steering]	√	√	√	√		
U S	VELOSTER(FS)	2014	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	VELOSTER(FS)	2014	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	VELOSTER(FS)	2014	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	VELOSTER(FS)	2014	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	VELOSTER(FS)	2014	G 1.6 T-GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	VELOSTER(FS)	2014	G 1.6 T-GDI	TMU [Telematics Unit]	√	√	√			
U S	VELOSTER(FS)	2014	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
U S	VELOSTER(FS)	2013	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	VELOSTER(FS)	2013	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	VELOSTER(FS)	2013	G 1.6 GDI	AT [Dual Clutch Transmission]	√	√	√	√	√	0028
U S	VELOSTER(FS)	2013	G 1.6 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	VELOSTER(FS)	2013	G 1.6 GDI	ODS [PODS - F]	√	√	√			
U S	VELOSTER(FS)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	VELOSTER(FS)	2013	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	VELOSTER(FS)	2013	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	VELOSTER(FS)	2013	G 1.6 GDI	EPS [Motor driven Power Steering]	√	√	√	√		
U S	VELOSTER(FS)	2013	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	VELOSTER(FS)	2013	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	VELOSTER(FS)	2013	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	VELOSTER(FS)	2013	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	VELOSTER(FS)	2013	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	VELOSTER(FS)	2013	G 1.6 GDI	TMU [Telematics Unit]	√	√	√			
U S	VELOSTER(FS)	2013	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
U S	VELOSTER(FS)	2013	G 1.6 T-GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	VELOSTER(FS)	2013	G 1.6 T-GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	VELOSTER(FS)	2013	G 1.6 T-GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	VELOSTER(FS)	2013	G 1.6 T-GDI	ODS [PODS - F]	√	√	√			
U S	VELOSTER(FS)	2013	G 1.6 T-GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	VELOSTER(FS)	2013	G 1.6 T-GDI	AIRBAG [Airbag (Event #1)]	√	√	√			

U S	VELOSTER(FS)	2013	G 1.6 T-GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	VELOSTER(FS)	2013	G 1.6 T-GDI	EPS [Motor driven Power Steering]	√	√	√	√		
U S	VELOSTER(FS)	2013	G 1.6 T-GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	VELOSTER(FS)	2013	G 1.6 T-GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	VELOSTER(FS)	2013	G 1.6 T-GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	VELOSTER(FS)	2013	G 1.6 T-GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	VELOSTER(FS)	2013	G 1.6 T-GDI	TMU [Telematics Unit]	√	√	√			
U S	VELOSTER(FS)	2013	G 1.6 T-GDI	CODE [Transmitter Code Saving]				√		0026
U S	VELOSTER(FS)	2012	G 1.6 GDI	ENGINE [Engine Control]	√	√	√	√		0013, 0040, 0055, 0072, 0116, 0158
U S	VELOSTER(FS)	2012	G 1.6 GDI	AT [Automatic Transaxle]	√	√	√	√	√	0121
U S	VELOSTER(FS)	2012	G 1.6 GDI	AT [Dual Clutch Transmission]	√	√	√	√	√	0028
U S	VELOSTER(FS)	2012	G 1.6 GDI	ABSESC [ABS / ESC]	√	√	√	√	√	0064, 0093
U S	VELOSTER(FS)	2012	G 1.6 GDI	ODS [PODS - F]	√	√	√			
U S	VELOSTER(FS)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	VELOSTER(FS)	2012	G 1.6 GDI	AIRBAG [Airbag (Event #1)]	√	√	√			
U S	VELOSTER(FS)	2012	G 1.6 GDI	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	VELOSTER(FS)	2012	G 1.6 GDI	EPS [Motor driven Power Steering]	√	√	√	√		
U S	VELOSTER(FS)	2012	G 1.6 GDI	TPMS [Tire Pressure Monitoring]	√	√	√			
U S	VELOSTER(FS)	2012	G 1.6 GDI	IMMO [Immobilizer]		√	√	√		0086, 0091, 0102, 0112
U S	VELOSTER(FS)	2012	G 1.6 GDI	SMK [Smart Key Unit]	√	√	√	√	√	0027, 0058, 0129
U S	VELOSTER(FS)	2012	G 1.6 GDI	BCM [Body Control Module]	√	√	√	√	√	
U S	VELOSTER(FS)	2012	G 1.6 GDI	CLU [Cluster Module]	√	√	√	√	√	
U S	VELOSTER(FS)	2012	G 1.6 GDI	TMU [Telematics Unit]	√	√	√			
U S	VELOSTER(FS)	2012	G 1.6 GDI	CODE [Transmitter Code Saving]				√		0026
U S	VERACRUZ(EN)	2013	G 3.8 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0100, 0158, 0055, 0055
U S	VERACRUZ(EN)	2013	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121, 0160
U S	VERACRUZ(EN)	2013	G 3.8 DOHC	ESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	VERACRUZ(EN)	2013	G 3.8 DOHC	AIRBAG [Airbag (Event #1)]	√	√	√			0109
U S	VERACRUZ(EN)	2013	G 3.8 DOHC	ODS [Weight Classification System]	√	√	√	√		0156
U S	VERACRUZ(EN)	2013	G 3.8 DOHC	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	VERACRUZ(EN)	2013	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	VERACRUZ(EN)	2013	G 3.8 DOHC	4WD [4WD Control]		√	√	√	√	
U S	VERACRUZ(EN)	2013	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	VERACRUZ(EN)	2013	G 3.8 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	VERACRUZ(EN)	2013	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				√		
U S	VERACRUZ(EN)	2013	G 3.8 DOHC	SMK [Smart Key Unit]	√	√	√		√	0097
U S	VERACRUZ(EN)	2013	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
U S	VERACRUZ(EN)	2013	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
U S	VERACRUZ(EN)	2013	G 3.8 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
U S	VERACRUZ(EN)	2013	G 3.8 DOHC	OPTION [User Option]				√		
U S	VERACRUZ(EN)	2013	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
U S	VERACRUZ(EN)	2013	G 3.8 DOHC	TILT [Tilt & Telescope]	√	√	√	√	√	
U S	VERACRUZ(EN)	2013	G 3.8 DOHC	PTG [Power Tailgate]	√	√	√	√		

U S	VERACRUZ(EN)	2013	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		
U S	VERACRUZ(EN)	2012	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121, 0160
U S	VERACRUZ(EN)	2012	G 3.8 DOHC	ESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	VERACRUZ(EN)	2012	G 3.8 DOHC	AIRBAG [Airbag (Event #1)]	√	√	√			0109
U S	VERACRUZ(EN)	2012	G 3.8 DOHC	ODS [Weight Classification System]	√	√	√	√		0156
U S	VERACRUZ(EN)	2012	G 3.8 DOHC	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	VERACRUZ(EN)	2012	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	VERACRUZ(EN)	2012	G 3.8 DOHC	4WD [4WD Control]		√	√	√	√	
U S	VERACRUZ(EN)	2012	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	VERACRUZ(EN)	2012	G 3.8 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	VERACRUZ(EN)	2012	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				√		
U S	VERACRUZ(EN)	2012	G 3.8 DOHC	SMK [Smart Key Unit]	√	√	√		√	0097
U S	VERACRUZ(EN)	2012	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
U S	VERACRUZ(EN)	2012	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
U S	VERACRUZ(EN)	2012	G 3.8 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
U S	VERACRUZ(EN)	2012	G 3.8 DOHC	OPTION [User Option]				√		
U S	VERACRUZ(EN)	2012	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
U S	VERACRUZ(EN)	2012	G 3.8 DOHC	TILT [Tilt & Telescope]	√	√	√	√	√	
U S	VERACRUZ(EN)	2012	G 3.8 DOHC	PTG [Power Tailgate]	√	√	√	√		
U S	VERACRUZ(EN)	2012	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		
U S	VERACRUZ(EN)	2011	G 3.8 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0100, 0158, 0055, 0055
U S	VERACRUZ(EN)	2011	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121, 0160
U S	VERACRUZ(EN)	2011	G 3.8 DOHC	ESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	VERACRUZ(EN)	2011	G 3.8 DOHC	AIRBAG [Airbag (Event #1)]	√	√	√			0109
U S	VERACRUZ(EN)	2011	G 3.8 DOHC	ODS [Weight Classification System]	√	√	√	√		0156
U S	VERACRUZ(EN)	2011	G 3.8 DOHC	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	VERACRUZ(EN)	2011	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	VERACRUZ(EN)	2011	G 3.8 DOHC	4WD [4WD Control]		√	√	√	√	
U S	VERACRUZ(EN)	2011	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	VERACRUZ(EN)	2011	G 3.8 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	VERACRUZ(EN)	2011	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				√		
U S	VERACRUZ(EN)	2011	G 3.8 DOHC	SMK [Smart Key Unit]	√	√	√		√	0097
U S	VERACRUZ(EN)	2011	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
U S	VERACRUZ(EN)	2011	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
U S	VERACRUZ(EN)	2011	G 3.8 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
U S	VERACRUZ(EN)	2011	G 3.8 DOHC	OPTION [User Option]				√		
U S	VERACRUZ(EN)	2011	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
U S	VERACRUZ(EN)	2011	G 3.8 DOHC	TILT [Tilt & Telescope]	√	√	√	√	√	
U S	VERACRUZ(EN)	2011	G 3.8 DOHC	PTG [Power Tailgate]	√	√	√	√		
U S	VERACRUZ(EN)	2010	G 3.8 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0100, 0158, 0055, 0055
U S	VERACRUZ(EN)	2010	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121, 0160
U S	VERACRUZ(EN)	2010	G 3.8 DOHC	ESC [Electronic Stability Control]	√	√	√	√	√	0064
U S	VERACRUZ(EN)	2010	G 3.8 DOHC	AIRBAG [Airbag (Event #1)]	√	√	√			0109

U S	VERACRUZ(EN)	2010	G 3.8 DOHC	ODS [Weight Classification System]	√	√	√	√		0156
U S	VERACRUZ(EN)	2010	G 3.8 DOHC	AIRBAG [Airbag (Event #2)]	√	√	√			
U S	VERACRUZ(EN)	2010	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	VERACRUZ(EN)	2010	G 3.8 DOHC	4WD [4WD Control]		√	√	√	√	
U S	VERACRUZ(EN)	2010	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	VERACRUZ(EN)	2010	G 3.8 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	VERACRUZ(EN)	2010	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				√		
U S	VERACRUZ(EN)	2010	G 3.8 DOHC	SMK [Smart Key Unit]	√	√	√		√	0097
U S	VERACRUZ(EN)	2010	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
U S	VERACRUZ(EN)	2010	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
U S	VERACRUZ(EN)	2010	G 3.8 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
U S	VERACRUZ(EN)	2010	G 3.8 DOHC	OPTION [User Option]				√		
U S	VERACRUZ(EN)	2010	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
U S	VERACRUZ(EN)	2010	G 3.8 DOHC	TILT [Tilt & Telescope]	√	√	√	√	√	
U S	VERACRUZ(EN)	2010	G 3.8 DOHC	PTG [Power Tailgate]	√	√	√	√		
U S	VERACRUZ(EN)	2010	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		
U S	VERACRUZ(EN)	2009	G 3.8 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0100, 0158, 0055, 0055
U S	VERACRUZ(EN)	2009	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121, 0160
U S	VERACRUZ(EN)	2009	G 3.8 DOHC	ESC [Electronic Stability Control]	√	√	√	√	√	
U S	VERACRUZ(EN)	2009	G 3.8 DOHC	ODS [Weight Classification System]	√	√	√	√		0156
U S	VERACRUZ(EN)	2009	G 3.8 DOHC	AIRBAG [Airbag Control Unit]	√	√	√			
U S	VERACRUZ(EN)	2009	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	VERACRUZ(EN)	2009	G 3.8 DOHC	4WD [4WD Control]		√	√	√	√	
U S	VERACRUZ(EN)	2009	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	VERACRUZ(EN)	2009	G 3.8 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	VERACRUZ(EN)	2009	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				√		
U S	VERACRUZ(EN)	2009	G 3.8 DOHC	SMK [Smart Key Unit]	√	√	√		√	0097
U S	VERACRUZ(EN)	2009	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
U S	VERACRUZ(EN)	2009	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
U S	VERACRUZ(EN)	2009	G 3.8 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
U S	VERACRUZ(EN)	2009	G 3.8 DOHC	OPTION [User Option]				√		
U S	VERACRUZ(EN)	2009	G 3.8 DOHC	TILT [Tilt & Telescope]	√	√	√	√	√	
U S	VERACRUZ(EN)	2009	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
U S	VERACRUZ(EN)	2009	G 3.8 DOHC	PTG [Power Tailgate]	√	√	√	√		
U S	VERACRUZ(EN)	2008	G 3.8 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0100, 0158, 0055, 0055
U S	VERACRUZ(EN)	2008	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121, 0160
U S	VERACRUZ(EN)	2008	G 3.8 DOHC	ESC [Electronic Stability Control]	√	√	√	√	√	
U S	VERACRUZ(EN)	2008	G 3.8 DOHC	ODS [Weight Classification System]	√	√	√	√		0156
U S	VERACRUZ(EN)	2008	G 3.8 DOHC	AIRBAG [Airbag Control Unit]	√	√	√			
U S	VERACRUZ(EN)	2008	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	VERACRUZ(EN)	2008	G 3.8 DOHC	4WD [4WD Control]		√	√	√	√	
U S	VERACRUZ(EN)	2008	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	VERACRUZ(EN)	2008	G 3.8 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138

U S	VERACRUZ(EN)	2008	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				√		
U S	VERACRUZ(EN)	2008	G 3.8 DOHC	SMK [Smart Key Unit]	√	√	√		√	0097
U S	VERACRUZ(EN)	2008	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
U S	VERACRUZ(EN)	2008	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
U S	VERACRUZ(EN)	2008	G 3.8 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
U S	VERACRUZ(EN)	2008	G 3.8 DOHC	OPTION [User Option]				√		
U S	VERACRUZ(EN)	2008	G 3.8 DOHC	TILT [Tilt & Telescope]	√	√	√	√	√	
U S	VERACRUZ(EN)	2008	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
U S	VERACRUZ(EN)	2008	G 3.8 DOHC	PTG [Power Tailgate]	√	√	√	√		
U S	VERACRUZ(EN)	2008	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		
U S	VERACRUZ(EN)	2007	G 3.8 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0116, 0015, 0100, 0158, 0055, 0055
U S	VERACRUZ(EN)	2007	G 3.8 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	0121, 0160
U S	VERACRUZ(EN)	2007	G 3.8 DOHC	ESC [Electronic Stability Control]	√	√	√	√	√	
U S	VERACRUZ(EN)	2007	G 3.8 DOHC	ODS [Weight Classification System]	√	√	√	√		0156
U S	VERACRUZ(EN)	2007	G 3.8 DOHC	AIRBAG [Airbag Control Unit]	√	√	√			
U S	VERACRUZ(EN)	2007	G 3.8 DOHC	AIRCON [Air Conditioner]	√	√	√	√	√	
U S	VERACRUZ(EN)	2007	G 3.8 DOHC	4WD [4WD Control]		√	√	√	√	
U S	VERACRUZ(EN)	2007	G 3.8 DOHC	TPMS [Tire Pressure Monitoring System]	√	√	√		√	
U S	VERACRUZ(EN)	2007	G 3.8 DOHC	IMMO [Immobilizer]				√		0086, 0091, 0102, 0112, 0138
U S	VERACRUZ(EN)	2007	G 3.8 DOHC	SMKCODE [Smart Key Code Saving]				√		
U S	VERACRUZ(EN)	2007	G 3.8 DOHC	SMK [Smart Key Unit]	√	√	√		√	0097
U S	VERACRUZ(EN)	2007	G 3.8 DOHC	DDM [Driver Door Module]	√	√	√	√	√	
U S	VERACRUZ(EN)	2007	G 3.8 DOHC	ADM [Assist Door Module]	√	√	√	√	√	
U S	VERACRUZ(EN)	2007	G 3.8 DOHC	IMS [Integrated Memory System]	√	√	√	√	√	
U S	VERACRUZ(EN)	2007	G 3.8 DOHC	OPTION [User Option]				√		
U S	VERACRUZ(EN)	2007	G 3.8 DOHC	TILT [Tilt & Telescope]	√	√	√	√	√	
U S	VERACRUZ(EN)	2007	G 3.8 DOHC	BCM [Body Control Module]	√	√	√		√	
U S	VERACRUZ(EN)	2007	G 3.8 DOHC	PTG [Power Tailgate]	√	√	√	√		
U S	VERACRUZ(EN)	2007	G 3.8 DOHC	CODE [Transmitter Code Saving]				√		
U S	XG(XG)	2005	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	XG(XG)	2005	G 3.5 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	XG(XG)	2005	G 3.5 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	XG(XG)	2005	G 3.5 DOHC	AIRBAG [Airbag Control]		√	√			
U S	XG(XG)	2005	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	XG(XG)	2004	G 3.5 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055
U S	XG(XG)	2004	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	XG(XG)	2004	G 3.5 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	XG(XG)	2004	G 3.5 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	XG(XG)	2004	G 3.5 DOHC	AIRBAG [Airbag Control]		√	√			
U S	XG(XG)	2004	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	XG(XG)	2003	G 3.5 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055
U S	XG(XG)	2003	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	XG(XG)	2003	G 3.5 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	XG(XG)	2003	G 3.5 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064

U S	XG(XG)	2003	G 3.5 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	XG(XG)	2003	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	XG(XG)	2002	G 3.5 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055
U S	XG(XG)	2002	G 3.5 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	XG(XG)	2002	G 3.5 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	XG(XG)	2002	G 3.5 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	XG(XG)	2002	G 3.5 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	XG(XG)	2002	G 3.5 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102
U S	XG(XG)	2001	G 3.0 DOHC	ENGINE [Engine Control]	√	√	√	√	√	0055
U S	XG(XG)	2001	G 3.0 DOHC	AT [Automatic Transaxle]	√	√	√	√	√	
U S	XG(XG)	2001	G 3.0 DOHC	TCS [Traction Control System]		√	√	√	√	
U S	XG(XG)	2001	G 3.0 DOHC	ABS [Anti - Lock Brake System]		√	√	√	√	0064
U S	XG(XG)	2001	G 3.0 DOHC	AIRBAG [Airbag Control]	√	√	√			
U S	XG(XG)	2001	G 3.0 DOHC	IMMO [Immobilizer]		√	√	√		0074, 0098, 0099, 0102